## **Circular Planar Inductor**

#### **Table of Contents**

Parameters	1
Code	2
Geometry	-

 $X = circular\_planar\_inductor(N,r0,ri,d,phi0,RES,h,x0,y0,z0,phix,phiy,phiz,view)$ 

This function generates a planar circular multilayer spiral - PCB Inductor The coil will have enough layers to acomodate all N turns. The first layer will be generated with center in (0,0,0) in XY plane The layers will be generated below (z<0) the first layer. It can be moved using the x0,..., phix... parameters

### **Parameters**

- @param N Number of Turns
- @param r0 External radius of the coil
- @param ri Internal radius of the coil
- @param d Distane bewtween turns
- @param **phi0** Angle at which the turns start
- @param **RES** Number of nodes of the Geometry (Discretization)
- @param h Distance between layers of the Coil. Can be interoduced as a single value (equidistant) or an array

```
e
e
      With different distances between each layer.
  * @param
            *x0* Center position X
응
            *y0* Center position Y
  * @param
응
            *z0* Center position Z
용
 * @param
응
           *phix* Turn respect X axis
  * @param
응
  * @param *phiy* Turn respect Y axis
   @param *phiz* Turn respect Z axis
 * @param *view* Optional parameter, if true generates figure with
 geometry
 * @retval *X*
                  Geometry nodes
```


### Code

```
function X =
 circular_planar_inductor(N,r0,ri,d,phi0,RES,h,x0,y0,z0,phix,phiy,phiz,view)
Rx=[1,0,0;0,\cos(phix),-\sin(phix);0,\sin(phix),\cos(phix)];
Ry=[\cos(phiy),0,\sin(phiy);0,1,0;-\sin(phiy),0,\cos(phiy)];
Rz=[\cos(phiz),-\sin(phiz),0;\sin(phiz),\cos(phiz),0;0,0,1];
Nremainding=N; Nmax=floor((r0-ri)/d);
i=1;
while Nremainding>0 %Calculate turns per Layer
  if Nremainding>Nmax
  Nlayer(i)=Nmax;
  Nremainding=Nremainding-Nmax;
 else
  Nlayer(i)=Nremainding;
  Nremainding=Nremainding-Nremainding;
 end
 i=i+1;
 end
 if length(h)==1
 hlayer=h/(size(Nlayer,2)-1); %Height of each layer
 zlayer=hlayer.*(0:1:(size(Nlayer,2)-1));
 else
 hlayer=h;
 zlayer(1)=0;
 for i=2:1:(size(Nlayer,2))
  zlayer(i)=sum(hlayer(1:(i-1)));
 end
 end
X=round_spiral(Nlayer(1), r0, d, phi0, RES, 0, 0, 0, 0, 0, 0, false);
for i=2:1:size(Nlayer,2)
 if mod(i,2)==1 %Assures the correct direction of the turns
  X=[X,round_spiral(Nlayer(i), r0, d, phi0, RES, 0, 0, -zlayer(i), 0,
 0, 0, false)];
 else
   if Nlayer(i) == Nmax
   X=[X,fliplr(round_spiral(Nlayer(i), r0, d, phi0, RES, 0, 0, -
zlayer(i), pi, 0, 0, false))];
   else &Connection to the last turn has to be manually made
   Xaux=X(:,size(X,2))+[0:0:-hlayer]; %@TODO: Warning two points of
the inductor could overlap
   X=[X,Xaux,fliplr(round spiral(Nlayer(i), r0, d, phi0, RES, 0, 0, -
zlayer(i), pi, 0, 0, false))];
  end
 end
 end
 for i=1:size(X,2)
 X(:,i) = transpose(Rx*[X(1,i);X(2,i);X(3,i)]);
 X(:,i) = transpose(Ry*[X(1,i);X(2,i);X(3,i)]);
```

```
X(:,i)=transpose(Rz*[X(1,i);X(2,i);X(3,i)]);
X(:,i)=X(:,i)+[x0;y0;z0];
end

if nargin>13
   if view
   plot3(X(1,:),X(2,:),X(3,:))
   grid on
   xlabel('X')
   ylabel('Y')
   zlabel('Z')
   title('Round Layer Spiral');
   end
end
end
```

# **Geometry**

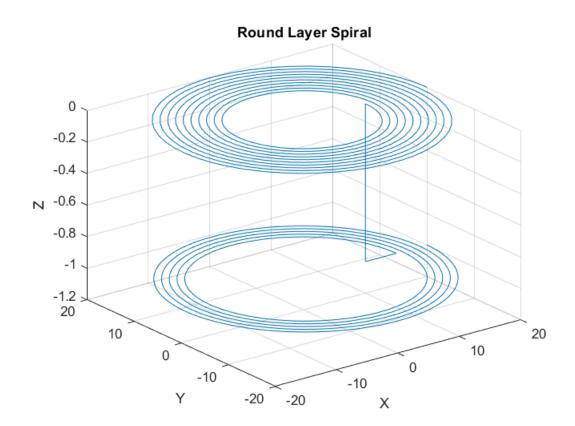

Published with MATLAB® R2018b