### **Project**

**Applying Your Learning** 

# Lab9

The Instructors Design's for Students to Analyze

### Remember

There is no 100% security

Security, like all engineering, involves tradeoffs

Know what you are trying to secure

The adversary...





### Schedule

```
• 12 APR Topic Review / Project Launch
```

- 19 APR [DEFEND] Design Review: **Key Management**
- 26 APR [DEFEND] Design Review: Secure Message Exchange
- 03MAY [ATTACK] Analysis: Attack Plan for Two Designs

Biased toward attacking Instructor designs

# Project -- Randomizer

Network	Number of Nodes per Session	Nature of Security	Channel	Hardware Acceleration	Message Rate
CAN	Fixed; N=5	Secure each message	1	Symmetric only	10 msg/sec
CAN FD	Dynamic; N=315	Secure the control loop	8	Symm & Asymm	1,000 msg/sec

## Project – Instructor Constraints

### **Instructor A**

CAN FD

Fixed; N = 5

Secure Control Loop

8 Channel

Symm and Asymm

1000 msg/sec

### **Instructor B**

CAN FD

Dynamic; N = 3..15

Secure Control Loop

8 Channel

Symm and Asymm

10 msg/sec

#### **Instructor A: Fast Multi-Loop**

### **Key Management**

Key Management is handled in two stages:

• Joining (done once in an ECU's "life"), which is driven by PoP CWTs and uses NaCl Box() to move network channel key, S<sub>NCH</sub>.

• Session (done on every power cycle, or more

An: Valid PoP CWT

by

Az: ECUs must be for the VIN and assigned a channel(s) - signed by OEM

P/K<sub>OFM</sub> – for signing/validating PoP CWT (ECU's do NOT have K<sub>OFM</sub>)

P/K<sub>A</sub> -- public/private key agreement keypair for ECU "A".

S<sub>NCH</sub> - long-lived network channel key S<sub>VCH</sub> – short-lived session channel key

#### **Message Exchange**

[ <msg security> ] <pt?>

<comment on these characteristics>

C :

An: Az:

### **Instructor A**

**CAN FD** 

Fixed; N = 5

Secure Control Loop

8 Channel

Symm and Asymm


1000 msg/sec


# Instructor A – Key Management

### "Joining" is a one-time event

- TIC is the network leader
- Uses CWT signed by OEM
  - CWT includes AZ for VIN and Channel
- Mutual authentication of CWT
  - TIC validates ECU CWT using P<sub>OEM</sub>
  - ECU validates TIC CWT using P<sub>OEM</sub>
  - Validation includes Proof-of-possession step
    - Send a nonce in a box, require nonce+1 to come back in another box
- TIC gives out long-lived channel key, S<sub>NCH</sub> using Box()
  - Message size = (16+24)+16 = 56 bytes
  - (16+24) is MAC and nonce
  - 16 is AES-128 key, S<sub>NCH</sub>.


### **OEM issues PoP CWT**

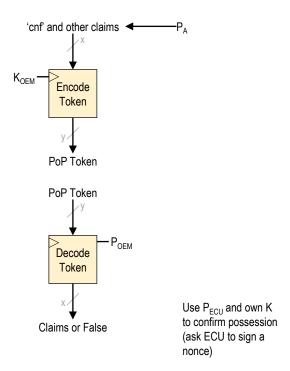

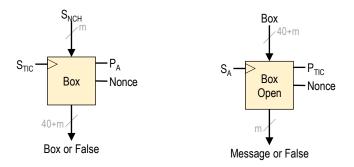


# Instructor A – Key Management

- "Session" happens on every power-cycle (or more often, if needed)
  - TIC waits for all 5 members to complete NAME process before starting...
  - On each session & for each channel
    - TIC sends 8-bit channel, 128-bit nonce and 128tag
    - Tag = CMAC(S<sub>NCH</sub>, PGN | | CH | | NONCE)
    - Nonce Message = CH | | NONCE | | Tag
  - Each member validates the nonce, if valid
    - Calculate the session key for the channel(s) it participates in
    - S<sub>VCH</sub> = KDF(S<sub>NCH</sub>, NONCE)

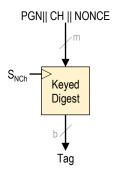

- Used by TIC to create nonce message.
- Used by member to validate the nonce message.



 Used by all participants to create the session key for the channel

### Instructor B: SlowSigned

### **Key Management**

Key Management (on every power cycle):

by

An: Valid PoP CWT Az: ECUs must be

assigned a channel(s)

signed by OEM

- Recognition, ECU sends 32-byte public key.
  If other ECU doesn't recognize the Public key then it triggers mutual An/Az via PoP CWT.
- ECUs remember P<sub>ECU</sub> and Authorized channels for subsequent power cycles.

P/K<sub>OEM</sub> – for signing/validating PoP CWT (ECU's do NOT have K<sub>OEM</sub>)

P/K<sub>A</sub> – public/private signing keypair for ECU "A".

#### Message Exchange

[ <msg security> ] <pt?>

F : <comment on these characteristics>

C :

An : Az :

### **Instructor B**

**CAN FD** 

Dynamic; N = 3..15

Secure Control Loop

8 Channel

Symm and Asymm

10 msg/sec

# Instructor B – Key Management

### "Recognition" happens on every cycle

- ECU<sub>A</sub> sends its public key, P<sub>A</sub>, as 32-byte CAN FD frame
  - If everyone else recognizes the ECU then go to message exchange
- If ECU<sub>B</sub> does not recognize ECU<sub>A</sub>:
  - ECU<sub>B</sub> responds with "unrecognized" PGN, where the frame contains  $P_A$ .
  - ECU<sub>B</sub> and ECU<sub>A</sub> exchange PoP CWT, validate them, and then do Proof-of-Possession step.
    - Proof-of-Possession requires signing a nonce provided by the other ECU
  - ECUs then store the other ECU's public key and channels in flash memory, to be used in future recognition events.

#### **OEM issues PoP CWT**

