
# **Virtual Panel**

## **Quick Reference**

# Arduino Experiment Control Panel

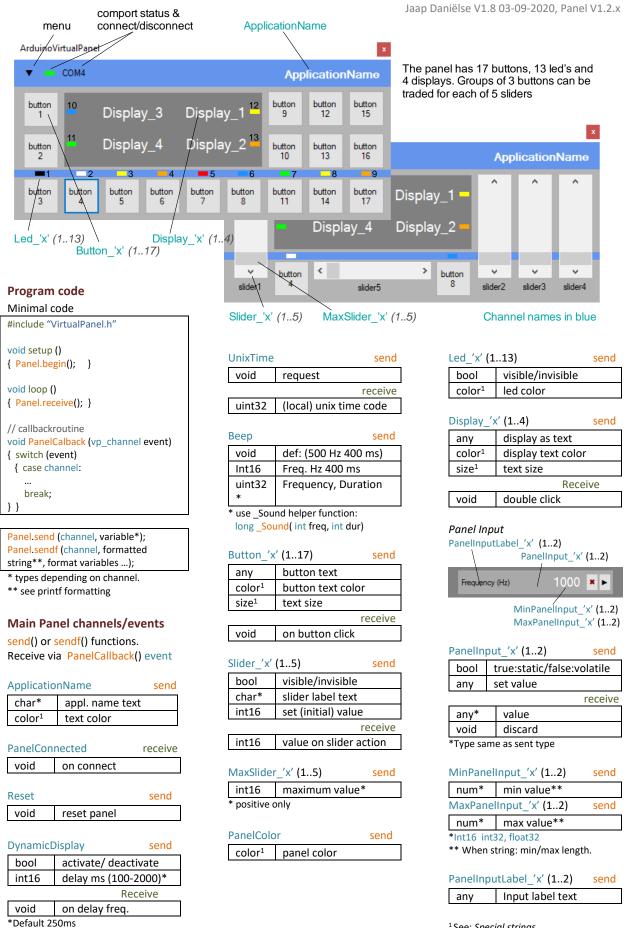

<sup>&</sup>lt;sup>1</sup>See: Special strings

# OpenFile\_'x' (1..4) send

Cilai	The path string	
	Receive	
int32	line count if open	
void	if file not open	

- \*- dir. path only, sets dialog path.
- filename or wildcard + ext. opens or creates file via dialog.
- ext. sets dialog file filter.

**Message Log Panel** 

 - /f forces open/create w/o dialog if specified dir. / dialog dir. valid.

Records panel incoming (R) and

panel outgoing (S) messages.

# FileOpenDialogTitle\_'x' (1..4) send

char\* set dialog title

ReadLineFile\_'x' (1..4) send

void	read next line
int32	set next read line nr.
	Receive

		neceive
char*	line read *	
void	end of file	

<sup>\*</sup> Truncates to 60 chars.

# writeLineFile\_'x' (1..4) send char\* write next line int32 set next write line nr.


ClearFile\_'x' (1..4) send

void clear open file

DeleteFile\_'x' (1..4) send
void delete open file

#### **Monitor Panel**

Provides a log panel and additional displays and inputs

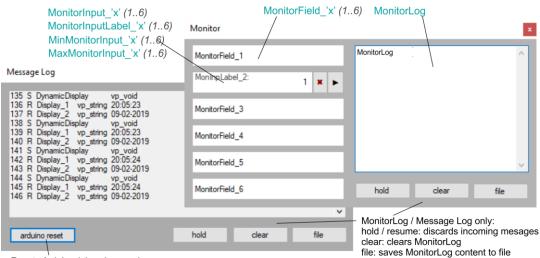

Resets Arduino (also via menu)

#### **Message Log**

Format:

146 R Display\_2 vp\_string Test {MessageNumber} {Send/Receive} {channel} {VarType} {Value}

#### Monitor channels / events

Monitor send
bool win. visible/invisible

MonitorField_'x' (16)		send	
	any	display as text	

MonitorInput\_'x' (1..6) send
bool static/volatile

value
receive
value

void discard
\*Type same as sent type

MonitorInputLabel\_'x' (1..2) send
any Input label text

MinMonitorInput\_'x' (1..6) send
MaxMonitorInput\_'x' (1..6) send
num\* value

\*Int16 int32, float32

When string: min/max length.

#### MonitorLog


send

any	display as text
\$CLEAR1	clear Log

<sup>&</sup>lt;sup>1</sup>See special strings

### **Info Panel**

Application dependent help panel.

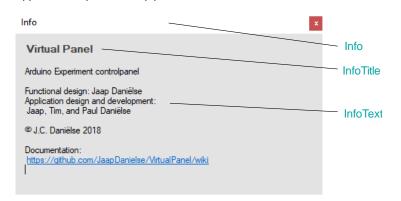

## Info channels/ events

 Info
 send

 bool
 win. visible/invisible

 \$CLEAR¹
 Resets to default.

InfoTitle send
any\* title text

\*Also clears InfoText


InfoText send char\* Info text\*

\* max 60 char per send.

Can be repeated for larger text

#### **Graph Panel**

Graphic display functions (rolling/static graph, draw) panel, including additional labels and buttons.

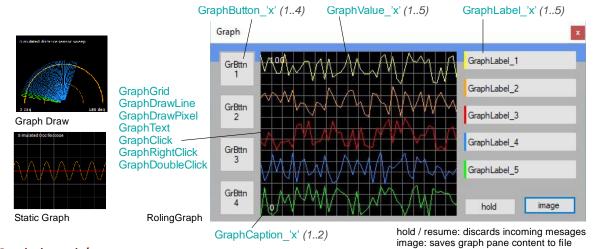

#### **Graph channels/events**

Graph	send
bool	win. visible/invisible
\$CLEAR1	clear graph*

\*Not values

GraphGrid	send
int16	vert. grid count

#### GraphDrawLine send

void	line start
uint16 <sup>2</sup>	line point (x,y)
uint32 <sup>2</sup>	line segment
	(x,y,x',y')
color1	line color
width <sup>1</sup>	line width

GraphDrawPixel	send
----------------	------

uint16²	point (x,y)
color <sup>1</sup>	pixel color
width <sup>1</sup>	pixel width

#### GraphDrawCircle send

params <sup>2</sup>	circle parameters
color1	circle color
width1	circle width

GraphCapti	on_'x' (12)	send
any	Caption text	

## **Data types and Panel Variables**

## Data types

Data types	
vp_type::vp_void	void
<pre>vp_type::vp_boolean</pre>	bool
vp_type::vp_string	char*
vp_type::vp_byte	byte
vp_type::vp_int	int16
vp_type::vp_uint	uint16
vp_type::vp_long	int32
vp_type::vp_ulong	uint32
vp_type::vp_float	float

#### Event data type received in:

_ · · · · · · · · · · · · · · · · · · ·	
Panel.vpr_type	vpr type

## Graph Panel 255(x) X 220(y) Actual 263(x) for GraphValue

GraphText	send
color1	text color
uint16 <sup>2</sup>	point 2 x byte (x,y)
char*	text

#### GraphValue 'x' (1..5) send

byte	graph value (0-255)
color1	graph color
width <sup>1</sup>	line width string
type1	rolling/static
\$CLEAR <sup>1</sup>	clear sent values

#### GraphValueCount\_'x' (1..5) send int16 hor. value count\*

<sup>1</sup>See: Special strings <sup>2</sup> See: Helper functions Draw \_Point, \_Line \_Circle

#### GraphButton 'x' (1..4) send

any	button text	
color1	button color	
size <sup>1</sup>	text size	
		receive

	receive
void	on button click

#### **Panel variables**

(Event data received)	
Panel.vpr_void	void
Panel.vpr_bool	bool
Panel.vpr_string	char*
Panel.vpr_byte	byte
Panel.vpr_int	int16_t
Panel.vpr_uint	unint16_t
Panel.vpr_long	int32_t
Panel.vpr_ulong	unit32_t
Panel.vpr_float	float32_t

GraphClick receive GraphRightClick receive GraphDoubleClick\* receive

uint16**   click position	uint16**	click position
---------------------------	----------	----------------

<sup>\*</sup> occurs together with GraphClick

(same as -DrawPixel and -DrawLine)

GraphLabel	_'x' (15)	send
bool	visible/invisible	
any	label text	
color1	color bar color	¢

<sup>\* \$</sup>OFF (color bar invisible)

#### GraphInput\_'x' (1..5) send

bool	static/volatile
any*	set value
·	receive

any*	value
void	discard
. —	

<sup>\*</sup>Type same as sent type

#### GraphInputLabel\_'x' (1..5) any Input label text

MinGraphInput\_'x' (1..5) send MaxGraphInput 'x' (1..5) send

р	/ (2.1.5)
num*	min/max value

<sup>\*</sup>Int16 int32, float32

When string min/max length.

vpr\_void DynamicDisplay (timer), Button, GraphButton (click), ReadLineFile (eof), Display (double click), PanelInput, MonitorInput, GraphInput (discard) vpr\_bool OpenFile, WriteLineFile vpr\_string ReadLineFile (line read) vpr\_int Slider (slider value) vpr\_long UnixTime (timecode) any type PanelInput, MonitorInput, GraphInput (send)

#### Code example:

if (Panel.vpr\_type==vp\_type::vp\_int) MyInt = Panel.vpr\_int;

<sup>\*</sup>Default value 50.

<sup>\*\*</sup>uint 2 x byte (X,Y)

#### **Special strings**

#### **Color strings**

For: ApplicationName, Display, Led, Button, GraphButton, GraphValue, GraphLine, GraphPixel, GraphCircle.

Grapherixer, Graphicircle.		
\$DELETE*		
\$OFF**		
\$BLACK		
\$GRAY		
\$PURPLE		
\$PINK		
\$BLUE		
\$GREEN	•	
\$YELLOW	_	
\$ORANGE	_	
\$RED	•	
\$BROWN		
\$WHITE		

<sup>\*</sup> draw only \*\* Led only

#### (Helper) Functions

#### **Panel Delay function**

bool Panel.Delay(int16\_t milliseconds, bool receive)
Allows to check for incoming messages during delay. If receive is true. Panel receive is called. If an incoming message was detected true is returned.

#### **Panel Synchronous request**

bool PanelSyncRequest(event)
Request event and waits for
answer. Only for ReadLineFile\_x
and UnixTime events.
Concurrent use blocked!
On success true: PanelSrqStatus =
vpsrq\_Success else false:
vpsrq\_Timeout / vpsrq\_InvalidChannel
/ vpsrq\_ConcurrencyErr.

#### **Helper function Sound**

uint32\_t \_Sound( int freq, int dur) Combines two int16\_t (frequency Hz, duration mS) into one uint32 t.

#### **Helper functions Draw**

\_Point()
uint16\_t \_Point(byte x, byte y)
combines 2 bytes into uint16\_t
(x,y) for a point.
When sent to GraphDrawLine
consecutive points are connected
in a line.

\_Line()
uint32\_t \_Line(byte Fx, Fy, Tx, Ty)
Combines four bytes into uint32\_t
(x from, y from, x to, y to)

#### **Graph Type strings**

Set graph type for: GraphValue. Rolling values are added right and move to left. Static waits until all values have been sent then displays.

\$ROLING*	Set rolling graph	
\$STATIC	Set static graph	

<sup>\*</sup> default

#### Pen size strings Draw

Size for: GraphPixel, GraphLine, GraphCircle, GraphValue.

\$1PX*	1 pixel
\$2PX	2 pixels
\$3PX	3 pixels
\$4PX	4 pixels

<sup>\*</sup> default

#### \_Circle()

char \* \_Circle(byte x, byte y, byte rad, int angle, int arc)
Center (x,y) radius, start angle, radius angle.

\_VPoint() /\_VLine() /\_VCircle()
uint16\_t \_VPoint(byte x, byte y)
uint32\_t \_VLine(byte Fx, Fy, Tx, Ty)
char \* \_VCircle(byte x, byte y, byte
rad, int angle, int arc)
Same as \_Point, \_Line and \_Circle
but transforms y values from value
(0-255) to coordinate (0-220).

# **Sendf() / Printf formatting** %[flags][width][length]specifier

#### specifiers (limited list)

specificis (illilited list)			
%с	ascii char	byte	
%d	signed dec.	int16	
%ld			
%u			
%lu	unsigned dec.	uint32	
%o	unsigned octal	any	
%x	uns. hex lc/uc	any	
%s	string	char[]	
%f*	float	float	
dia		16() 61	

<sup>\*</sup>Not AVR supported. see: sendf() float

#### flaas

,	.90	
-	left justify	
+	force sign	
0	pad zero's	

#### Examples:

Panel.sendf (Display\_1, "Test %d", 10) // output: Test 10
Panel.sendf(Display\_1, "Test %03d", 10) // output: Test 010
Panel.sendf(Display\_1, "Test %+d", 10) // output: Test +10

#### Text attributes/size strings

For: Display, Button, GraphButton.

\$SMALL	font size small	
\$NORMAL*	font size normal	
\$BIG	font size big	
\$BOLD	bold text	
\$xPT**	point size	

<sup>\*</sup>Default. Resets bold and big

#### **Clear Function**

MonitorLog, Info, Graph, GraphValue.

\$CLEAR	cle	ar/res	et e	ntity

# Helper function Float string

char \* \_FString(floatNumber, length, decimals);

#### sendf() float

Float not supported on AVR (Uno, Nano, Mega ... )
Use \_FString() helper function.
char\* \_FString(floatNumber,
length, decimals); again with
Panel.sendf using "%s"

#### Example:

Panel.sendf(Display\_1, "Value %s", \_FString(FloatValue, 5, 2)); Prints FloatValue using 5 chars, 3 of which are a '.' and 2 decimals.

#### **Unicode characters**

Using send() or sendf() to send a string, Unicode characters can be used. Simply copy and paste into the string.

#### F() Macro

In both send() and sendf() the F() macro for strings is allowed. This will force the string to be placed in program memory. (not Due) Example:

Panel.sendf (Display\_1, F("Value %d"), 10);

<sup>\*\*</sup> Buttons x = 6, 8, 10, 12,14, 16PT Displays x = 10, 12, 14, 16, 18PT