
Virtual Panel

Quick Reference

Arduino Experiment Control Panel

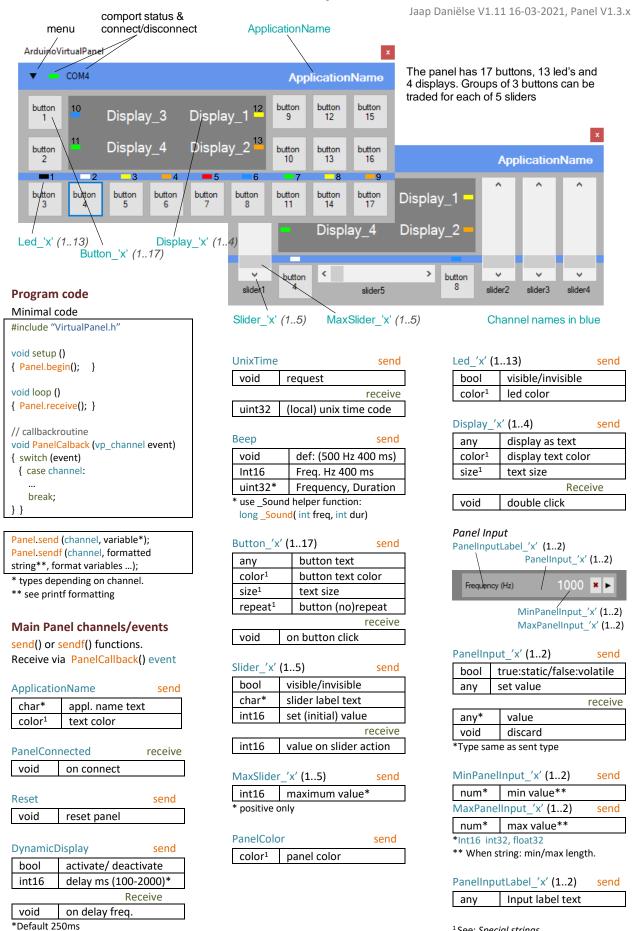

¹See: Special strings

OpenFile_'x' (1..4) send char* file path string*

	Receive
int32	line count if open
void	if file not open

- *- dir. path only, sets dialog path.
- filename or wildcard + ext. opens or creates file via dialog.
- ext. sets dialog file filter.

Message Log Panel

 - /f forces open/create w/o dialog if specified dir. / dialog dir. valid.

Records panel incoming (R) and

panel outgoing (S) messages.

FileOpenDialogTitle_'x' (1..4) send

char* set dialog title

ReadLineFile_'x' (1..4) send

void	read next line
int32	set next read line nr.

Receive

char*	line read *
void	end of file

^{*} Truncates to 60 chars.


writeLineFile_'x' (1..4) send char* write next line int32 set next write line nr.

ClearFile_'x' (1..4) send
void | clear open file

DeleteFile_'x' (1..4) send
void delete open file

Monitor Panel

Provides a log panel and additional displays and inputs

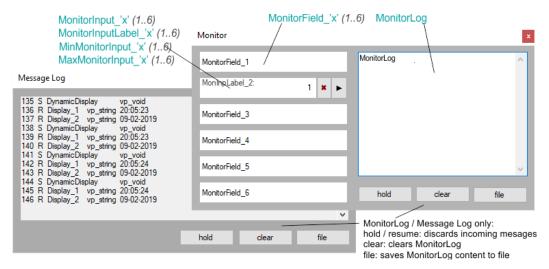

Message Log

Format:

146 R Display_2 vp_string Test {MessageNumber} {Send/Receive} {channel} {VarType} {Value}

Monitor channels / events

Monitor	send
bool	win. visible/invisible


MonitorField_'x' (16)		send	
	any	display as text	

MonitorInput_'x' (1..6) send
bool static/volatile
any* value

	I CCCIVC
any*	value
void	discard

*Type same as sent type

MonitorInputLabel_'x' (1..2) send
any Input label text

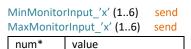

*Int16 int32, float32

When string: min/max length.

MonitorLog


send

any	display as text
\$CLEAR ¹	clear Log

¹See special strings

Info Panel

Application dependent help panel.

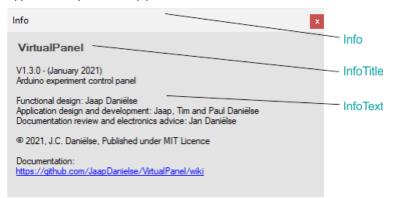

Info channels/ events

*Also clears InfoText

| Info | send | bool | win. visible/invisible | \$CLEAR1 | Resets to default.


InfoTitle send
any* title text

InfoText send char* Info text*

* max 60 char per send. Can be repeated for larger text

Graph Panel

Graphic display functions (rolling/static graph, draw) panel, including additional labels and buttons.

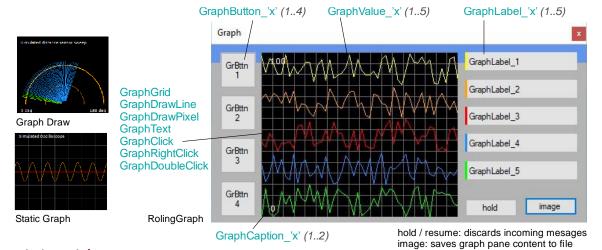

Graph channels/events

Graph	send	
bool	win. visible/invisible	
\$CLFAR1	clear graph*	

*Not values

GraphGrid		send
	int16	vert. grid count

Cuanala	Daniel Inc.	I
GLADII	DrawLine	send

void	line start	
uint16 ²	line point (x,y)	
uint32 ²	line segment	
	(x,y,x',y')	
color1	line color	
width ¹	line width	

GraphDrawPixel	send
----------------	------

uint16 ²	point (x,y)
color1	pixel color
width ¹	pixel width

GraphDrawCircle send

params ²	circle parameters
color1	circle color
width ¹	circle width

GraphCaption_'x' (12)		send
any	Caption text	

Data types and Panel Variables

Data types

Data types	
vp_type::vp_void	void
vp_type::vp_boolean	bool
vp_type::vp_string	char*
vp_type::vp_byte	byte
vp_type::vp_int	int16
vp_type::vp_uint	uint16
vp_type::vp_long	int32
vp_type::vp_ulong	uint32
vp_type::vp_float	float

Event data type received in:

Panel.vpr_type	vpr type

Graph Panel 255(x) X 220(y) Actual 263(x) for GraphValue

GraphText send

color1	text color
uint16 ²	point 2 x byte (x,y)
char*	text

GraphValue_'x' (1..5)

byte	graph value (0-255)
color1	graph color
width ¹	line width string
type ¹	rolling/static
\$CLEAR ¹	clear sent values

GraphValueCount_'x' (1..5) send int16 hor. value count*

¹See: Special strings

_Point, _Line _Circle

GraphButton 'x' (1..4) send

any	button text
color1	button color
size ¹	text size
	receive

void on button click

Panel variables

(Event data received)	
Panel.vpr_void	void
Panel.vpr_bool	bool
Panel.vpr_string	char*
Panel.vpr_byte	byte
Panel.vpr_int	int16_t
Panel.vpr_uint	unint16_t
Panel.vpr_long	int32_t
Panel.vpr_ulong	unit32_t
Panel.vpr_float	float32_t

GraphClick receive GraphRightClick receive GraphDoubleClick* receive

uint16** | click position

**uint 2 x byte (X,Y) (same as -DrawPixel and -DrawLine)

GraphLabel 'x' (1..5)

bool	visible/invisible
any	label text
color ¹	color bar color*

^{* \$}OFF (color bar invisible)

GraphInput_'x' (1..5) send

bool	static/volatile
any*	set value
	receive

any*	value
void	discard

^{*}Type same as sent type

GraphInputLabel_'x' (1..5) any Input label text

MinGraphInput_'x' (1..5) send MaxGraphInput_'x' (1..5) send

num*	min/max value
------	---------------

^{*}Int16 int32, float32

When string min/max length.

vpr_void DynamicDisplay (timer), Button, GraphButton (click), ReadLineFile (eof), Display (double click), PanelInput, MonitorInput, GraphInput (discard) vpr_bool OpenFile, WriteLineFile vpr_string ReadLineFile (line read) vpr_int Slider (slider value) vpr_long UnixTime (timecode) OpenFile (linecount) any type: PanelInput, MonitorInput, GraphInput (send)

Code example:

if (Panel.vpr_type==vp_type::vp_int) MyInt = Panel.vpr_int;

^{*}Default value 50.

² See: Helper functions Draw

occurs together with GraphClick

Special strings

Color strings

For: ApplicationName, Display, Led, Button, GraphButton, GraphValue, GraphDrawLine, GraphDrawPixel, GraphDrawCircle.

or aprile ration on ordi	
\$DEL(ETE)*	
\$OFF**	
\$BLACK	
\$GRAY	
\$PURPLE	_
\$PINK	i <mark>ne</mark>
\$BLUE	
\$GREEN	•
\$YELLOW	_
\$ORANGE	•
\$RED	•
\$BROWN	
\$WHITE	

^{*} draw only ** Led only

(Helper) Functions

Panel Delay function

bool Panel.Delay(int16_t milliseconds, bool receive)
Allows to check for incoming messages during delay. If receive is true. Panel receive is called. If an incoming message was detected true is returned.

Panel Synchronous request

bool PanelSyncRequest(event)
Request event and waits for
answer. Only for ReadLineFile_x
and UnixTime events.
Concurrent use blocked!
On success true: PanelSrqStatus =
vpsrq_Success else false:
vpsrq_Timeout / vpsrq_InvalidChannel
/ vpsrq_ConcurrencyErr.

Helper function Sound

uint32_t _Sound(int freq, int dur) Combines two int16_t (frequency Hz, duration mS) into one uint32_t.

Helper functions Draw

_Point()

uint16_t _Point(byte x, byte y)
combines 2 bytes into uint16_t
(x,y) for a point.
When sent to GraphDrawLine
consecutive points are connected
in a line.

_Line()
uint32_t _Line(byte Fx, Fy, Tx, Ty)
Combines four bytes into uint32_t
(x from, y from, x to, y to)

Graph Type strings

Set graph type for: GraphValue. Rolling values are added right and move to left. Static waits until all values have been sent then displays.

\$ROLING*	Set rolling graph
\$STATIC	Set static graph

^{*} default

Pen size strings Draw

Size for: GraphDrawPixel, GraphDrawLine, GraphDrawCircle, GraphValue.

\$1PX*	1 pixel
\$2PX	2 pixels
\$3PX	3 pixels
\$4PX	4 pixels

^{*} default

_Circle()

char * _Circle(byte x, byte y, byte rad, int angle, int arc)
Center (x,y) rad (radius), start angle, arc angle. Omitting angle and arc draws a full circle.

_VPoint() /_VLine() /_VCircle()
uint16_t _VPoint(byte x, byte y)
uint32_t _VLine(byte Fx, Fy, Tx, Ty)
char *_VCircle(byte x, byte y, byte
rad, int angle, int arc)
Same as _Point, _Line and _Circle
but transforms y values from value
(0-255) to coordinate (0-220).

Sendf() / Printf formatting %[flags][width][length]specifier

specifiers (limited list)

specificis (illilited list)			
%с	ascii char	byte	
%d	signed dec.	int16	
%ld	signed dec.	int32	
%u	unsigned dec.	uint16	
%lu	unsigned dec.	uint32	
%o	unsigned octal	any	
%x	uns. hex lc/uc	any	
%s	string	char[]	
%f*	float	float	
dea : 21 (5) (1)			

^{*}Not AVR supported. see: sendf() float

flags

J9-	
-	left justify
+	force sign
0	pad zero's

Examples:

Panel.sendf (Display_1, "Test %d", 10) // output: Test 10 Panel.sendf(Display_1, "Test %03d", 10) // output: Test 010

Text attributes/size strings

For: Display, Button, GraphButton.

\$SMALL	font size small
\$NORMAL*	font size normal
\$BIG	font size big
\$BOLD	bold text
\$xPT**	point size

^{*}Default. Resets bold and big

Clear Function

MonitorLog, Info, Graph, GraphValue.

\$CLEAR	clear/reset entity	

Button repeat Function

Button.

\$REPEAT*	set button rep.
\$NOREPEAT	set button click

^{*}Default

Panel.sendf(Display_1, "Test %+d", 10) // output: Test +10 Helper function Float string char * _FString(floatNumber, length, decimals);

sendf() float

Float not supported on AVR (Uno, Nano, Mega ...)
Use _FString() helper function.
char* _FString(floatNumber,
length, decimals); again with
Panel.sendf using "%s"

Example:

Panel.sendf(Display_1, "Value %s", _FString(FloatValue, 5, 2));
Prints FloatValue using 5 chars,
3 of which are a '.' and 2 decimals.

Unicode characters

Using send() or sendf() to send a string, Unicode characters can be used. Simply copy and paste into the string.

F() Macro

In both send() and sendf() the F() macro for strings is allowed. This will force the string to be placed in program memory. (not Due) Example:

Panel.sendf (Display_1, F("Value %d"), 10);

^{**} Buttons x = 6, 8, 10, 12,14, 16PT Displays x = 10, 12, 14, 16, 18PT