
Virtual Panel

Quick Reference

Arduino Experiment Control Panel

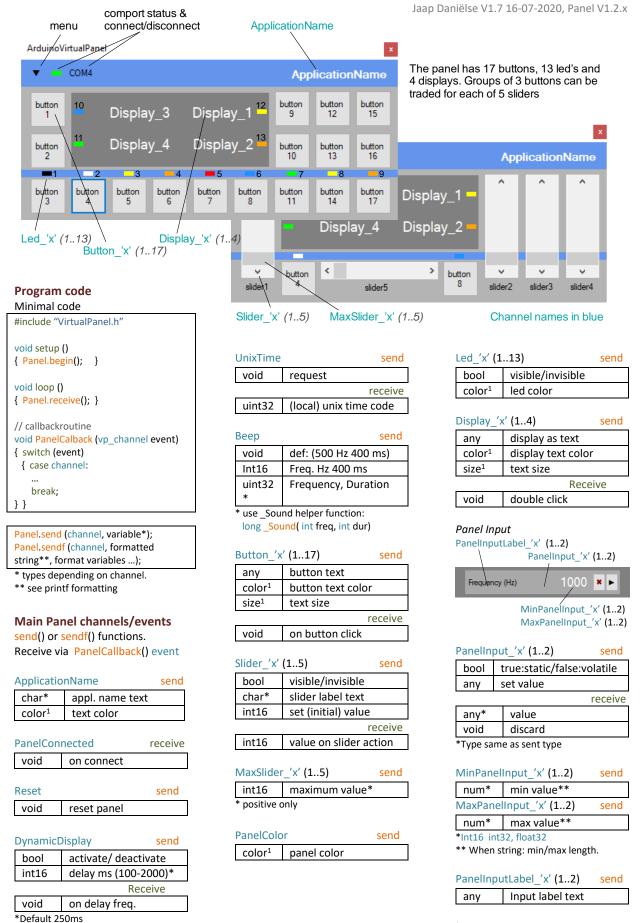

¹See: Special strings

OpenFile_'x' (1..4) send

char*	file path string*	
	Receive	
int32	line count if open	
void	if file not open	

- *- dir. path only, sets dialog path.
- filename or wildcard + ext. opens or creates file via dialog.
- ext. sets dialog file filter.

Message Log Panel

- /f forces open/create w/o dialog if specified dir. / dialog dir. valid.

Records panel incoming (R) and

FileOpenDialogTitle 'x' (1..4) send

	char*	set dialog title
--	-------	------------------

ReadLineFile_'x' (1..4) send

void	read next line
int32	set next read line nr.
	Receive

char*	line read *		
void	end of file	•	

^{*} Truncates to 60 chars.


WriteLineFile 'x' (1..4) char* write next line int32 set next write line nr.

ClearFile_'x' (14)		send
void	clear onen file	

DeleteFile_'x' (14)		send	
	void	delete open file	

Monitor Panel

Provides a log panel and additional displays and inputs

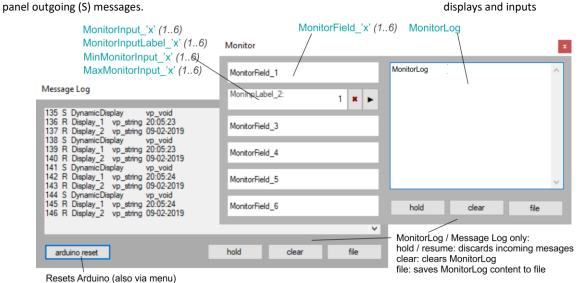

Message Log

Format:

146 R Display 2 vp string Test {MessageNumber} {Send/Receive} {channel} {VarType} {Value}

Monitor channels / events

Monitor	send
bool	win. visible/invisible

MonitorFiel	d_'x' (16)	send
any	display as text	

MonitorInput 'x' (1..6) send bool static/volatile value

*···/		
		receive
any*	value	
void	discard	•

^{*}Type same as sent type

anv*

MonitorInputLabel 'x' (1..2) send Input label text any

MinMonitorInput_'x' (1..6) send MaxMonitorInput 'x' (1..6) send num*

*Int16 int32, float32

When string: min/max length.

MonitorLog


send

any	display as text
\$CLEAR1	clear Log

¹See special strings

Info Panel

Application dependent help panel.

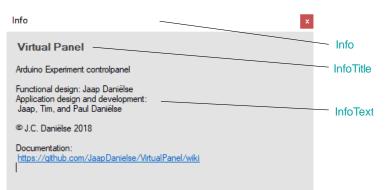

Info channels/ events

Info send win. visible/invisible bool \$CLEAR1 Resets to default.


InfoTitle any* title text *Also clears InfoText

InfoText send char* Info text*

max 60 char per send. Can be repeated for larger text

Graph Panel

Graphic display functions (rolling/static graph, draw) panel, including additional labels and buttons.

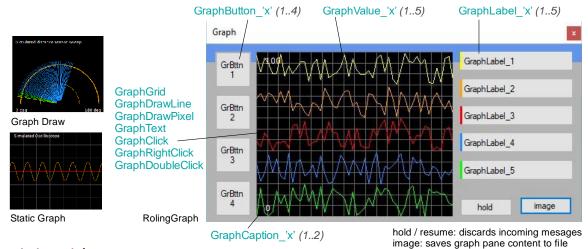

Graph channels/events

Graph		send
	bool	win. visible/invisible
	\$CLFΔR ¹	clear granh*

^{*}Not values

GraphGrid	send
int16	vert. grid count

GraphDrawLine send

void	line start
uint16²	line point (x,y)
uint32 ²	line segment
	(x,y,x',y')
color ¹	line color
width ¹	line width

GraphDrawPixel send

	_	
uint16 ²	point (x,y)	
color1	pixel color	
width ¹	pixel width	

GraphDrawCircle send

params ²	circle parameters
color ¹	circle color
width1	circle width

GraphCapti	on_'x' (12)	send
any	Caption text	

Data types and Panel Variables Data types

Data types	
vp_type::vp_void	void
<pre>vp_type::vp_boolean</pre>	bool
vp_type::vp_string	char*
vp_type::vp_byte	byte
vp_type::vp_int	int16
vp_type::vp_uint	uint16
vp_type::vp_long	int32
vp_type::vp_ulong	uint32
vp_type::vp_float	float

Event data type received in:

ereme data	·/ P · · · · ·		
Panel.vpr	_type	vpr type	

Graph Panel 255(x) X 220(y) Actual 263(x) for GraphValue

GraphText	send
color1	text color
uint16 ²	point 2 x byte (x,y)
char*	text

GraphValue_'x' (15) send		send
byte	graph value (0)-255)
color ¹	graph color	
width ¹	line width stri	ng
type ¹	rolling/static	
\$CLEAR ¹	clear sent valu	ues

GraphValueCount_'x' (1..5) send

int16	hor. value count*
*	

^{*}Default value 50.

GraphButton_'x' (1..4) send

any	button text
color1	button color
size ¹	text size

	receive
void	on button click

Panel variables

(Event data received)

1
void
bool
char*
byte
int16_t
unint16_t
int32_t
unit32_t
float32_t

GraphClick receive GraphRightClick receive GraphDoubleClick* receive

uint16**	click position
----------	----------------

^{*} occurs together with GraphClick

(same as -DrawPixel and -DrawLine)

GraphLabel_'x'	(15)	send
----------------	------	------

bool	visible/invisible
any	label text
color ¹	color bar color*

^{* \$}OFF (color bar invisible)

GraphInput_'x' (1..5)

bool	static/volatile
any*	set value
	receive

send

void discard	

^{*}Type same as sent type

GraphInputLabel_'x' (1..5) send

Grapiniipatta	DCI_ X (1)	cnu
any	Input label text	

MinGraphInput_'x' (1..5) send MaxGraphInput_'x' (1..5) send

	num*	min/max value
--	------	---------------

^{*}Int16 int32, float32

When string min/max length.

vpr_void DynamicDisplay (timer),
Button, GraphButton (click),
ReadLineFile (eof),
Display (double click), PanelInput,
MonitorInput, GraphInput (discard)
vpr_bool OpenFile, WriteLineFile
vpr_string ReadLineFile (line read)
vpr_int Slider (slider value)
vpr_long UnixTime (timecode)
any type PanelInput, MonitorInput,
GraphInput (send)

Code example:

if (Panel.vpr_type==vp_type::vp_int)
MyInt = Panel.vpr_int;

¹See: Special strings ² See: Helper functions Draw _Point, _Line _Circle

^{**}uint 2 x byte (X,Y)

Special strings

Color strings

For: ApplicationName, Display, Led, Button, GraphButton, GraphValue, GraphLine, GraphPixel, GraphCircle.

orapin men orapin	
\$DELETE*	
\$OFF**	
\$BLACK	
\$GRAY	
\$PURPLE	_
\$PINK	
\$BLUE	
\$GREEN	•
\$YELLOW	_
\$ORANGE	•
\$RED	•
\$BROWN	
\$WHITE	

^{*} draw only ** Led only

(Helper) Functions

Panel Synchronous request

bool PanelSyncRequest(event)
Request event and waits for
answer. Only for ReadLineFile_x
and UnixTime events.
Concurrent use blocked!
On success true: PanelSrqStatus =
vpsrq_Success else false:
vpsrq_Timeout / vpsrq_InvalidChannel
/ vpsrq_ConcurrencyErr.

Panel Delay function

bool Panel.Delay(int16_t milliseconds, bool receive)
Allows to check for incoming messages during delay. If receive is true. Panel receive is called. If an incoming message was detected true is returned.

Helper function Sound

uint32_t_Sound(int freq, int dur) Combines two int16_t (frequency Hz, duration mS) into one uint32 t.

Helper functions Draw

_Point()
uint16_t _Point(byte x, byte y)
combines 2 bytes into uint16_t
(x,y) for a point.
When sent to GraphDrawLine
consecutive points are connected
in a line.

_Line()
uint32_t _Line(byte Fx, Fy, Tx, Ty)
Combines four bytes into uint32_t
(x from, y from, x to, y to)

Graph Type strings

Set graph type for: GraphValue. Rolling values are added right and move to left. Static waits until all values have been sent then displays.

\$ROLING*	Set rolling graph
\$STATIC	Set static graph
* default	

Pen size strings Draw

Size for: GraphPixel, GraphLine, GraphCircle, GraphValue.

\$1PX*	1 pixel
\$2PX	2 pixels
\$3PX	3 pixels
\$4PX	4 pixels

^{*} default

_Circle()

char * _Circle(byte x, byte y, byte rad, int angle, int arc)
Center (x,y) radius, start angle, radius angle.

_VPoint()/_VLine()/_VCircle()
uint16_t _VPoint(byte x, byte y)
uint32_t _VLine(byte Fx, Fy, Tx, Ty)
char * _VCircle(byte x, byte y, byte
rad, int angle, int arc)
Same as _Point, _Line and _Circle
but transforms y values from value
(0-255) to coordinate (0-220).

Sendf() / Printf formatting %[flags][width][length]specifier

specifiers (limited list)

specifiers (illitited list)		
%с	ascii char	byte
%d	%d signed dec.	
%ld	signed dec.	int32
%u	unsigned dec.	uint16
%lu	unsigned dec.	uint32
%o	unsigned octal	any
%x	uns. hex lc/uc	any
%s	string	char[]
%f*	float	float
	-	

^{*}Not AVR supported. see: sendf() float

flags

79-		
	-	left justify
	+	force sign
	0	pad zero's

Examples:

Panel.sendf (Display_1, "Test %d", 10) // output: Test 10
Panel.sendf(Display_1, "Test %03d", 10) // output: Test 010

Text attributes/size strings

For: Display, Button, GraphButton.

\$SMALL	font size small	
\$NORMAL*	font size normal	
\$BIG	font size big	
\$BOLD	bold text	

^{*}Default. Resets bold and big

Clear Function

MonitorLog, Info, Graph, GraphValue.

\$CLEAR	clear/reset	entity
---------	-------------	--------

Panel.sendf(Display_1, "Test
%+d", 10) // output: Test +10

Helper function Float string
char * _FString(floatNumber,
length, decimals);

sendf() float

Float not supported on AVR (Uno, Nano, Mega ...)
Use _FString() helper function.
char* _FString(floatNumber,
length, decimals); again with
Panel.sendf using "%s"

Example:

Panel.sendf(Display_1, "Value %s", _FString(FloatValue, 5, 2));
Prints FloatValue using 5 chars,
3 of which are a '.' and 2 decimals.

Unicode characters

Using send() or sendf() to send a string, Unicode characters can be used. Simply copy and paste into the string.

F() Macro

In both send() and sendf() the F() macro for strings is allowed. This will force the string to be placed in program memory. (not Due) Example:

Panel.sendf (Display_1, F("Value %d"), 10);