ULTRA-LOW POWER 2.4GHz WI-FI + BLUETOOTH SMART SOC

RF Testing Guide



http://www.opulinks.com/

Copyright © 2019, Opulinks. All Rights Reserved.

OPL1000-RF-Testing-Guide | Version 03

REVISION HISTORY

Date	Version	Contents Updated
2018-07-20	0.1	Initial Release
2018-07-27	0.2	Update section 2.3
2019-03-04	0.3	Add section 2.5



TABLE OF CONTENTS

TABLE OF CONTENTS

1.	intro	oduction	1
	1.1.	Scope of Document Applications	1
	1.2.	Abbreviations	1
	1.3.	References	1
2.	Meth	hod of OPL1000 RF TESTING	2
	2.1.	Environment Setup	2
	2.2.	RF Cable Decay Testing and Compensation	3
	2.3.	WiFi Testing	6
	2.4.	BLE Testing	15
	25	Announcements	22



CHAPTER ONE

INTRODUCTION

1.1. Scope of Document Applications

This file outline RF testing flow and method on OPL1000.

1.2. Abbreviations

Abbr.	Explanation
BLE	Bluetooth Low Energy
WIFI	Wireless Fidelity
RF	Radio Frequency
RSSI	Radio Signal Strength Indicator
VSA	Vector Signal Analysis
VSG	Vector Signal Generation
DUT	Device Under Test


1.3. References

[1] AT Command and procedure outline, OPL1000-AT-instruction-set-and-examples.pdf



2. METHOD OF OPL1000 RF TESTING


2.1. Environment Setup

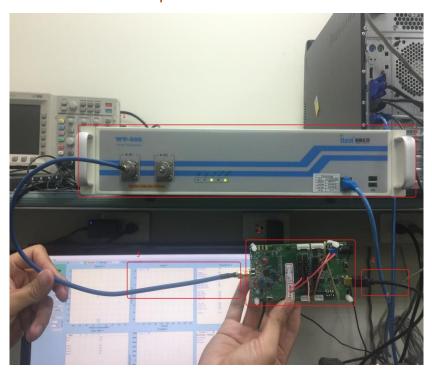

- 1. WLAN Meter: This demonstration is set up with WT-200
- 2. OPL1000 board: The board being tested
- 3. RF cable: Through a wired method to connect WLAN Meter and OPL1000 Board
- 4. USB to UART cable: Used to connect with PC to perform operation of UART command




Connect with WLAN Meter: After having activated WLAN Meter, set IP before clicking "Connect".

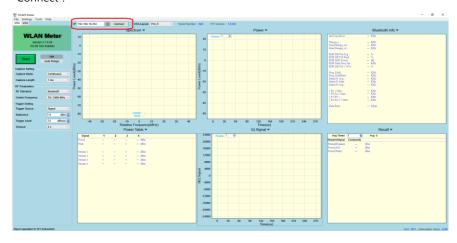

2.2. RF Cable Decay Testing and Compensation


RF Cable Connection: Please connect RF cable with these 2 ports, as shown in the diagram below,

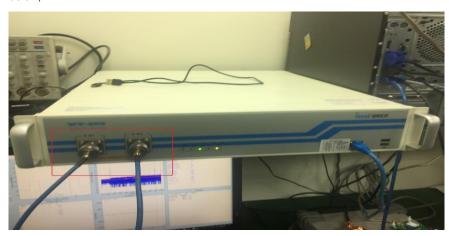




批注 [01]: 為翻譯到

RF Port Setting: After having activated WLAN Meter, please proceed with RF Port set-up

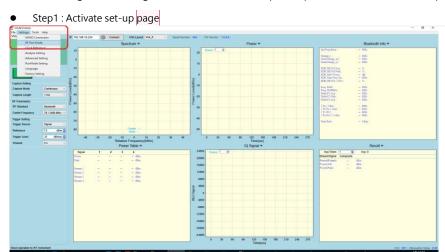


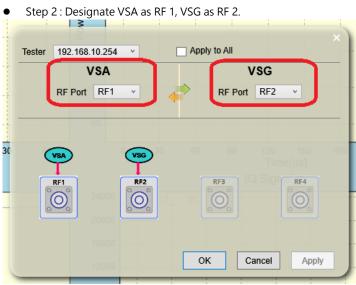




批注 [02]: 未翻譯到


Step 3 : Activate Testing Page

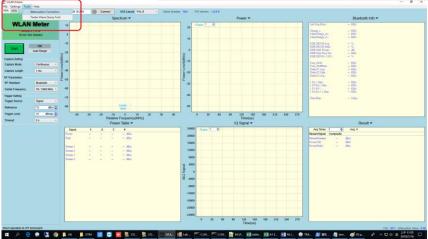


Step 4 : Select 2.4G in "Option" , before clicking "Start"

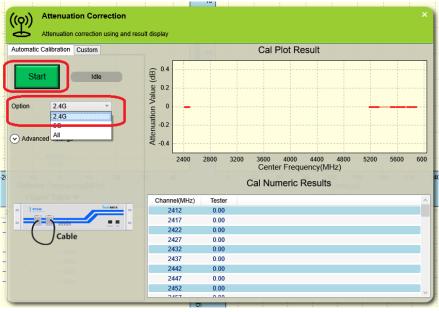





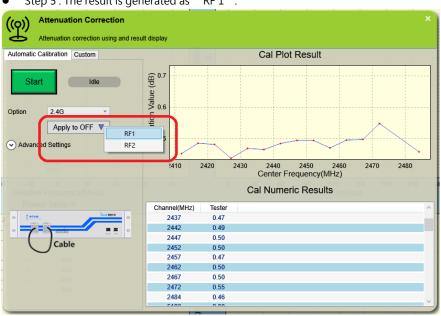

2.3. WiFi Testing

Command Index

Initialization

at+mode= [Mode]	
Mode	3

Channel setting

enamer setting		
at+channel= [Channe	4]	
Channel	1 ~ 14	



Set WiFi Packet Format

at+go=[bLongPreamble], [Data Length], [Interval], [Data Rate], [Packet Count]		
bLongPreamble	1 for LONG	
	Others for SHORT	
Data Length	n bytes	
Interval	n us (Packet interval)	
Data Rate	1, 2, 5.5, 11 Mbps	
Packet Count	0 for infinite	
	Others for given number	

Activate/Terminate WiFi Tx Testing

at+tx=[bEnable]	
	1 for enable
bEnable	0 for disable

Activate/Terminate WiFi Rx Testing

at+rx=[bEnable]	
bEnable	1 for enable
	0 for disable

Clear WiFi Rx Data Count

at+reset_cnts	

Read WiFi Rx Data Count

at+counters?	



Test Items

1. Initialization

at+mode=3

```
COM14:115200baud - Tera Term VT
                                                                                                                   <u>File Edit Setup Control Window KanjiCode H</u>elp
Mode is RF
```

2. Set up and initiate WiFi Tx Testing

at+channel=7

at+go=1,30,40,1,0


at+tx=1

```
at+go=1,30,40,1,0
Preamble type: LONG
Data length: 30 bytes
Interval: 40 us
Data rate: 1 Mbps
Ix Counts: 0
```



- 3. WLAN Meter Set-up
- Set up RF Port

VSA as RF 1

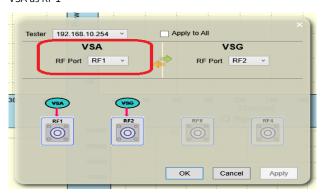


Set up Related Parameters

Select VSA Page

Set up Capture Setting: Continuous mode, with Length of 1ms


Set up RF parameters : 802.11b \cdot 20M, with Center Frequency as 7

Select desired testing result : Spectrum \ Power \ Symbol Const \ Eye Diagram

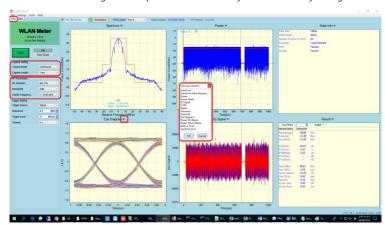



As set-up completes, click "Start" .

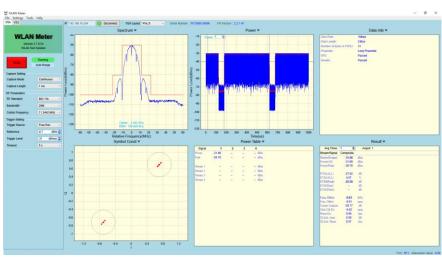

4. Terminate WiFi Tx Testing

at+tx=0



5. Initiate WiFi RX Testing

at+rx=1






CHAPTER TWO

WLAN Meter Set-Up

• Set up RF Port

VSG as RF 1

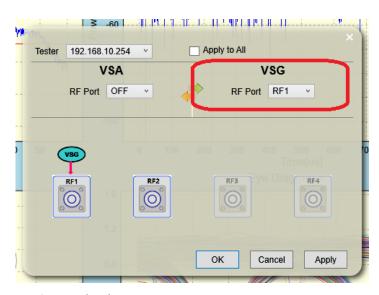

Set up Related Parameters

Select VSG Page

Set RF standard: 802.11b

Set Bandwidth: 20M


Set Signal Type: 1 Mbps (DSSS)

Set Center Frequency: 7 / 2442 MHz


Set IFG: 40 us

Set Repeat Count : Infinity Repeat



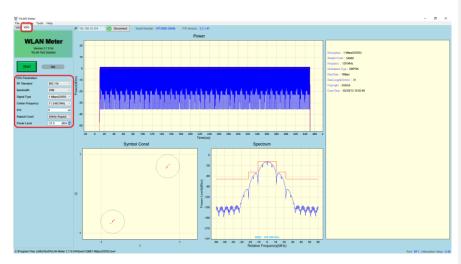


Loaded VSG Signal

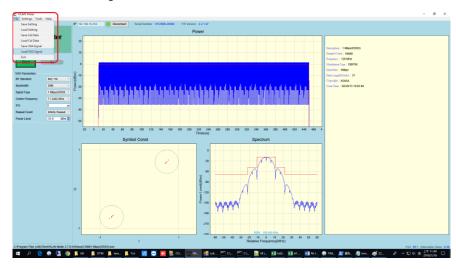




Select file, "1 Mbps(DSSS).bwv" .

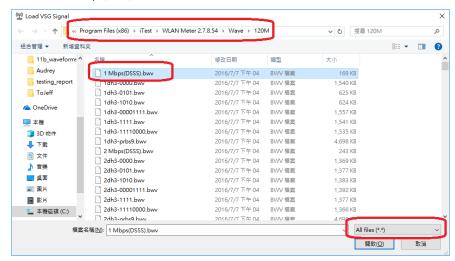

Confirm uploaded result, before clicking "Start" .

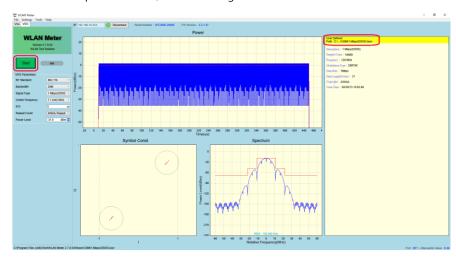



6. Clear WiFi Rx Data Count

at+reset_cnts

```
at+reset_cnts
```

7. Read WiFi Rx Data Count

at+counters?

```
at+counters?
```

OK: The number of correct packets received in the testing period.

err: The number of incorrect packets received in the testing period.

rssi: RSSI Value (Signal Strength)

8. Terminate WiFi Rx Testing

at+rx=0

Note: TX and RX cannot be tested at the same time, as one needs to be completed before processing with the other function.



2.4. BLE Testing

Command Index

Set-Up and initiate BLE Tx Testing

at+dtm= tx [Channel] [Data Length] [Packet Type]	
Channel	0 ~ 39
Data Length	n bytes
	0: PRBS9
	1 : Pattern 11110000
Do alcot Tura	2 : Pattern 10101010
Packet Type	3:PRBS15
	4 : Pattern 11111111
	5 : Pattern 00000000

Set-Up and initiate BLE Rx Testing

at+dtm= rx [Channel]	
Channel	0 ~ 39

Terminate BLE Testing

at+dtm= end	



Test Items:

1. Set-Up and initiate BLE Tx Testing

at+dtm=tx,20,30,2


```
>at+dtm=tx,20,30,2
Start DTM Tx
frequency: 20, length: 30, type: 2
```

Note: As Channel = 20, it is equivalent to 2442 MHz.

Meter Set-Up

• Set up RF Port

VSA as RF 1

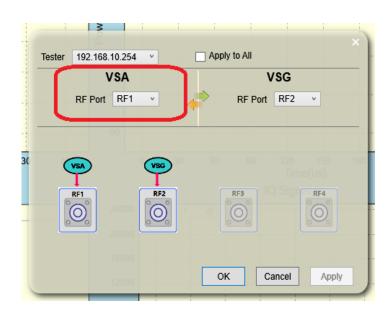



Set up Related Parameters

Select VSA Page

Set Capture Settings: Continuous mode, with Length as 1ms.


Set RF parameters: Bluetooth, with Center Frequency as 40/2442 MHz.

Select desired testing result: Spectrum


Power

Symbol Const

Power Table

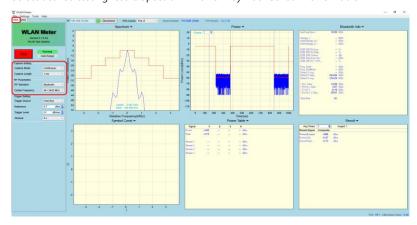

As set-up completes, click "Start" .

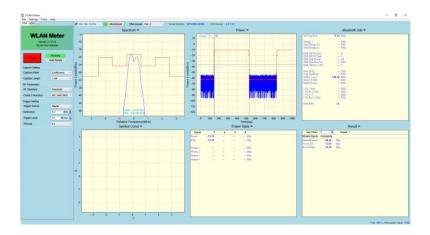



2. Terminate BLE Tx Testing

at+dtm=end

```
>at+dtm=end
RX CNT: 0
CRC OK: 0
CRC FAIL:
```

3. Set-up and initiate BLE Rx Testing

at+dtm=rx,20


```
at+dtm=rx,20
Start DTM Rx
```

Note: As Channel = 20, it is equivalent to 2442 MHz.

Meter Set-Up

Set up RF Port

VSG as RF 1

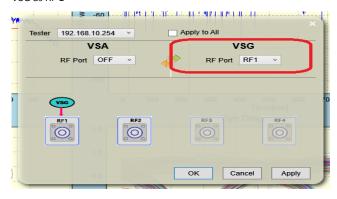



CHAPTER TWO

Set up Related Parameters


Select VSG Page

Set RF standard: Bluetooth

Set Center Frequency : 40 / 2442 MHz


Set IFG: 40 us

Set Repeat Count : Infinity Repeat

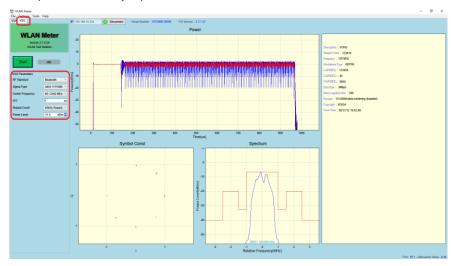




Loaded VSG Signal

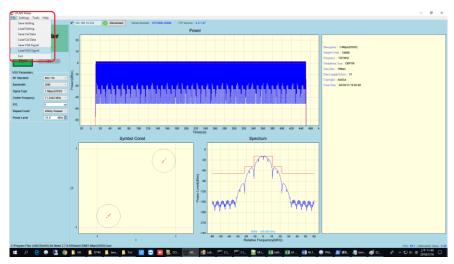


Select file, "BLE.bwv".

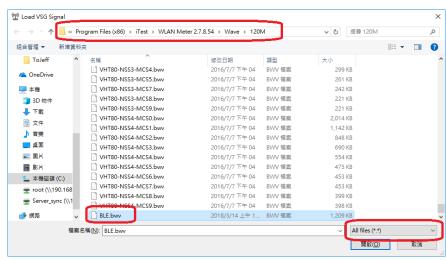



CHAPTER TWO

Confirm uploaded result, before clicking "Start" . Confirm loaded resulted and clicking start

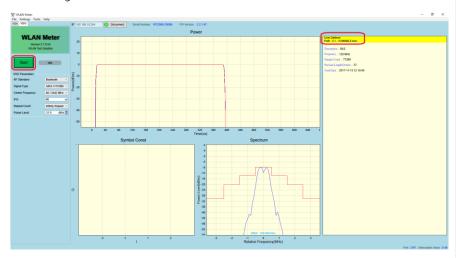

4. Terminate BLE Rx Testing

at+dtm=end



RX CNT: Total number of packets received

CRC OK: The number of correct CRC packets received in the meantime

CRC FAIL: The number of incorrect CRC packets received in the meantime

RSSI: RSSI Value (Signal Strength)



2.5. Announcements

```
1. For other channels to test, the DUT command is as follows:
   a. Tx power Test for WiFi CH1, 5.5Mbps
   at+channel=1
   at+go=1,30,40,5.5,0
   at+tx=1
   b. Tx power Test for WiFi CH13, 11Mbps
   at+channel=13
   at+go=1,30,40,11,0
   at+tx=1
   c. Rx PER Test for WiFi CH1
   at+channel=1
   at+rx=1
   at+reset_cnts
   at+counters?
   d. Rx PER Test for WiFi CH13
   at+channel=13
   at+rx=1
   at+reset_cnts
   at+counters?
   e. Tx power Test for BLE CHO, payload=PRBS9
   at+dtm=tx,0,30,0
   at+dtm=end
   f. Tx power Test for BLE CH39, payload=0xFF
   at+dtm=tx,39,30,4
   at+dtm=end
```



CHAPTER TWO

g. Rx PER Test for BLE CHO at+dtm=rx, 0 at+dtm=end

h. Rx PER Test for BLE CH39 at+dtm=rx, 39 at+dtm=end



CONTACT

sales@Opulinks.com

