

Lab ThingWorx REST Interface Experiment

- Use the same hardware previously used for Cayenne
- 1. Meet ThingWorx (PowerPoint slides)
- 2. Install Arduino IDE (if you have not done before). https://www.arduino.cc/en/Guide/Windows
- 3. Install ESP8266 Library from the following link (if you have not done before). https://github.com/esp8266/Arduino
- 4. Download this code and modify (instructions are given later).
 REST_ESP8266_ThingWorx_JSON_LED_control.ino from the following repository:
 https://github.com/indystar1/ESP8266-code-various/REST_ESP8266_ThingWorx
- Follow tutorial here https://www.udemy.com/thingworx-fundamentals/
- 6. Create an account on https://www.thingworxacademic.com/
- 7. Use the following composer for experiment (use same user ID and password as above) https://academic.cloud.thingworx.com/Thingworx/Composer/
- 8. The following steps are very similar to the tutorial appearing here (but see below for some property names for our project that are different)


 https://www.thingworx.com/ecosystem/academic-program/iot-projects/weather-app-arduino-uno/
- 9. Create an App key
 - a. The App key is a ThingWorx created object that is used in the authentication into the ThingWorx Server process. Application keys are used whenever one would like to interact with a ThingWorx Application outside of the actual ThingWorx Web Application. Thus an app key replaces the login credentials input that is normally required for each communication with ThingWorx.
 - b. To get this value go to your ThingWorx Composer home tab and locate Application Key in the Security section.

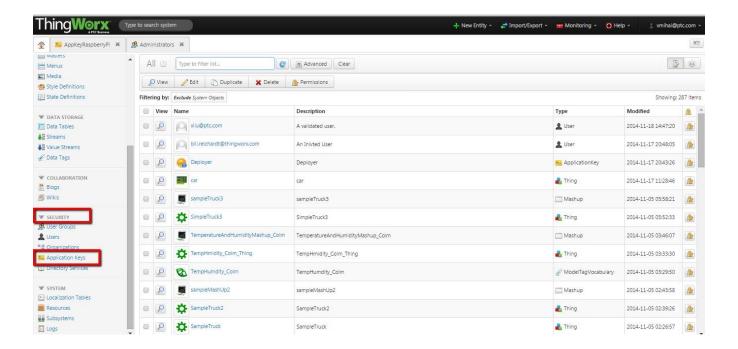


10. Click it and click the +New Button:

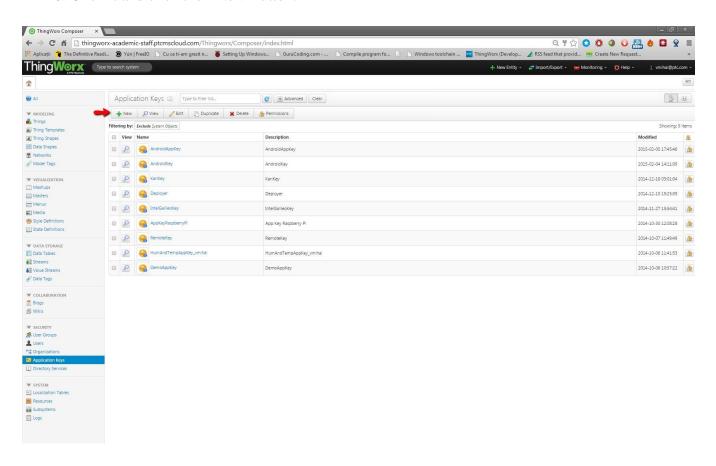


11. Enter a name, for example: ArduinoUnoKey (or ESP8266Key) and Reference field:

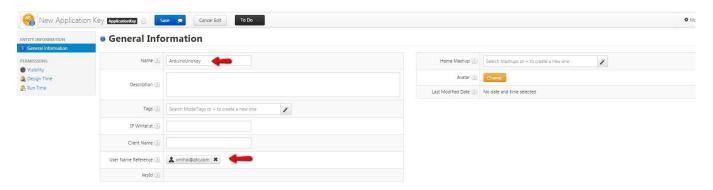


- 12. You can also tag it. This is useful if you plan on exporting for example all the objects you made for a project. If you tag all your Things, ThingTemplates, ThingShapes etc. with the same tag you can then filter the export based on your tag and have an xml file with all the information. To read more about tags go to Wiki page of ThingWorx Community, section 03.13 Tags.
- 13. To create a tag, click on the wand in the tag field and select + Term

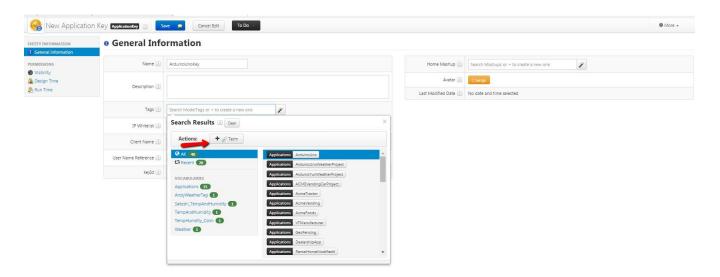

14. Choose the Vocabulary in which you want to create it and give the term a name. For example ArduinoUnoWeatherProject.

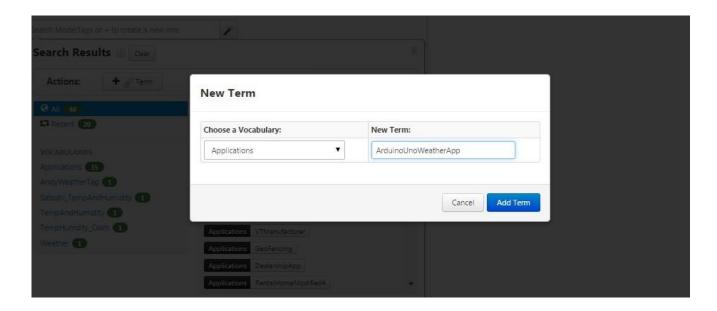


15. Next, click Add Term. Save the App key and copy the keyld

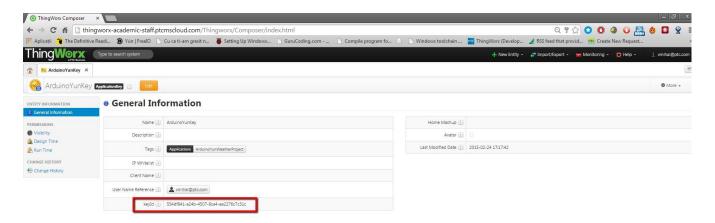


16. And paste it as value for the appKey in the your Arduino source code.ino file.

Note: When creating the Application key, make sure that in the User Name Reference field you select the same user you use to log into ThingWorx to follow this tutorial. Otherwise the data sent from the ThingWorx java SDK program won't be received by ThingWorx.

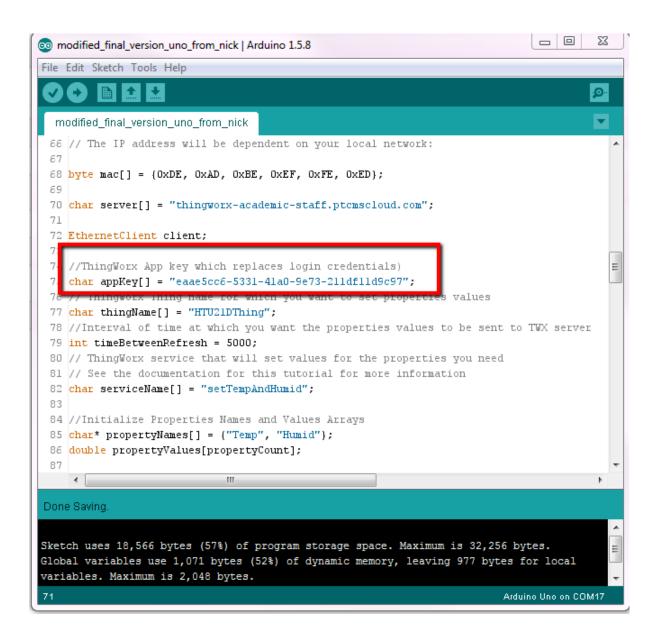


17. To create this Thing on your ThingWorx Platform, Go to Things and click New.

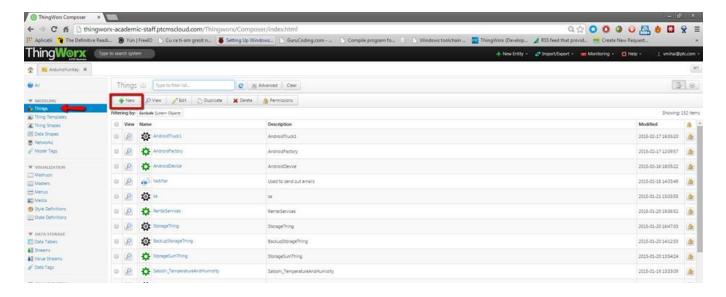


18. Name the Thing "ESP8266_REST_yours" or whatever you want.

Note: Make sure you use this exact name in your Arduino sketch, otherwise you will need to change also the REST call in your Arduino sketch to reflect the new name of the Thing you want to set property values for.

- 19. Tag it with your ArduinoUnoWeatherProject tag
- 20. Select GenericThing as a Template.

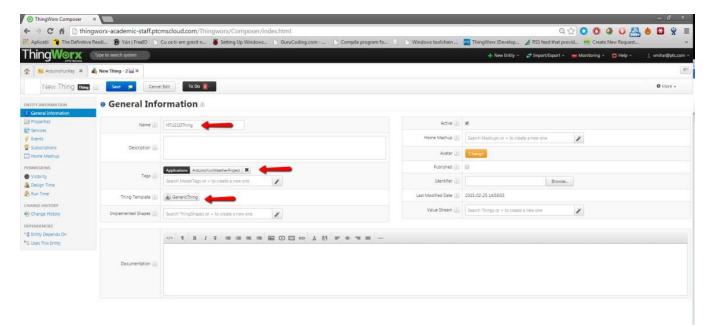


21. Next click Save and go to the Properties Section of your Thing. Here make sure your Thing is in edit mode and click Add My Property.

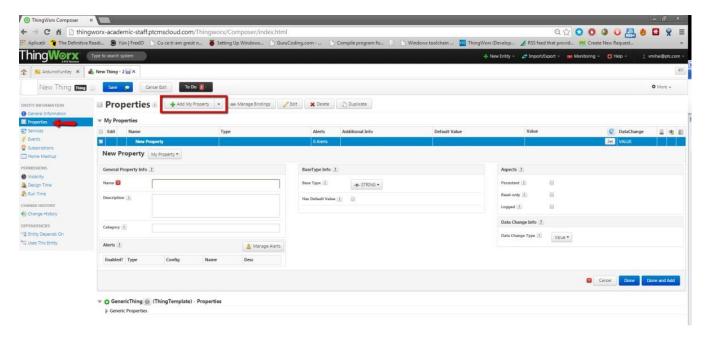


22. Create five Properties: Temperature (Number), Humidity (Number), AnalogValue (Number), BoolStatus (Number), and MyControl (Boolean). Note: Property names are case-sensitive in RFST calls.


Start with the Temperature property. Type in the Name field and select Number as Base Type.

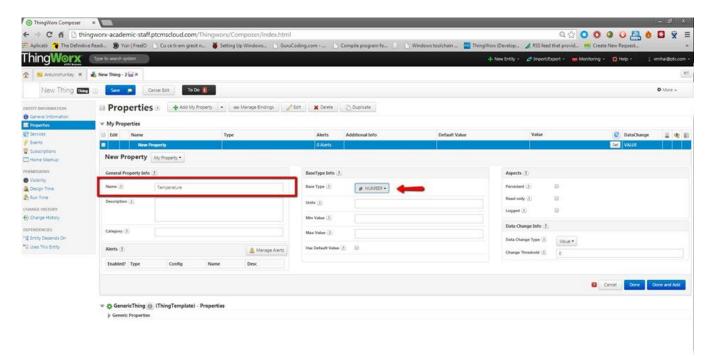

23. Next, click [Done and Add] to add also the Humidity property. Add the rest of properties. Note that BoolStatus and MyControl need to be set Boolean as Base Type. Click Done. At the end you should have something like this.

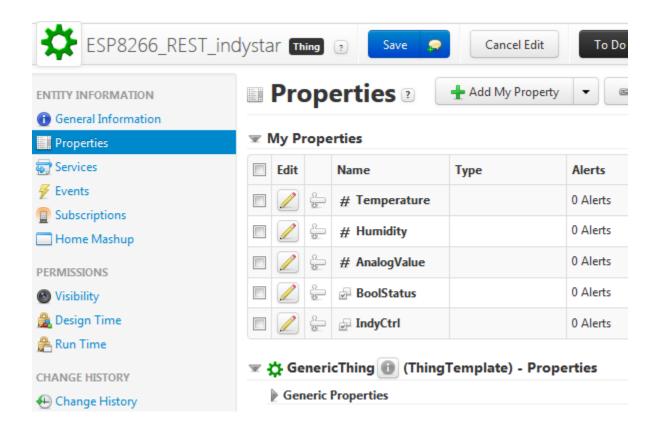


- 24. Move to the Services section.
- 25. Click Add My Service and name the new Service setTempAndHumid.

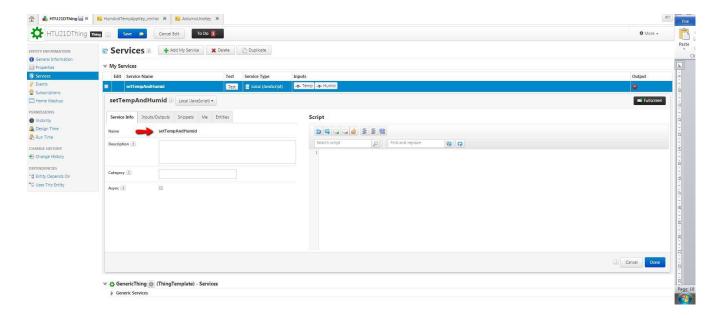


- 26. Click the Inputs/Outputs tab and add four String inputs. Name them: "Temp", "Humid", "Bool", "Analog" (Make sure you use the exact names and Base types used in your Arduino sketch because this is taken into account when building the HTTP Post Request in your Arduino sketch.)
- 27. In the script area paste in the following code that sets your Thing properties values to the values of the input parameters of your setTempAndHumid service.

```
me.Temperature = parseFloat(Temp);
me.Humidity = parseFloat(Humid);
me.BoolStatus = parseFloat(Bool);
me.AnalogValue = parseFloat(Analog);
```

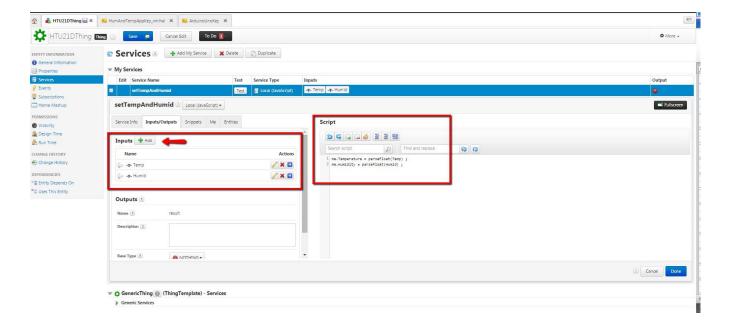


- 28. Compile and make sure no errors exist.
- 29. Now, you can go ahead and upload the sketch to the board.

 Connect power to the hardware. Make sure you have the right port selected under Tools→Serial Port and Arduino Uno select under Tools→Board. Then click upload. After seeing the Transfer completed message, go to Tools →Serial Monitor to see the temperature and humidity values are displayed and sent to ThingWorx.

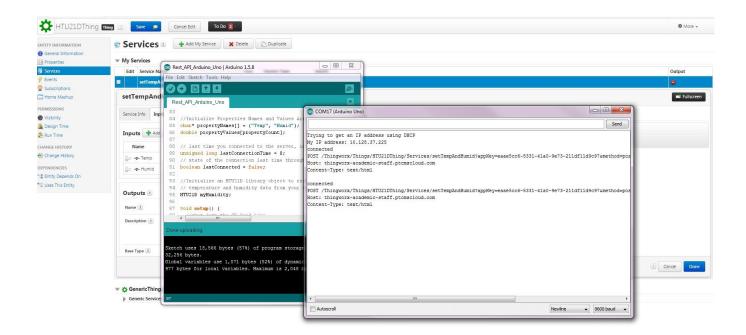


If you go back to your Thing properties section, you should be able to see the values being constantly updated when clicking on the update button.

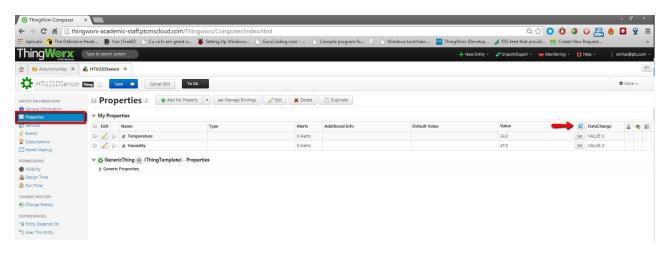


Note: Programs running on the Arduino Uno cannot be stopped. This sketch will run continuously until you replace it with a different one. Note that the sketch is stored on the board's memory and will start running even after cutting the power supply and then connecting it again.

30. Next, create a Mashup like this (to visualize your data):

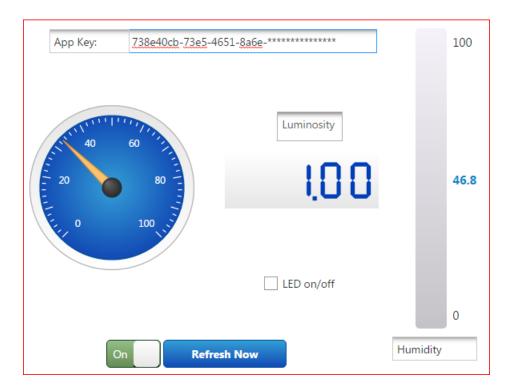

- 31. To do that, follow *How to Create a Mashup for Arduino Uno: Part One Instructions.pdf* files https://www.thingworx.com/ecosystem/academic-program/iot-projects/weather-app-arduino-uno/ but replace every reference of HTU21DThing to Your_Thing_name, and also some property names such as Analog.
- 32. For controlling an LED, need to add a Checkbox widget. Drag and drop Checkbox widget and name it (at the display name) something like "LED on/off."




33. Add setProperties Services by clicking + button next to Things_ESP8266_REST bar below.




34. Then click [All], select Things, and then select your thing.

Add Data

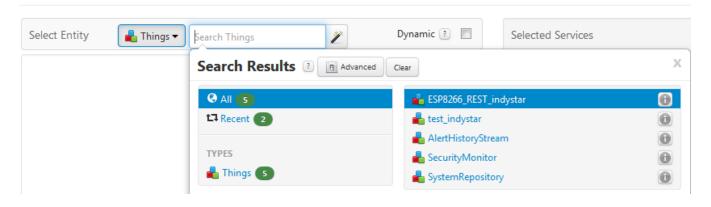

35. Then type setPro at the Filer window, and click [->] to add to Selected Services. Don't forget to check "Mashup Loaded? checkbox. Click Done and go back.

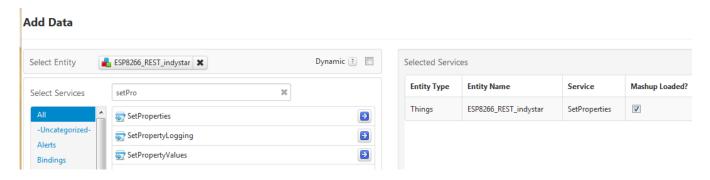


- 36. Bind the State attribute (with → mark) of the checkbox widget (it appears when you hover your mouse on the checkbox) to the MyControl on the setProperties Service that you brought in at the previous step.
- 37. Trigger the setProperties Service by the Changed event of the checkbox widget. That is, bind the Changed attribute (with → mark) of the checkbox widget to the MyControl on the setProperties Service.


38. Now when you click, "LED on/off" checkbox widget, you should see the following on the Connections window.



- 39. Save frequently while creating mashup.
- 40. Once you successfully create your mashup, launch the mashup by clicking [View Mashup] button. Your browser's pop-up blocker may not allow mashup pop-up. In that case, enable pop-ups for this site.
- 41. See if data change. Try to cover photoresistor to see if Luminosity changes.
- 42. Now check or un-check "LED on/off" checkbox widget to see if LED2 on the board is turned on or off.
- 43. Testing the Service: you could test your Service by clicking [Test] button.

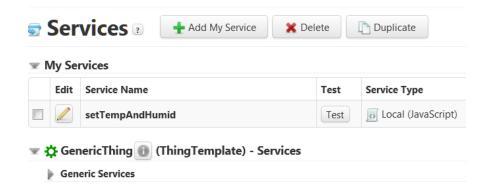

44. It will show the following Test Service Window, by which you can test your service.

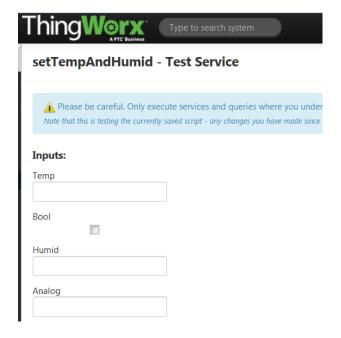

45.