

ORGANISATION EUROPÉENNE POUR LA RECHERCHE NUCLÉAIRE EUROPEAN ORGANIZATION FOR NUCLEAR RESEARCH

CERN BE-CO-HT

Functional Specifications Gennum GN4124 Core For FMC Projects

June 2010

Edited by: Checked by:

Simon Deprez Javier Serrano

Abstract

This functional specification describes the HDL controller for Gennum GN4124 chip. This chip is used on the PCI express FMC carrier (www.ohwr.org/projects/fmc-pci-carrier). It provides a Wishbone master for control and status registers access and a DMA controller for high speed data transfers.

Revision History

Version	Date	Notes
0.1	21-05-2010	Initial release
0.2	29-05-2010	Add DMA master specifications
0.3	01-06-2010	Core diagram review + clocks

Contents

1	Intr	roduction
2	GN ²	4124 core for PCIe FMC carrier
	2.1	GN4124 Local Bus Interface
	2.2	DMA Interface
		2.2.1 DMACTRLR
		2.2.2 DMASTATR
		2.2.3 DMACSTARTR
		2.2.4 DMAHSTARTLR and DMAHSTARTHR
		2.2.5 DMALENR
		2.2.6 DMANEXTLR and DMANEXTHR
		2.2.7 DMAATTRIBR
	2.3	Wishbone interface
	2.4	Interrupts
L	ist o	of Figures
	1	GN4124 core for PCIe FMC carrier

CERN BE-CO-HT Page 2 of 6

1 Introduction

The PCIe FMC carrier¹ will be associated with several FMC² mezzanines.

Each FMC mezzanine used with the PCIe FMC carrier will need a specific HDL configuration. The HDL code should be generic for reusing the carrier-specific modules with the other FMC mezzanines.

The communication between modules is essentially based on the Wishbone bus.

2 GN4124 core for PCIe FMC carrier

This core provides a Wishbone master to access control registers and read status. The Wishbone³ bus is used for almost all communications between modules. The different soft cores are reusable.

A simple DMA master is used for high speed data transfers of mezzanine card acquisitions. This DMA master is also based on Wishbone and uses a new pipelined mode to increase throughput.

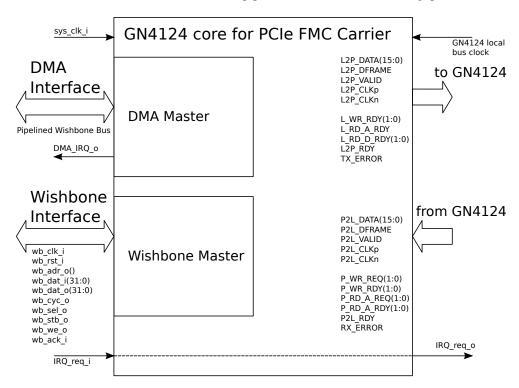


Figure 1: GN4124 core for PCIe FMC carrier

2.1 GN4124 Local Bus Interface

The GN4124 is a 4-lane PCI express to local bus bridge that is designed to work with a FPGA device to provide a high speed serial access for an application.

CERN BE-CO-HT Page 3 of 6

¹See www.ohwr.org/projects/fmc-pci-carrier.

²See VITA FMC standard: www.vita.com/fmc.

³See http://opencores.org/downloads/wbspec_b3.pdf.

The GN412x PCI Express family Reference Manual⁴ (52624-0 June 2009) describes the local bus interface at page 40.

The data exchange is based on packets similar of PCI express packets, but the headers are different. It is not possible to send MSI (Message Signaled Interrupts) packets with this bus.

2.2 DMA Interface

The DMA interface is a pipelined Wishbone bus. It performs application to host communications.

The DMA engine works with a linked list so that DMAs can be chained. The first item in the list is loaded by the host on the carrier and contains a pointer to the next one, which is in host memory. The DMA engine will fetch items from host memory and perform the corresponding DMAs until one of the items is recognized as the last one though the contents of the DMAATTRIBR register (see table 1).

Each item in the list is made of the following registers: DMACSTARTR, DMAHSTARTLR, DMAHSTARTLR, DMAHSTARTLR, DMANEXTLR, DMANEXTLR, DMANEXTHR and DMAATTRIBR. When reading these items from the host, the DMA engine assumes a little-endian host. Big-endian hosts should shuffle data accordingly so that it is found in the same order as in a little-endian host. In addition, the DMA controller provides global DMA control and status registers.

The end of a chained DMA access generates an interrupt request towards the interrupt controller (DMA_IRQ_o output).

NAME	OFFSET	MODE	RESET	DESCRIPTION
DMACTRLR		R/W		DMA engine control
DMASTATR		RO		DMA engine status
DMACSTARTR		R/W		DMA start address in the carrier
DMAHSTARTLR		R/W		DMA start address (low) in the host
DMAHSTARTHR		R/W		DMA start address (high) in the host
DMALENR		R/W		DMA read length in bytes
DMANEXTLR		R/W		Pointer (low) to next item in list
DMANEXTHR		R/W		Pointer (high) to next item in list
DMAATTRIBR		R/W		DMA endianness and control

Table 1: Register set for the DDR RAM controller block.

2.2.1 DMACTRLR

Writing 1 to this register starts a DMA transfer. Writing 2 aborts the ongoing transfer.

2.2.2 DMASTATR

This is a status register for the DMA engine. Possible contents are:

- 0: Idle (before any DMA transfer takes place).
- 1: Done (after successful DMA).
- 2: Busy.
- 3: Error (following a memory access error, either on the host or on the carrier). This also produces an interrupt.

CERN BE-CO-HT Page 4 of 6

⁴See http://my.gennum.com/mygennum/view.php/gn4124-gullwing.

• 4: Aborted (after receiving an abort command in DMACTRLR).

A DMA start command written into the DMACTRLR register takes this status out of Idle, Done, Error or Aborted into the Busy state.

2.2.3 DMACSTARTR

The DMACSTARTR register holds a byte address pointing to a location inside the DDR RAM, at which the DMA access should start. Taking into account that the DDR is a 16-bit device, only even values are allowed in DMACSTARTR.

2.2.4 DMAHSTARTLR and DMAHSTARTHR

Registers DMAHSTARTLR and DMAHSTARTHR select the low and high parts of the 64-bit start address for the DMA access in the host.

2.2.5 DMALENR

Register DMALENR selects the length of the reading in bytes, i.e. twice the number of samples to be read by the host. This means DMALENR has to hold an even number.

2.2.6 DMANEXTLR and DMANEXTHR

These two registers contain the low and high parts of the 64-bit address of the next item in the linked list, in host memory.

2.2.7 DMAATTRIBR

This register contains several control features for the DMA engine:

- Bits [31..16] are reserved.
- Bits [15..8] are used to select how many bytes the DDR controller jumps after every RAM access. A value of 2 will give interleaved samples. A value of 8 will give samples corresponding to a given channel.
- Bits [7..2] are reserved.
- Bit 1 is set to '0' for little-endian accesses and '1' for big-endian. This affects the way in which 16-bit samples can be stored in a 32-bit long word.
- Bit 0 is set to '1' to signal this is the last item in the linked list, '0' otherwise.

The end of a chained DMA access generates an interrupt request towards the interrupt controller.

2.3 Wishbone interface

The Wishbone master transforms a PCIe write into a Wishbone write and a PCIe read into a Wishbone read. Only single word reads and writes are supported.

The Wishbone bus is clocked by the wb_clk_i input.

CERN BE-CO-HT Page 5 of 6

WISHBONE DATASHEET for the 32-bit MASTER with 8-bit granularity							
Description	Spe	Specification					
General description	Wishbone master c	Wishbone master controlled by PCI express					
Supported cycles	MASTER, READ/	MASTER, READ/WRITE					
Data port, size:	32-bit	32-bit					
Data port, granularity:	8-bit	8-bit					
Data port, maximum operand size	32-bit						
Clock frequency constraints:	100 MHz						
	Signal Name	WISHBONE Equiv.					
	wb_clk_i	CLK_I					
	wb_rst_i	RST_I					
Supported signal list and cross reference	wb_cyc_o	CYC_O					
to equivalent WISHBONE signals	wb_stb_o	STB_O					
	wb_adr_o(100)	ADR_O()					
	wb_dat_i(310)	DAT_I()					
	wb_dat_o(310)	DAT_O()					
	wb_we_o	WE_O					
	wb_ack_i	ACK_I					

2.4 Interrupts

When the GN4124 master gets a one-tick-long (sys_clk_i) positive pulse on the IRQ_req_i input, a one-tick-long (GN4124 local bus clock) positive pulse is send on the IRQ_req_o output to the GN4124 chip. The interrupt signal is directly wired to GN4124 chip GPIO. When configured, the chip sends an MSI packet (Message Signaled Interrupts) to the host.

At the end of a chained DMA acces, the DMA master sends a one-tick-long (sys_clk_i) interrupt signal on the DMA_IRQ_o output toward the interrupt controller.

CERN BE-CO-HT Page 6 of 6