Development of a Cost-Effective 1kN Liquid-Fueled Rocket Propulsion System

Jason Chen, Project Caelus 501(c)(3) contact@projectcaelus.org

August 7, 2019

1 Pipe Dimension Calculation

The following section describes the theoretical process used to dimensionalize the preliminary plumbing framework in preparation for the first static cold flow test. By definition, these calculations are purely speculatory and are only used for the initial design process. The purpose of the cold flow test is to verify these parameters, and consequently adjust these parameters to better fit the system requirements.

1.1 Assumptions

To simplify the rigorous analysis and optimization processes often associated with viscous pipe flow, a couple of assumptions are applied in the following section to both shorten the development timeline and to avoid unecessarily complex or expensive methods outside of the scope of a high school amateur rocketry program. They are as follows:

- 1. Flow is driven by both pressure and gravity.
- 2. Pipe is circular and is of constant cross-sectional area.
- 3. No swirl, circumferential variation, or entrance effects.
- 4. No shaft-work or heat-transfer effects.
- 5. A simplified steady-flow energy equation due to Assumption 4.

1.2 Iterative Diameter Calculation

Given the simplifying assumptions mentioned in Section 1.1, we can begin with the classic case of Bernoulli's Equation:

$$p + \frac{1}{2}\rho V^2 + \rho gz = constant \tag{1.1}$$

where p is the pressure, ρ is density, V is the total velocity, z is elevation, and g represents gravitational acceleration. It gives insight into the balance between pressure, velocity, and elevation by assuming that the two points in question lie on a streamline, the fluid is incompressible, the flow is steady and inviscid, and there is no friction. Although useful for some applications, it is not adequate for designing robust piping systems which will in actuality encounter such effects.

The addition of a head loss term, denoted as h_f , is the first step in introducing a viscous term into an otherwise inviscid equation. Head loss can simply be thought of as an additional pressure loss in the system due to viscous effects, a sudden expansion/contraction, and/or obstructions to its path such as pipe elbows, bends, valves, etc. This can be done by first realizing that the continuity (conservation of mass) equation, when an arbitrary fixed control volume has only a number of one-dimensional inlets and outlets and when the flow within the control volume is steady (dp/dt = 0), can be written simply as

$$\int_{CS} \rho(\vec{V} \cdot \vec{n}) dA = 0 \tag{1.2}$$

Equation 1.2 above refers to the following figure (see References): This states that in

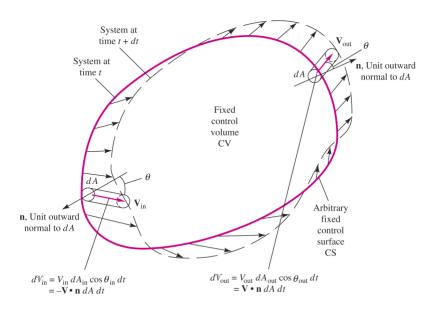


Figure 1: An arbitrary fixed control volume with an arbitrary flow pattern.

steady flow, the mass flows entering and exitting the control volume are exactly equal, while neglecting sources or sinks of mass which might be embedded in the control volume. Due to Assumption 2, Equation 1.2 reduces to

$$Q_1 = Q_2 = constant (1.3)$$

$$V_1 = \frac{Q_1}{A_1} = V_2 = \frac{Q_2}{A_2} \tag{1.4}$$

Bernoulli's Equation (Equation 1.1, in combination with the steady-flow energy equation) can thus be reduced and rearranged into

$$E = mc^2 (1.5)$$

We can begin by introducing the dimensionless Darcy friction factor f as a baseline relationship between roughness and pipe resistance:

$$\frac{8\tau_w}{\rho V^2} = f = F(Re_d, \frac{\epsilon}{d}) \tag{1.6}$$

where τ_w depicts the wall shear stress, ρ is density, V is the mean velocity, and F represents a later-defined function between the Reynold's Number Re_d and the average pipe roughness to diameter ratio $\frac{\epsilon}{d}$ (also known as relative roughness).

Using Equation 1.6 and the wall shear stress equation (see References), we obtain the desired expression for finding pipe-head loss, also known as the Darcy-Weisbach equation. It is valid for duct flows of any cross section and any Reynold's Number

$$h_f = f \frac{L}{d} \frac{V^2}{2q} \tag{1.7}$$

where h_f represents the head loss factor as a function of the dimensionless Darcy friction factor f, L is the length of the pipe, and g is equal to one standard Earth gravity.

1.3 The Reynolds Transport Theorem

We can begin by introducing the concept of control-volume analysis —a powerful approach to solving fundamental fluid mechanics probelms —in which a mathematical abstraction is employed to generate mathematical models of physical systems. That is, in an inertial frame of reference, the *control volume* is a volume fixed in space or moving with constant velocity with the fluid flows. The surface enclosing the control volume is referred to as the *control surface*. To convert a system analysis to a control-volume analysis, we must shift our perspective such that our mathematics apply to a specific region rather than to individual bodies. This process is called the *Reynolds Transport Theorem*, and allows us to study certain properties (e.g. angular momentum L, enthalpy h, etc.) crossing the boundaries of the region. Essentially, we need to relate the time derivative of a system property of that property within a certain region.

[Quoting directly from References] The desired conversion formula differs slightly according to whether the control volume is fixed, moving, or deformable, but for the purposes of our application, we'll be focusing on a fixed control volume. The fixed control volume in Figure ?? a encloses a stationary region of interest to a nozzle designer. The control surface is an abstract concept that does not hinder the flow in any way. It slices through the jet leaving the nozzle, circles around through the surrounding (ambient) atmosphere, and slices through the flange bolts and the fluid within the nozzle.

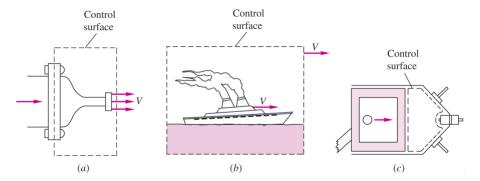


Figure 2: Fixed, moving, and deformable control volumes: (a) fixed control volume for nozzle stress analysis; (b) control volume moving at ship speed for drag force analysis; (c) control volume deforming within cylinder for transient pressure variation analysis.

This particular control volume exposes the stresses in the flange bolts, which contribute to applied forces in the momentum analysis. In this sense, the control volume resembles the *free-body* concept, which is applied to systems in solid-mechanics analysis.

1.4 Flow in a Circular Pipe

1.5 Example Calculation

1.5.1 Determining Head Loss and Pressure Drop Using the Moody Chart

1.6 Units and Symbols

All units are implied with accordance to the Metric system (seconds, kilograms, Pascals, etc.), but are defined explicity along with common Greek symbols below for ease-of-use:

- $Q = \text{volumetric flow rate}, m^3/s$
- u = velocity, m/s
- u(r), V = local mean velocity, m/s
- $u_{max} = \text{local maximum velocity}, m/s$
- $\mu = \text{dynamic viscosity}, \frac{kg}{m \cdot s} \text{ or } Pa \cdot s$
- $\nu = \text{kinematic viscosity}, m^2/s$
- R = radius, m