## **CPE301 - SPRING 2018**

# Design Assignment 02

# **DO NOT REMOVE THIS PAGE DURING SUBMISSION:**

The student understands that all required components should be submitted in complete for grading of this assignment.

NO	SUBMISSION ITEM	COMPLETED (Y/N)	MARKS (/MAX)
1	COMPONENTS LIST AND CONNECTION BLOCK DIAGRAM w/ PINS		
2.	INITIAL CODE OF TASK 1/A		
3.	INCREMENTAL / DIFFERENTIAL CODE OF TASK 2/B		
3.	INCREMENTAL / DIFFERENTIAL CODE OF TASK 3/C		
3.	INCREMENTAL / DIFFERENTIAL CODE OF TASK 4/D		
3.	INCREMENTAL / DIFFERENTIAL CODE OF TASK 5/E		
4.	SCHEMATICS		
5.	SCREENSHOTS OF EACH TASK OUTPUT		
5.	SCREENSHOT OF EACH DEMO		
6.	VIDEO LINKS OF EACH DEMO		
7.	GOOGLECODE LINK OF THE DA		

**Task 1/A**: Design a delay subroutine to generate a waveform on PORTB.2 with 50% DC and 0.5 sec period. (I was told that just having the LED light turn on/off every 0.25s would suffice.)

#### a) C code

```
1) toggle LED light on
     2) delay 0.25s
     3) toggle LED light off
     4) delay 0.25s
     5) repeat
 #define F_CPU 8000000UL
 #include <avr/io.h>
 #include <util/delay.h>
 #define LEDPORT PORTB
 #define LED_PIN PORTB2
 #define LED_DDR DDRB
∃int main(void)
 {
     LED_DDR |= (1 << LED_PIN); // Set LED to output
     LEDPORT &= ~(1 << LED_PIN); // Initial state of OFF
     while (1) // Loops forever
         LEDPORT |= (1 << LED_PIN); // turn LED on
         _delay_ms(250); // 0.25 sec delay
         LEDPORT &= ~(1 << LED_PIN); // turn LED off
         _delay_ms(250); // 0.25 sec delay
}
```

## b) Assembly code

```
.org 0
    LDI R16, 4 ; needed to toggle LED
    SBI DDRB, 2 ;PB2 as output
    LDI R17,0 ; needed to toggle led
    ;OUT PORTB,R17
    LDI R20,5 ;to set prescaler
    STS TCCR1B,R20 ;Prescaler: 1024
    RCALL delay ; calling timer to wait for 0.25 sec
    EOR R17, R16 ; XOR to toogle led
    OUT PORTB,R17 ; display LED
    RJMP begin ; repeating i.e, while(1)
delay:
    LDS R29, TCNT1H ; loading upper bit of counter to R29
    LDS R28, TCNT1L ;loading lower bit of counter to R28
    CPI R28, 0xA1 ; comparing if lower is 0xA1
    BRSH body
    RJMP delay
body:
    CPI R29,0x07 ; comparing if higher is 0x07
    BRSH done ;if equal, branch to "done"
    RJMP delay ;if not, loop back
done:
    LDI R20,0x00
    STS TCNT1H,R20 ; resetting the counter to 0 for next round
    STS TCNT1L,R20 ; resetting the counter to 0 for next round
```

c) Timing Proof

In /da02\_screenshots/TimingProof folder, under the names:

Assembly code: ASM\_T1.PNG

C code: C\_T1.PNG

**Task 2/B**: Connect a switch to PORTD.2 (active high - turn on the pull up transistor) to poll for an event to turn on the led at PORTB.2 for 1 sec after the event. (There were no further instructions of what to do after, so I made the LED light toggle on/off 1 second after pressing the button.)

#### a) C code

```
1) push button is initially off
     2) push button
     3) toggle LED light
 #define F CPU 8000000UL
 #include <avr/io.h>
 #include <util/delay.h>
 #define LEDPORT PORTB
 #define LED PIN PORTB2
 #define LED DDR DDRB
 #define BUTTONPORT PORTD
 #define BUTTONDDR DDRD
 #define BUTTON_PIN PORTD2
 #define BUTTONPIN PIND
 short checkButton(); // prototype
⊟int main(void)
     LED_DDR |= (1 << LED_PIN); // Set LED to output
    LEDPORT &= ~(1 << LED_PIN); // Initial state of OFF
    BUTTONPORT |= (1 << BUTTON_PIN); // pull-up
     while (1) // Loops forever
         short pressed = checkButton(); // branch to
        if(pressed) // if button is pressed,
            _delay_ms(900); // 0.9 sec delay
            // (0.9 sec + 0.1 sec makes 1 sec delay)
            LEDPORT ^= (1 << LED_PIN); // turn LED on
     }
}
⊨short checkButton()
     short count = 0; // counter
     while(!(BUTTONPIN & (1 << BUTTON_PIN)) && // check if button is stayed
             count < 20)
         // counter to make sure button is being pressed for 0.1 sec
         _delay_ms(5);
     return (count == 20);
     // return true if button has been held for 0.1 sec
}
```

#### b) Assembly code

```
.INCLUDE "M328pDEF.INC"
.org 0
   LDI R16, 4 ; needed to toggle LED
   SBI DDRB, 2 ;PB2 as output
    CBI DDRD, 2 ;PD2 as input
   LDI R17, 0 ; needed to toggle led
    ;OUT PORTB,R17
    LDI R20,5 ;to set prescaler
   OUT TCCR0B,R20 ;Prescaler: 1024
button:
    SBIS PIND, 2 ;prompts for button
    JMP begin ; jumps to LED toggle function
    RJMP button ;loop back to prompt for button
begin:
    RCALL delay ; calling timer to wait for 1 sec
    EOR R17, R16 ; XOR to toogle led
   OUT PORTB,R17 ; display LED
   RJMP button ; jump to prompt for button again
delay:
   IN R28, TCNT0 ;loading lower bit of counter to R28
   CPI R28, 0xFF ; check for overflow
   BREQ HIGHINC ; jump to increment overflow count
    CPI R28, 0xA0 ; comparing if timer is 0xA0
    BREQ body ;if equal, check for OVF_count
   RJMP delay ;if not, loop back
HIGHINC:
   INC R21 ;increment overflow count
   LDI R20, 0
   OUT TCNT0, R20 ; reset TCNT
   RJMP cont ;loop back to check timer bits
body:
    CPI R21,0x1E ; comparing if OVF_count is 0x1E
   BRSH done ;if equal, branch to "done"
   RJMP delay ;if not, loop back
done:
   LDI R21, 0 ;reset overflow count
    LDI R20, 0
   OUT TCNT0, R20 ; resetting the counter to 0 for next round
```

## c) Timing Proof

In /da02\_screenshots/TimingProof folder, under the names:

Assembly code: ASM\_T2.PNG

C code: C\_T2.PNG

Task 3/C: Implement Task 1 using Timer 0. Count OVF occurrence if needed. Do not use interrupts.

#### a) C code

```
1) USE TIMERØ (TCNTØ) TO CHECK FOR OVF
     2) ONCE OVF == 1, TOGGLE LED LIGHT
     3) RESTART TIMERO
     4) REPEAT
 #include <avr/io.h>
 #define LEDPORT PORTB
 #define LED_PIN PORTB2
 #define LED_DDR DDRB
⊟int main(void)
     volatile int count = 0; // initialize overflow count
     LED_DDR |= (1 << LED_PIN); // Set LED to output
     LEDPORT &= ~(1 << LED_PIN); // Initial state of OFF
     TCCR0A = 0; // normal mode
     TCCR0B = (1 << CS02) | (1 << CS00); // Clock divided by 1024
     while (1) // Loops forever
         if(TCNT0 >= 255)
             // using this check and the two for loops inside
             //with cause the LED to toggle for 0.25 sec
             if(count == 6)
                 for(volatile unsigned int i=0; i<38; i++)
                 for(volatile unsigned int j=0; j<255; j++);</pre>
                 LEDPORT ^= (1 << LED_PIN); //toggle LED light
                 count = 0; //reset count to continuously toggle LED
             else
                 count++; // overflow occurred
         TCNT0 = 0; // reset timer
```

#### b) Assembly code

```
.org 0
    LDI R16, 4 ; needed to toggle LED
    LDI R21, 0 ;OVF count
    SBI DDRB, 2 ; PB2 as output
    LDI R17,0 ; needed to toggle led
    OUT PORTB, R17
    LDI R20,5 ;to set prescaler
    OUT TCCR0B, R20 ; Prescaler: 1024
begin:
    RCALL delay ; calling timer to wait for 0.25 sec
    EOR R17, R16 ; XOR to toogle led
    OUT PORTB, R17 ; display LED
    RJMP begin ; repeating i.e, while(1)
delay:
    IN R28, TCNT0 ; loading lower bit of counter to R28
    CPI R28, 0xFF ; check for overflow
    BREQ HIGHINC ; jump to increment overflow count
```

## (assembly code cont.)

```
cont:
    CPI R28, 0xA0 ; comparing if timer is 0xA0
    BREQ body ; if equal, check for OVF_count
    RJMP delay ;if not, loop back
HIGHINC:
    INC R21 ;increment overflow count
    LDI R20, 0
    OUT TCNT0, R20 ; reset TCNT
    RJMP cont ;loop back to check timer bits
body:
    CPI R21,0x07 ; comparing if higher is 0x07
    BRSH done ;if equal, branch to "done"
    RJMP delay ;if not, loop back
done:
    LDI R21, 0 ; reset overflow count
    LDI R20, 0
    OUT TCNT0,R20 ; resetting the counter to 0 for next round
    RET
```

## c) Timing Proof

In /da02\_screenshots/TimingProof folder, under the names:

Assembly code: ASM\_T3.PNG

C code: C\_T3.PNG

Task 4/D: Implement Task 1 using TIMERO\_OVF\_vect interrupt mechanism.

## a) C code

```
1) HAVE A 0.5 PERIOD, TOGGLE LED EVERY 0.25s
     2) ONCE OVF == 1, TURN LED ON FOR 1 SEC
    3) AFTER 1 SEC, CONTINUE 0.5 PERIOD LIKE NORMAL
 #include <avr/io.h>
#include <avr/interrupt.h>
 #define LEDPORT PORTB
 #define LED_PIN PORTB2
 #define LED_DDR DDRB
volatile int count;
⊟int main(void)
     volatile int count = 0;
     LED_DDR |= (1 << LED_PIN); // Set LED to output
    TCCR0B |= (1 << CS02) | (1 << CS00); // clock divided by 1024
    TIMSK0 |= (1 << TOIE0); // enable interrupt on overflow
    sei(); // turn on interrupts
     while (1);
```

## 

## b) Assembly code

```
.org 0
   jmp main
.org 0x20
    jmp TIM0_OVF ; Timer0 overflow interrupt vector
main:
   LDI R16, 4 ; needed to toggle LED
    LDI R21, 0 ;OVF count
    SBI DDRB, 2 ;PB2 as output
   LDI R17,0 ; needed to toggle led
    ;OUT PORTB, R17
    LDI R20,5 ;to set prescaler
   OUT TCCR0B,R20 ;Prescaler: 1024
    LDI R20, 0x01 ;can also use (1<<TOIE0)
    STS TIMSKO, R20 ; enable overflow interrupt
   SEI ; enable global interrupts
Loop:
   RJMP Loop ;infinite loop
TIM0_OVF:
delay:
    IN R28, TCNT0 ;loading timer0 to R28
    CPI R28, 0xFF ; check for overflow
    BREQ HIGHINC ; jump to increment overflow count
cont:
    CPI R28, 0xB6 ; comparing if timer is 0xB6
    BREQ body ;if equal, check for OVF_count
    RJMP delay ;if not, loop back
HIGHINC:
    INC R21 ;increment overflow count
    LDI R20, 0
    OUT TCNT0, R20 ; reset TCNT
   RJMP cont ;loop back to check timer bits
body:
    CPI R21,0x06 ; comparing if OVF_count is 0x06
    BRSH done ;if equal, branch to "done"
    RJMP delay ;if not, loop back
done:
    EOR R17, R16 ; XOR to toogle led
   OUT PORTB, R17 ; display LED
    LDI R21, 0 ;reset overflow count
   OUT TCNT0,R20 ; resetting the counter to 0 for next round
   LDI R20, 5 ;Timer0: enabled, prescaler = 1024
   OUT TCCR0B, R20 ; prescaler = 1024
   RETI ; return from interrupt, interrupts enabled
```

#### c) Timing Proof

In /da02\_screenshots/TimingProof folder, under the names:

Assembly code: ASM T4.PNG

C code: C\_T4.PNG

Task 5/E: Implement Task 2 using INTO interrupt mechanism.

#### a) C code

```
#define F_CPU 8000000UL
 #include <avr/io.h>
 #include <avr/interrupt.h>
 #include <util/delay.h>
 #define LEDPORT PORTB
 #define LED_PIN PORTB2
 #define LED_DDR DDRB
 #define BUTTONPORT PORTD
 #define BUTTONDDR DDRD
 #define BUTTON_PIN PORTD2
 #define BUTTONPIN PD2
□ISR(INT0_vect)
     unsigned char temp; // Saves current state of LED light
    EIFR |= (1 <<INTF0); // clear flag
    temp = LEDPORT; // Save the LED light state
    LEDPORT |= (1 << LED_PIN); // Turn LED on
     delay ms(1000); // Keep LED on for 1 sec
    LEDPORT = temp; // Restore state
}
⊟int main(void)
     LED_DDR |= (1 << LED_PIN); // Set LED to output
    LEDPORT &= ~(1 << LED_PIN); // Initial state of OFF
     BUTTONPORT = (1 << BUTTONPIN); // pull-up
     BUTTONDDR = (1 << BUTTONPIN); // set PD2 as input (using for interrupt INT0)
     EIMSK = (1 << INT0);
                                           // Enable INT0
     EICRA = (1 << ISC01) | (1 << ISC00); // Trigger INTO on rising edge
     sei(); // enables interrupt
     while (1) // Loops forever
        LEDPORT |= (1 << LED_PIN); // turn LED on
         _delay_ms(250); // 0.25 sec delay
        LEDPORT &= ~(1 << LED_PIN); // turn LED off
         _delay_ms(250); // 0.25 sec delay
 }
```

#### b) Assembly code

```
.INCLUDE "M328pDEF.INC"
                                                              body:
                                                                   CPI R21,0x07 ; comparing if higher is 0x07
.org 0
                                                                   BRSH done ;if equal, branch to "done"
    jmp main
                                                                   RJMP delay ;if not, loop back
.org 0x02
    jmp INTO_v ;external interrupt vector
                                                                   LDI R21, 0 ; reset overflow count
                                                                   LDI R20, 0
                                                                   OUT TCNT0, R20 ; resetting the counter to 0 for next round
    LDI R16, 4 ;needed to toggle LED
    SBI DDRB, 2 ;PB2 as output
    CBI DDRD, 2 ;PD2 as input
                                                              INTO_v:
   LDI R17, 0 ; needed to toggle led
                                                               begin2:
                                                                   LDI R20, (1 << INTF0)
    LDI R20,5 ;to set prescaler
                                                                   OUT EIFR, R20 ; clear flag
    OUT TCCR0B,R20 ;Prescaler: 1024
                                                                   SBI PORTB, 2 ;turn LED light on
   LDI R20, (1 << INT0)
                                                                   RCALL delay2 ;delay function
    OUT EIMSK, R20 ; set bits for EIMSK
                                                                   RETI ; return from interrupt, interrupts enabled
    LDI R20, (1 << ISC11) | (1 << ISC01)
                                                              delay2:
    STS EICRA, R20 ; set bits for EICRA
                                                                   IN R28, TCNT0 ;loading timer0 to R28
                                                                   CPI R28, 0xFF ; check for overflow
                                                                   BREQ HIGHINC2 ; jump to increment overflow count
button:
    SBI PIND, 2 ;prompts for button
                                                               cont2:
    RJMP begin ;toggle LED if != button
                                                                   CPI R28, 0x84 ; comparing if timer is 0x86
                                                                   BREQ body2 ;if equal, check for OVF_count
begin:
                                                                   RJMP delay2 ;if not, loop back
    RCALL delay ;delay function
    EOR R17,R16 ;XOR to toogle led
                                                               HIGHINC2:
    OUT PORTB,R17 ; display LED
                                                                   INC R21 ;increment overflow count
   RJMP button ; jump to prompt for button again
delay:
                                                                   LDI R20, 0
                                                                   OUT TCNT0, R20 ; reset TCNT
    IN R28, TCNT0 ;loading lower bit of counter to R28
    CPI R28, 0xFF ; comparing if lower is 0x41
                                                                   RJMP cont2 ;loop back to check timer bits
    BREQ HIGHINC
                                                               body2:
                                                                   CPI R21,0x1E ; comparing if OVF_count is 0x1E
    CPI R28, 0xA0 ; comparing if timer is 0xA0
                                                                   BRSH done2 ;if equal, branch to "done2"
    BREQ body ;if equal, check for OVF_count
                                                                   RJMP delay2 ;if not, loop back
   RJMP delay ;if not, loop back
                                                              done2:
                                                                   LDI R21, 0 ; reset overflow count
                                                                   LDI R20. 0
    INC R21 ;increment overflow count
                                                                   OUT TCNT0,R20 ; resetting the counter to 0 for next round
    LDI R20, 0
    OUT TCNT0, R20 ; reset TCNT
    RJMP cont ;loop back to check timer bits
```

#### c) Timing Proof

In /da02\_screenshots/TimingProof folder, under the names:


Assembly code: ASM\_T5a.PNG and ASM\_T5b.PNG

C code: C\_T5.PNG

#### **Schematics:**


This schematic is the basic setup for this assignment. PORTB2 was used in all 5 tasks (website used to build this schematic did not let me connect the resistor and ATmega to the led, so the connection in the picture below was the best I could do). PORTD2 was used in task 2 and 5. The ATmega328p was connected to the ISR cable to my laptop and a VCC and GND source, which connected to the power supply (delivering a fixed 5V to microcontroller).

# a) Fritzing schematics

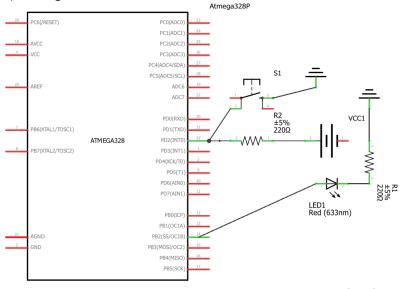

fritzing


# b) Fritzing breadboard

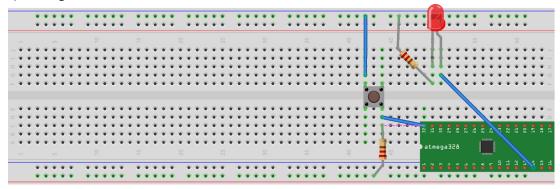


fritzing

# Physical Set-Up:

b) the power supply (using fixed 5V)

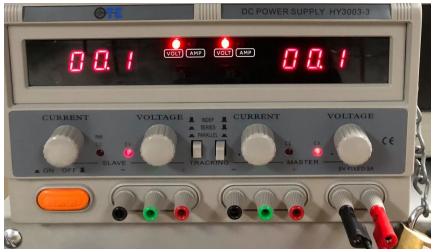

## a) the breadboard set-up

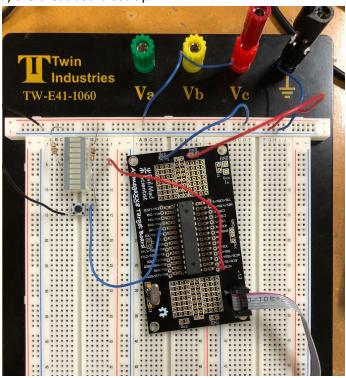

# Other notes:

**da02\_screenshots** in the repository contains the photos of the timing proof, schematics, physical setup, and screenshots of all of my code for this assignment.

Brief explanations of the timing proof are in **TP\_README.txt** in the same folder.

Outputs of each demo are shown in the Youtube videos. (It's difficult to prove with screenshots)

**GITHUB LINK:** https://github.com/JeffinVegas/EmbSys.git

YOUTUBE LINK: In the videos\_DA02.txt file

## **Student Academic Misconduct Policy**

http://studentconduct.unlv.edu/misconduct/policy.html

"This assignment submission is my own, original work".

Jeffrey Razon