CPE301 - SPRING 2018

Design Assignment 02

DO NOT REMOVE THIS PAGE DURING SUBMISSION:

The student understands that all required components should be submitted in complete for grading of this assignment.

NO	SUBMISSION ITEM	COMPLETED (Y/N)	MARKS (/MAX)
1	COMPONENTS LIST AND CONNECTION BLOCK DIAGRAM w/ PINS		
2.	INITIAL CODE OF TASK 1/A		
3.	INCREMENTAL / DIFFERENTIAL CODE OF TASK 2/B		
3.	INCREMENTAL / DIFFERENTIAL CODE OF TASK 3/C		
3.	INCREMENTAL / DIFFERENTIAL CODE OF TASK 4/D		
3.	INCREMENTAL / DIFFERENTIAL CODE OF TASK 5/E		
4.	SCHEMATICS		
5.	SCREENSHOTS OF EACH TASK OUTPUT		
5.	SCREENSHOT OF EACH DEMO		
6.	VIDEO LINKS OF EACH DEMO		
7.	GOOGLECODE LINK OF THE DA		

Task 1/A: Design a delay subroutine to generate a waveform on PORTB.2 with 50% DC and 0.5 sec period. (I was told that just having the LED light turn on/off every 0.25s would suffice.)

a) C code

```
1) toggle LED light on
     2) delay 0.25s
     3) toggle LED light off
     4) delay 0.25s
     5) repeat
 #define F_CPU 8000000UL
 #include <avr/io.h>
 #include <util/delay.h>
 #define LEDPORT PORTB
 #define LED_PIN PORTB2
 #define LED_DDR DDRB
∃int main(void)
 {
     LED_DDR |= (1 << LED_PIN); // Set LED to output
     LEDPORT &= ~(1 << LED_PIN); // Initial state of OFF
     while (1) // Loops forever
         LEDPORT |= (1 << LED_PIN); // turn LED on
         _delay_ms(250); // 0.25 sec delay
         LEDPORT &= ~(1 << LED_PIN); // turn LED off
         _delay_ms(250); // 0.25 sec delay
}
```

b) Assembly code

```
.org 0
    LDI R16, 4 ; needed to toggle LED
    SBI DDRB, 2 ;PB2 as output
    LDI R17,0 ; needed to toggle led
    ;OUT PORTB,R17
    LDI R20,5 ;to set prescaler
    STS TCCR1B,R20 ;Prescaler: 1024
    RCALL delay ; calling timer to wait for 0.25 sec
    EOR R17, R16 ; XOR to toogle led
    OUT PORTB,R17 ; display LED
    RJMP begin ; repeating i.e, while(1)
delay:
    LDS R29, TCNT1H ; loading upper bit of counter to R29
    LDS R28, TCNT1L ;loading lower bit of counter to R28
    CPI R28, 0xA1 ; comparing if lower is 0xA1
    BRSH body
    RJMP delay
body:
    CPI R29,0x07 ; comparing if higher is 0x07
    BRSH done ;if equal, branch to "done"
    RJMP delay ;if not, loop back
done:
    LDI R20,0x00
    STS TCNT1H,R20 ; resetting the counter to 0 for next round
    STS TCNT1L,R20 ; resetting the counter to 0 for next round
```

c) Timing Proof

In /da02_screenshots/TimingProof folder, under the names:

Assembly code: ASM_T1.PNG

C code: C_T1.PNG

Task 2/B: Connect a switch to PORTD.2 (active high - turn on the pull up transistor) to poll for an event to turn on the led at PORTB.2 for 1 sec after the event. (There were no further instructions of what to do after, so I made the LED light toggle on/off 1 second after pressing the button.)

a) C code

```
1) push button is initially off
     2) push button
     3) toggle LED light
 #define F CPU 8000000UL
 #include <avr/io.h>
 #include <util/delay.h>
 #define LEDPORT PORTB
 #define LED PIN PORTB2
 #define LED DDR DDRB
 #define BUTTONPORT PORTD
 #define BUTTONDDR DDRD
 #define BUTTON_PIN PORTD2
 #define BUTTONPIN PIND
 short checkButton(); // prototype
⊟int main(void)
     LED_DDR |= (1 << LED_PIN); // Set LED to output
    LEDPORT &= ~(1 << LED_PIN); // Initial state of OFF
    BUTTONPORT |= (1 << BUTTON_PIN); // pull-up
     while (1) // Loops forever
         short pressed = checkButton(); // branch to
        if(pressed) // if button is pressed,
            _delay_ms(900); // 0.9 sec delay
            // (0.9 sec + 0.1 sec makes 1 sec delay)
            LEDPORT ^= (1 << LED_PIN); // turn LED on
     }
}
⊨short checkButton()
     short count = 0; // counter
     while(!(BUTTONPIN & (1 << BUTTON_PIN)) && // check if button is stayed
             count < 20)
         // counter to make sure button is being pressed for 0.1 sec
         _delay_ms(5);
     return (count == 20);
     // return true if button has been held for 0.1 sec
}
```

b) Assembly code

```
.INCLUDE "M328pDEF.INC"
.org 0
   LDI R16, 4 ; needed to toggle LED
   SBI DDRB, 2 ;PB2 as output
    CBI DDRD, 2 ;PD2 as input
   LDI R17, 0 ; needed to toggle led
    ;OUT PORTB,R17
    LDI R20,5 ;to set prescaler
   OUT TCCR0B,R20 ;Prescaler: 1024
button:
    SBIS PIND, 2 ;prompts for button
    JMP begin ; jumps to LED toggle function
    RJMP button ;loop back to prompt for button
begin:
    RCALL delay ; calling timer to wait for 1 sec
    EOR R17, R16 ; XOR to toogle led
   OUT PORTB,R17 ; display LED
   RJMP button ; jump to prompt for button again
delay:
   IN R28, TCNT0 ;loading lower bit of counter to R28
   CPI R28, 0xFF ; check for overflow
   BREQ HIGHINC ; jump to increment overflow count
    CPI R28, 0xA0 ; comparing if timer is 0xA0
    BREQ body ;if equal, check for OVF_count
   RJMP delay ;if not, loop back
HIGHINC:
   INC R21 ;increment overflow count
   LDI R20, 0
   OUT TCNT0, R20 ; reset TCNT
   RJMP cont ;loop back to check timer bits
body:
    CPI R21,0x1E ; comparing if OVF_count is 0x1E
   BRSH done ;if equal, branch to "done"
   RJMP delay ;if not, loop back
done:
   LDI R21, 0 ;reset overflow count
    LDI R20, 0
   OUT TCNT0, R20 ; resetting the counter to 0 for next round
```

c) Timing Proof

In /da02_screenshots/TimingProof folder, under the names:

Assembly code: ASM_T2.PNG

C code: C_T2.PNG

Task 3/C: Implement Task 1 using Timer 0. Count OVF occurrence if needed. Do not use interrupts.

a) C code

```
1) USE TIMERØ (TCNTØ) TO CHECK FOR OVF
     2) ONCE OVF == 1, TOGGLE LED LIGHT
     3) RESTART TIMERO
     4) REPEAT
 #include <avr/io.h>
 #define LEDPORT PORTB
 #define LED_PIN PORTB2
 #define LED_DDR DDRB
⊟int main(void)
     volatile int count = 0; // initialize overflow count
     LED_DDR |= (1 << LED_PIN); // Set LED to output
     LEDPORT &= ~(1 << LED_PIN); // Initial state of OFF
     TCCR0A = 0; // normal mode
     TCCR0B = (1 << CS02) | (1 << CS00); // Clock divided by 1024
     while (1) // Loops forever
         if(TCNT0 >= 255)
             // using this check and the two for loops inside
             //with cause the LED to toggle for 0.25 sec
             if(count == 6)
                 for(volatile unsigned int i=0; i<38; i++)
                 for(volatile unsigned int j=0; j<255; j++);</pre>
                 LEDPORT ^= (1 << LED_PIN); //toggle LED light
                 count = 0; //reset count to continuously toggle LED
             else
                 count++; // overflow occurred
         TCNT0 = 0; // reset timer
```

b) Assembly code

```
.org 0
    LDI R16, 4 ; needed to toggle LED
    LDI R21, 0 ;OVF count
    SBI DDRB, 2 ; PB2 as output
    LDI R17,0 ; needed to toggle led
    OUT PORTB, R17
    LDI R20,5 ;to set prescaler
    OUT TCCR0B, R20 ; Prescaler: 1024
begin:
    RCALL delay ; calling timer to wait for 0.25 sec
    EOR R17, R16 ; XOR to toogle led
    OUT PORTB, R17 ; display LED
    RJMP begin ; repeating i.e, while(1)
delay:
    IN R28, TCNT0 ; loading lower bit of counter to R28
    CPI R28, 0xFF ; check for overflow
    BREQ HIGHINC ; jump to increment overflow count
```

(assembly code cont.)

```
cont:
    CPI R28, 0xA0 ; comparing if timer is 0xA0
    BREQ body ; if equal, check for OVF_count
    RJMP delay ;if not, loop back
HIGHINC:
    INC R21 ;increment overflow count
    LDI R20, 0
    OUT TCNT0, R20 ; reset TCNT
    RJMP cont ;loop back to check timer bits
body:
    CPI R21,0x07 ; comparing if higher is 0x07
    BRSH done ;if equal, branch to "done"
    RJMP delay ;if not, loop back
done:
    LDI R21, 0 ; reset overflow count
    LDI R20, 0
    OUT TCNT0,R20 ; resetting the counter to 0 for next round
    RET
```

c) Timing Proof

In /da02_screenshots/TimingProof folder, under the names:

Assembly code: ASM_T3.PNG

C code: C_T3.PNG

Task 4/D: Implement Task 1 using TIMERO_OVF_vect interrupt mechanism.

a) C code

```
1) HAVE A 0.5 PERIOD, TOGGLE LED EVERY 0.25s
     2) ONCE OVF == 1, TURN LED ON FOR 1 SEC
    3) AFTER 1 SEC, CONTINUE 0.5 PERIOD LIKE NORMAL
 #include <avr/io.h>
#include <avr/interrupt.h>
 #define LEDPORT PORTB
 #define LED_PIN PORTB2
 #define LED_DDR DDRB
volatile int count;
⊟int main(void)
     volatile int count = 0;
     LED_DDR |= (1 << LED_PIN); // Set LED to output
    TCCR0B |= (1 << CS02) | (1 << CS00); // clock divided by 1024
    TIMSK0 |= (1 << TOIE0); // enable interrupt on overflow
    sei(); // turn on interrupts
     while (1);
```


b) Assembly code

```
.org 0
   jmp main
.org 0x20
    jmp TIM0_OVF ; Timer0 overflow interrupt vector
main:
   LDI R16, 4 ; needed to toggle LED
    LDI R21, 0 ;OVF count
    SBI DDRB, 2 ;PB2 as output
   LDI R17,0 ; needed to toggle led
    ;OUT PORTB, R17
    LDI R20,5 ;to set prescaler
   OUT TCCR0B,R20 ;Prescaler: 1024
    LDI R20, 0x01 ;can also use (1<<TOIE0)
    STS TIMSKO, R20 ; enable overflow interrupt
   SEI ; enable global interrupts
Loop:
   RJMP Loop ;infinite loop
TIM0_OVF:
delay:
    IN R28, TCNT0 ;loading timer0 to R28
    CPI R28, 0xFF ; check for overflow
    BREQ HIGHINC ; jump to increment overflow count
cont:
    CPI R28, 0xB6 ; comparing if timer is 0xB6
    BREQ body ;if equal, check for OVF_count
    RJMP delay ;if not, loop back
HIGHINC:
    INC R21 ;increment overflow count
    LDI R20, 0
    OUT TCNT0, R20 ; reset TCNT
   RJMP cont ;loop back to check timer bits
body:
    CPI R21,0x06 ; comparing if OVF_count is 0x06
    BRSH done ;if equal, branch to "done"
    RJMP delay ;if not, loop back
done:
    EOR R17, R16 ; XOR to toogle led
   OUT PORTB, R17 ; display LED
    LDI R21, 0 ;reset overflow count
   OUT TCNT0,R20 ; resetting the counter to 0 for next round
   LDI R20, 5 ;Timer0: enabled, prescaler = 1024
   OUT TCCR0B, R20 ; prescaler = 1024
   RETI ; return from interrupt, interrupts enabled
```

c) Timing Proof

In /da02_screenshots/TimingProof folder, under the names:

Assembly code: ASM T4.PNG

C code: C_T4.PNG

Task 5/E: Implement Task 2 using INTO interrupt mechanism.

a) C code

```
#define F_CPU 8000000UL
 #include <avr/io.h>
 #include <avr/interrupt.h>
 #include <util/delay.h>
 #define LEDPORT PORTB
 #define LED_PIN PORTB2
 #define LED_DDR DDRB
 #define BUTTONPORT PORTD
 #define BUTTONDDR DDRD
 #define BUTTON_PIN PORTD2
 #define BUTTONPIN PD2
□ISR(INT0_vect)
     unsigned char temp; // Saves current state of LED light
    EIFR |= (1 <<INTF0); // clear flag
    temp = LEDPORT; // Save the LED light state
    LEDPORT |= (1 << LED_PIN); // Turn LED on
     delay ms(1000); // Keep LED on for 1 sec
    LEDPORT = temp; // Restore state
}
⊟int main(void)
     LED_DDR |= (1 << LED_PIN); // Set LED to output
    LEDPORT &= ~(1 << LED_PIN); // Initial state of OFF
     BUTTONPORT = (1 << BUTTONPIN); // pull-up
     BUTTONDDR = (1 << BUTTONPIN); // set PD2 as input (using for interrupt INT0)
     EIMSK = (1 << INT0);
                                           // Enable INT0
     EICRA = (1 << ISC01) | (1 << ISC00); // Trigger INTO on rising edge
     sei(); // enables interrupt
     while (1) // Loops forever
        LEDPORT |= (1 << LED_PIN); // turn LED on
         _delay_ms(250); // 0.25 sec delay
        LEDPORT &= ~(1 << LED_PIN); // turn LED off
         _delay_ms(250); // 0.25 sec delay
 }
```

b) Assembly code

```
.INCLUDE "M328pDEF.INC"
                                                                 body:
                                                                     CPI R21,0x07 ; comparing if higher is 0x07
.org 0
                                                                     BRSH done ;if equal, branch to "done"
    imp main
                                                                     RJMP delay ;if not, loop back
.org 0x02
                                                                 done:
    jmp INTO_v ;external interrupt vector
                                                                     LDI R21, 0 ; reset overflow count
main:
                                                                     OUT TCNT0,R20 ; resetting the counter to 0 for next round
    LDI R16, 4 ; needed to toggle LED
    SBI DDRB, 2 ;PB2 as output
    CBI DDRD, 2 ;PD2 as input
                                                                 INTO_v:
    LDI R17, 0 ; needed to toggle led
                                                                 begin2:
                                                                     LDI R22, (1 << INTF0)
    LDI R20,5 ;to set prescaler
                                                                     OUT EIFR, R22 ; clear flag
    OUT TCCR0B,R20 ;Prescaler: 1024
                                                                     SBI PORTB, 2 ;turn LED light on
                                                                     RCALL delay2 ;delay function
    LDI R20, (1 << INT0)
                                                                     LDI R22, 5 ;Timer0: enabled, prescaler = 1024
    OUT EIMSK, R20 ; set bits for EIMSK
                                                                     OUT TCCR0B, R22; prescaler = 1024
                                                                     RETI ; return from interrupt, interrupts enabled
    LDI R20, (1 << ISC11) | (1 << ISC01)
    STS EICRA, R20 ; set bits for EICRA
                                                                     IN R28, TCNT0 ;loading timer0 to R28
    SEI
                                                                     CPI R28, 0xFF ; check for overflow
                                                                     BREQ HIGHINC2 ; jump to increment overflow count
button:
    SBI PIND, 2 ;prompts for button
    RJMP begin ;toggle LED if != button
                                                                     CPI R28, 0x84 ; comparing if timer is 0x84
                                                                     BREQ body2 ;if equal, check for OVF_count
                                                                     RJMP delay2 ;if not, loop back
    RCALL delay ;delay function
    EOR R17, R16 ; XOR to toogle led
                                                                 HIGHINC2:
    OUT PORTB,R17 ; display LED
                                                                     INC R23 ;increment overflow count
    RJMP button ; jump to prompt for button again
                                                                     LDI R22, 0
delay:
                                                                     OUT TCNT0, R22 ; reset TCNT
    IN R28, TCNT0 ; loading lower bit of counter to R28
                                                                     RJMP cont2 ;loop back to check timer bits
    CPI R28, 0xFF ; comparing if lower is 0x41
    BREQ HIGHINC
                                                                 body2:
                                                                     CPI R23,0x1E ; comparing if OVF_count is 0x1E
cont:
                                                                     BRSH done2 ;if equal, branch to "done2"
    CPI R28, 0xA0 ; comparing if timer is 0xA0
                                                                     RJMP delay2 ; if not, loop back
    BREQ body ;if equal, check for OVF_count
                                                                 done2:
    RJMP delay ;if not, loop back
                                                                     LDI R23, 0 ; reset overflow count
                                                                     LDI R22. 0
HIGHINC:
                                                                     OUT TCNT0,R22 ; resetting the counter to 0 for next round
    INC R21 ;increment overflow count
    LDI R20, 0
    OUT TCNT0, R20 ; reset TCNT
    RJMP cont ;loop back to check timer bits
```

c) Timing Proof

In /da02_screenshots/TimingProof folder, under the names:


Assembly code: ASM_T5a.PNG and ASM_T5b.PNG

C code: C_T5.PNG

Schematics:


This schematic is the basic setup for this assignment. PORTB2 was used in all 5 tasks (website used to build this schematic did not let me connect the resistor and ATmega to the led, so the connection in the picture below was the best I could do). PORTD2 was used in task 2 and 5. The ATmega328p was connected to the ISR cable to my laptop and a VCC and GND source, which connected to the power supply (delivering a fixed 5V to microcontroller).

a) Fritzing schematics

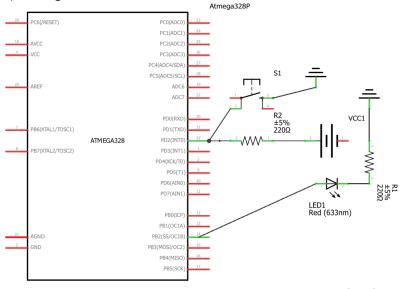

fritzing


b) Fritzing breadboard

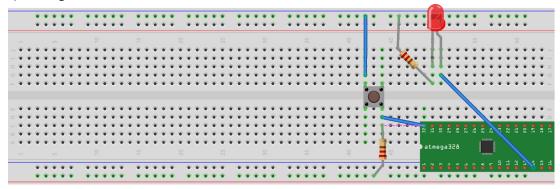


fritzing

Physical Set-Up:

b) the power supply (using fixed 5V)

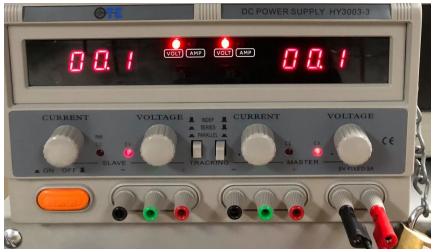

a) the breadboard set-up

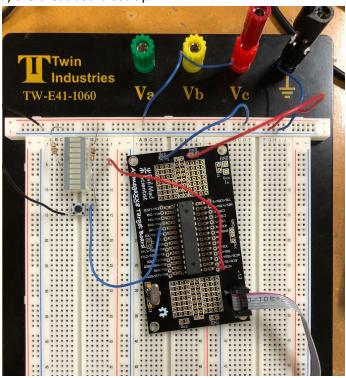

Other notes:

da02_screenshots in the repository contains the photos of the timing proof, schematics, physical setup, and screenshots of all of my code for this assignment.

Brief explanations of the timing proof are in **TP_README.txt** in the same folder.

Outputs of each demo are shown in the Youtube videos. (It's difficult to prove with screenshots)

GITHUB LINK: https://github.com/JeffinVegas/EmbSys.git

YOUTUBE LINK: In the videos_DA02.txt file

Student Academic Misconduct Policy

http://studentconduct.unlv.edu/misconduct/policy.html

"This assignment submission is my own, original work".

Jeffrey Razon