

Lecture #7

MIPS

Part I: Introduction



Lecture #7: MIPS Part 1: Introduction (1/2)

- 1. Instruction Set Architecture
- 2. Machine Code vs Assembly Language
- 3. Walkthrough
- 4. General Purpose Registers
- 5. MIPS Assembly Language
 - 5.1 General Instruction Syntax
 - 5.2 Arithmetic Operation: Addition
 - 5.3 Arithmetic Operation: Subtraction
 - 5.4 Complex Expression
 - 5.5 Constant/Immediate Operands
 - 5.6 Register Zero (\$0 or \$zero)

Lecture #7: MIPS Part 1: Introduction (1/2)

- 5. MIPS Assembly Language
 - 5.7 Logical Operations: Overview
 - 5.8 Logical Operations: Shifting
 - 5.9 Logical Operations: Bitwise AND
 - 5.10 Logical Operations: Bitwise OR
 - 5.11 Logical Operations: Bitwise NOR
 - 5.12 Logical Operations: Bitwise XOR
- 6. Large Constant: Case Study
- MIPS Basic Instructions Checklist

Recap

High-level language program (in C)

Assembly

language

program (for MIPS)

```
swap(int v[], int k)
{int temp;
   temp = v[k];
   v[k] = v[k+1]:
   v[k+1] = temp;
  Compiler
swap:
      muli $2, $5,4
           $2, $4,$2
           $15, 0($2)
           $16, 4($2)
           $16. 0($2)
           $15, 4($2)
      SW
      ir
           $31
  Assembler
```

Binary machine language program (for MIPS) You write programs in high level programming languages, e.g., C/C++, Java:

$$A + B$$

Compiler translates this into assembly language statement:

Assembler translates this statement into machine language instructions that the processor can execute:

1000 1100 1010 0000

1. Instruction Set Architecture (1/2)

- Instruction Set Architecture (ISA):
 - An abstraction on the interface between the hardware and the low-level software.


Software

(to be translated to the instruction set)



Instruction Set Architecture

Hardware (implementing the instruction set)

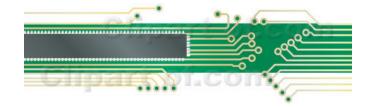

1. Instruction Set Architecture (2/2)

- Instruction Set Architecture
 - Includes everything programmers need to know to make the machine code work correctly
 - Allows computer designers to talk about functions independently from the hardware that performs them
- This abstraction allows many implementations of varying cost and performance to run identical software.
 - Example: Intel x86/IA-32 ISA has been implemented by a range of processors starting from 80386 (1985) to Pentium 4 (2005)
 - Other companies such as AMD and Transmeta have implemented IA-32 ISA as well
 - A program compiled for IA-32 ISA can execute on any of these implementations

2. Machine Code vs Assembly Language

Machine code

- Instructions are represented in binary
- 1000110010100000 is an instruction that tells one computer to add two numbers
- Hard and tedious for programmer

Assembly language

- Symbolic version of machine code
- Human readable
- add A, B is equivalent to 1000110010100000
- Assembler translates from assembly language to machine code
- Assembly can provide 'pseudo-instructions' as syntactic sugar
- When considering performance, only real instructions are counted.

3. Walkthrough: An Example Code (1/15)

- Let us take a journey with the execution of a simple code:
 - Discover the components in a typical computer
 - Learn the type of instructions required to control the processor
 - Simplified to highlight the important concepts ©

```
// assume res is 0 initially
for (i=1; i<10; i++) {
    res = res + i:
```



"Assembly"

res ← res + i


if i < 10, repeat

Code

C-like code fragment


3. Walkthrough: The Components (2/15)

- The two major components in a computer
 - Processor and Memory
 - Input/Output devices omitted in this example

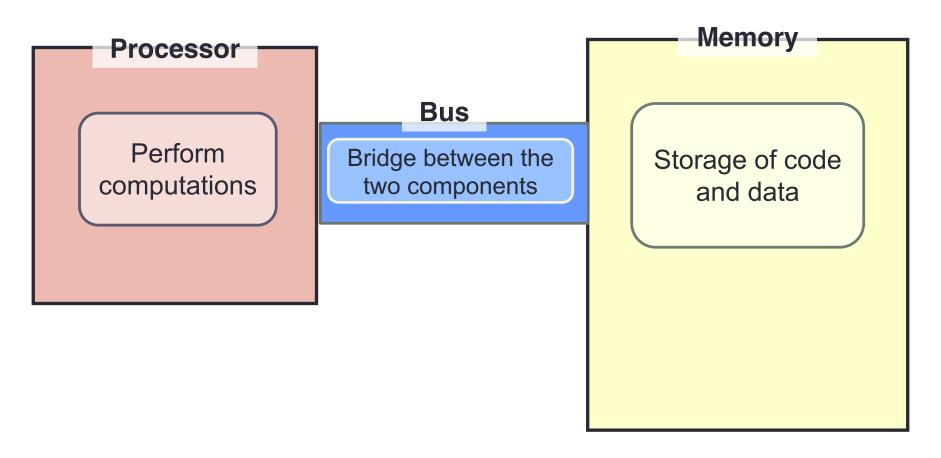


3. Walkthrough: The Code in Action (3/15)

- The code and data reside in memory
 - Transferred into the processor during execution

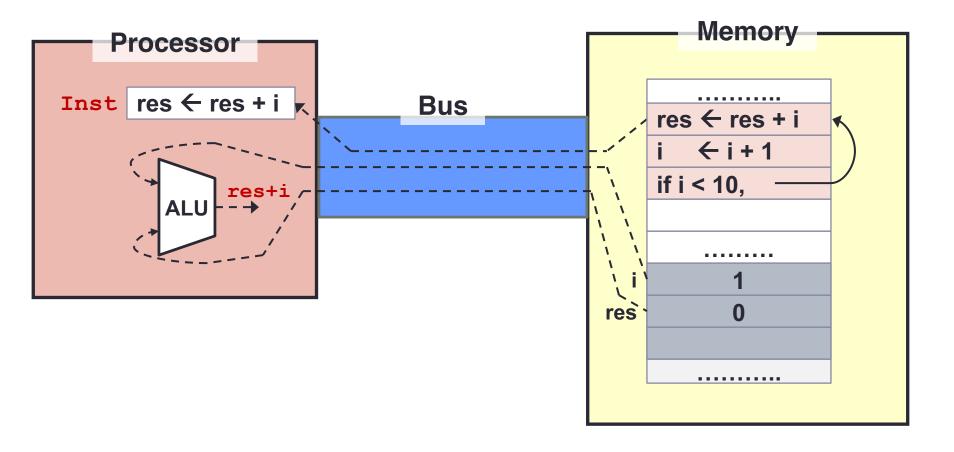


3. Walkthrough: Memory Access is Slow! (4/15)

- To avoid frequent access of memory
 - Provide temporary storage for values in the processor (known as registers)

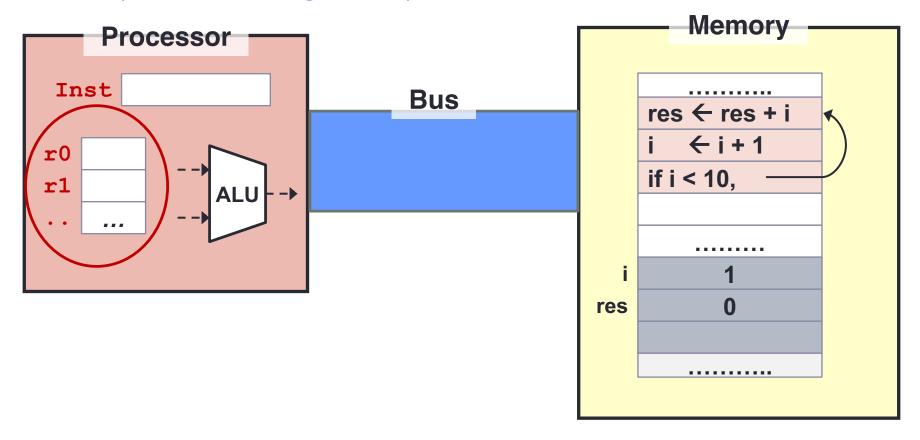


3. Walkthrough: Memory Instruction (5/15)

- Need instruction to move data into registers
 - Also to move data from registers to memory later

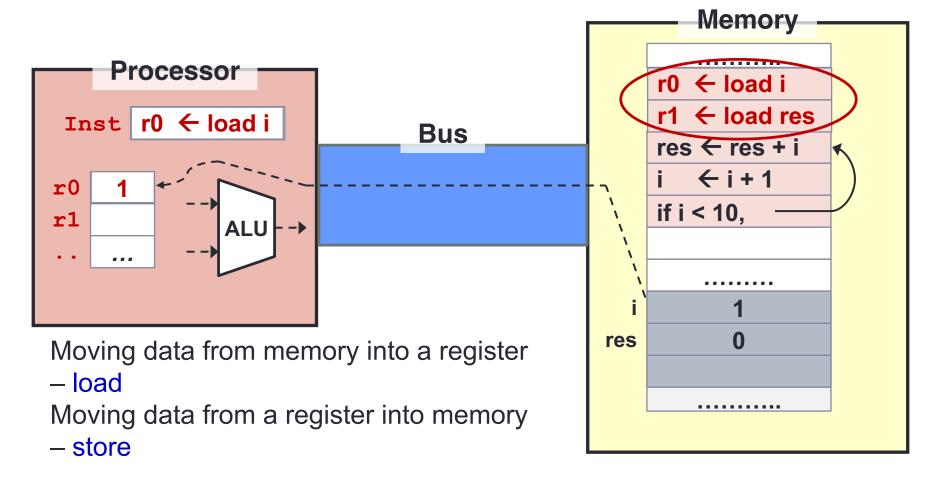


3. Walkthrough: Memory Instruction (6/15)

- Need instruction to move data into registers
 - Also to move data from registers to memory later

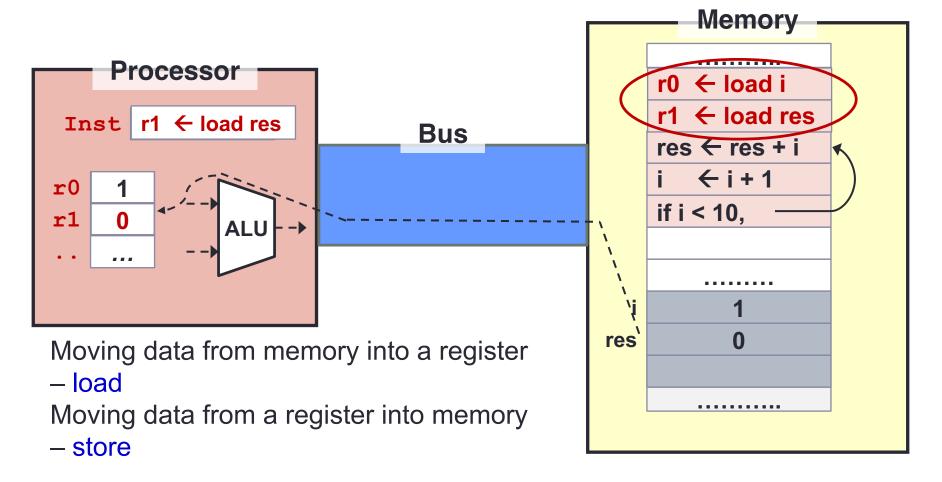


3. Walkthrough: Reg-to-Reg Arithmetic (7/15)

 Arithmetic operations can now work directly on registers only (much faster!)

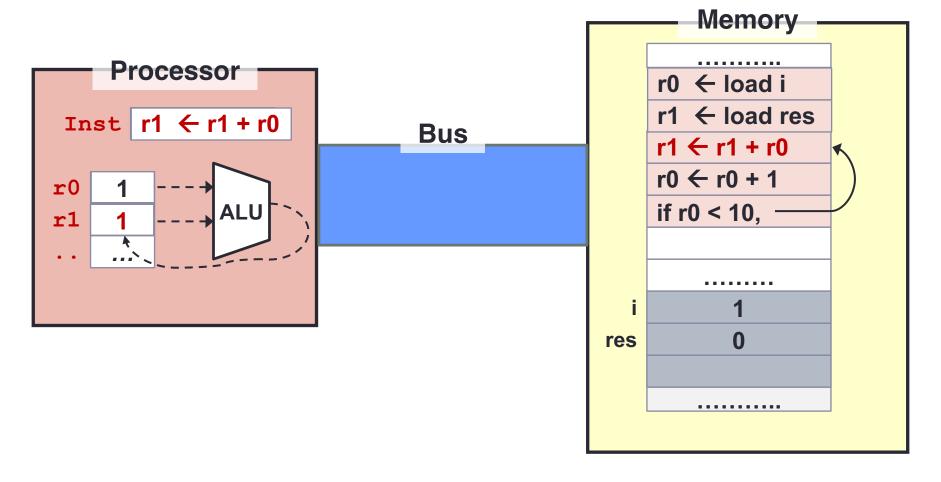


3. Walkthrough: Reg-to-Reg Arithmetic (8/15)

 Sometimes, arithmetic operation uses a constant value instead of register value

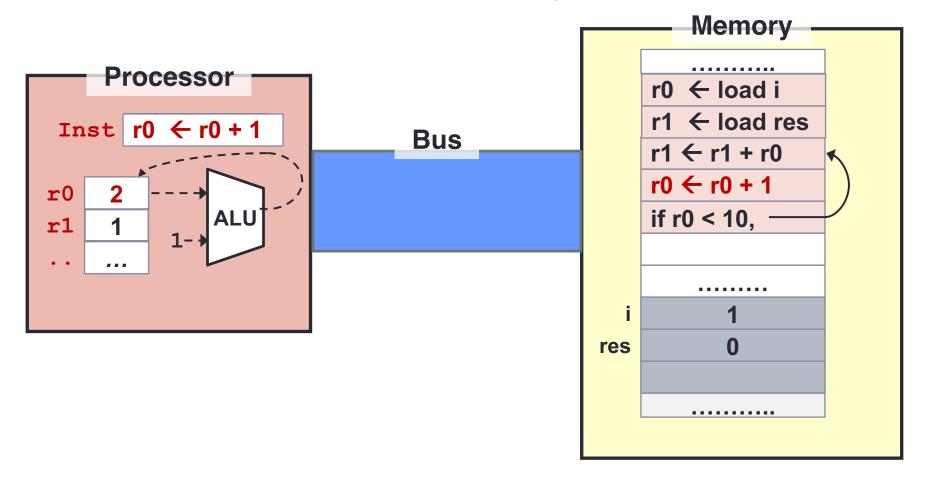


3. Walkthrough: Execution Sequence (9/15)

- Instruction is executed sequentially by default
 - How do we "repeat" or "make a choice"?

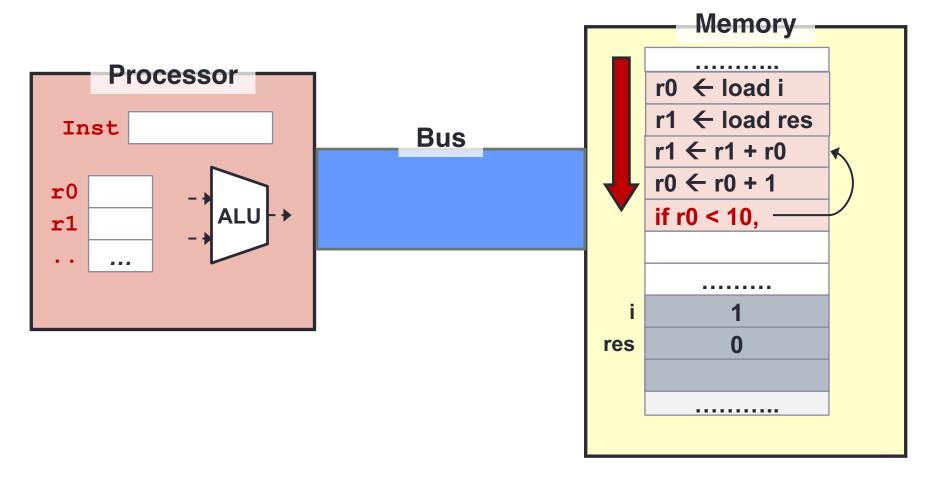


3. Walkthrough: Control Flow (10/15)

- We need instructions to change the control flow based on condition:
 - Repetition (loop) and Selection (if-else) can both be supported

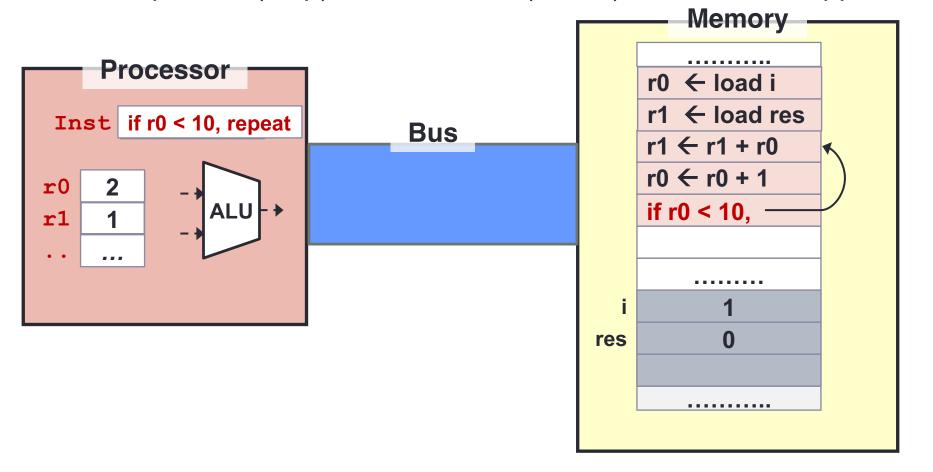


3. Walkthrough: Looping! (11/15)

 Since the condition succeeded, execution will repeat from the indicated position

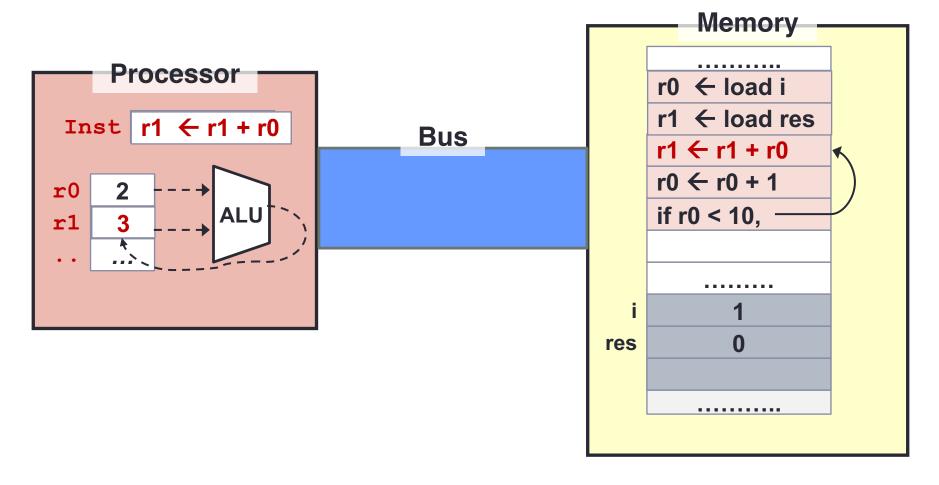


3. Walkthrough: Looping! (12/15)

- Execution will continue sequentially
 - Until we see another control flow instruction

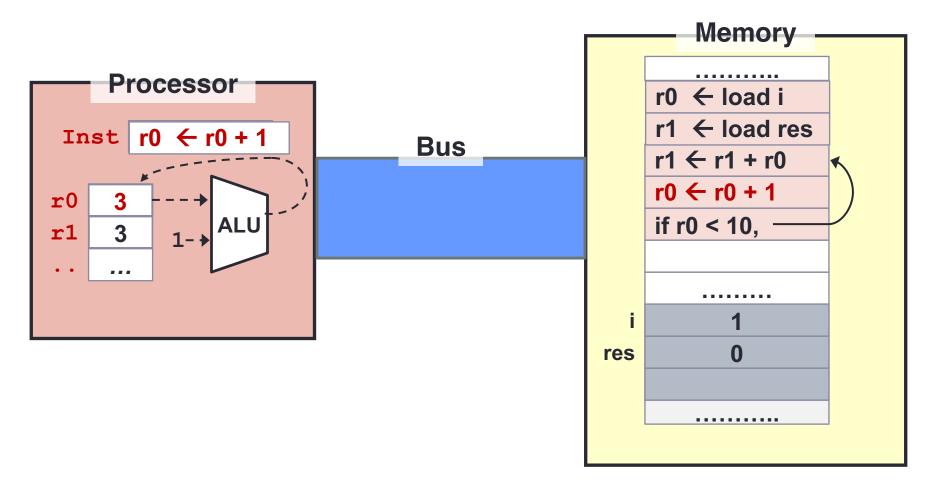


3. Walkthrough: Looping! (13/15)

 The three instructions will be repeated until the condition fails

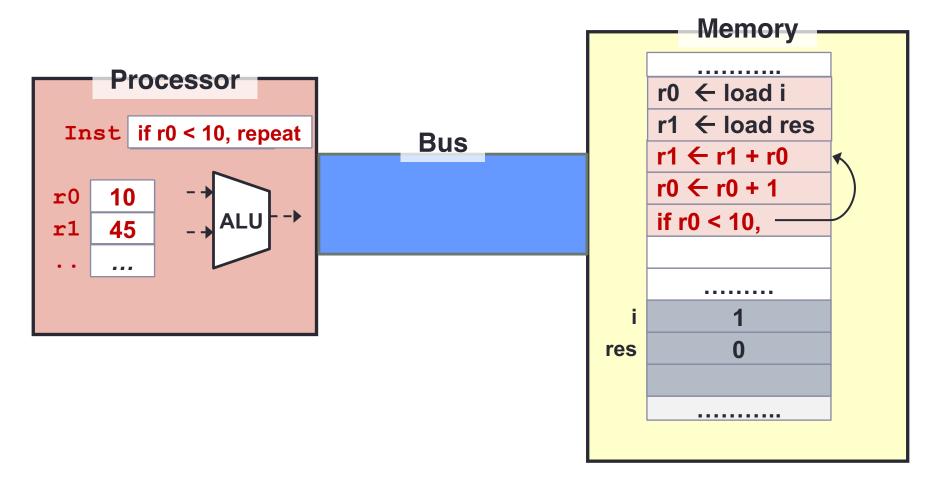

3. Walkthrough: Memory Instruction (14/15)

 We can now move back the values from register to their "home" in memory

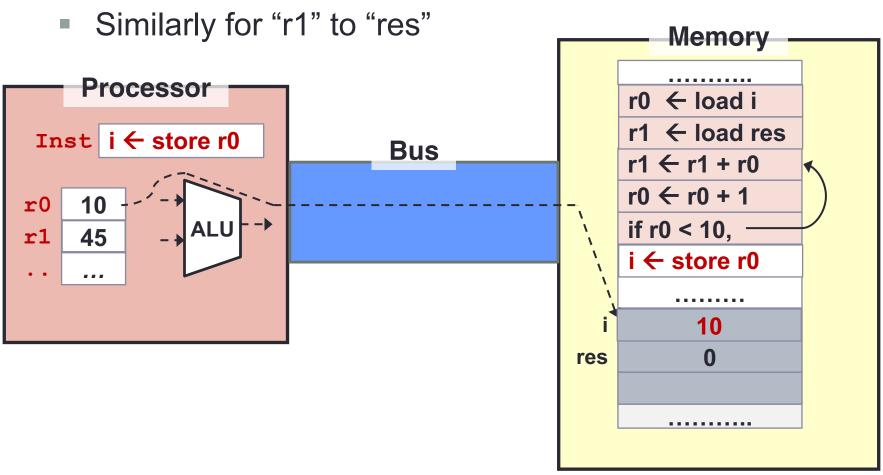

3. Walkthrough: Summary (15/15)

- The stored-memory concept:
 - Both instruction and data are stored in memory
- The load-store model:
 - Limit memory operations and relies on registers for storage during execution
- The major types of assembly instruction:
 - Memory: Move values between memory and registers
 - Calculation: Arithmetic and other operations
 - Control flow: Change the sequential execution

4. General Purpose Registers (1/2)

- Fast memories in the processor:
 - Data are transferred from memory to registers for faster processing
- Limited in number:
 - A typical architecture has 16 to 32 registers
 - Compiler associates variables in program with registers
- Registers have no data type
 - Unlike program variables!
 - Machine/Assembly instruction assumes the data stored in the register is of the correct type

4. General Purpose Registers (2/2)

- There are 32 registers in MIPS assembly language:
 - Can be referred by a number (\$0, \$1, ..., \$31) OR
 - Referred by a name (eg: \$a0, \$t1)

Name	Register number	Usage
\$zero	0	Constant value 0
\$v0-\$v1	2-3	Values for results and expression evaluation
\$a0-\$a3	4-7	Arguments
\$t0-\$t7	8-15	Temporaries
\$s0-\$s7	16-23	Program variables

Name	Register number	Usage
\$t8-\$t9	24-25	More temporaries
\$gp	28	Global pointer
\$sp	29	Stack pointer
\$fp	30	Frame pointer
\$ra	31	Return address

\$at (register 1) is reserved for the assembler.

\$k0-\$k1 (registers 26-27) are reserved for the operation system.


5. MIPS Assembly Language

- Each instruction executes a simple command
 - Usually has a counterpart in high level programming languages like C/C++, Java etc
 - Each line of assembly code contains at most 1 instruction
- # (hex-sign) is used for comments
 - Anything from # to end of line is a comment and will be ignored by the assembler

```
add $t0, $s1, $s2  # $t0 ← $s1 + $s2

sub $s0, $t0, $s3  # $s0 ← $t0 - $s3
```

5.1 General Instruction Syntax

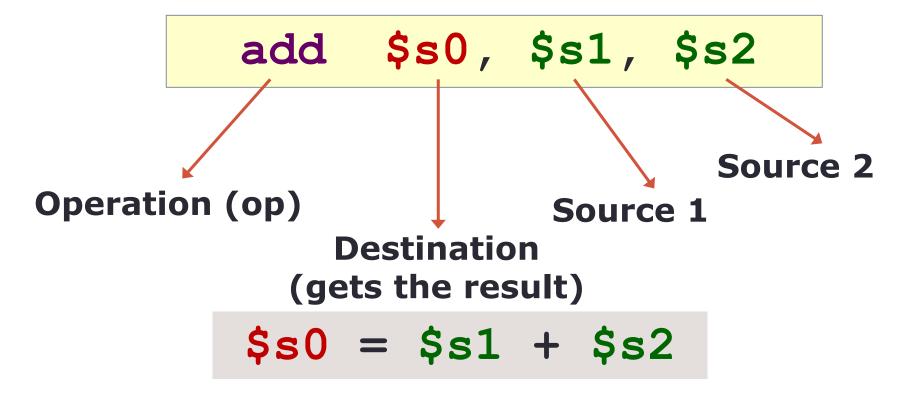

Naturally, most of the MIPS arithmetic/logic operations have three operands: **2 sources** and **1 destination**

5.2 Arithmetic Operation: Addition

C Statement	MIPS Assembly Code	
a = b + c;	add \$s0, \$s1, \$s2	

- We assume the values of "a", "b" and "c" are loaded into registers "\$s0", "\$s1" and "\$s2"
 - Known as variable mapping
 - Actual code to perform the loading will be shown later in memory instruction
- Important concept:
 - MIPS arithmetic operations are mainly register-to-register

5.3 Arithmetic Operation: Subtraction

C Statement	MIPS Assembly Code	
a = b - c;	sub \$s0, \$s1, \$s2 \$s0 \rightarrow variable a \$s1 \rightarrow variable b \$s2 \rightarrow variable c	

Positions of \$s1 and \$s2 (i.e., source1 and source2) are important for subtraction

5.4 Complex Expression (1/3)

C Statement	MIPS Assembly Code
a = b + c - d;	??? ??? ??? \$s0 \rightarrow variable a \$s1 \rightarrow variable b \$s2 \rightarrow variable c \$s3 \rightarrow variable d

- A single MIPS instruction can handle at most two source operands
 - → Need to break a complex statement into multiple MIPS instructions

```
MIPS Assembly Code

add $t0, $s1, $s2 # tmp = b + c

sub $s0, $t0, $s3 # a = tmp - d
```

Use temporary registers **\$t0** to **\$t7** for intermediate results

5.4 Complex Expression: Example (2/3)

C Statement	Variable Mappings
f = (g + h) - (i + j);	\$s0 → variable f \$s1 → variable g \$s2 → variable h \$s3 → variable i \$s4 → variable j

- Break it up into multiple instructions
 - Use two temporary registers \$t0, \$t1

```
add $t0, $s1, $s2  # tmp0 = g + h
add $t1, $s3, $s4  # tmp1 = i + j
sub $s0, $t0, $t1  # f = tmp0 - tmp1
```

5.4 Complex Expression: Exercise (3/3)

C Statement	Variable Mappings
z = a + b + c + d; add \$s4, \$s0, \$s1 add \$s4, \$s4, \$s2 add \$s4, \$s4, \$s3	\$s0 → variable a \$s1 → variable b \$s2 → variable c \$s3 → variable d \$s4 → variable z

C Statement	Variable Mappings
z = (a - b) + c; sub \$s3, \$s0, \$s1 add \$s3, \$s3, \$s2	\$s0 → variable a \$s1 → variable b \$s2 → variable c \$s3 → variable z

5.5 Constant/Immediate Operands

C Statement	MIPS Assembly Code	
a = a + 4;	add i \$s0 , \$s0, 4	

- Immediate values are numerical constants
 - Frequently used in operations
 - MIPS supplies a set of operations specially for them
- "Add immediate" (addi)
 - Syntax is similar to add instruction; but source2 is a constant instead of register
 - The constant ranges from [-2¹⁵ to 2¹⁵-1]

Can you guess what number system is used?

Answer: 16-bit 2s complement number system

5.6 Register Zero (\$0 or \$zero)

- The number zero (0), appears very often in code
 - Provide register zero (\$0 or \$zero) which always have the value 0

C Statement	MIPS Assembly Code
f = g;	add \$s0, \$s1, \$zero \$s0 → variable f \$s1 → variable g

The above assignment is so common that MIPS has an equivalent pseudo instruction (move):

MIPS Assembly Code
move \$s0, \$s1

Pseudo-Instruction

"Fake" instruction that gets translated to corresponding MIPS instruction(s). Provided for convenience in coding only.

5.7 Logical Operations: Overview (1/2)

 Arithmetic instructions view the content of a register as a single quantity (signed or unsigned integer)

New perspective:

- View register as 32 raw bits rather than as a single 32-bit number
- → Possible to operate on individual bits or bytes within a word

Logical operation	C operator	Java operator	MIPS instruction
Shift Left	<<	<<	sll
Shift right	>>	>>, >>>	srl
Bitwise AND	&	&	and, andi
Bitwise OR		I	or, ori
Bitwise NOT	~	~	nor

5.7 Logical Operations: Overview (2/2)

- Truth tables of logical operations
 - 0 represents false; 1 represents true

AND

а	b	a AND b
0	0	0
0	1	0
1	0	0
1	1	1

OR

а	b	a OR b
0	0	0
0	1	1
1	0	1
1	1	1

NOR

а	b	a NOR b
0	0	1
0	1	0
1	0	0
1	1	0

XOR

а	b	a XOR b
0	0	0
0	1	1
1	0	1
1	1	0

5.8 Logical Operations: Shifting (1/2)

Opcode: sll (shift left logical)

Move all the bits in a word to the left by a number of positions; fill the emptied positions with zeroes.

E.g. Shift bits in \$s0 to the left by 4 positions

```
$s0 1011 1000 0000 0000 0000 0000 0000 1001

$11 $t2, $s0, 4 # $t2 = $s0<<4

$t2 1000 0000 0000 0000 0000 0000 1001 0000
```

5.8 Logical Operations: Shifting (2/2)

Opcode: srl (shift right logical)

Shifts right and fills emptied positions with zeroes.

- What is the equivalent math operations for shifting left/right n bits? Answer: Multiply/divide by 2ⁿ
- Shifting is faster than multiplication/division
 - Good compiler translates such multiplication/division into shift instructions

C Statement	MIPS Assembly Code
a = a * 8;	sll \$s0, \$s0, 3

5.9 Logical Operations: Bitwise AND

Opcode: and (bitwise AND)

Bitwise operation that leaves a 1 only if both the bits of the operands are 1

E.g.: and \$t0, \$t1, \$t2

- and can be used for masking operation:
 - Place 0s into the positions to be ignored → bits will turn into 0s
 - Place 1s for interested positions → bits will remain the same as the original.

5.9 Exercise: Bitwise AND

- We are interested in the last 12 bits of the word in register \$t1. Result to be stored in \$t0.
 - Q: What's the mask to use?

Notes:

The and instruction has an immediate version, andi

5.10 Logical Operations: Bitwise OR

```
Opcode: or (bitwise OR)
```

Bitwise operation that that places a 1 in the result if either operand bit is 1

Example: or \$t0, \$t1, \$t2

- The or instruction has an immediate version ori
- Can be used to force certain bits to 1s
- E.g.: ori \$t0, \$t1, 0xFFF

5.11 Logical Operations: Bitwise NOR

- Strange fact 1:
 - There is no **NOT** instruction in MIPS to toggle the bits $(1 \rightarrow 0, 0 \rightarrow 1)$
 - However, a NOR instruction is provided:

```
Opcode: nor (bitwise NOR)

Example: nor $t0, $t1, $t2
```

Question: How do we get a NOT operation?

```
nor $t0, $t0, $zero
```

Question: Why do you think is the reason for not providing a NOT instruction?

One of design principles: Keep the instruction set small.

5.12 Logical Operations: Bitwise XOR

Opcode: xor (bitwise XOR)

Example: xor \$t0, \$t1, \$t2

Question: Can we also get NOT operation from XOR?
Yes, let \$t2 contain all 1s.

xor \$t0, \$t0, \$t2

- Strange Fact 2:
 - There is no NORI, but there is XORI in MIPS
 - Why?

6. Large Constant: Case Study

- Question: How to load a 32-bit constant into a register? e.g 10101010 10101010 11110000 11110000
- 1. Use "load upper immediate" (lui) to set the upper 16-bit:
 lui \$t0, 0xAAAA #10101010101010

2. Use "or immediate" (ori) to set the lower-order bits:

ori \$t0, \$t0, 0xF0F0 #1111000011110000

	1010101010101010	(00000000000000000000000000000000000000
ori	0000000000000000	1111000011110000
	1010101010101010	1111000011110000
	1010101010101010	(1111000011110000)

7. MIPS Basic Instructions Checklist

Operation	Opcode in MIPS	Immediate Version (if applicable)
Addition	add \$s0, \$s1, \$s2	addi $$s0$, $$s1$, $C16_{2s}$ $C16_{2s}$ is $[-2^{15}$ to 2^{15} -1]
Subtraction	sub \$s0, \$s1, \$s2	
Shift left logical	\$11 \$ \$0 , \$ \$1 , C5 C5 is [0 to 2 ⁵ -1]	
Shift right logical	srl \$s0, \$s1, C5	
AND bitwise	and \$s0, \$s1, \$s2	andi \$s0, \$s1, C16 C16 is a 16-bit pattern
OR bitwise	or \$s0, \$s1, \$s2	ori \$s0, \$s1, C16
NOR bitwise	nor \$s0, \$s1, \$s2	
XOR bitwise	xor \$s0, \$s1, \$s2	xori \$s0, \$s1, C16

End of File