# **Optimization of Multiple Rotors**

J. Spencerr \*
Brigham Young University, Provo, Utah, 84601

This report describes a project completed as part of my research with the Brigham Young University FLOW Lab. this project drew on skills gained throughout the semester to design and execute a code in the Julia programming language to find the optimal blade count, blade thickness magnification, and twist angle for a propellor to achieve its maximum efficiency,  $\eta$ , at a known advance ratio, J. This investigation found that thinner rotors are more efficient, especially at negative angles of attack. The implications of these results and possible areas of future research are then discussed.

#### **Nomenclature**

(Nomenclature entries are identified with their default units.)

J = Advance Ratio, dimensionless

 $\alpha$  = Angle of Attack, rad

 $\phi$  = Angle of Rotation, rad

 $\Omega$ , n = Angular Speed, rev./s

W = Apparent Speed, m/s

*a* = Axial Induction Factor *dimensionless* 

 $M_b$  = Bending Moment,  $N \times m$ 

r = Blade Tip Radius, m

c = Chord length, m

D = Diameter, m

 $c_d$  = Drag Coefficient, dimensionless

D = Drag Force, N

 $\nu$  = Dynamic Viscosity,  $\frac{Ns}{m^2}$ 

 $\eta$  = Efficiency, *unitless* 

 $\rho$  = Fluid Density,  $kg/m^3$ 

 $v_a, U_\infty$  = Freestream Velocity, m/s

 $\mu$  = Kinematic Viscosity,  $m^2/s$ 

<sup>\*</sup>Undergraduate Researcher, Brigham Young University FLOW Lab.

 $c_l$  = Lift Coefficient, dimensionless

L = Lift Force, N

*M* = Mach Number, *dimensionless* 

 $M_p$  = Pitching Moment,  $N \times m$ 

 $c_m$  = Pitching Moment Coefficient, dimensionless

P = Power, W

 $C_P$  = Power Coefficient, dimensionless

N = Propellor Count, *integer* 

 $\omega$  = Radial Velocity,  $\frac{rad.}{s}$ 

RPM = Revolutions Per Minute,  $\frac{rev.}{min.}$ 

Re = Reynolds Number, dimensionless

 $n = \text{Rotational Frequency, } \frac{rev.}{s}$ 

 $\sigma$  = Rotor Solidity dimensionless

*n* = Safety Factor, *dimensionless* 

s = Spacing, m

A = Surface Area, m2

 $\beta$  = Stationary Angle of Rotation, rad.

a' = Tangential Induction Factor dimensionless

T = Thrust, N

 $C_T$  = Thrust Coefficient, dimensionless

 $\lambda$  = Tip Speed Ratio, dimensionless

 $Q = \text{Torque}, N \times m$ 

 $C_Q$  = Torque Coefficient, *unitless* 

 $v_i$  = Uniform Induced Velocity, m/s

u = Velocity, m/s

## I. Introduction

PROPELLORS come in a variety of different shapes and sizes. This paper describes how one propellor, which started as an APC 10x7 rotor and a NACA 4412 airfoil, was optimized to perform better at a certain advance ratio. The code used for this report could also be applied to different rotors in the future.

This report shows how computer simulations can be used to simulate the performance of propellors without needing to actually create them. It finds that changing the twist angle and the thickness of a propellor shifts the curves for its

efficiency, thrust coefficient, and torque coefficient, and that propellors with different blade counts also have different curves for these three non-dimensional numbers. All code used for each section of this report can also be accessed through a GitHub repository \*.

#### II. Procedure

This project was performed using julia programming language. † jula is available for free and is useful for a variety of reasons. It can store data as vectors and matrices, and perform rapid calculations with these objects. It compiles functions in advance, so they can be run more quickly than other languages like python. Header files needed for this project, including Xfoil ‡, CCBlade §, SNOW ¶, and FLOWMath  $\|$ , are all designed for julia. These files provided useful functionality that simplified the design process.

In the rotor design process, an airfoil was first created using Xfoil.jl. This rotor was then attached to a rotor and evaluated using CCBlade.jl. Data about the rotor, including its moments in the normal and tangential directions and its torque, is recorded. This data is then multiplied by a factor, in this case n = 1.1, to determine the maximum allowable loads before the rotor would break or a different material would be required. After constraints are determined, rotor variable types called *rotortest* are created with variable thickness magnification and rotation angle and the program uses Optim.jl to find the rotor with the optimal twist angle and thickness magnification for the objective function.

The objective function used in this optimization is listed in equation 1.

$$f(x_1, x_2, x_3...) = \eta \tag{1}$$

Constraints were placed on the solution to ensure that the optimizer found a reasonable solution. In addition to restrictions on the moment and torque, the cord thickness was kept within a factor of two of the original and the twist angle magnitude was kept below  $90^{\circ}$ 

<sup>\*</sup>This repository can be accessed at https://github.com/JoeSpencer1/497R-Projects

<sup>&</sup>lt;sup>†</sup>julia can be found at https://julialang.org.

<sup>&</sup>lt;sup>‡</sup>Xfoil.jl is available at https://github.com/byuflowlab/Xfoil.jl

<sup>§</sup>CCBlade.jl is available at https://github.com/byuflowlab/CCBlade.jl

<sup>¶</sup>SNOW.jl is available at https://github.com/byuflowlab/SNOWl.jl

FLOWMath.jl is available at https://github.com/byuflowlab/FLOWMath.jl

Table 1: Optimization objective, parameters, and constraints

Maximize:	η
By varying:	scale of the chord, $c$
	twist angle, $\phi$
Subject to	total torque less than 110% of original
	normal moment less than 110% of original
	tangential moment less than 110% of original
	$-90^{\circ}$ < twist angle < $90^{\circ}$
	50% < chord magnification < 200%

The rotors optimized each had some properties similar and some different between them. For reference, these properties are shown in table 2. Parameters kept constant in this table have the same maximum and minimum value. The advance ratio in table 2 can be found from other variables already listed in the table by equation 2, in which  $v_{\infty}$  is the free stream velocity, n is the rotational velocity in revolutions per second, and D is the outer diameter.

$$J = \frac{v_{\infty}}{nD} \tag{2}$$

Table 2: Input Value Limits in Rotor Design

These are the default values for each parameter, before the rotor is optimized.

Parameter	Default Value	Minimum Value	Maximum Value	
Chord Length,	100% length	50%	200%	
Twist Angle,	0°	-90°	90°	
Rotational Velocity, RPM		500 RPM		
Blade Count	2 blades	2 blades 1 to 3)		
Hub-to-tip ratio	10%			
Air Density	1.225 kg/m <sup>3</sup>			
Diameter	20 m			
Velocity	45 m/s			
Advance Ratio	0.27			

## III. Results

As stated previously, an APC 10x7 rotor with what started as a NACA 4412 airfoil was optimized. While the APC rotor number stayed the same, the NACA airfoil number was changed. The maximum chord found in first digit and the maximum thickness from two digits at the end are multiplied by whatever the magnification of the chord is. So, a NACA 4412 airfoil becomes a NACA 2206 airfoil at 50% magnification and a NACA 8424 at 200%.

The propellor was checked at blade counts of 2, 3, and 4. These results are described and compared in plot 1. This report found that for all three blade counts, the optimal propellor was as thin as possible, with negative angles of attack. The finding about thinner rotor blades being more efficient was in line with **THE PAPER** \*\*, but such a high negative rotation angle was surprising.

#### A. Results Plot

Four plots, displayed below, were output by the rotor analysis. Figure 1 shows that while the optimized design increased the efficiency of even the rotor with a higher blade count above the rotor pre-optimization, it dramatically decreases the thrust and torque coefficients. These decreases in other rotor properties may or may not be desired. This illustrates one problem with optimizers: they will do exactly what they are programmed to do and may sacrifice some desirable properties to further optimize the objective function.

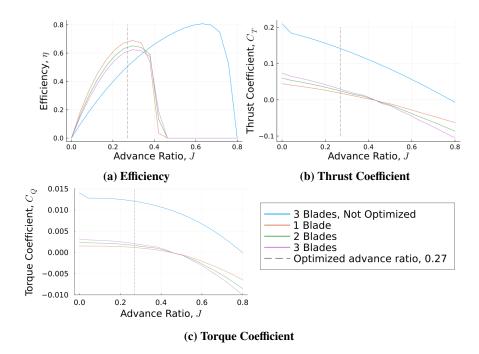


Fig. 1 Efficiency, Thrust Coefficients, and Torque Coefficients Compared at Different Advance Ratios

These plots visually represent how optimized rotors are different from the original rotor.

<sup>\*\*</sup>Experimental study of blade thickness effects on the overall and local performances of a Controlled Vortex Designed axial-flow fan, https://doi.org/10.1016/j.expthermflusci.2011.01.002

If necessary, minimum thrust and torque coefficients could be provided as parameters along with those shown below the objective function in table 1. These could find the angle of rotation and thickness that would provide the maximum efficiency while still maintaining some required thrust. If a minimum thrust or torque coefficient is provided, the optimizer might not reduce the rotor to its minimum possible thickness in every case.

#### **B.** Results Table

Table 3 shows the optimal twist angles and chord magnifications for each different rotor blade count. The reader can observe that the optimal thickness for each propellor blade was the very thinnest possible. The thickness had to between 50% and 200% of the original. The optimal angle of rotation was slightly less than  $-10^{\circ}$  for each rotor, gradually decreasing in magnitude as the blade count increased.

Table 3: Optimized Chord Magnification and Rotation Angles for Different Blade Counts

Blade Count	<b>Chord Thickness Multiplication</b>	Twist Angle
3 (Default)	1.0	0°
2	0.50	-9.54°
3	0.50	-9.47°
4	0.50	-9.39°

# **IV. Discussion**

As stated previously, one lesson that could be learned from this optimization is that people should be careful what they optimize for, because the computer will optimize exactly what it is told, even if that is not what the user actually wants. An optimization that is written incorrectly or has unseen loopholes can not only give a misleading answer but also waste a lot of time. In the case of this optimization, I think other constraints could have been added to the optimization

## A. Efficiency Equation

One issue with the optimization is that a rotor's efficiency can be found as a function of the advance ratio, the thrust coefficient, and the power coefficient. The equation is described by Andrew Ning in *Computational Aerodynamics*CITE! using the relation below.

$$\eta = J \frac{C_T}{C_P} \tag{3}$$

With J kept constant, as it was in this research, this equation can be maximized in either by maximizing  $C_T$  or by minimizing  $C_P$ , which is equal to  $C_Q$  multiplied by  $2\pi$ . Inspection of figure 1 reveals that the optimizer did the latter.

The torque coefficient  $C_Q$  is five times lower for each rotor. While the thrust coefficient  $C_T$  did not decrease by as much as  $C_Q$ , it is still much lower than before. Although more efficient, the newly optimized propellor is now designed for an entirely different function.

#### B. Angle of Attack

The optimal angle of attack was a surprising result. I had found, in my airfoil analysis, that the angle of attack that generally had the lowest drag coefficient was close to zero, like in figure 2.

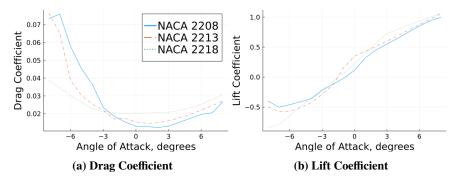


Fig. 2 Drag Coefficient and Lift Coefficient Compared to Angle of Attack
These plots show that an airfoil's drag and lift are both closest to zero when it has a low angle of attack.

The angle of rotation is different from the angle of attack, though. While the angle of attack is simply the angle the chord line forms with the normal, a propellor's rotation angle is the angle between its tangential velocity and the free stream velocity. (CITE) *Computational Aerodynamics*, page 205 shows that the

## V. Keeping this stuff so I can learn how to do references to my bibliography.

# A. Headings

Format the title of your paper in bold, 18-point type, with capital and lower-case letters, and center it at the top of the page. The names of the authors, business or academic affiliation, city, and state/province follow on separate lines below the title. The names of authors with the same affiliation can be listed on the same line above their collective affiliation information. Author names are centered, and affiliations are centered and in italic type. The affiliation line for each author includes that author's city, state, and zip/postal code (or city, province, zip/postal code and country, as appropriate). The first footnote (bottom of first page) contains the job title and department name, and AIAA member grade for each author. Author email addresses may be included also.

Major headings in the template ("sections" in the L<sup>A</sup>T<sub>E</sub>X template commands) are bold 11-point font and centered. Please omit section numbers before all headings unless you refer frequently to different sections. Use Roman numerals for major headings if they must be numbered.

Subheadings ("subsections" in the LaTeX template commands) are bold, flush left, and either unnumbered or identified with capital letters if necessary for cross-referencing sections within the paper. There must be at least 2 of all subheadings and sub-subheadings. If there is only a single subheading or sub-subheading, please italicize the title of the subheadings, followed by a period, and run it into the text paragraph.

Sub-subheadings ("subsubsections" in the LATEX template commands) are italic, flush left, and either unnumbered or numbered with Arabic numerals (1, 2, 3, etc.) if necessary for cross-referencing sections within the paper.

#### B. Abstract

An abstract appears at the beginning of Full-Length Papers, Regular Articles, and Express Articles. (Survey and Design Forum Papers, History of Key Technologies Papers, invited lectures, and Technical/Engineering Notes do not include abstracts.) The abstract is one paragraph (not an introduction) and complete in itself (no reference numbers). It should indicate subjects dealt with in the paper and state the objectives of the investigation. Newly observed facts and conclusions of the experiment or argument discussed in the paper must be stated in summary form; readers should not have to read the paper to understand the abstract. Format the abstract bold, indented 3 picas (1/2 in.) on each side, and separated from the rest of the document by two blank lines.

## C. Nomenclature

Papers with many symbols may benefit from a nomenclature list that defines all symbols with units, inserted between the abstract and the introduction. If one is used, it must contain all the symbology used in the manuscript, and the definitions should not be repeated in the text. In all cases, identify the symbols used if they are not widely recognized in the profession. Define acronyms in the text, not in the nomenclature.

#### D. Biographies

Survey Papers and some Full-Length Papers include author biographies. These biographies are one paragraph each and should use the abstract formatting style.

#### E. Footnotes and References

Footnotes, where they appear, should be placed above the 1" margin at the bottom of the page. Numbered footnotes are acceptable, but superscript symbols are the preferred AIAA style, in the sequence, \*, †, ‡, §,  $\P$ , \*\*, ††, ‡‡, §, etc.

List and number all references at the end of the paper. Corresponding bracketed numbers are used to cite references in the text [1], including citations that are an integral part of the sentence (e.g., "It is shown in [2] that...") or follow a mathematical expression: " $A^2 + B = C$  (Ref. [3])." For multiple citations, separate reference numbers with commas [4, 5], or use a dash to show a range [6–9]. Reference citations in the text should be in numerical order.

In the reference list, give all authors' names; do not use "et al.". Papers that have not been published should be

cited as "unpublished"; papers that have been submitted or accepted for publication should be cited as "submitted for publication." Private communications and personal website should appear as footnotes rather than in the reference list.

References should be cited according to the standard publication reference style (for examples, see the "References" section of this template). Never edit titles in references to conform to AIAA style of spellings, abbreviations, etc. Names and locations of publishers should be listed; month and year should be included for reports and papers. For papers published in translation journals, please give the English citation first, followed by the original foreign language citation.

# F. Figures and Tables

Insert tables and figures within your document; they may be either scattered throughout the text or grouped all together at the end of the file. Do not insert your figures in text boxes. Figures should have no background, borders, or outlines. In the LATEX template, use the "caption" command to type caption text. Captions are bold with a single tab (no hyphen or other character) between the figure number and figure description. See the Table 1 example for table style and column alignment. If you wish to center tables that do not fill the width of the page, simply highlight and "grab" the entire table to move it into proper position.

Table 1 Transitions selected for thermometry

	Transition					
Line	$\nu^{\prime\prime}$	-	$J^{\prime\prime}$	Frequency, cm <sup>-1</sup>	FJ, cm <sup>-1</sup>	$G\nu$ , cm <sup>-1</sup>
a	0	P <sub>12</sub>	2.5	44069.416	73.58	948.66
b	1	$R_2$	2.5	42229.348	73.41	2824.76
c	2	$R_{21}$	805	40562.179	71.37	4672.68
d	0	$R_2$	23.5	42516.527	1045.85	948.76

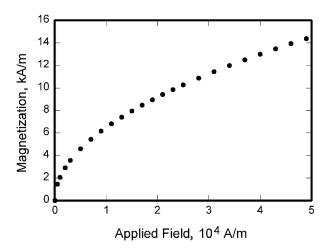


Fig. 3 Magnetization as a function of applied fields.

Line drawings must be clear and sharp. Make sure that all lines and graph points are dark and distinct and that

lettering is legible. Keep the lettering size and style uniform both within each figure and throughout all of your illustrations, no smaller than 8- to 10-point type for artwork that is sized to fit the column width (3 ¼ in.) or the full-page width (7 in.). Place figure captions below each figure, and limit main caption length to 20–25 words. If your figure has multiple parts, include the labels "a)," "b)," etc., below and to the left of each part, above the figure caption. Please verify that the figures and tables you mention in the text actually exist. When citing a figure in the text, use the abbreviation "Fig." except at the beginning of a sentence. Do not abbreviate "Table." Number each different type of illustration (i.e., figures and tables) sequentially with relation to other illustrations of the same type.

Figures that are slightly wider than the column width will be reduced in size to fit, so ensure that labels will remain legible (no smaller than 8 to 10 points) after reduction to column width.

All tables are numbered consecutively and must be cited in the text; give each table a definitive title. Be sure that you have a minimum of two columns (with headings) and two rows to constitute a proper table; otherwise reformat as a displayed list or incorporate the data into the text. Plan tables to fit the column width (3 ¼ in.) or the journal page width (7 in.). Position a double rule at the top and bottom of each table and single rule under the column headings; do not use shading, border lines, or vertical rules between table columns. Position each table in the text close to where it is cited

#### **G.** Equations

Equations are numbered consecutively, with equation numbers in parentheses flush right, as in Eq. (4). Insert a blank line on either side of the equation. To insert an equation into the LATEX document, use the \begin{equation}...\end{equation} command environment.

A sample equation is included here, formatted using the preceding instructions:

$$\int_0^{r_2} F(r,\varphi) dr d\varphi = \left[ \sigma r_2 / (2\mu_0) \right] \int_0^{\infty} \exp(-\lambda |z_j - z_i|) \lambda^{-1} J_1(\lambda r_2) J_0(\lambda r_i \lambda d\lambda)$$
 (4)

Be sure that symbols in your equation are defined in the Nomenclature or immediately following the equation. Also define abbreviations and acronyms the first time they are used in the main text. (Very common abbreviations such as AIAA and NASA, do not have to be defined.)

# H. General Grammar and Preferred Usage

Use only one space after periods or colons. Hyphenate complex modifiers: "zero-field-cooled magnetization." Insert a zero before decimal points: "0.25," not ".25." Use "cm²" not "cc."

A parenthetical statement at the end of a sentence is punctuated outside of the closing parenthesis (like this). (A parenthetical sentence is punctuated within parenthesis.) Use American, not English, spellings (e.g., "color," not "colour"). The serial comma is preferred: "A, B, and C" instead of "A, B and C."

Be aware of the different meanings of the homophones "affect" (usually a verb) and "effect" (usually a noun),

"complement" and "compliment," "discreet" and "discrete," "principal" (e.g., "principal investigator") and "principle" (e.g., "principle of measurement"). Do not confuse "imply" and "infer."

## VI. Conclusion

Although a conclusion may review the main points of the paper, it must not replicate the abstract. A conclusion might elaborate on the importance of the work or suggest applications and extensions. Do not cite references in the conclusion. Note that the conclusion section is the last section of the paper to be numbered. The appendix (if present), funding information, other acknowledgments, and references are listed without numbers.

# **Appendix**

An Appendix, if needed, appears **before** research funding information and other acknowledgments.

## **Funding Sources**

Sponsorship information and acknowledgments of financial support should be included here. Authors are responsible for accurately reporting funding data relevant to their research. Please confirm that you have correctly entered all sources of funding and grant/award numbers for all authors in this section of your article. You will also be asked to select the appropriate funding organization from a drop-down menu in ScholarOne when you submit your manuscript. Be careful to choose the correct funder name, as organization names can be similar, and also be mindful to select sub-organizations within the registry hierarchy that are the actual funding sources, as appropriate, rather than choosing the name of the parent organization. Information provided in your manuscript must match the funding data entered in ScholarOne.

## Acknowledgments

An Acknowledgments section, if used, **immediately precedes** the References. Individuals other than the authors who contributed to the underlying research may be acknowledged in this section. The use of special facilities and other resources also may be acknowledged.

## References

- [1] Vatistas, G. H., Lin, S., and Kwok, C. K., "Reverse Flow Radius in Vortex Chambers," *AIAA Journal*, Vol. 24, No. 11, 1986, pp. 1872, 1873. https://doi.org/10.2514/3.13046.
- [2] Dornheim, M. A., "Planetary Flight Surge Faces Budget Realities," Aviation Week & Space Technology, Vol. 145, No. 24, 1996, pp. 44–46.
- [3] Terster, W., "NASA Considers Switch to Delta 2," Space News, Vol. 8, No. 2, 1997, pp. 13-19.

- [4] Peyret, R., and Taylor, T. D., Computational Methods for Fluid Flow, 2<sup>nd</sup> ed., Springer-Verlag, New York, 1983, Chaps. 7, 14.
- [5] Oates, G. C. (ed.), Aerothermodynamics of Gas Turbine and Rocket Propulsion, AIAA Education Series, AIAA, New York, 1984, pp. 19, 136.
- [6] Volpe, R., "Techniques for Collision Prevention, Impact Stability, and Force Control by Space Manipulators," *Teleoperation and Robotics in Space*, edited by S. B. Skaar and C. F. Ruoff, Progress in Astronautics and Aeronautics, AIAA, Washington, DC, 1994, pp. 175–212.
- [7] Thompson, C. M., "Spacecraft Thermal Control, Design, and Operation," *AIAA Guidance, Navigation, and Control Conference*, CP849, Vol. 1, AIAA, Washington, DC, 1989, pp. 103–115.
- [8] Chi, Y. (ed.), Fluid Mechanics Proceedings, NASA SP-255, 1993.
- [9] Brandis, A. M., Johnston, C. O., and Cruden, B. A., "Nonequilibrium Radiation for Earth Entry," *AIAA Paper 2016–3690*, June 2016. https://doi.org/10.2514/6.2016-3690.