RFID MODULE

Mifare Reader / Writer

SL030 User Manual

Version 3.1 Jan, 2018 StrongLink

CONTENT

1.	MAIN FEATURES	3
2.	PINNING INFORMATION	4
3.	Device Operation	5
3-2, 3-3, 3-4, 3-5, 3-6, 3-7, 3-8,	. CLOCK AND DATA TRANSITIONS: . START CONDITION . STOP CONDITION ACKNOWLEDGE BUSY STATE DEVICE ADDRESSING WRITE OPERATIONS . READ OPERATIONS	5 5 6 6 7
	COMMAND DESCRIPTION	
4-1	. FORMAT	7
4-2	2. Command Overview	8
	COMMAND LIST	
	-1. SELECT MIFARE CARD	
	3-2. LOGIN TO A SECTOR	
	3-3. DOWNLOAD KEY INTO SL030	
	3-4. LOGIN SECTOR VIA STORED KEY 3-5. READ A DATA BLOCK	
	-5. KEAD A DATA BLOCK -6. WRITE A DATA BLOCK	
	-7. READ A VALUE BLOCK	
	8-8. INITIALIZE A VALUE BLOCK	
	-9. WRITE MASTER KEY (KEYA)	
	-10. INCREMENT VALUE	
	3-11. DECREMENT VALUE	
	3-12. COPY VALUE	
	3-13. READ A DATA PAGE (ULTRALIGHT & NTAG203)	
	3-14. WRITE A DATA PAGE (ULTRALIGHT & NTAG203)	
	3-15. REQUEST FOR ANSWER TO SELECT (ISO14443-4)	
	3-16. EXCHANGE TRANSPARENT DATA (T = CL)	
	3-17. LED CONTROL	
	3-18. POWER DOWN	
	3-19. Write Perso	
	3-21. GET FIRMWARE VERSION	
	3-22. TURN ON/OFF AUTO-DETECTION	
	DIFFERENCES FROM PREVIOUS VERSION	

1. MAIN FEATURES





*This picture may not be exactly the same as real object.

- Tags supported: Mifare 1k, Mifare 4k, Mifare UltraLight, Mifare UltraLight C, NTAG203, DESFire, DESFire EV1 and Mifare Plus 2K/4K
- Built-in antenna
- 0 to 400 KHz bit-wide I²C-bus communication
- 2.7 ~ 3.6V VDC operating, I/O pins are 5V tolerant
- Work current less than 45mA @3.3V
- Power down current less than 10uA
- Operating distance: Up to 50mm, depending on tag
- Storage temperature: $-40 \, ^{\circ}\text{C} \sim +85 \, ^{\circ}\text{C}$
- Operating temperature: -25 °C $\sim +55$ °C
- Dimension: $38 \times 38 \times 3$ mm
- The OUT pin at low level indicates tag in detective range, and high level indicating tag out
- Auto-detection: LED is on when card is in the detection range¹
- Support IAP firmware update

¹ Suppots all cards above except ISO14443-4 cards like DESFire/DESFire EV1 and MifarePlus L0/L2/L3. There is Auto-detection command to control its on/off.

2. PINNING INFORMATION

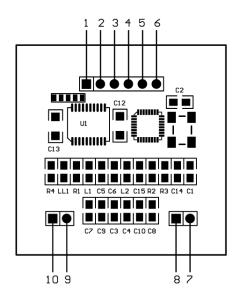

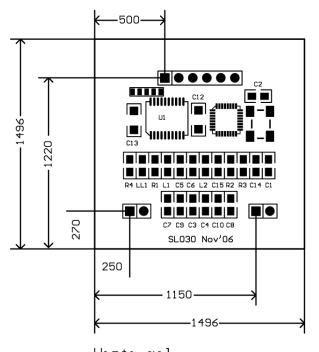

Uint: mil 100 mil between two pads


PIN	SYMBOL	TYPE	DESCRIPTION	
1	VDD	PWR	Power supply, 2.7V to 3.6VDC	
2	IN	Input	Falling edge wake up SL030 from power down mode	
3	SDA	Input/Output	Serial Data Line	
4	SLC	Input	Serial Clock Line	
			Tag auto-detection signal	
5 Out Output low level indicating tag in				
			high level indicating tag out	
6	GND	PWR	Ground	
7	NC			
8	NC			
9	NC			
10	NC			

Attention: Pin IN must be connected HIGH voltage when working, so SL030 can enter power down mode properly.

3. Device Operation

3-1. Clock and Data Transitions:

The SDA pin is normally pulled high with an external device. Data on the SDA pin may change only during SCL low time periods. Data changes during SCL high periods will indicate a start or stop condition as defined below.

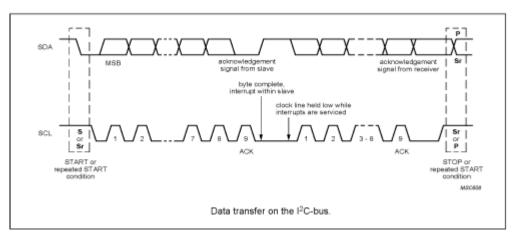


3-2. Start Condition

A high-to-low transition of SDA with SCL high is a start condition which must precede any other command

3-3. Stop Condition

A low-to-high transition of SDA with SCL high is a stop condition.

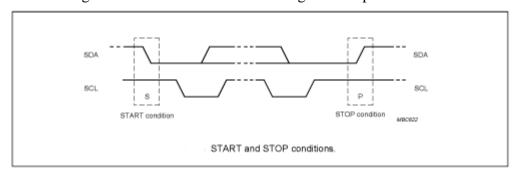


3-4. Acknowledge

All addresses and data words are serially transmitted to and from the SL030 in 8-bit words. The SL030 sends a zero to acknowledge that it is not busy, and has received each word. This happens during the ninth clock cycle.

3-5. Busy State

When the SL030 has received command, then don't acknowledge IIC bus until ends with the card communication.

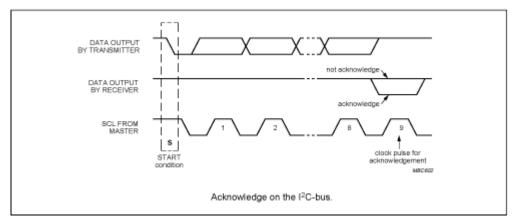

3-6. Device Addressing

The SL030 devices require an 8-bit device address word following a start condition to enable the chip for a read or write operation.

The device address word consists of 7 bits addressing and 1 bit operation select bit. The first 7 bits are the SL030 addressing, is 10100xx depend on JP1 and JP2 status as below table

, ,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,			
	JP1	JP2	Address
	no	no	1010000
	no	no	(default)
shorted	no	yes	1010001
	yes	no	1010010
	yes	yes	1010011


The eighth bit of the device address is the read/write operation select bit. A read operation is initiated if this bit is high and a write operation is initiated if this bit is low.



The first byte after the START procedure.


3-7. Write Operations

The host device send a command(refer chapter 4) to SL030 via write operation, then SL030 will carry out the order that receive. Finished time according to different order



3-8. Read Operations

The host device passes to read the operation gets the order carries out the result

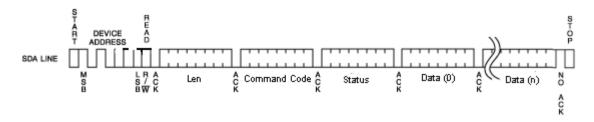

4. COMMAND DESCRIPTION

4-1. FORMAT

Host Write Command to SL030:

Address	Len	Command	Data	
Address:	1 b	yte, 0xA0		
Len:	1 b	yte indicating	the numb	er of bytes from Command to the end of Data
Command: 1 byte Command code, see Table 3				
Data:	Var	iable length d	epends or	the command type

Host Read The Result:

Address	Len	Command	Status	Data	
Address:	1 b	yte, 0xA1			
Len:	1 b	yte indicating	the numb	er of byte	es from Command to the end of Data
Command	l: 1 b	yte Command	code, see	Table 3	
Status:	1 b	yte Command	status, se	e Table 4	1
Data:	Var	iable length de	epends on	the com	mand type.

4-2. Command Overview

Table 3

Command	Description
0x01	Select Mifare card
0x02	Login to a sector
0x03	Read a data block
0x04	Write a data block
0x05	Read a value block
0x06	Initialize a value block
0x07	Write master key (key A)
0x08	Increment value
0x09	Decrement value
0x0A	Copy value
0x10	Read a data page (Ultralight & NATG203)
0x11	Write a data page (Ultralight & NTAG203)
0x12	Download Key
0x13	Login sector via stored Key
0x20	Request for Answer to Select (ISO14443-4)
0x21	Exchange Transparent Data according to T = CL
0x40	LED control
0x50	Go to Power Down mode
0x80	MFP WritePerso
0x81	MFP CommitPerso
0xF0	Get firmware version
0xFE	Turn on/off Auto-detection

STATUS OVERVIEW

Table 4

Table 4	
Status	Description
0x00	Operation succeed
0x01	No tag
0x02	Login succeed
0x03	Login fail
0x04	Read fail
0x05	Write fail
0x06	Unable to read after write
0x08	Address overflow
0x09	Download Key fail
0x0A	Collision occur
0x0C	Load key fail
0x0D	Not authenticate
0x0E	Not a value block
0x0F	Input len invalid
0x12	MFP WritePerso fail
0x13	MFP CommitPerso fail
0xF1	Invalid command

0x01 0x02 0x03 0x04 0x05 0x06 0x07 0x09 0x0B 0x21 0x22

0x00

4-3. COMMAND LIST

4-3-1. Select Mifare card

Host Write:

Len	0x01
LCII	OAUI

LUI	07101					
Host Read:						
Len	0x01	Status	UID	Type		
Status: 0x00: Operation succeed						
	0x01:	No tag				
UID:	The u	niquely se	erial numb	per of Mifare card		
Type:						
	MFM	ini_4B				
	MFM	ini_7B				
	MF1K_4B UID/ MFPLUS2K SL1_4B UID					
	MF1K_7B UID/ MFPLUS2K SL1_7B UID					
	MF4k	K_4B UID	/ MFPLU	JS4K SL1_4B UID		
	MF4K	C_7B UID	/ MFPLU	IS4K SL1_7B UID		
	MF Ultralight/MF Ultralight C/Ntag 203					
	MF DESFire/MF DESFire EV1					
	MF PROX					
	MFPL	US2K SI	_2_4B UI	D		
	MFPI	JUS4K SI	L2 4B UI	D		

 MFPLUS2K SL2_7B UID
 0x23

 MFPLUS4K SL2_7B UID
 0x24

 MFPLUS2K SL0/SL3_4B UID²
 0x31

 MFPLUS4K SL0/SL3_4B UID
 0x32

 MFPLUS2K SL0/SL3_7B UID
 0x33

 MFPLUS4K SL0/SL3_7B UID
 0x34

Other **4-3-2. Login to a sector**

Host Write:

Len 0x02 Sector Type Key

Sector: Sector need to login, 0x00 - 0x27

Type: Key type (0xAA: authenticate with KeyA, 0xBB: authenticate with KeyB)

Key: Authenticate key, 6 bytes

Host Read:

Len	0x02	Status					
C	0.00	т .					

Status: 0x02: Login succeed

0x01: No tag 0x03: Login fail

0x08: Address overflow

4-3-3. Download Key into SL030

² Mifare Plus SL0 and SL3 can tell differences via ATS(ISO14443-4). Before ATS, they have the same ATQA and SAK(ISO14443-3). SL030 judges card type only via ISO14443-3 layer for the compatibility.

Host Write:

Len	0x12	Sector	Type	Key

Sector: 0x00 - 0x27

Type: Key type (0xAA: KeyA, 0xBB: KeyB)

Key: 6 bytes, stored into SL030

Host Read:

Len 0x12 Status

Status: 0x00: Operation succeed

0x08: Address overflow 0x09: Download fail

Note: Some delay is needed between Host Write and Host Read.

4-3-4. Login sector via stored key

Host Write:

Len 0x13 Sector Type

Sector: Sector need to login, 0x00 - 0x27

Type: Key type (0xAA: KeyA, 0xBB: KeyB)

Host Read:

Len 0x13 Status

Status: 0x02: Login succeed

0x03: Login fail

0x08: Address overflow

4-3-5. Read a data block

Host Write:

Len 0x03 Block

Block: The absolute address of block to be read, 1 byte

Host Read:

Len 0x03 Status Data

Status: 0x00: Operation succeed

0x01: No tag 0x04: Read fail

0x0D: Not authenticate

Data: Block data returned if operation succeeds, 16 bytes.

4-3-6. Write a data block

Host Write:

Len 0x04 Block Data	
---------------------	--

Block: The absolute address of block to be written, 1 byte.

Data: The data to write, 16 bytes.

Host Read:

	1		
Len	0x04	Status	Data

Status: 0x00: Operation succeed

0x01: No tag 0x05: Write fail

0x06: Unable to read after write

0x0D: Not authenticate

Data: Block data written if operation succeeds, 16 bytes.

4-3-7. Read a value block

Host Write:

Len 0x05 Block

Block: The absolute address of block to be read, 1 byte.

Host Read:

Status: 0x00: Operation succeed

0x01: No tag 0x04: Read fail 0x0D: Not authenticate

0x0D: Not authenticate 0x0E: Not a value block

Value: Value returned if the operation succeeds, 4 bytes.

4-3-8. Initialize a value block

Host Write:

Block: The absolute address of block to be initialized, 1 byte.

Value: The value to be written, 4 bytes.

Host Read:

Len	0x06	Status	Value

Status: 0x00: Operation succeed

0x01: No tag 0x05: Write fail

0x06: Unable to read after write

0x0D: Not authenticate

Value: Value written if the operation succeeds, 4 bytes.

4-3-9. Write master key (KeyA)

Host Write:

Len	0x07	Sector	Key
-----	------	--------	-----

Sector: The sector number to be written, 0x00 - 0x27.

Key: Authentication key, 6 bytes

Host Read:

Len UXU/ Status Ney	Len	0x07	Status	Key
---------------------------	-----	------	--------	-----

Status: 0x00: Operation succeed

0x01: No tag 0x05: Write fail

0x08: Address overflow 0x0D: Not authenticate

Key: Authentication key written if the operation succeeds, 6 bytes.

after this command.

4-3-10. Increment value

Host Write:

Len	0x08	Block	Value

Block: The absolute address of block to be increased, 1 byte.

Value: The value to be increased by, 4 bytes.

Host Read:

Len	0x08	Status	Value	
Status	0x00:	Operat	ion succe	ed

0x01: No tag 0x05: Write fail

0x06: Unable to read after write

0x0D: Not authenticate 0x0E: Not a value block

Value: The value after increment if the operation succeeds, 4 bytes

4-3-11. Decrement value

Host Write:

Len 0x09 Block Value

Block: The absolute address of block to be decreased, 1 byte

Value: The value to be decreased by, 4 bytes

Host Read:

Len	0x09	Status	Value
G	0.00	^	, •

Status: 0x00: Operation succeed

0x01: No tag 0x05: Write fail

0x06: Unable to read after write

0x0D: Not authenticate 0x0E: Not a value block

Value: The value after decrement if the operation succeeds, 4 bytes

4-3-12. Copy value

Host Write:

Source: The source block copy from, 1 byte Destination: The destination copy to, 1 byte

The source and destination must in the same sector

Host Read:

Len 0x0A Status Value

Status: 0x00: Operation succeed

0x01: No tag 0x05: Write fail

0x06: Unable to read after write

0x0D: Not authenticate

0x0E: Not a value block (Source)

Value: The value after copy if the operation succeeds, 4 bytes

4-3-13. Read a data page (UltraLight & NTAG203)

Host Write:

Len 0x10 Page

Page: The page number to be read, 1 byte

Host Read:

Len 0x10 Status Data

Status: 0x00: Operation succeed

0x01: No tag 0x04: Read fail

0x08: Address overflow

Data: Block data returned if operation succeeds, 4 bytes.

4-3-14. Write a data Page (UltraLight & NTAG203)

Host Write:

Len 0x11 Page Data

Page: The page number to be written, 1 byte.

Data: The data to write, 4 bytes.

Host Read:

Len 0x11 Status Data

Status: 0x00: Operation succeed

0x01: No tag 0x05: Write fail

0x06: Unable to read after write

0x08: Address overflow

Data: page data written if operation succeeds, 4 bytes.

4-3-15. Request for Answer to Select (ISO14443-4)

Len	0x20
-----	------

Response:

Len 0x20 Status ATS

Status: 0x00: Operation succeed

0x10: Address overflow

ATS: According to ISO14443-4 protocol

 $Len+T_0+TA_1+TB_1+TC_1+A_1+A_K\\$

4-3-16. Exchange Transparent Data (T = CL)

Len 0x21 Data

Data: COS command

Response:

Len 0x21 Status Data

Status: 0x00: Operation succeed

0x11: Communicate with card failed

Data: Response data from card

4-3-17. LED Control

Host Write:

Len0x40DataData:0x00: LED off

0x01: LED on

Host Read:

Len 0x40 Status

Status: 0x00: Operation succeed

4-3-18. Power Down

Host Write:

Len 0x50

Host Read:

Len 0x50 Status

Status: 0x00: Operation succeed

Note: Some delay is needed when waking up SL030.

4-3-19. Write Perso

Host Write:

Len 0x80	Bnr	Data
----------	-----	------

Bnr: 2Byte Block or Key Address to be written, MSB first.

For example,

Master Key Address is 0x9000, and write it as 0xFFFF..FF(16Bytes)

Configuration Key Address is 0x9001, and write it as 0xFFFF..FF(16Bytes)

Switch to Level 2 Key Address is 0x9002, and write it as 0xFFFF..FF(16Bytes)

Switch to Level 3 Key Address is 0x9003, and write it as 0xFFFF..FF(16Bytes)

Data: Value of the key or data

Host Read:

Status: 0x00: Operation succeed

0x11: Communicate with card failed

0x12: Card Write Perso failed

4-3-20. Commit Perso

Host Write:

Len 0x81

This command commit the Write Perso and switch the card to security level 1(SL1 card) or level 3(SL3 card).

Host Read:

Len	0x81	Status

Status: 0x00: Operation succeed

0x11: Communicate with card failed0x13: Card Commit Perso failed

Attention: According to NXP MifarePlus card document, Commit Perso will make effect after you have "Write Perso" the Master KEY, Configuration KEY and SWL3 KEY.

If your card is L1 card, after Commit Perso, the card will switch L0 to L1;

If your card is L3 card, after Commit Perso, the card will switch L0 to L3.

4-3-21. Get firmware version

Host Write:

Len 0xF0

Host Read:

Len 0xF0 Status Data

Status: 0x00: Operation succeed

Data: firmware version.

4-3-22. Turn on/off Auto-detection

Host Write:

Len 0xFE Data

Data: 0x00: Turn off Auto-detection

0x01: Turn on Auto-detection

For example,

02FE00h // Turn off Auto-detection 02FE01h // Turn on Auto-detection

Host Read:

Len OxFE Status

Status: 0x00: Operation succeed

5. DIFFERENCES FROM PREVIOUS VERSION

Although we make efforts on the compatibility between the new SL030 V3.0 and the old SL030 V1.0-V2.3, there are still some differences you need to know.

- 1. New SL030 has a new auto-detection function which can close automatically when there is a DESFire or MifarePlus L0/L2/L3 card coming into the detection range, and the light will be on even if the card is out of field. By the way, we also offer you the Turn On/Off Auto-detection command.
- 2. New SL030 supports nearly all cards of NXP Mifare series now and we rebuilt the card type characters.(Details see to Command Select Mifare Card Description)