

Technical University of Denmark, Kongens Lyngby, Danmark

run.py - a HAWC supplementation

 $\begin{array}{c} code/documentation:\ Jonas\ Lohmann\\ email:\ s223685@student.dtu.dk\\ date:\ 2023-11-26\\ version:\ 0.1.2 \end{array}$

Table of Contents

Table of Contents				
1	Disc	nimer 2		
2	Wha	at it can help you with	2	
3		requisites	2	
	3.1	Always: directory structure		
	3.2	For HAWC2 runs: results file name	3	
	3.3	For incorporating tuned control parameters: parameter file contents	3	
4	How	to use run.py and its parameters	3	
	4.1	hawc_type	3	
	4.2	dir_htc_relates_to	4	
	4.3	htc_file_name	4	
	4.4	$root_results \ \ldots \ldots \ldots \ldots \ldots \ldots \ldots$	4	
	4.5	case_name	4	
	4.6	overwrite_existing_case	4	
	4.7	opt_file_to_be_saved	5	
	4.8	change_param_type	5	
	4.9	n_parallel_processes	5	
	4.10	change_params	5	
		change_opt_file		
		incorporate_ctrl_tuning	7	

	4.13	hawc2_use_from_hawc2s
5	Exa	mple use cases
	5.1	Setup
	5.2	Simple run
	5.3	Finding the optimum Tip Speed Ratio
	5.4	Controller optimisation

1 Disclaimer

Use at your own risk! One setting (see Section 4.6) enables *run.py* to overwrite a single directory without any safety measures and without sending the files to the trash directory.

2 What it can help you with

The script run.py and its classes are designed to automate the manipulation of .htc files, run HAWC2/HAWC2S simulations, and collect all results in an orderly manner. With a few user definitions, the script fully automatically

- changes any parameters in an .htc file and then runs it
- runs simulations in parallel
- collects the results and saves them to a user-defined directory
- accepts multiple values for the same parameter(s) and runs them one after the other
- \bullet incorporates HAWC2S control tuning results into HAWC2 .htc files and runs the HAWC2 simulation
- creates and runs simulations for slices of existing .opt files
- incorporates settings from a HAWC2S .htc into a HAWC2 .htc file

The updated code and the updated (if there are updates) documentation can be found on GitHub. Unexpected behaviour and errors can be posted on run.py - issues or send to s223685@student.dtu.dk. Example use cases are given in Section 5.

3 Prerequisites

To balance user-friendliness (few user inputs) against the generality of the script (many user inputs), some assumptions are hard-coded into the script. These are now briefly explained.

3.1 Always: directory structure

The directory that the file path definitions in your .htc file relate to (here called rel) must contain an htc and opt directory. The htc directory holds all (both HAWC2 and HAWC2S) .htc files and the opt directory all controller dll's. Jk, all .opt files have to go there. The minimum required directory structure can be seen in Fig. 1.

3.2 For HAWC2 runs: results file name

The *filename* of the *output* block of .htc files needs to be a path including at least one directory. The directory *rel* does not suffice. Result files named ./tsr_10_test thus do not work. An acceptable *filename* is ./results/tsr_10_test (here, the needed directory is results).

3.3 For incorporating tuned control parameters: parameter file contents

The file containing the tuned control parameters that is created with a HAWC2S run needs to contain parameters for regions 1, 2, and 3, and be for quadratic gain scheduling. This depends on the wind speeds for which the control tuning parameters are calculated and the *gain_scheduling* parameter in the *controller_tuning* block of the HAWC2S .htc.

4 How to use run.py and its parameters

All run.py does is modify .htc files, run it, and collect the outputs. That inherently means that all parameters in the .htc file that run.py doesn't change need to be set up properly beforehand. No parameter in an .htc file that influences the results is changed silently (meaning without the user's action). If the constraints of the prerequisites of Section 3 are satisfied, only the parameters inside the run.py script need to be set and the script run. These parameters are explained in the following subsections.

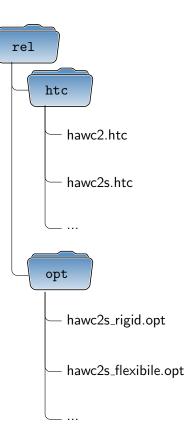


Figure 1: Minimum directory structure

The parameters change_params, change_opt_file, and incorporate_ctrl_tuning should be used mutually exclusive. Only one of them may not be empty every time run.py is used. See the respective parameter descriptions for when the parameters are called empty.

4.1 hawc_type

type str

description tell run.py whether to run HAWC2 or HAWC2S

takes values "hawc2mb" or "hawc2s"

4.2 dir_htc_relates_to

type str

description path from the location of the run.py file to the directory the .htc file

relates to

takes values string representing the path

Note: All file paths specified in the .htc file (to the different structural, aerodynamic, etc. data files) are in relation to a certain directory. This directory is here called "the directory the .htc file relates to". See Fig. 1.

4.3 htc_file_name

type str

description file name (i.e. without the .htc extension) of the .htc file to be run

takes values string representing the file name

Note: This .htc file has to exist in the htc directory.

4.4 root_results

type str

description path to the root directory of the results in relation to rel (see Fig. 1)

takes values string representing the path

Note: This is not the directory the results are going to be saved to.

4.5 case_name

type str

description directory path relative to root_results into which the results are saved

takes values string representing the path

Note: When using change_opt_file with case_name = "", the results are going to be saved in new directories inside the directory of the .opt file.

4.6 overwrite_existing_case

type bool

description Whether to overwrite the case_name directory if it already exists

takes values True or False

4.7 opt_file_to_be_saved

type str

description path of an .opt file relative to rel that should be saved into the

case_name directory

takes values string representing the path

Note: Using run.py to calculate optimal .opt files with HAWC2S automatically saves the optimal .opt files to case_name.

4.8 change_param_type

type str

description controls how to change the parameters in the .htc file for a given

change_params

takes values "consecutively" or "simultaneously"

Note: This only has an influence on cases in which multiple parameters are to be changed. "consecutively" means each parameter is changed one after the other. "simultaneously" means each $i^{\rm th}$ value of all parameters is set simultaneously.

Assume you want to change opt_lambda=[7, 8] and minpitch=[0, 10]. Using change_param_type="consecutively" will cause four runs setting opt_lambda=7 first, then opt_lambda=8, then minpitch=0, and finally minpitch=10. Using change_param_type="simultaneously" will cause two runs setting opt_lambda=7 and minpitch=0 first, and then opt_lambda=8 and minpitch=10.

4.9 n_parallel_processes

type int

description how many simulations to do in parallel

takes values integers > 0

Note: **DANGEROUS IF MISUSED.** Check yourself before you shrek yourself (or more accurately your PC). Start with n_parallel_processes=1 and check your RAM and CPU. Then increase it to 2 and see the influence on your RAM and CPU. From that, judge how many processes your PC can handle.

4.10 change_params

type $\operatorname{dict}[\operatorname{dict}[...[\operatorname{list}]]]$

description nested dictionary defining which parameters the change to which values takes values deeply nested dictionary; the wanted values for each parameter have to

be specified as a list

Note: The nested dictionary is structured according to the blocks in the .htc file. The definition of the new parameter-value combination is based on a key-value (dictionary) pair, too. change_params is considered empty when the deepest layers of keys have empty dictionaries as values.

Example setting the optimal tip-speed-ratio: The respective HAWC2S parameter is called opt_lambda and it exists in the block hawcstab2 \rightarrow operational_data. To have 3 runs with different tip-speed-ratios, one would set

```
change_param={
  "hawcstab2":
    "operational_data": {
      "opt_lambda": [7, 8, 9]
  }
To set the controller constant 7 for a HAWC2 simulation, one could set
change_param={
  "dll":
    "type2_dll": {
      "innit": {
        "constant__7": [100, 200, 300]
A block in change_param is skipped if it ends in an empty dictionary. E.g.,
change_param={
  "hawcstab2":
    "operational_data": {
      #"opt_lambda": [7, 8, 9]
  "dll": {
    "type2_dll": {
      "innit": {
        "constant__7":
                        [100, 200, 300]
    }
```

only changes $constant_{-7}$ because the key operational_data's value is an empty dictionary (note the comment indication #).

4.11 change_opt_file

type list[tuple]

description run with different .opt files for certain ranges of wind speeds

takes values list of tuples; first tuple value is the file path relative to rel and the

second value is a tuple specifying the wind speed range

Note: **change_opt_file** is considered empty when it is an empty list. The file paths have to be specified relative to *rel*.

4.12 incorporate_ctrl_tuning

type list[str]

description incorporate the parameters from a HAWC2S control tuning

computation into a HAWC2 .htc and runs it

takes values list of strings representing paths

Note: incorporate_ctrl_tuning is considered empty when it is an empty list. The file paths have to be specified relative to rel.

4.13 hawc2_use_from_hawc2s

type list[tuple[str, str]]

description specify all parameters and values a HAWC2 .htc file should use from

a HAWC2S .htc file

takes values list of tuples with the first tuple entry denoting the HAWC2S

parameter and the second entry the HAWC2 parameter

Note: Currently, this only works if incorporate_ctrl_tuning is used and the directories that contain the HAWC2S control tuning parameter file contain the HAWC2S .htc file that was used to create the control parameter file.

The parameters have to be specified as a string in the format of "block1.block2.parameter", i.e. to use the constant power setting from a HAWC2S .htc in a HAWC2 .htc file use

incorporate_ctrl_tuning =

[("hawcstab2.controller_tuning.constant_power",

"dll.type2_dll.init.constant__15")]

5 Example use cases

run.py can always be used if just a single simulation should be performed or when multiple parameters need to be changed. The three main use cases the author has used are quickly shown.

5.1 Setup

Given a directory structure like seen in Fig. 2 and assuming that redesign.htc's file paths relate to the input directory, the following parameters in run.py have to be set:

```
dir_htc_relates_to = "../data/HAWC/input"
htc_file_name = "redesign.htc"
```

Then, the directory output is chosen as the root directory for the results:

```
dir_htc_relates_to = "../output"
```

5.2 Simple run

Assume redesign.htc to be a HAWC2S .htc file. This implies

```
hawc_type = "hawc2s"
```

Now, assume redesign.htc is already ready to use using a command prompt. The .htc file is set to calculate the optimal operational data, steady-state power values, induction values, and tune the controllers. These are a lot of files you'd like to collect in a directory all_calculations. This means

```
case_name = "all_calculations"
```

Now additionally set

```
overwrite_existing_case = True
skip_safety_warning = False
opt_file_to_be_safed = None
change_params = {}
change_opt_file = []
incorporate_ctrl_tuning = []
```

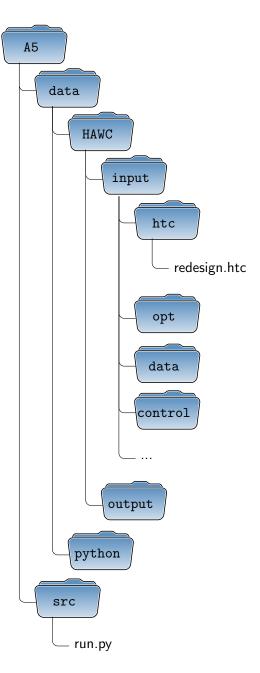


Figure 2: Exemplary directory structure

and run run.py. Parameters that aren't specifically set in this example don't have an influence in this case. Once the script is done, all results will be in A5/data/HAWC/output/all_calculations.

5.3 Finding the optimum Tip Speed Ratio

Change redesign.htc to calculate the optimal operational settings. Then, use the same settings as in Sections 5.1 and 5.2 except for

```
 \begin{array}{lll} {\tt case\_name} & {\tt "tsr\_optimisation"} \\ {\tt change\_params} & = & \{{\tt "hawcstab2": \{"opt\_lambda": [5,6,7,8,9,10]\}} \} \\ \end{array}
```

And set n_parallel_processes to what your PC can handle (or what you like). Once the script is done, A5/data/HAWC/output/tsr_optimisation contains 6 directories called opt_lambda_i, with i the tip speed ratios 5 to 10. In each directory are the results for the respective tip speed ratio.

5.4 Controller optimisation

Assume there is a HAWC2 redesign_hawc2.htc file next to the redesign.htc. Set the latter to perform control parameter tuning. Create a list of tuples with different (ctrl_frequency, ctrl_damping) called ctrller_values. Then set

Now run run.py. In the meantime, set the HAWC2 redesign hawc2.htc for your desired wind conditions and simulation time. Don't forget the note in Section 3.2. Once the script is done, the directory A5/data/HAWC/output/ctrl_optimisation will be filled with directories corresponding to the different controller values. In each of them, a file with the tuned parameters exists. Since all of them have the same name, one can os.listdir() through the case_name directory to quickly define all tuned control parameter files an save them as tuned_files. Then set

and run again. After the script is done, each directory for a unique controller damping and frequency setting contains a directory <code>HAWC2_sim</code> containing the .hdf5, .log, and .htc file. The .htc file there is the original <code>redesign_hawc2.htc</code> file with the changed tuned controller values.