# Companion Models for Basic Non-Linear and Transient Devices

Steven Herbst, Antoine Levitt
July 9, 2008

# 1 Introduction

# 1.1 Linear DC analysis

#### 1.1.1 Nodal analysis

The most simple kind of circuit simulation deals with constant sources and resistors. There are a number of different techniques to formulate the network equations in a general way, the most convenient for computer simulation being nodal analysis (NA). This method formulates equation in the matrix form GV = I, which is straightforward for current sources and resistors by application of the Kirchoff current law (KCL) at each node.

An interesting side effect is that we can formulate the equations in a percomponent basis: each component "stamps" itself in the G matrix and I right hand side. For instance, a resistor between node i and node j contributes to the current flowing to node j by  $\frac{1}{R}(v_j-v_i)$  and to the current flowing to node i by the negative of the same amount. So its "stamp" is four entries in the G matrix: R in (i,i) and (j,j), and -R in (i,j) and (j,i). The stamp for the current source is derived in the same way: a current source of known current J between node i and j adds J to entry number i of I, and -J to entry number j of I.

#### 1.1.2 Modified nodal analysis

Using NA, we can treat circuits comprised of resistors and current sources. For the other basic building block, voltage source, a trick is required. Since we can not incorporate the missing equations directly, we add another unknown for every voltage source: this is known as modified nodal analysis (MNA) and is at the core of agar-eda. The idea is to split the unknown vector (which is called x in the simulation) and the right hand side (called z) in two parts: the first corresponds to classical nodal analysis, the second is used to treat voltage sources.

The second part of the unknowns are the current flowing through the voltage

source. A voltage source of known voltage V between nodes i and j adds the unknown  $I_{i,j}$  to the unknowns vector, and contributes to the equations with by adding  $I_{i,j}$  to  $i_i$  and  $-I_{i,j}$  to  $i_j$ , and the new equation  $V_j - V_i = V$ . These equations, like the previous ones, can be incorporated by stamping. The new matrix relation becomes Ax = z:

- z is  $(z_{NA}, z_{MNA})$ ,  $z_{NA}$  being the stamps of current sources, and  $z_{MNA}$  the stamps of voltage sources.
- x is  $(x_{NA}, x_{MNA})$ ,  $x_{NA}$  being the voltages at the nodes, and  $x_{MNA}$  the currents flowing through the voltage sources.
- A is the block matrix (G, C; B, D), G being the admittance matrix of NA, and B, C, D representing various constitutive equations concerning the voltage sources.

# 1.2 Non-linear DC analysis

For simulation of real circuits, which contain transistors and diode, we are interested in simulating components which have arbitrary i-v relations. We use the standard Newton method, described in any numerical analysis textbook. The derivation of how the multidimensional Newton method leads to the algorithm we use is a bit long, but here is the intuitive explanation: the Newton method works by linearizing the equation around the operating point  $X_n$ , solve the linearized equation to obtain  $X_{n+1}$ , and iterate until convergence (which is when  $X_n$  is near  $X_{n+1}$ , the precise definition of near involving a compromise between speed and accuracy). In circuits, we linearize the i-v characteristic around point  $v_n: i = i(v_n) + (dv/di)(v - v_n)$ . That allows us to form companion models describing the linearized component, which we can stamp. The equation is solved for another operating point, and the cycle continues.

#### 1.3 Transient analysis

Transient analysis uses pretty much the same idea as non-linear analysis. We have to take into account are energy storage components, namely capacitor and inductor. For example the constitutive relation for the inductor is u = Ldi/dt, or equivalently  $i(t+\Delta t) = i(t) + 1/L \int_t^{t+\Delta t} u(t)$ . We then use an approximation method (we implement single step methods, namely forward euler, backward euler and trapezoidal rule) to compute this integral. This leads to a formula describing the behavior of the component (i.e. a relationship between  $i(t+\Delta t)$  and  $v(t+\Delta t)$ , which we can then convert to a companion model and compute the solution (using a Newton loop). This gives us a new operating point, which we use for the next time step.

#### 1.4 Summary

The structure of the final algorithm is as follow:

```
Transient loop:

while the simulation is not over

Formulate companion models for energy storage
    components, using current operating point

Newton loop:

while the convergence is not achieved

Formulate companion models for non-linear components,
    using current operating point

Solve for new operating point

end while

end while
```

# 2 Non-linear components

### 2.1 PN Diode

As a two-terminal device with only one distinct operating region, the PN diode was a natural starting point for non-linear simulation. The current model does not include parasitic capacitances, but this is planned for the future.

The i-v relation that describes a diode is the following:

$$i(v) = I_S(e^{v/V_t} - 1)$$
 (1)

where  $I_S$  is the reverse saturation current and  $V_t$  is the thermal voltage (kT/q). From this, we derive the small-signal conductance:

$$g = \frac{di}{dv} = (I_S/V_t)e^{v/V_T} \approx i(v)/V_t \tag{2}$$

The error committed in the equation is  $I_S/V_t$ , which for common diodes is around  $10^{-12}S$ , which is negligibly for common applications and allow us to avoid computing the exp function twice. In simulation we use the Newton-Raphson method to solve circuits with non-linear elements. The method works by linearizing the constitutive equations, solve for a new operating point, and iterate until convergence. The linearised curve around operating point  $v_n$  is:

$$i_{lin}(v) = i(v_n) + (di/dv)(v_n)(v - v_n)$$
 (3)

By rearranging this equation, we find the i-v relation  $i_{lin} = (i(v_n) - gv_n) + gv$ . Hence the appropriate companion model for a diode is a conductance g in parallel with a current source  $i(v_n) - gv_n$ , not simply  $i(v_n)$ , as one might suspect. The result is shown in Figure 1.

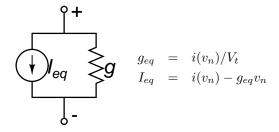


Figure 1: Linear companion model for diode

#### 2.2 Metal-Oxide-Silicon Field-Effect Transistor

The next simplest non-linear devices are n- and p-channel MOSFETs, as no current flows into the gate, and the non-linear source-to-drain port depends on only two parameters,  $v_{GS}$  and  $v_{DS}$ . The model is complicated slightly, however, by the fact that MOSFETs have three distinct operating regions. For brevity, we derive only the results for n-channel MOSFETs. Similar results for p-channel MOSFETs are presented at the end of this subsection.

#### **2.2.1** Cutoff: $v_{GS} - V_T < 0$

Cutoff is a trivial operating region, as all of the companion model parameters (depicted in Fig. 2) zero. No current flows into any of the nodes.

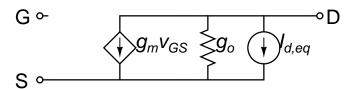


Figure 2: Linear companion model for n-channel MOSFET

#### **2.2.2** Saturation: $0 \le v_{GS} - V_T < v_{DS}$

In saturation, the following large-signal model holds:

$$I_D = \frac{K}{2}(v_{GS} - V_T)^2 (1 + (v_{DS} - v_{DS,sat})/V_a)$$
(4)

where  $V_a$  is the Early voltage and  $v_{DS,sat} = v_{GS} - V_T$ . Since  $I_D$  is a function of two variables, we now use partial derivatives to find the small-signal conductances across the DS port.

$$g_m = \frac{\partial I_D}{\partial v_{GS}} = K(v_{GS} - V_T)(1 + (v_{DS} - v_{DS,sat})/V_a) = \sqrt{2KI_D}$$
 (5)

$$g_o = \frac{\partial I_D}{\partial v_{DS}} = \frac{K}{2} (v_{GS} - V_T)^2 / V_a = I_S / V_a$$
(6)

We seek to define a bias current from drain to source that will cause the node voltages to evolve by Newton-Raphson iteration, as we did for the diode in the previous subsection. We now use the multivariable form of the iteration equation:

$$I_{D,n+1} = I_D + g_m(v_{GS,n+1} - v_{GS,n}) + g_o(v_{DS,n+1} - v_{DS,n})$$
(7)

Rearranging this equation, we find that  $I_{D,n+1} = (I_D - g_m v_{GS,n} - g_o v_{DS,n}) + g_m v_{GS,n+1} + g_o v_{DS,n+1}$ . Hence the bias current is  $I_{D,eq} = I_D - g_m v_{GS,n} - g_o v_{DS,n}$ . Although we will not derive it here, it should now be apparent that the following general result holds when dermining bias currents for Newton-Raphson iteration:

$$I_{eq} = I(\mathcal{V}_i) - \sum_{v \in \mathcal{V}} \frac{\partial I}{\partial v} v_i \tag{8}$$

where V is the set of device port voltages and  $V_i$  is the set of calculated node voltages from the previous iteration.

## **2.2.3** Triode: $0 \le v_{DS} \le v_{GS} - V_T$

The drain current in this operating region is related to the  $v_{GS}$  and  $v_{DS}$  by Equation 9. Note that this model does not include the Early effect.

$$I_S = K((v_{GS} - V_T) - v_{DS}/2)v_{DS}$$
(9)

Applying partial derivatives, we find the small-signal conductances:

$$g_m = \frac{\partial I_D}{\partial v_{GS}} = K v_{DS} \tag{10}$$

$$g_o = \frac{\partial I_D}{\partial v_{DS}} = K((v_{GS} - V_T) - v_{DS}) \tag{11}$$

Again,  $I_{D,eq} = I_D - g_m v_{GS} - g_o v_{DS}$ .

# 2.2.4 p-channel Results

The linear companion model for a p-channel MOSFET is shown in Figure 3, and the values of  $g_m$ ,  $g_o$ , and  $I_{S,eq}$  for the various operating regions are summarized in Table 1. For all operating regions,  $I_{S,eq}$  is related to  $I_S$ ,  $g_m$ , and  $g_o$  by the following equation:

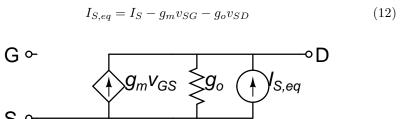


Figure 3: Linear companion model for p-channel MOSFET

Table 1: PMOS companion model parameters

Operating Region	Parameters
Cutoff: $v_{SG} - V_T < 0$	$I_S = 0$ $g_m = 0$ $g_o = 0$
Saturation: $0 \le v_{GS} - V_T < v_{DS}$	$I_S = \frac{K}{2}(v_{SG} - V_T)^2 (1 + (v_{SD} - v_{SD,sat})/V_a)$ $g_m = \sqrt{2KI_S}$ $g_o = I_S/V_a$
Triode: $0 \le v_{DS} \le v_{GS} - V_T$	$I_S = K((v_{SG} - V_T) - v_{SD}/2)v_{SD}$ $g_m = Kv_{SD}$ $g_o = K((v_{SG} - V_T) - v_{SD})$

# 2.3 Bipolar Junction Transistor

Companion models for BJTs are the most complex circuits presented here because current flows between all nodes. The model is not quite as unwieldy as it looks, however, because there is only one operating region.

We start with a simplified, mid-band Gummel-Poon NPN model, as shown in Figure 4. The base currents are defined as follows:

$$i_{bf} = (I_{fs}/\beta_f)(e^{v_{BE}/V_t} - 1)$$
 (13)

$$i_{br} = (I_{rs}/\beta_r)(e^{v_{BC}/V_t} - 1)$$
 (14)

Then, defining the small-signal conductances as in Figure 5, we have

$$g_{\pi,f} = \frac{\partial i_{bf}}{\partial v_{BE}} = (I_{fs}/\beta_f)e^{v_{BE}/V_t}/V_t \approx I_{bf}/V_t$$
 (15)

$$g_{\pi,r} = \frac{\partial i_{br}}{\partial v_{BC}} = (I_{rs}/\beta_r)e^{v_{BC}/V_t}/V_t \approx I_{br}/V_t$$
 (16)

$$g_{m,f} = \frac{\partial i_C}{\partial v_{BE}} = I_{fs} e^{v_{BE}/V_t} / V_t = \beta_f g_{\pi,f}$$
 (17)

$$g_{m,r} = \frac{\partial i_C}{\partial v_{BC}} = I_{rs} e^{v_{BC}/V_t} / V_t = \beta_r g_{\pi,r}$$
(18)

We add the Early effect by placing an output resistance across the CE port, with conductance  $I_C/V_a$ .

Using the general bias current formula (Eqn. 8), we find

$$I_{bf,eq} = I_b f(v_{BE}) - g_{\pi,f} v_{BE} \tag{19}$$

$$I_{br,eq} = I_b r(v_{BC}) - g_{\pi,r} v_{BC} \tag{20}$$

$$I_{C,eq} = I_C(v_{BE}, v_{BC}) - g_{m,f}v_{BE} + g_{m,r}v_{BC} - g_o v_{CE}$$
 (21)

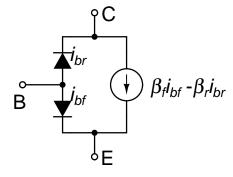


Figure 4: Mid-band Gummel-Poon BJT Model

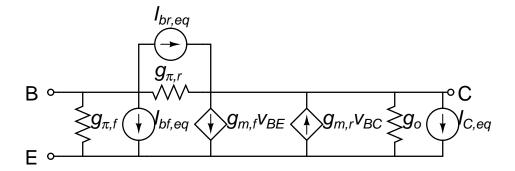


Figure 5: Linear companion model for NPN BJT

The analogous model for a PNP BJT is shown in Figure 6, and the corresponding parameters are listed below:

$$g_{\pi,f} = \frac{\partial i_{bf}}{\partial v_{EB}} = (I_{fs}/\beta_f)e^{v_{EB}/V_t}/V_t \approx I_{bf}/V_t$$
 (22)

$$g_{\pi,r} = \frac{\partial i_{br}}{\partial v_{CB}} = (I_{rs}/\beta_r)e^{v_{CB}/V_t}/V_t \approx I_{br}/V_t$$
 (23)

$$g_{m,f} = \frac{\partial i_E}{\partial v_{EB}} = I_{fs} e^{v_{EB}/V_t} / V_t = \beta_f g_{\pi,f}$$
 (24)

$$g_{m,r} = \frac{\partial i_E}{\partial v_{CB}} = I_{rs} e^{v_{CB}/V_t} / V_t = \beta_r g_{\pi,r}$$
(25)

$$g_o = I_E/V_a \tag{26}$$

$$I_{bf,eq} = I_b f(v_{EB}) - g_{\pi,f} v_{EB} \tag{27}$$

$$I_{br,eq} = I_b r(v_{CB}) - g_{\pi,r} v_{CB} \tag{28}$$

$$I_{C,eq} = I_C(v_{EB}, v_{CB}) - g_{m,f}v_{EB} + g_{m,r}v_{CB} - g_o v_{EC}$$
 (29)

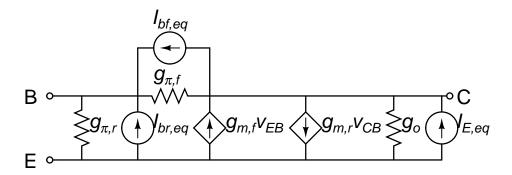


Figure 6: Linear companion model for PNP BJT

# 3 Energy storage components

# 3.1 Capacitor

The companion models presented for capacitors and inductors in the next two subsections are somewhat different from the companion models presented so far. Both devices are linear, but require special models to keep track of state variables from timestep to timestep. The state variable for a capacitor is voltage, so a Thevenin equivalent circuit, shown in Figure 7, is the natural choice for a capacitor companion model.

In deriving the model parameters, we start with the differential equation relating current to voltage in a capacitor:

$$I = C(dv/dt) (30)$$

Discretizing this equation, we find

$$v_{n+1} \approx v_n + (\Delta t/C)I \tag{31}$$

How we define I determines the integration method implemented by the companion model. Table 2 summarizes three common integration methods and the corresponding model parameters.

Table 2: Capacitor companion model parameters for integration methods

Method	Parameters
Forward Euler: $I = I_{n+1}$	$V_{eq} = v_n + (\Delta t/C)i_n$ $R = 0$
Backward Euler: $I = I_n$	$V_{eq} = v_n$ $R = \Delta t/C$
Trapezoidal: $I = (I_n + I_{n+1})/2$	$V_{eq} = v_n + (\Delta t/2C)i_n$ $R = \Delta t/2C$

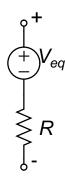


Figure 7: Linear companion model for capacitor

# 3.2 Inductor

The state variable for an inductor is current, so a Norton equivalent model is better suited to the inductor (see Fig. 8). The model parameters can be found in the same way as for the capacitor: discretize the i-v differential equation and select an integration method.

We start with the relation V=L(di/dt), and make the following approximation for small timesteps

$$i_{n+1} \approx i_n + (\Delta t/L)V \tag{32}$$

Again, our choice of V will determine the integration method used. The results are displayed in Table 3.

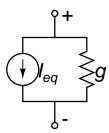


Figure 8: Linear companion model for inductor

Table 3: Induction companion model parameters for integration methods

Method	Parameters
Forward Euler: $V = V_{n+1}$	$I_{eq} = i_n + (\Delta t/L)v_n$ $g = 0$
Backward Euler: $V = V_n$	$I_{eq} = i_n$ $R = \Delta t/L$
Trapezoidal: $V = (V_n + V_{n+1})/2$	$I_{eq} = i_n + (\Delta t/2L)v_n$ $R = \Delta t/2L$

# References

[1] T. L. Pillage, R. A. Rohrer, and C. Visweswariah. *Electronic Circuit & System Simulation Methods*. McGraw-Hill, Inc., 1994.