
# An SDRuno plugin for DRM30 small user's guide \* Revised edition of the plugin

Jan van Katwijk Lazy Chair Computing The Netherlands J.vanKatwijk@gmail.com

January 8, 2022

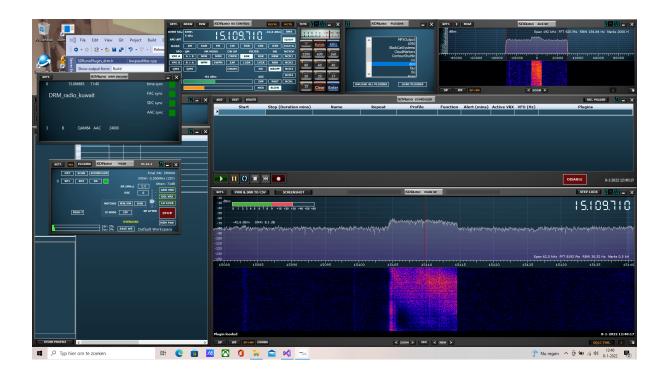

#### 1 Introduction

DRM, Digital Radio Mondiale, is a system for digital radio on medium and short waves up to 30 MHz. This form of DRM is sometimes called DRM30, a variant of DRM, called DRM+, is meant to operate in the FM band,

<sup>\*©</sup>J van Katwijk

DRM is not very popular in western Europe, I receive during daytimes the transmission from Radio Kuwait, and in the evening transmissions from Radio Romenia International. In the past there were transmissions from e.g. Spain, Nigeria and India, Spain stopped the DRM transmissions around 2015, and I do not hear Nigeria nor India anymore. I have to admit though that my antenna equipment is rather limited, for shortwave I use an in-house loop antenna with a simple amplifier.

This document describes a plugin for decoding DRM, developed for the SDRuno environment.

# 2 Installing

As the other plugins for SDRuno, the plugin is implemented as a dll, i.e. a *dynamic load library*, and it should be installed in the folder for community plugins.

The recent standard for DRM supports, next to AAC encoded audio, xHE-AAC encoded audio. The *libfdk-aac-2* decoder is capable of handling both. The plugin uses this decoder for AAC and xHE-AAC decoding (note that so far I did not receive any DRM transmission with service(s) encoded as xHE-AAC).

- *libfdk-aac-2.dll*, for the decoding of the AAC and xHE-AAC data is the main one. However, running this dll requires two additional dll's to be installed
- $libgcc\_s\_dw$ -1.dll, and
- $ullet \ libwinpthread 1.dll$

As said, these libraries are needed for convertings the AAC (or xHE-AAC) blocks to PCM samples, the last step in the plugin. The PCM samples are sent to the SDRuno system for the actual sound output. If (one of) these libraries is NOT installed, the plugin will work with limited functionality: no sound

will be decoded. In that case the plugin will show a message to invite you to install the library (libraries)

SDRuno DRM decoder

-46 -0.207495 time sync

SNR Tiganesti E2

FAC sync

SDC sync

AAC sync

3 B QAM64 AAC 24000

please install libfdk-aac-2.dll

Copies of the libraries can be found in the "the-dll" folder in the repository. Being a Linux developer, I do not understand much of Windows, but I installed these libraries in the folder where the Uno stuff is stored:

C:\\Program Files(x86)\\SDRuno

# 3 Running the plugin


The DRM signal (in the common modes) has a spectrum with a width of 10 KHz. SDRuno usually shows a much wider spectrum. On a 2 MHz wide spectrum 10 KHz takes 1/200-th part and is therefore not (hardly) visible.

The plugin operates using the IQOUT option of SDRuno. Selecting this option - the plugin itself will do so - gives an input rate of 192000 complex samples per second. The plugin software will take care of filtering out a band of 10 Khz and decimating to 12000 samples/second.

To get a decent view on the signal, most likely needed to fine-tune, it is advised to select on the main widget samplerate 2000000, and a suitable decimation factor (I use a decimation factor 8, leading to a spectrum with a width of 250 KHz). Using the zoom option, the spectrum in the picture at the top of this paper takes just over 60 Khz, The SDRuno filter is set to 60 KHz.



The spectrum of the DRM signal clearly shows: other than FM or AM signals no visible carrier or peak (the signal consist of over 200 carriers with a mutual distance of just over 45 Hz).

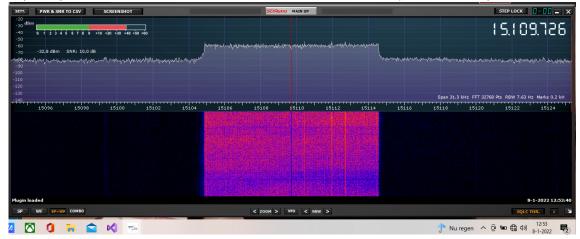

Note that in order to be able to decode the signal, the signal should have a reasonable signals strength. The figure here indicates that the signal strength is about 10dB.

What the waterfall shows is - apart from a nice color spectrum - three lines, coloured slightly brighter red. These lines correspond with special elements in the spectrum that will help the receiver to synchronize with the incoming signal.



#### 4 The widget

On selecting the plugin, the software starts reading in samples, trying to reach synchronization, etc. The detected mode (one of Modes A, B, C) and the spectrum (one of 1 .. 3) are displayed, as is the way the bits of the audio content are encoded (usually QAM16 or QAM64), followed by the decoding of the audio (either AAC or xHE-AAC) and the output sample rate.



At the top left, one sees two numbers, telling the offset of the selected frequency. The first number indicates the so-called *coarse* offset, which is (should be) reasonably stable, the second one tells the so-called *fine* offset, which ranges between -30 .. 30 and is - in most cases - continuously changing.

Note that the *coarse offset* for radio Kuwait is here 0, but the tuner was set app 280 Hz lower than the offical transmitter frequency of 15110 KHz. The *fine offset* is just -2 Hz.

The number to the right, 11.53, tells the time of the transmission (in UTC), not all transmissions show the transmission time.



The second picture, taken from a recording from a few years back, shows that the transmission was in mode C, the audio was encoded as QAM16 rather than QAM64, and the audio output samplerate

was 12000. Note that the bottom line of the widget can be filled with a message as was done by the Voice of Nigeria.

Processing the input takes 4 steps

- trying to reach time synchronization;
- then, trying to decode the FAC (Fast Access Channel) that contains some general information on the transmission:
- trying to decode the SDC (Service Description Channel), that contains detailed information on the service(s) and their decoding;
- trying to decode the AAC frames of the selected service.

The state of each of these "processes" is shown at the right side, from top to bottom an indicator for  $time\ synchronization$ , success in FAC decoding, success in SDC decoding and, finally, success with AAC decoding. If all these indicators are green, there will be sound, if one or mode of the indicators are red, some process parts fail with the given input and no sound can be emitted.

**Services** Most DRM transmissions carry a single service (as shown by the pictures above). The DRM technique, however, allows carrying more than one service (actually, up to 4). If a single service is carried, that service is - by default - the selected one and its content is decoded automatically. If, however, the transmission carries two services, both service names are shown and - by default - the first one is selected.

Clicking with the mouse on any of the two services will select that service, and to avoid ambiguity, the widget indicates which service is the selected one.



### 5 Notes on the implementation

The implementation of this plugin is almost a twin sister of the *drm-receiver* implementation for Linux, this twin implementation is a rewrite of my DRM backend for the sw software, the latter is slightly more extended since it supports - although untested - data transmissions.

This DRM plugin has some limitations, when compared to the standard:

- the plugin does not provide support for data transmissions, other than texts appearing as program associated data;
- the plugin supports up to two audio services;
- the plugin in its current form does not support spectra larger than 10 KHz;
- the plugin does not support DRM+.