# **Data Acquisition System**

**Chul Min Yeum** 

**Assistant Professor** 

Civil and Environmental Engineering


University of Waterloo, Canada

CIVE 497 – CIVE 700: Smart Structure Technology




Last updated: 2020-01-15

### **Structural Assessment**

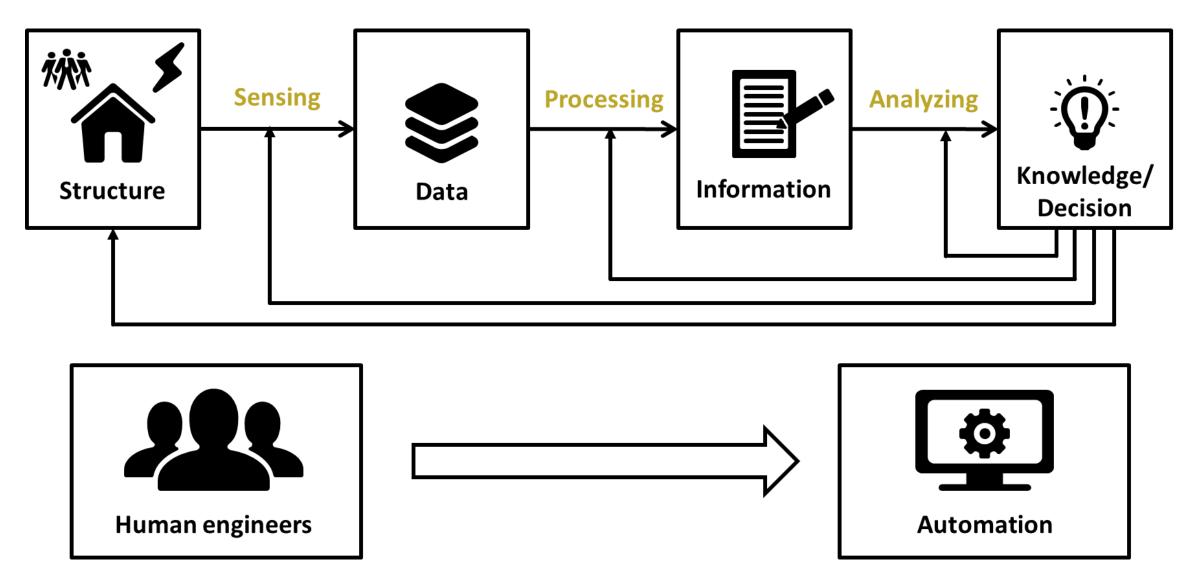

## What is Signal Processing?


- Signal processing is procedures to reveal the information about the behavior or attributes of some phenomenon contained in the measurements, such as sound, image, or acceleration.
- These procedures rely on various transformation that are mathematically based and implemented using digital techniques.

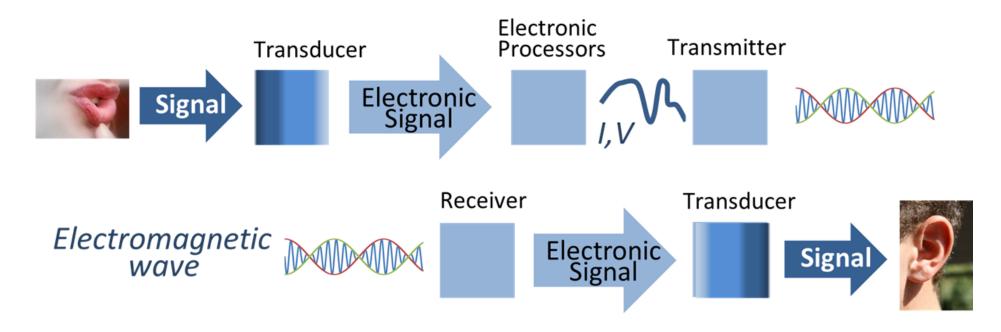


## **Data Acquisition**

- Data acquisition is the process of sampling signals that measure real world physical conditions and converting the resulting samples into <u>digital numerical values</u> that can be manipulated by a computer.
- Data acquisition systems are used by most engineers and scientists for laboratory research, industrial control, test, and measurement to input and output data to and from a computer.

Welcome to Digital World !!!!

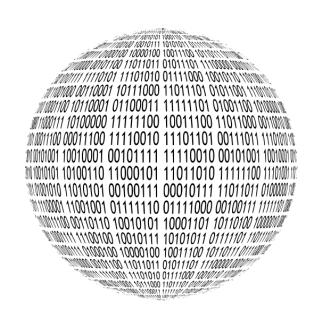

## **Data Acquisition Diagram**

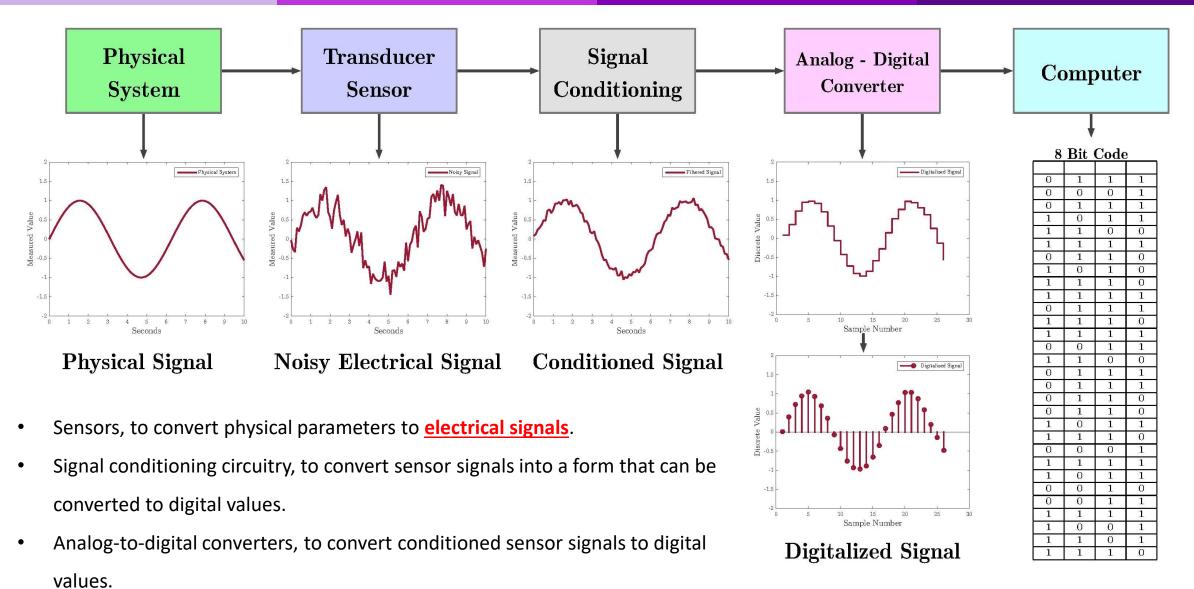


## **Analog vs Digital Signal**

A digital signal refers to an electrical signal that is converted into a pattern of bits. Unlike an analog signal, which is a continuous signal that contains time-varying quantities, a digital signal has a discrete value at each sampling point. Several issues need to be solved to minimize distortion of the original signal (sampling, quantization, aliasing, and leakage).

- Continuous-time vs Discrete-time signal
- Continuous-valued vs Discrete-valued signal
- Output range

Note that in certain physical situations, 'time' may not be the natural independent variable, for example, a plot of road roughness as a function of spatial position. Similarly, the images are considered as signals (functions) with respect to x and y pixels values.


## **Example: Imaging System**

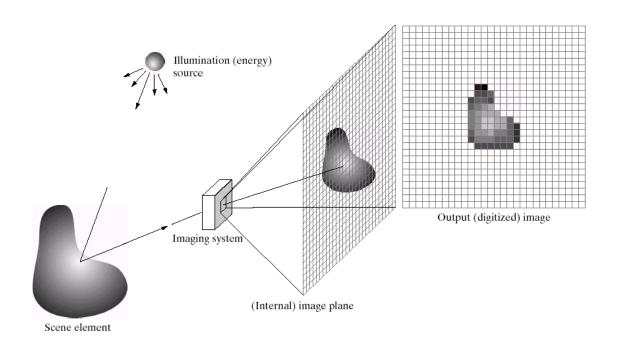

**Digital Image Acquisition** 

**Pixel** 

## **Example: Vector Graphics**

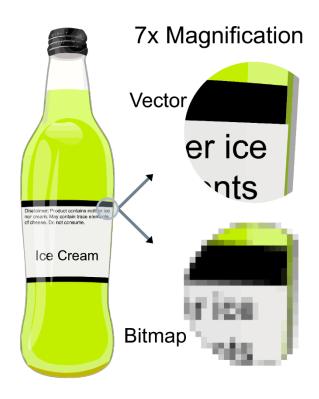

Vector graphics is the creation of digital images through <u>a</u> sequence of commands or mathematical statements that <u>place lines and shapes</u> in a given two-dimensional or three-dimensional space. In physics, a vector is a representation of both a quantity and a direction at the same time.



**Acrobat PDF** 

## **Digitization of Analog Signals**

Sampling: How often the data is sampled in the time axis.

$$y = \sin(2\pi f t)$$


Frequency (f): 1Hz

Sampling frequency

$$f_{\rm S}=5~{\rm Hz}$$

Sampling interval

$$\Delta t = 0.2 \text{ sec}$$

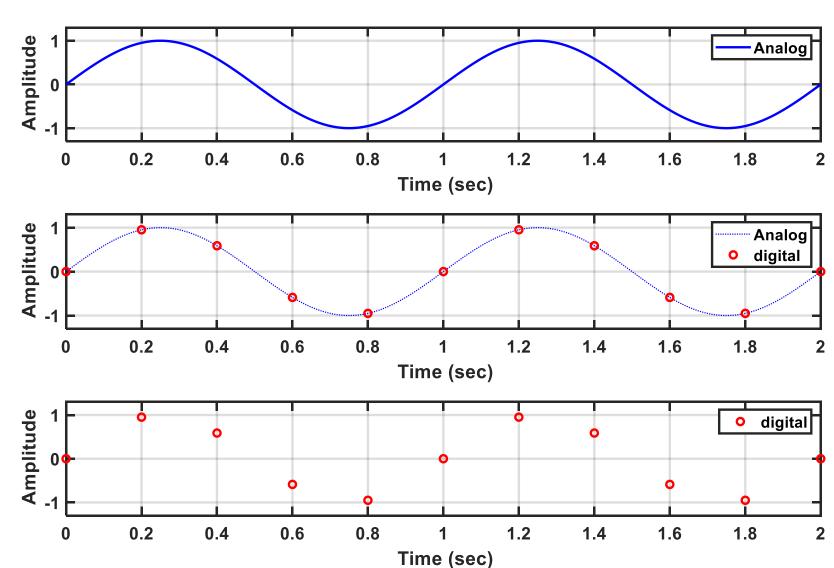

## **Determination of a Sampling Frequency (Rate)**


Sampling frequency (Hz) is the inverse of the sampling interval

$$f_{\rm S} = 1/\Delta t \, ({\rm Hz})$$


• <u>Make sure the sampling frequency is at least twice the desired frequency to be measured.</u> (When the signal is analyzed in the frequency domain)

$$f_h < \frac{f_s}{2} = 1/(2\Delta t)$$

• As a rule of thumb, 10 samples or more digital points during the signal period of interest (when the signal is analyzed in the time domain.

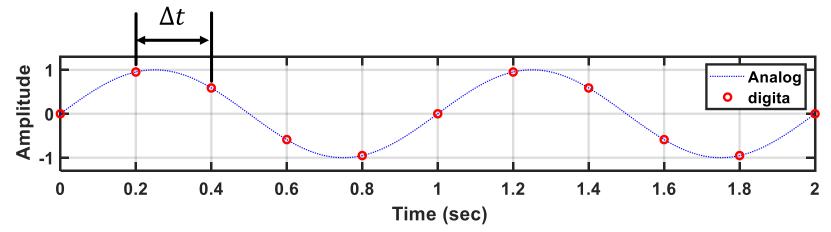

## **Time Signals in a Frequency Domain**




$$f_1$$
: 2Hz


$$y_1 = \sin(2\pi f_1 t) + 0.5\sin(2\pi f_1 t)$$

$$f_1$$
: 2Hz,  $f_2$ : 3Hz

$$y_3 = \sin(2\pi f_1 t) + 0.5\sin(2\pi f_1 t) + \sin(2\pi f_3 t)$$


 $f_1$ : 2Hz,  $f_2$ : 3Hz ,  $f_3$ : 5Hz

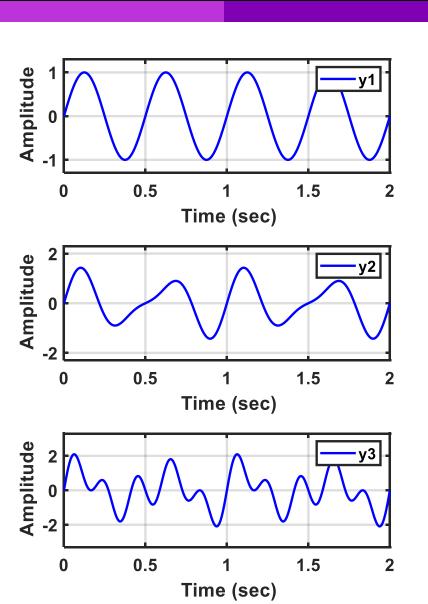


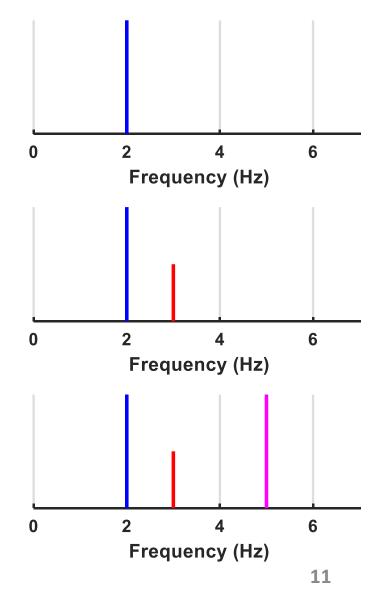

## Aliasing

- Aliasing refers to the distortion or artifact that results when the signal reconstructed from samples
  is different from the original continuous signal.
- A higher frequency component is disguised as a lower frequency component because of inadequate sampling.

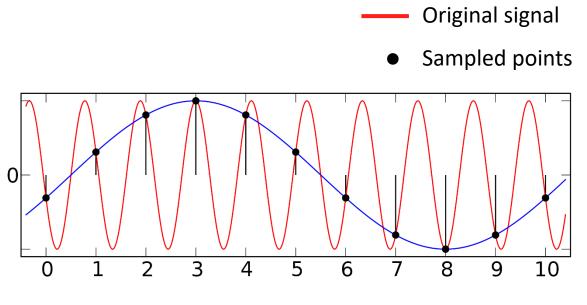

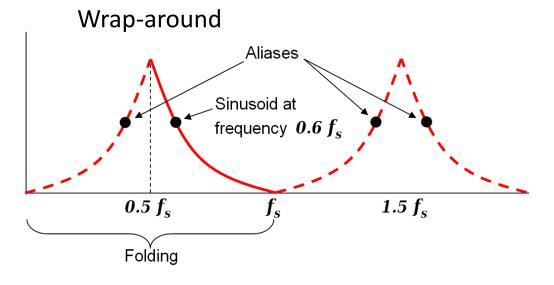

Sample from a sine wave

This aliasing occurs along the half of the sampling frequency.


## **Example: Spinner**




## **Example: Helicopter Like Spaceship**




## **Example: Effect of Aliasing**

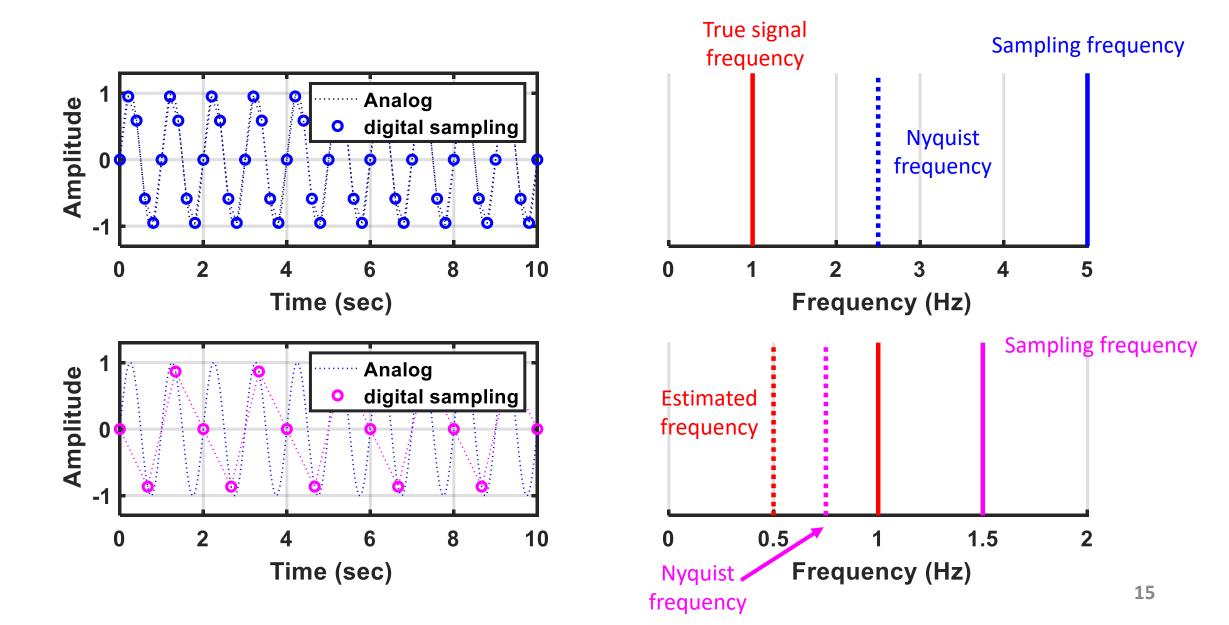


## **Example: Spatial Aliasing**

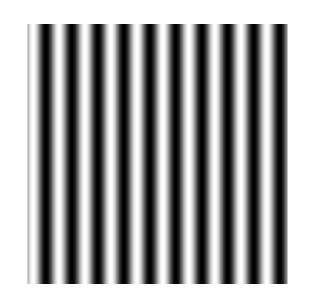

Original image (1200 x 1200)

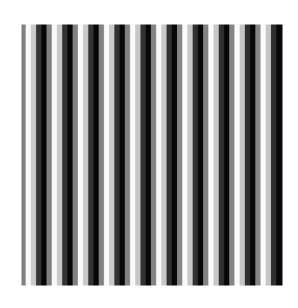

Resampling (50 X 50)

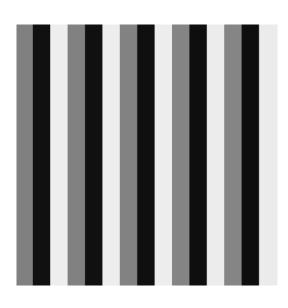


Resampling (15 X 15)

## **Example: Spatial Aliasing (Continue)**




## **Anti-Aliasing Analog Filter**

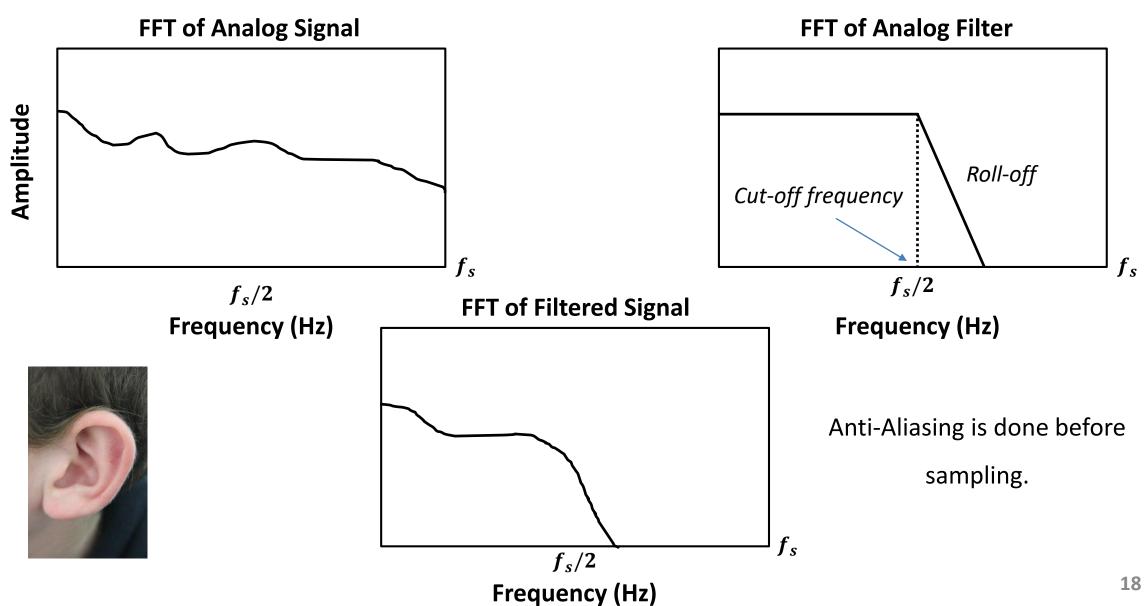

## **Oversampling**

Oversampling will provide a true picture of the time course of the event being studied but too much oversampling will result in very large data files.

Example: Drawing a graph

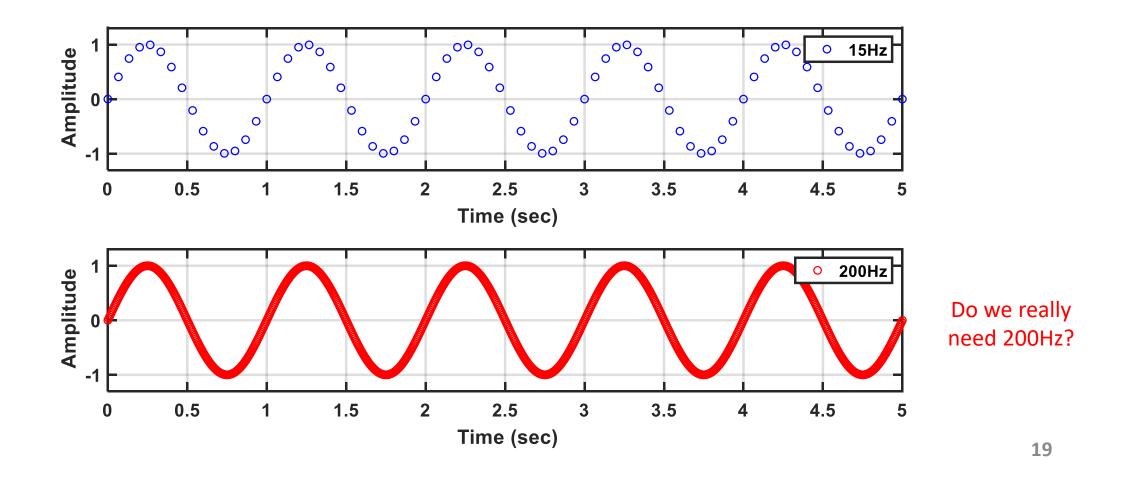

## **Example: Image Oversampling**





maxresdefault.jpg JPG File



Date taken: Specify date taken

Tags: Add a tag

Rating: ☆☆☆☆☆

Dimensions: 150 x 84
Size: 5.77 KB
Title: Add a title
Authors: Add an aut

Authors: Add an author
Comments: Add comments

Camera maker: Add text

Camera model: Add a name

Subject: Specify the subject
Date created: 12/26/2018 1:56 PM
Date modified: 12/26/2018 1:58 PM

## maxresdefault\_high.jpg JPG File



Date taken: Specify date taken

Tags: Add a tag

Rating: ☆☆☆☆☆

Dimensions: 1500 x 840 Size: 104 KB

Title: Add a title

Authors: Add an author
Comments: Add comments

Camera maker: Add text

Camera model: Add a name

Subject: Specify the subject
Date created: 12/26/2018 2:01 PM
Date modified: 12/26/2018 2:01 PM


## **Quantization of Analog Signals**

- Quantization is the process of constraining an input from a continuous or otherwise large set of values (such as the real numbers) to a discrete set (such as the integers).
- An analog signal from a sensor is sampled in time (sampling frequency) and in amplitude (Quantization).

#### Example)

3 bit Analog-digital converter produces

 $2^3$  = 8 bins for a voltage range of  $-4 \sim 4$  v.

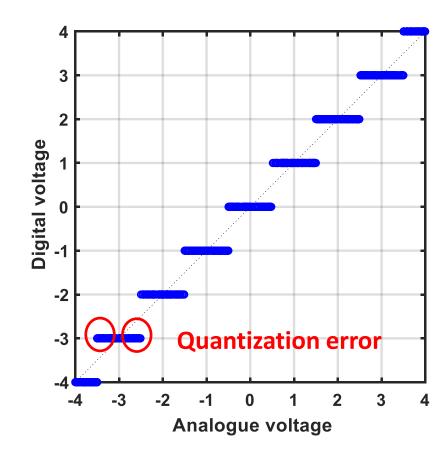

Q: example graph

## **Example for Resolution Calculation**

#### Given parameters

- Sensor sensitivity: 100mV/g
- Voltage output range: -2V to +2V
- # of ADC bits: 16 bits

#### Calculation

- 16 bit ADC divides the full scale voltage into 2<sup>16</sup> = 65536 bins
- Resolution in terms of voltage: 4V/65536 = 6.1035e-005V
- Resolution in terms of acceleration:

$$6.1035 \times 10^{-5} \times \frac{1}{100 \text{mV/g}} = 6.1035 \times 10^{-4} \text{g}$$

Resolution 
$$(g) = \frac{Output\ voltage\ range\ (V)}{2^{\#\ of\ ADC\ bits}} \times \frac{1}{Sensor\ Sensitivitiy\ (V/g)}$$

### **Other Considerations for Resolution**

 $y = 10 * \sin(2\pi f t)$ 

Frequency (f): 1

Sampling frequency


$$f_{\rm S} = 1/10 \; {\rm Hz}$$





Frequency (*f* ): 1


Sampling frequency

$$f_{\rm S} = 1/10~{\rm Hz}$$

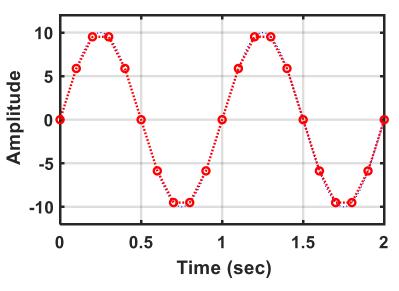

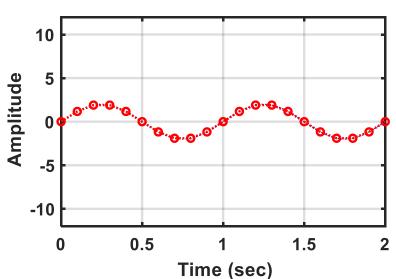

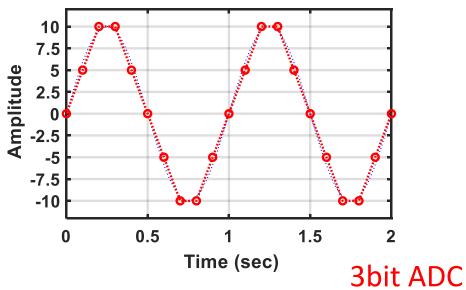

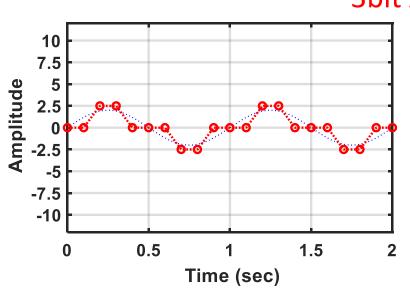

23


## Clipping

$$y = 2 * \sin(2\pi f t)$$

Frequency (*f* ): 1

Sampling frequency


$$f_{\rm S} = 1/10 \; {\rm Hz}$$



Frequency (f): 1

Sampling frequency

$$f_{\rm S} = 1/10 \; {\rm Hz}$$

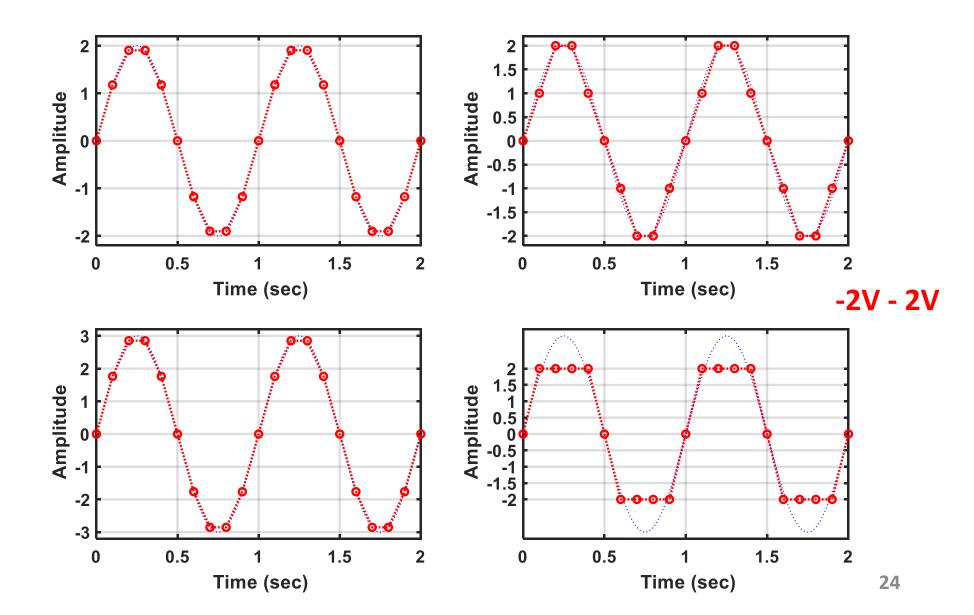

## **Example: Accelerometer in IPhone X Accelerometer**


#### **BMI 160, Bosch Sensortec**

Parameter	Technical data	
Digital resolution	Accelerometer (A): 16 bit Gyroscope (G): 16bit	
Measurement ranges (programmable)	(A): ± 2 g, ± 4 g, ± 8 g, ± 16 g (G): ± 125°/s, ± 250°/s, ± 500°/s	, ± 1000°/s, ± 2000°/s
Sensitivity (calibrated)	(A): ±2g: 16384LSB/g ±4g: 8192LSB/g ±8g: 4096LSB/g ±16g: 2048LSB/g (G): ±125°/s: 262.4 LSB/°/s ±250°/s: 131.2 LSB/°/s ±500°/s: 65.6 LSB/°/s ±1000°/s: 32.8 LSB/°/s ±2000°/s: 16.4 LSB/°/s	LSB: Least Square Bit
Zero-g offset (typ., over life-time)	(A): ±40mg (G): ± 10°/s	
Noise density (typ.)	(A): 180 μg/√Hz (G): 0.008 °/s/√Hz	
Bandwidths (programmable)	1600 Hz 25/32 Hz	

Digital inputs/outputs	SPI, I <sup>2</sup> C, 4x digital interrupts
Supply voltage (VDD)	1.71 3.6 V
I/0 supply voltage (VDDIO)	1.2 3.6 V
Temperature range	-40 +85°C
Current consumption - full operation - low-power mode	950 μA 3 μA
FIFO data buffer	1024 byte
LGA package	2.5 × 3.0 × 0.8 mm³
Shock resistance	10,000 g x 200 μs

## **Example: Modal Testing**



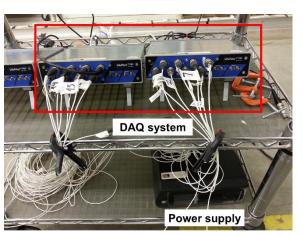

Analog Input		
Number of channels	4 or 8; multiple unit daisy chain	
Channel type	Voltage mode: single-ended or fully differential, selectable per channel IEPE mode: single-ended or pseudo-differential, selectable per channel	
Analog-to-digital converter type	Sigma-delta	
Resolution	24 bits	
Sampling rate per channel	40 to 204.8 kHz	
Input voltage range	$\pm$ 1 V and $\pm$ 10 V peak full scale, selectable per channel	
Overload protection	40 V	
Input impedance	1 MΩ, capacitance: 45 pF	
Coupling	AC/DC, switchable per channel	
AC coupling	0.3 Hz 6 dB/oct. and 10 Hz 6 dB/oct., selectable per channel	
Signal-to-noise ratio	At 102.4 kHz sampling: > 100 dB in 1 V range > 105 dB in 10 V range	
Amplitude accuracy	± 0.06 dB (at 1 kHz)	
Amplitude flatness	± 0.015 dB (DC to 80 kHz, relative to 1 kHz)	



Click to zoon

Model: 333B30
Add to Cart for Quote

📜 ADD TO CART

Product Summary

Specifications


Documents & Downloads

	English:	SI:	
PERFORMANCE			
Sensitivity (±10 %)	100 mV/g	10.2 mV/(m/s <sup>2</sup> )	
Measurement Range	±50 g pk	±490 m/s² pk	
Frequency Range (±5 %)	0.5 to 3000 Hz	0.5 to 3000 Hz	
Resonant Frequency	≥40 kHz	≥40 kHz	
Phase Response (±5 °) (at 70°F [21°C])	2 to 3000 Hz	2 to 3000 Hz	
Broadband Resolution (1 to 10000 Hz)	0.00015 g rms	0.0015 m/s <sup>2</sup> rms	[]
Non-Linearity	≤1 %	≤1 %	[
Transverse Sensitivity	≤5 %	≤5 %	[
ENVIRONMENTAL			
Overload Limit (Shock)	±5000 g pk	±49000 m/s² pk	
Temperature Range (Operating)	0 to +150 °F	-18 to +66 °C	
Temperature Response	See Graph %/°F	See Graph %/°F	
Base Strain Sensitivity	0.01 g/με	0.1 (m/s²)/με	[
ELECTRICAL			
Excitation Voltage	18 to 30 VDC	18 to 30 VDC	
Constant Current Excitation	2 to 20 mA	2 to 20 mA	
Output Impedance	≤300 Ohm	≤300 Ohm	
Output Bias Voltage	7 to 12 VDC	7 to 12 VDC	
Discharge Time Constant	1.0 to 3.0 sec	1.0 to 3.0 sec	
Settling Time (within 10% of bias)	<12 sec	<12 sec	
Spectral Noise (1 Hz)	39 μg/√Hz	380 (μm/sec²)/√Hz	[
Spectral Noise (10 Hz)	11 μg/√Hz	110 (μm/sec²)/√Hz	[
Spectral Noise (100 Hz)	3.4 μg/√Hz	33 (μm/sec²)/√Hz	[
Spectral Noise (1 kHz)	1.4 μg/√Hz	14 (μm/sec²)/√Hz	[

#### **↑** Accelerometer

← Data acquisition system

### **Demo: Acceleration Measurement using a Smart Phone – VibSensor**

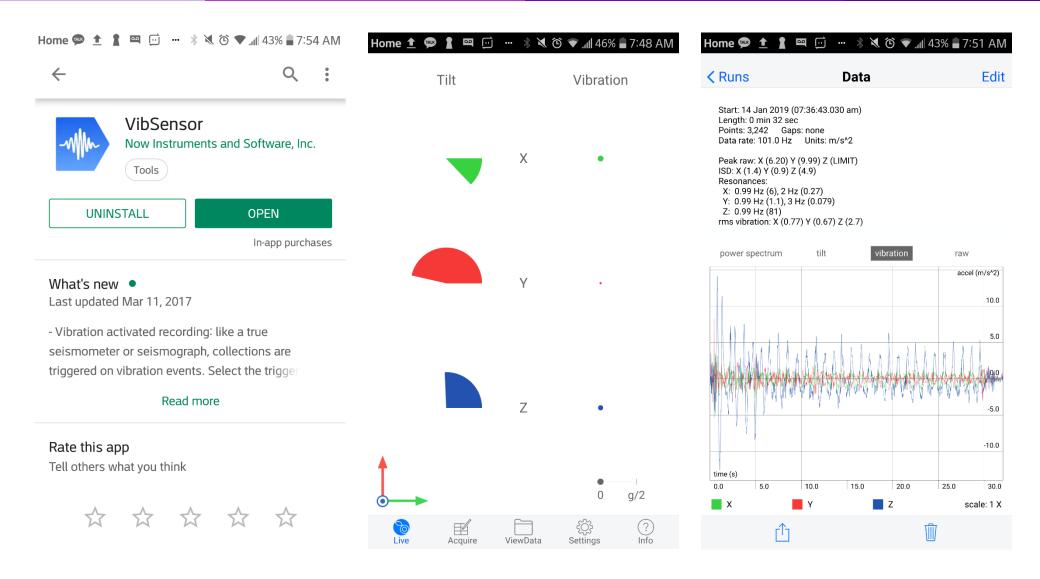

### **Demo: Acceleration Measurement using a Smart Phone – Vibration Measurement**


**Plot**: The plot allows interactive viewing of four types of data. The data type can be selected along the top of the plot. At the bottom of the plot is an interactive legend. Touch a legend entry to toggle that trace on or off. Also on the bottom is an x-axis scale factor. Touch to select the desired scale factor, then swipe to scroll through the data. The four types of data are:


<u>power spectrum</u>: The power spectrum is calculated from 0 Hz to the Nyquist frequency. The units are acceleration squared divided by the frequency. To integrate over the power spectrum, sum all data and then multiply by the frequency step size. This returns the mean squared amplitude in acceleration units squared. Both x and y axes can be toggled between linear and log by selecting the desired label next to the axis.

<u>vibration</u>: The raw accelerometer data high-pass filtered to emphasize vibration. The roll-off frequency is 1 Hz in high frequency mode, and 0.1 Hz in low frequency mode.

tilt: The raw accelerometer data low-pass filtered to emphasize tilt. The roll-off frequency is the same as for vibration.

raw: The unmodified accelerometer data from the device.

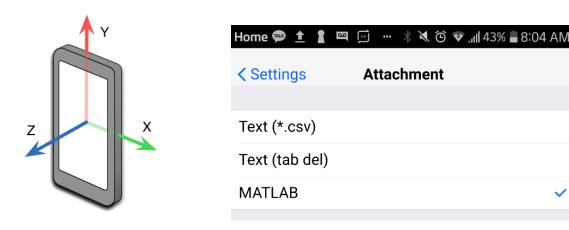

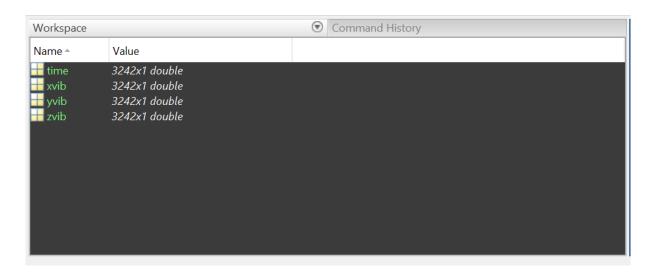


## **Demo: Acceleration Measurement using a Smart Phone – Vibration Analysis**


Frequency (*f* ): 1

Sampling frequency

 $f_{\rm S}=10~{\rm Hz}$ 

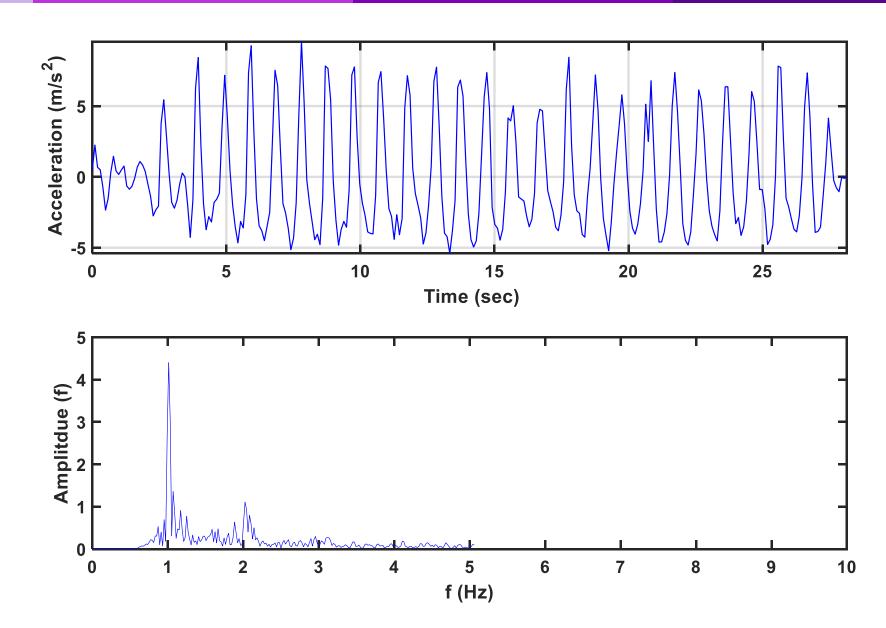

## **Demo: Acceleration Measurement using a Smart Phone – Clipping**

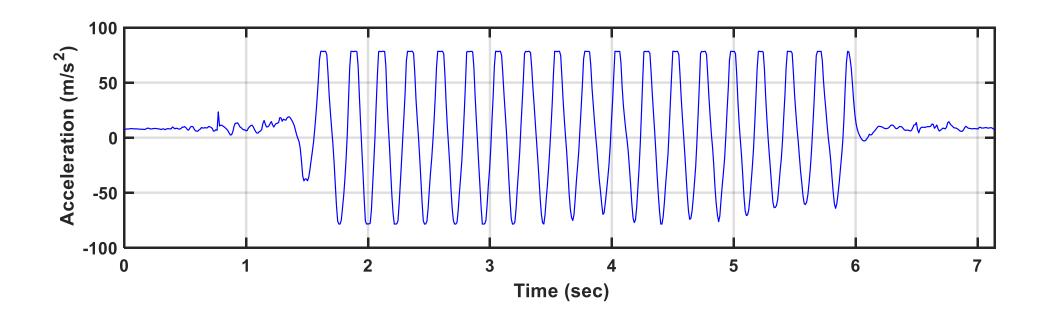

### **Slide Credits and References**

- Shin, K., & Hammond, J. K. (2008). Fundamentals of Signal Processing: for Sound and Vibration Engineers, 418.
- <a href="http://www.now-instruments.com/get-help/5-vibsensor-user-guide">http://www.now-instruments.com/get-help/5-vibsensor-user-guide</a>
- <a href="http://courses.me.metu.edu.tr/courses/me410/notes/Week10/Week10.pdf">http://courses.me.metu.edu.tr/courses/me410/notes/Week10/Week10.pdf</a>
- Introduction to Smart Structure Technology (Spring 2009, KAIST)
- https://www.bosch-sensortec.com/bst/products/all products/bmi160
- https://www.edaboard.com/showthread.php?250221-Accelerometer-Questions
- http://www2.hawaii.edu/~peterb/resources/equipment/analog devices accelermoter specifications.pdf
- https://www.mpihome.com/files/mppdf/mppdf product guide/mp ProductGuide VibPilot.pdf
- http://www.lb-acoustics.at/wp-content/uploads/2018/05/data\_mp\_vibpilot\_en.pdf
- http://www.pcb.com/products/model/333b30