IoT Engineering
2: Microcontrollers, Sensors & Actuators

Slides: tmb.gr/iot-2

Overview

These slides introduce *microcontrollers*.

We learn how to run a program on one.

And how to use *sensors* and *actuators*.

Prerequisites

Install the Arduino IDE and set up microcontrollers:

Check the Wiki entry on Installing the Arduino IDE.

Set up the Feather nRF52840 Express for Arduino.

Set up the Feather Huzzah ESP8266 for Arduino.

IoT reference model

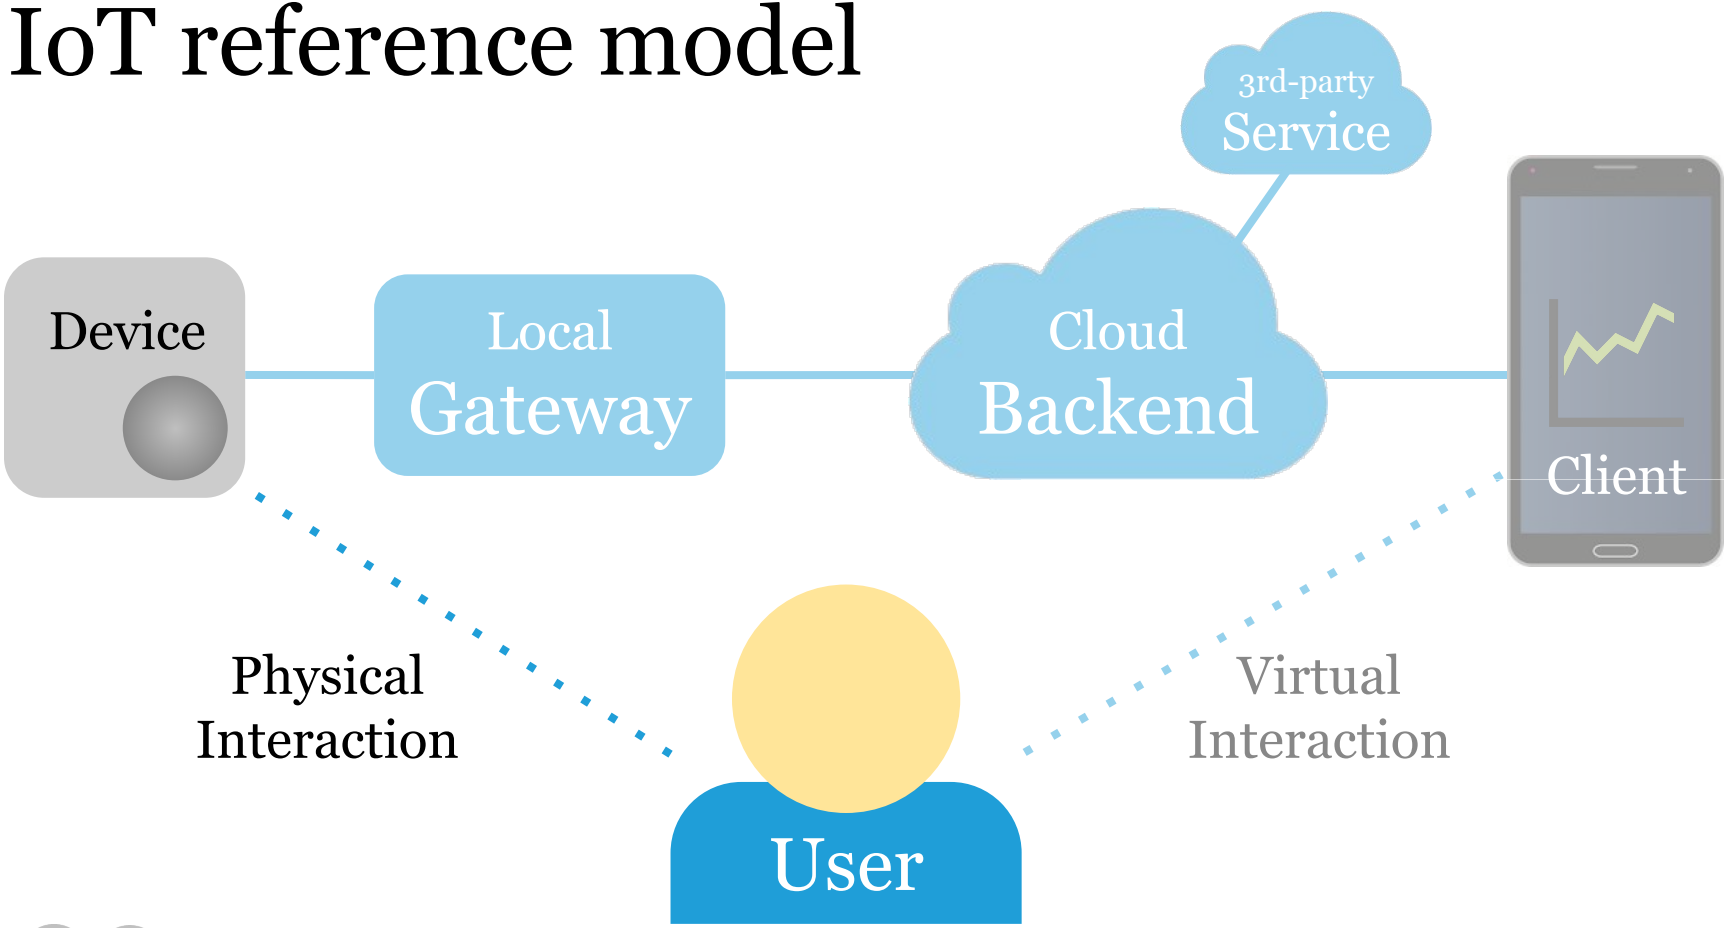

Let's look at physical computing

On device sensing/control, no connectivity.

Sensor → Device, e.g. logging temperature.

Device → Actuator, e.g. time-triggered buzzer.

Sensor → Device → Actuator, e.g. RFID door lock.

A → B: measurement or control data flow.

Arduino, a typical microcontroller

Microcontrollers (MCU) are small computers that run a single program.

Arduino is an MCU for electronics prototyping.

Here's a video about it with Massimo Banzi.

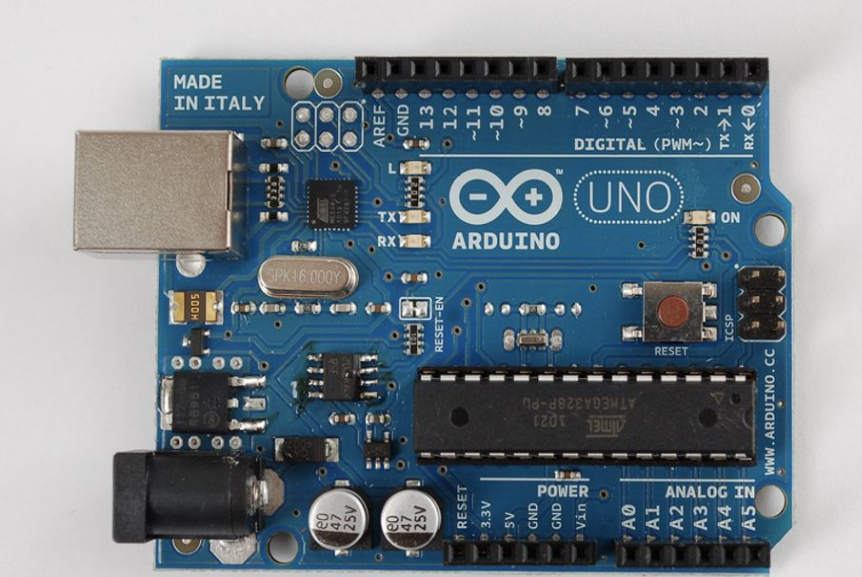

CC BY-NC-SA, adafruit.com

Raspberry Pi, a single-board computer

Single-board computers like the *Raspberry Pi* are *not* microcontrollers.

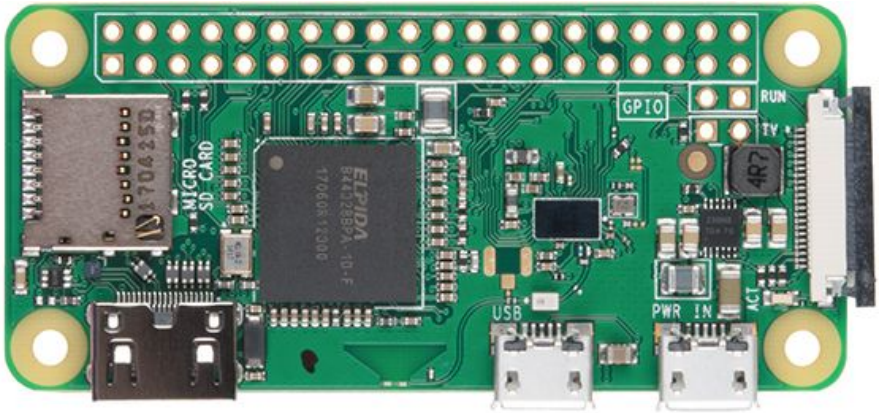

They run a full Linux OS, have a lot of memory and use way more power.

Here's a video on the Pi.

Prototyping hardware form factors

Some modular prototyping hardware *form factors*:

Arduino (Uno and MKR) with "shield" extensions.

Adafruit Feather with FeatherWing extensions.

Wemos, stackable modules based on ESP8266.

M5Stack, a modular system based on ESP32.

We use Feather compatible microcontrollers.

Feather Huzzah ESP8266

Microcontroller with Wi-Fi, used by hobbyists.

Espressif ESP8266 System on Chip (SoC).

32-bit Tensilica CPU, without a FPU.

4 MB flash memory, 80 kB RAM.

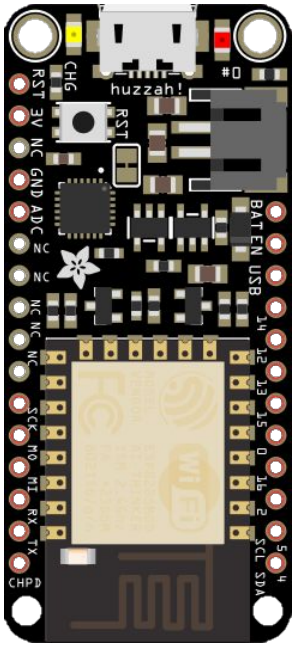

See also Wiki page.

Feather nRF52840 Express

Microcontroller with Bluetooth 5 (and more).

Nordic nRF52840 System on Chip (SoC).

32-bit ARM Cortex-M4 CPU with FPU.

1 MB flash memory, 265 kB RAM.

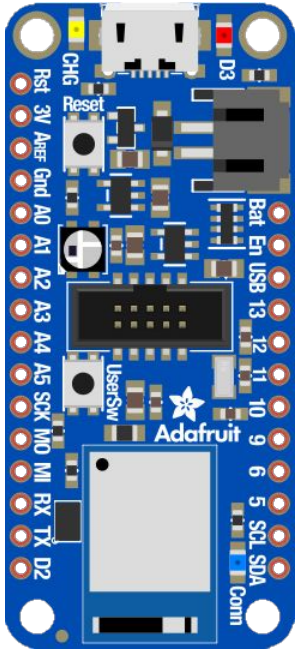

For details, check the Wiki page.

Programming a microcontroller

Microcontrollers are programmed via USB.

Code is (cross-) *compiled* on your computer.

The *binary* is *uploaded* to the microcontroller.

The uploaded program then runs "stand-alone".

Arduino IDE settings

Connect your board via USB and make sure that

Tools > *Board* is set to your microcontroller,

Tools > *Port* matches the current USB port.

Some boards require additional settings.

Arduino IDE program upload

The *Upload* button compiles and uploads the code.

USB

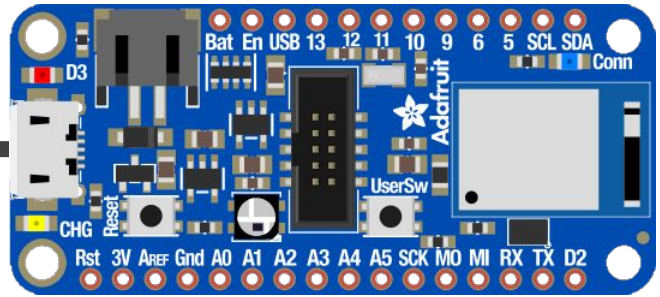

CC BY-SA, adafruit.com, fritzing.org

Arduino IDE serial console

Make sure the baud rate matches *Serial.begin()*.

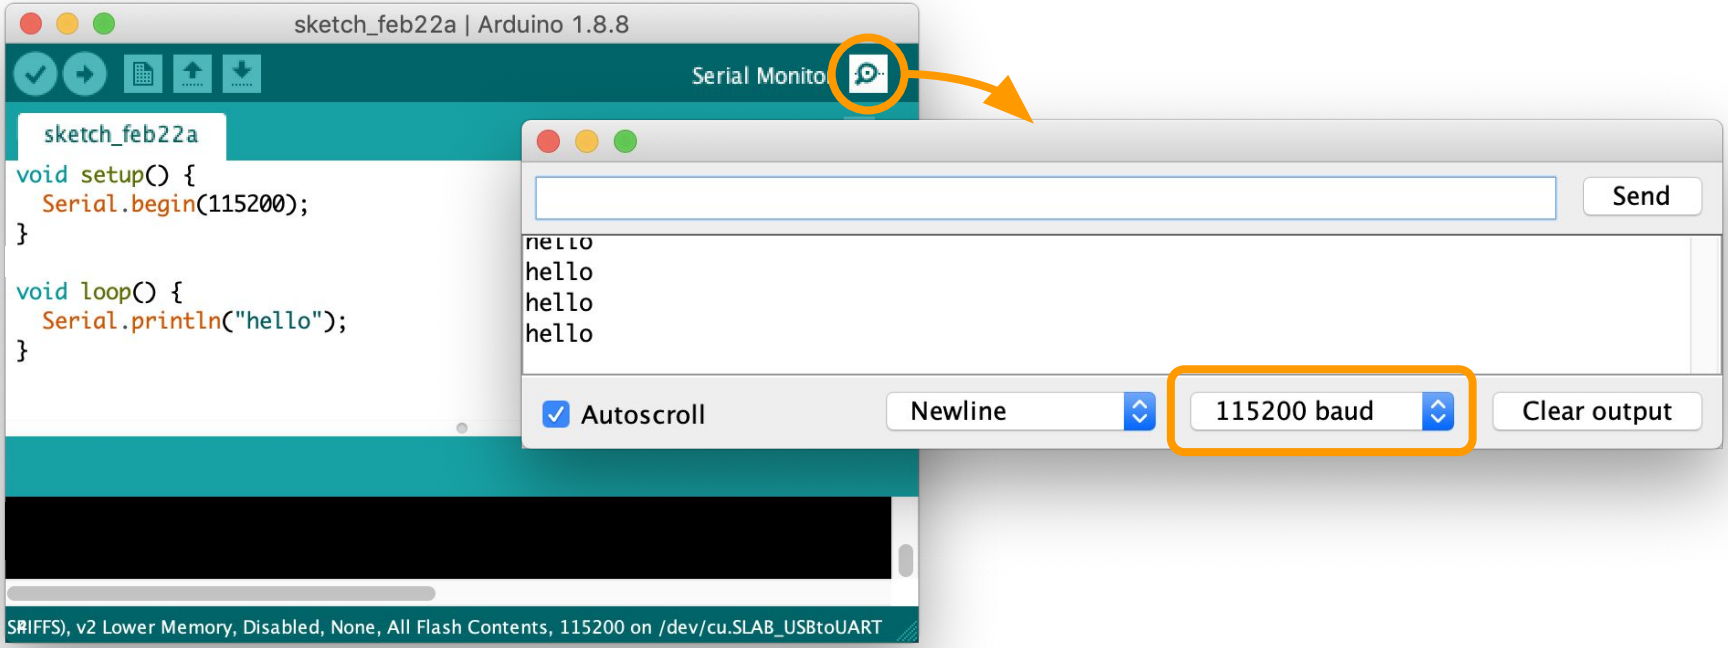

A typical program in Arduino C

```
void setup() { // called once at startup
  Serial.begin(115200); // set baud rate
}

void loop() { // called in a loop
  Serial.println("Hello, World!");
}
```

Arduino language

The Arduino language uses a subset of C/C++.

The user exposed code looks a bit like Java.

There is a string type and a String class.

Libraries are programmed in C++.

For details, check the language reference.

General purpose input and output

Microcontrollers can "talk to" the physical world through general purpose input and output (GPIO).

GPIO *pins* allow a MCU to measure/control signals.

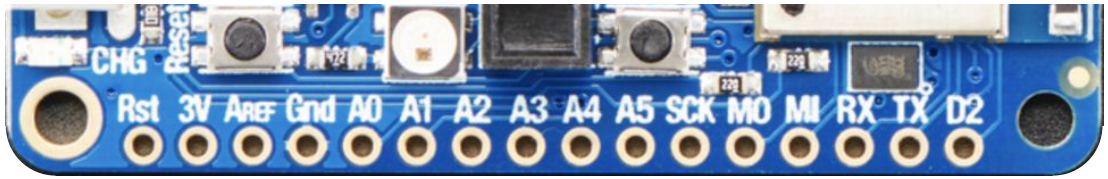

E.g. power, ground, analog pins, digital pin.

GPIO pin names

In Arduino, digital *pin names* are just numbers, e.g. pin *2*, while analog pins start with an *A*, like pin *A0*.

Which pins are available depends on the device.

The map of available pins is called *pinout*.

A pin can have multiple functions.

ESP8266

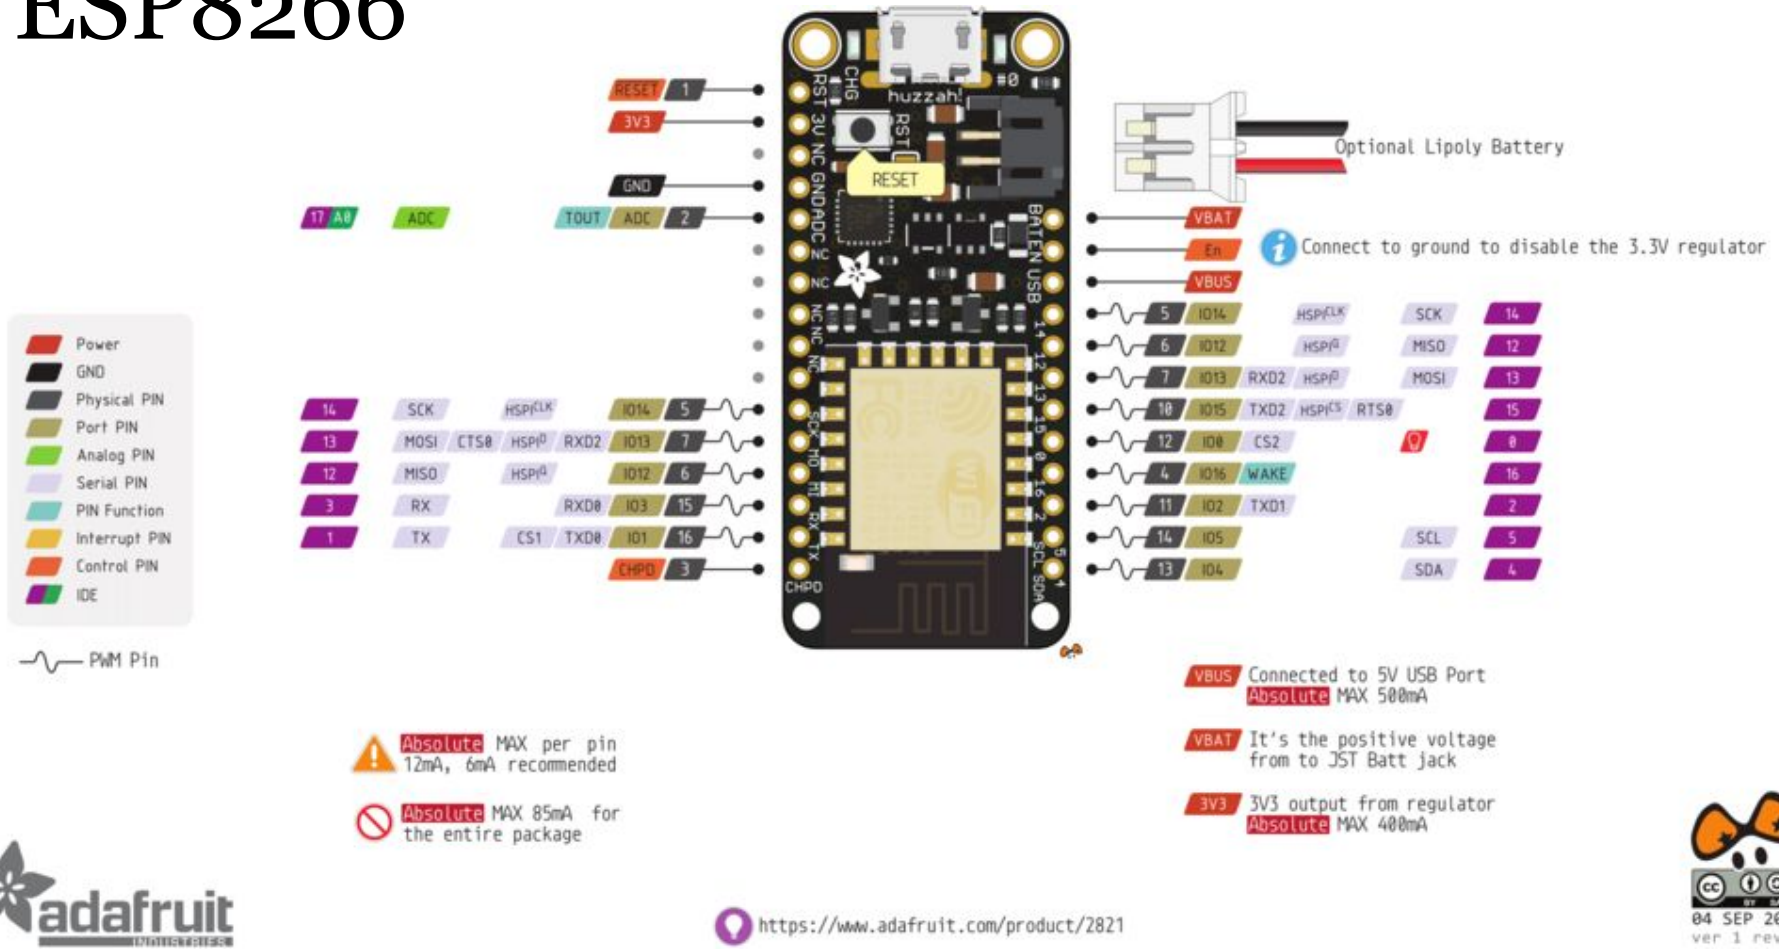

https://www.adafruit.com/product/2821

04 SEP 2017
ver 1 rev 2

nRF52840

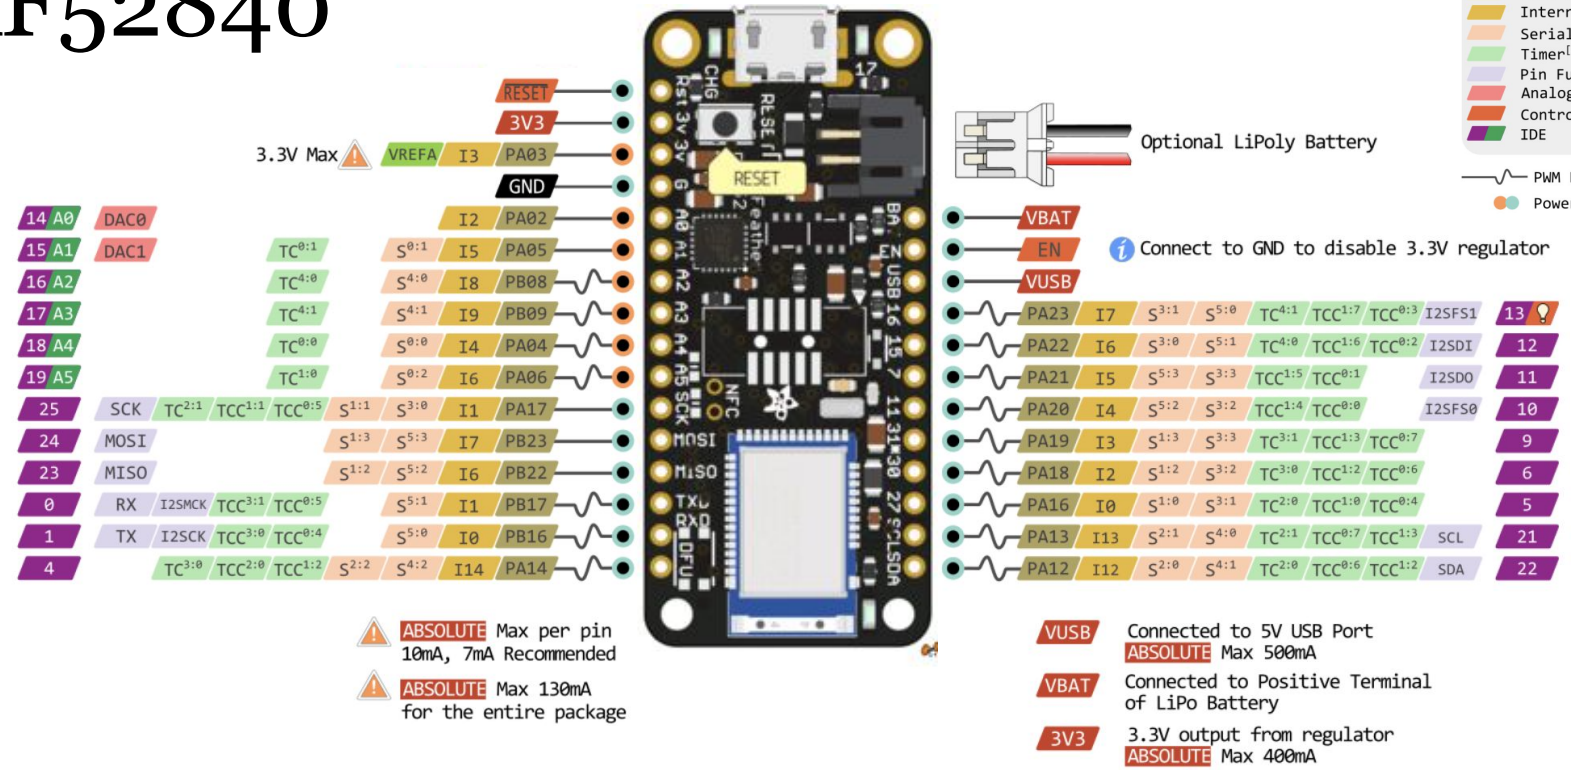
Power
GND
Port Pin
Interrupt
Serial[SERCOM]:[PAD]
Timer[TIMER]:[PAD]
Pin Function
Analog Output
Control Pin
IDE
PWM Pin
Power Supply
RESET
3V3
3.3V Max
VREFA I3 PA03
GND
14 A0 DAC0 I2 PA02
15 A1 DAC1 TC0:1 S0:1 I5 PA05
16 A2 TC4:0 S4:0 I8 PB08
17 A3 TC4:1 S4:1 I9 PB09
18 A4 TC0:0 S0:0 I4 PA04
19 A5 TC1:0 S0:2 I6 PA06
25 SCK TC2:1 TCC1:1 TCC0:5 S1:1 S3:0 I1 PA17
24 MOSI S1:3 S5:3 I7 PB23
23 MISO S1:2 S5:2 I6 PB22
0 RX I2SMCK TCC3:1 TCC0:5 S5:1 I1 PB17
1 TX I2SCK TCC3:0 TCC0:4 S5:0 I0 PB16
4 TC3:0 TCC2:0 TCC1:2 S2:2 S4:2 I14 PA14
Optional LiPoly Battery
VBAT
EN
VUSB
Connect to GND to disable 3.3V regulator
PA23 I7 S3:1 S5:0 TC4:1 TCC1:7 TCC0:3 I2SFS1 13
PA22 I6 S3:0 S5:1 TC4:0 TCC1:6 TCC0:2 I2SDI 12
PA21 I5 S5:3 S3:3 TCC1:5 TCC0:1 I2SDO 11
PA20 I4 S5:2 S3:2 TCC1:4 TCC0:0 I2SFS0 10
PA19 I3 S1:3 S3:3 TC3:1 TCC1:3 TCC0:7 9
PA18 I2 S1:2 S3:2 TC3:0 TCC1:2 TCC0:6 6
PA16 I0 S1:0 S3:1 TC2:0 TCC1:0 TCC0:4 5
PA13 I13 S2:1 S4:0 TC2:1 TCC0:7 TCC1:3 SCL 21
PA12 I12 S2:0 S4:1 TC2:0 TCC0:6 TCC1:2 SDA 22
ABSOLUTE Max per pin 10mA, 7mA Recommended
ABSOLUTE Max 130mA for the entire package
VUSB Connected to 5V USB Port ABSOLUTE Max 500mA
VBAT Connected to Positive Terminal of LiPo Battery
3V3 3.3V output from regulator ABSOLUTE Max 400mA

Sensors read the real world

Convert physical properties to electrical *input* signals.

E.g. temperature, humidity, brightness or orientation.

Input can be *digital* (0 or 1) or *analog* (e.g. 0 - 2^10).

Measuring = *reading* sensor values from input pins.

Actuators control the real world

Convert electrical *output* signals to physical properties.

E.g. light, current with a relay or motion with a motor.

Output can be *digital* (0 or 1) or *analog* (with PWM).

Controlling = *writing* actuator values to output pins.

Wiring sensors to the MCU

Sensors and actuators exchange signals with the MCU.

For prototyping, we use wires to achieve this, e.g.

Breadboard and wires, or the *Grove* standard.

For products, custom PCBs are designed*.

*See slides on Prototype to Product.

Breadboard prototyping

Wire electronic components, no soldering.

Under the hood, the columns are connected, also the power rails.

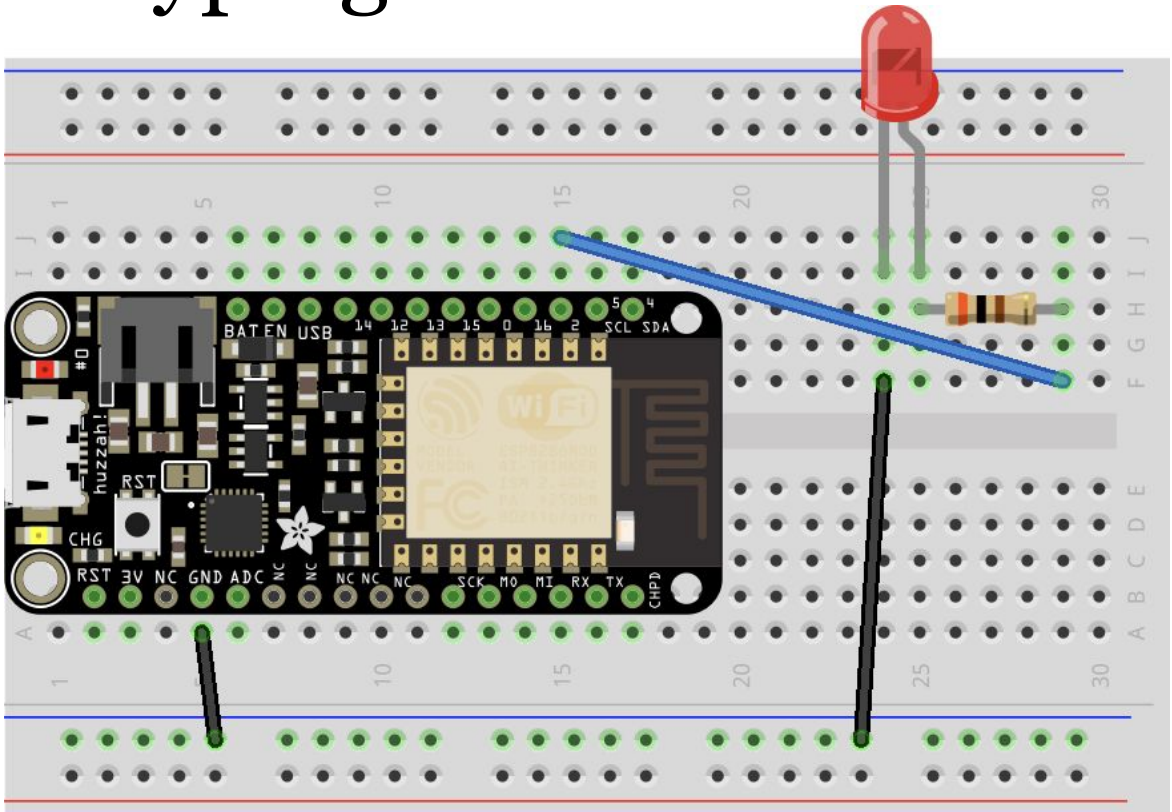

Grove wiring standard

Grove is a simple way to wire sensors and actuators.

It defines wires for power, ground and two signals.

Signals can be digital, analog, UART serial or I2C.

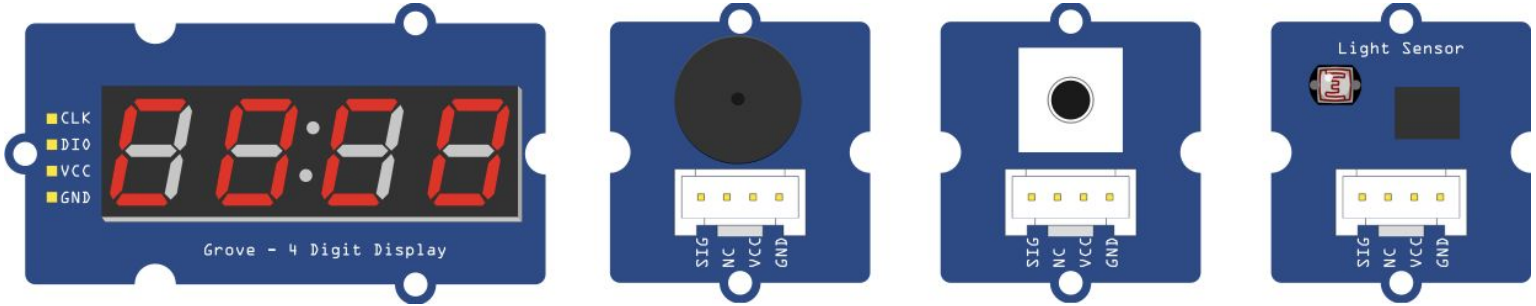

Arduino example code

Each Arduino library comes with example code.

And there are a number of basic examples.

See *Arduino IDE* > *File* > *Examples*

GPIO pin numbers may vary.

Use the pin mapping.

Blinking a LED (digital output)

Use *Examples* > *Basics* > *Blink*

Connect to Grove port *D4*.

It maps to ESP8266 pin *0*.

Or nRF52840 pin *9*.

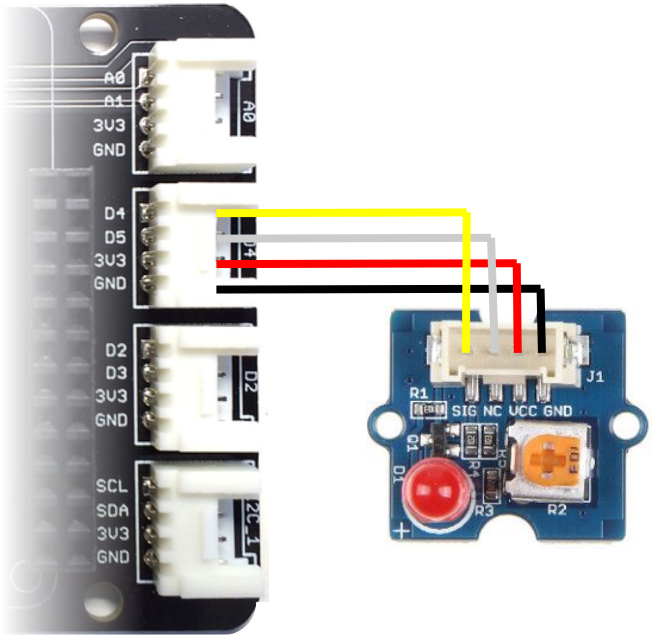

The same code works with the buzzer.

Blinking a LED (digital output)

```
pin = 0; // for ESP8266, or 9 for nRF52840

void setup() { // called once
  pinMode(pin, OUTPUT); // configure pin
}

void loop() { // called in a loop
  digitalWrite(pin, HIGH); // switch pin on
  delay(500); // ms
  digitalWrite(pin, LOW); // switch pin off
  delay(500); // ms
}
```

Reading a button (digital input)

Use *Basics* > *DigitalReadSerial*

Connect to Grove port *D4*.

It maps to ESP8266 pin *0*.

Or nRF52840 pin *9*.

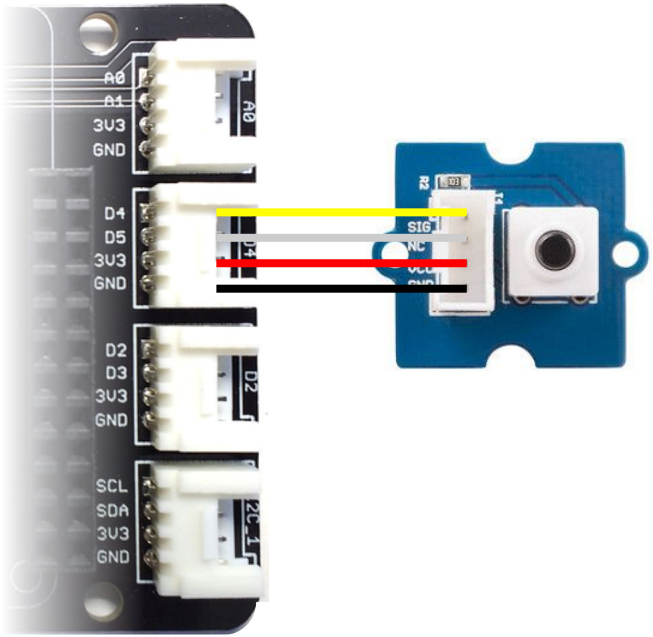

Use the serial console to see output.

Reading a button (digital input)

```
pin = 0; // for ESP8266, or 9 for nRF52840

void setup() { // called once
  pinMode(pin, INPUT); // configure pin
  Serial.begin(9600);
}

void loop() { // called in a loop
  int value = digitalRead(pin);
  Serial.println(value);
  delay(500); // ms
}
```

Hands-on, 15': Button-triggered LED

Connect the LED to port *D2**, and the button to *D4*.

Combine the previous examples to switch the LED.

Use the pin mapping to adapt the pin numbers.

*On the ESP8266, remove LED for programming.

State machine

A (finite-) state machine is a simple way to manage state in embedded programs.

System is in one state at a time, *events* trigger state *transitions*.

E.g. 1st button *press* => light *on*, 2nd button *press* => light *off*, 3rd => *on*, 4th => *off*, etc.

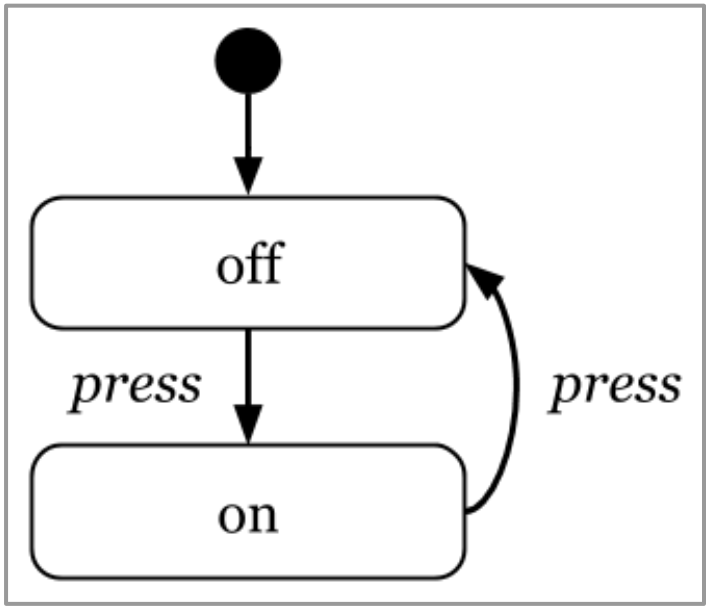

State machine (refined)

Button is *high* or *low*.

Light is *on* or *off*.

Pressed = *low* → *high*.

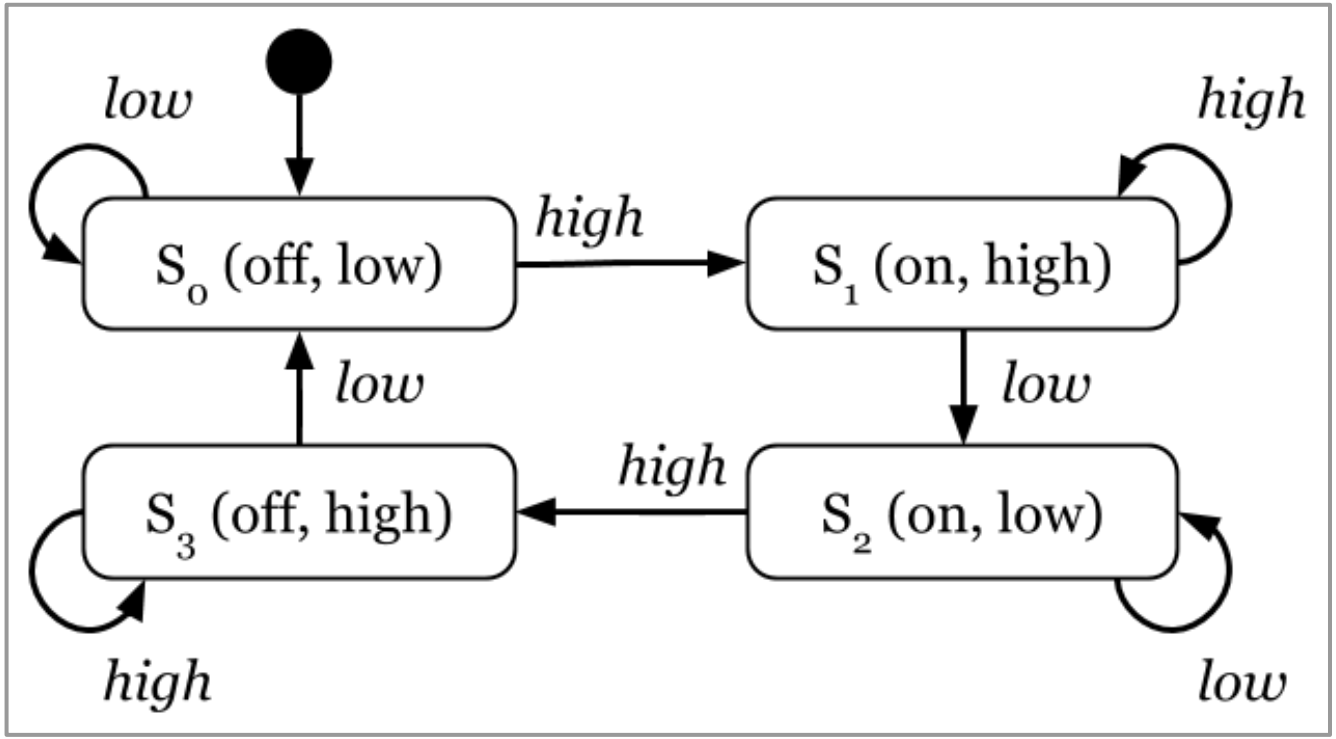

State machine (code snippet)

```
int b = digitalRead(buttonPin);
if (s == 0 && b == HIGH) { // s is state
  s = 1; digitalWrite(ledPin, HIGH); // on
} else if (s == 1 && b == LOW) {
  s = 2;
} else if (s == 2 && b == HIGH) {
  s = 3; digitalWrite(ledPin, LOW); // off
} else if (s == 3 && b == LOW) {
  s = 0;
}
```

Hands-on, 15': State machine

Copy and complete the code of the state machine.

Make sure it works, with a button and LED setup.

Change it to switch off only, if the 2nd press is *long*.

Let's define long as > 1s, measure time with millis().

Commit the resulting code to the hands-on repo.

Reading a light sensor (analog input)

Use *Basics* > *AnalogReadSerial*

Connect to Grove port / pin *A0*.

The analog value is, e.g. 0-1024*

```
int value = analogRead(pin);
```

Use serial plotter to see output.

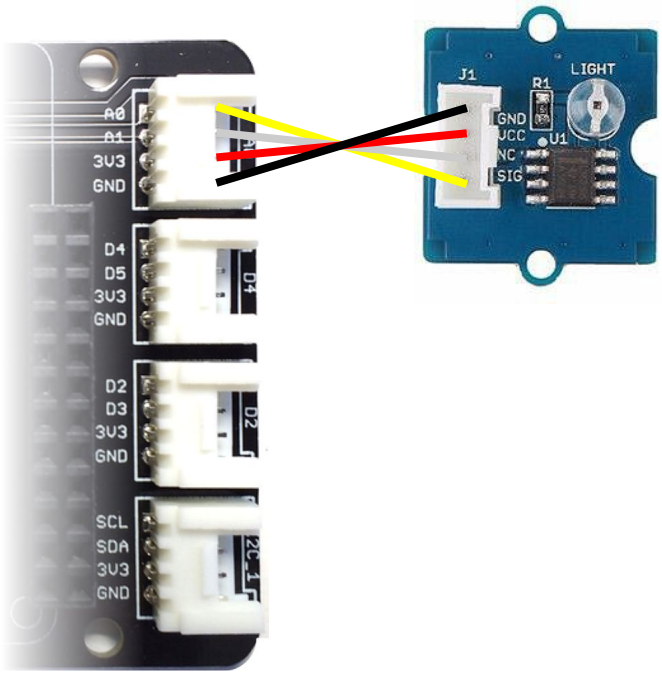

*Range depends on ADC resolution.

Mapping input to value range

Sometimes mapping sensor value ranges helps, e.g.

0 - 1024 analog input => 0 - 9 brightness levels.

Arduino has a simple map() function for this:

```
int map(value, // measured input value
  fromLow, fromHigh, // from range
  toLow, toHigh); // to range

e.g. result = map(value, 0, 1024, 0, 9);
```

Measuring temperature (DHT11)

DHT11 sensors require a library.

Setup and examples in the Wiki.

Connect to adapter port *D2*.

It maps to ESP8266 pin *2*.

Or nRF52840 pin *5*.

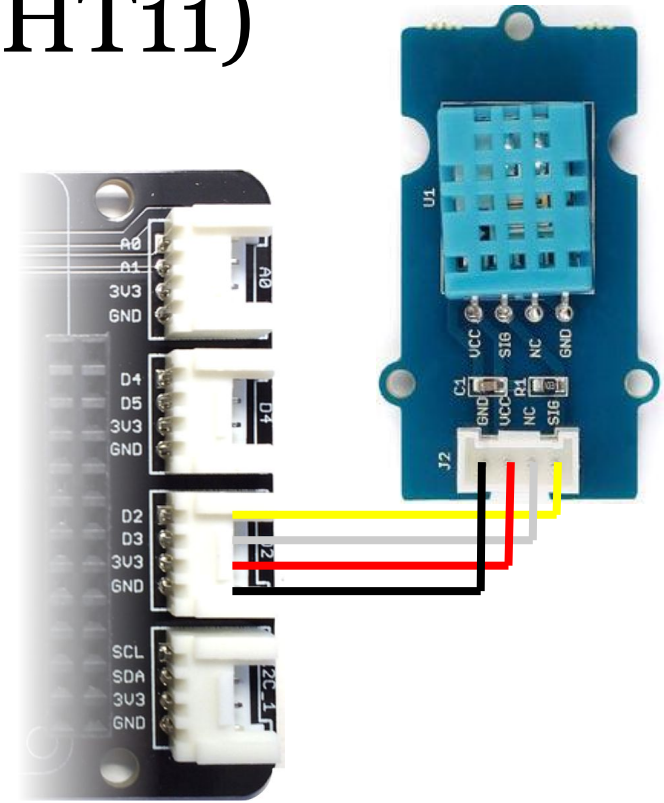

New to libraries? See Arduino library guide.

Hands-on, 15': Kitchen timer

Design a kitchen timer to the following specification:

Displays a countdown to 0, in minutes and seconds.

Let's the user reset to 00:00, enter a new timespan.

Allows the user to start the countdown at *mm:ss*.

Starts buzzing if the countdown reaches *00:00*.

Use a state machine, get the time with millis().

Summary

We programmed a microcontroller in (Arduino) C.

We used digital and analog sensors and actuators.

We learned to design and code a state machine.

These are the basics of physical computing.

Next: Sending Sensor Data to IoT Platforms.

Homework, max. 3h

Implement the kitchen timer you designed above.

Document the timer state machine (PDF or PNG).

Commit the code and docs to the hands-on repo.

Bring the (working) timer to the next lesson.

Consider cooking something to test it.

Feedback or questions?

Write me on https://fhnw-iot.slack.com/

Or email thomas.amberg@fhnw.ch

Thanks for your time.