
Table of Contents

	2
OVERVIEW OF APPLICATION	2
OPTIONAL: USE QUPATH TO CREATE DOWNSAMPLED IMAGE FILES	3
STEP 1. CREATE A QUPATH PROJECT CONTAINING ALL IMAGES	3
STEP 2. LOAD ALL IMAGES INTO THE QUPATH PROJECT	3
STEP 3. LOAD AND RUN THE DOWNSAMPLE SCRIPT	4
TAB 1. DEFINE PROJECT	6
STEP 1. DEFINE THE INPUTS TO YOUR PROJECT	6
OPTION 1. DEFINE THE INPUTS MANUALLY	6
OPTION 2. LOAD INPUTS FROM A PREVIOUS PROJECT	7
STEP 2. NAVIGATE ACROSS VARIOUS TABS TO PERFORM IMAGE OR COORDINATE REGISTRATION	8
TAB 2: CALCULATE IMAGE REGISTRATION	9
STEP 1. SELECT A MOVING IMAGE TO REGISTER (OR RE-REGISTER)	9
STEP 2. MANIPULATE FIXED AND MOVING IMAGE VIEWS TO DISPLAY SIMILAR REGIONS	10
STEP 3. SELECT FIDUCIAL POINT PAIRS	10
STEP 3A. ADD FIDUCIAL POINT PAIRS	11
STEP 3B. DELETE FIDUCIAL POINT PAIRS	11
STEP 3C. FIDUCIAL POINT VISIBILITY	12
STEP 4. CALCULATE POINT-CLOUD-BASED IMAGE REGISTRATION	12
STEP 4A. DETERMINE WHETHER THE POINT-CLOUD-BASED REGISTRATION IS ACCEPTABLE	12
STEP 4B. SAVE THE POINT-CLOUD-BASED REGISTRATION RESULTS OR RETURN TO EDIT FIDUCIAL PAIRS	13
STEP 5. OPTIONAL: CALCULATE ELASTIC IMAGE REGISTRATION	13
STEP 5A. DETERMINE WHETHER THE ELASTIC REGISTRATION IS ACCEPTABLE STEP 5B. SAVE THE ELASTIC REGISTRATION RESULTS OR RETURN	14 14
TAB 3. APPLY REGISTRATION TO COORDINATE DATA	15
STEP 1. LOAD A COORDINATES FILE AND CORRESPONDING MOVING IMAGE	15
STEP 2. CONFIRM THE COORDINATES OVERLAY ON THE UNREGISTERED MOVING IMAGE	16
STEP 3. CONFIRM COORDINATES OVERLAY CORRECTLY IN REGISTERED SPACE	16
STEP 4. SAVE THE REGISTERED COORDINATES	17
TAB 4. APPLY REGISTRATION TO IMAGE DATA	18
STEP 1. POPULATE THE TABLE WITH IMAGES TO REGISTER	18
STEP 2. SELECT RUN TO INITIATE THE ALIGNMENT CALCULATION	18
TAB 5. VIEW PROJECT STATUS	19

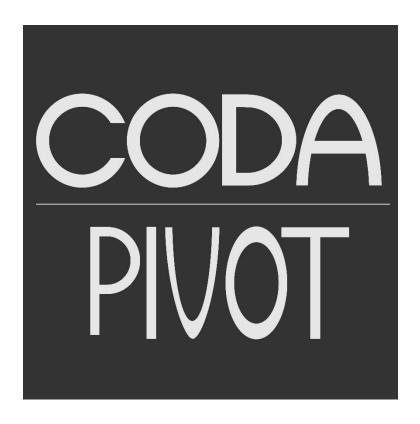

OVERVIEW OF APPLICATION

The purpose of this user interface is to streamline user-assisted registration of multi-plex biological images for the purpose of co-registering coordinate data.

To use this interface, the user should first define a project. Each project consists of a single fixed image and one or more moving images. All moving images will be aligned to spatially overlay on the fixed image. The registration transforms calculated to align the moving image to the fixed image may then be used to register coordinate data. Often, the fixed image should be a whole slide H&E, but this can vary.

All images used here should be downsampled from their original resolution to a size enabling rapid loading and manipulation (<150MB). The user must know the scale between the downsampled image and the full resolution file. To better enable down-sampling of diverse image file-types we provide a QuPath-based GROOVY script.

Before you begin, make a list of all images in your cohort. For each image, you need:


- The original, full resolution copy of the image
- A downsampled image that can be rapidly loaded into computer memory for the registration.
- The scale factor between the downsampled image and the full resolution file
- Coordinates corresponding to information you quantified in the full resolution image.

OPTIONAL: USE QUPATH TO CREATE DOWNSAMPLED IMAGE FILES

Excessively large images may be downsampled into smaller .tif files using the included "QuPath_downsample_and_save.groovy" GROOVY script.


STEP 1. CREATE A QUPATH PROJECT CONTAINING ALL IMAGES

Open QuPath. Click "Create project" and select an empty folder to serve as the project folder. After creating the Project.

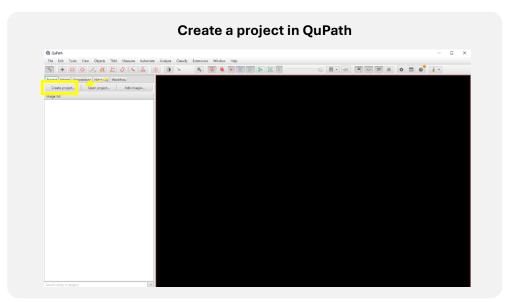


STEP 2. LOAD ALL IMAGES INTO THE QUPATH PROJECT

Drag and drop images into the QuPath "Image list" section to add them to the project.

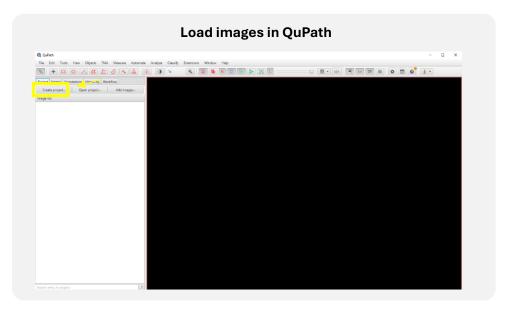


STEP 3. LOAD AND RUN THE DOWNSAMPLE SCRIPT

Once all desired images are loaded, go to Automate -> Script editor. The Script editor window will appear. In this window, go to File > Open, and navigate to the folder containing the PIVOT code package to open "QuPath_downsample_and_save.groovy".

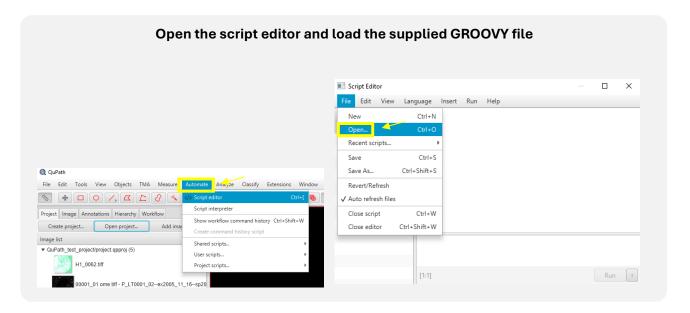


Press run to execute the image downsampling script. A window will appear prompting input of the maximum desired image dimensions. We suggest a maximum dimension of 2000 – 3000 pixels, depending on users' resolution needs and RAM limitations. For images smaller than this cutoff, the full-resolution file will be saved (images will not be upsampled)

For RGB images such as brightfield scans of H&E or IHC stained tissue sections, the script will automatically export an RGB image. For multi-channel images, the user will be asked to select up to three channels, which will be concatenated into an RGB output. We suggest that users select channels that together enable holistic visualization of the tissue, such as DAPI (nuclei), cytokeratin (epithelial cells), smooth muscle actin or collagen (stroma), and CD45 (immune cells), as this image will be used to guide fiducial point placement and registration.

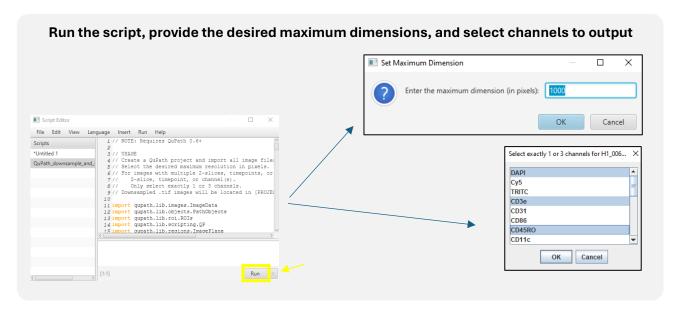

If an image file has multiple timepoints, select a timepoint from the dropdown menu

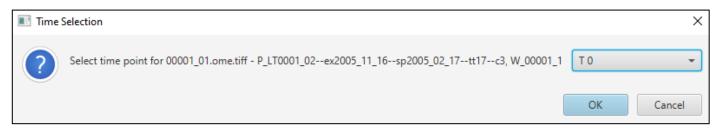


After the script is completed, the final images will be located in [project directory]/export. For each high-resolution image the script will output a downsampled image in .tif format and a .csv file containing the downsample factor (new greatest dimension / original greatest dimension), as well indicating (for multi-channel images) which channel is saved in the RGB file.

TAB 1. DEFINE PROJECT

The purpose of this tab is to set up a registration project by defining THE fixed and moving images and designating the folder to save the registration outputs. To complete this tab, follow the steps below.

STEP 1. DEFINE THE INPUTS TO YOUR PROJECT

There are two methods to input data. **Option 1**. define each required input manually or **Option 2**. load the inputs from a previous project. When all inputs to a panel are defined correctly, the panel will turn **green**. The user may advance to the next tab when all panels are **green**.

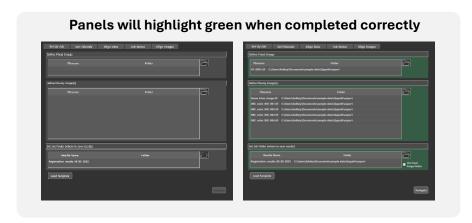


OPTION 1. DEFINE THE INPUTS MANUALLY

The user may define the project inputs manually by completing the three panels.

STEP 1A. COMPLETE THE "DEFINE FIXED IMAGE" PANEL


Select the folder icon button inside the fixed image panel and navigate to the folder containing a downsampled copy of the image that will serve as the reference coordinate system for this project. Select the image, which will populate the "Filename" and "Folder" cells of the table. To replace the current fixed image with another image, select the Folder icon button and confirm replacement of the current file.

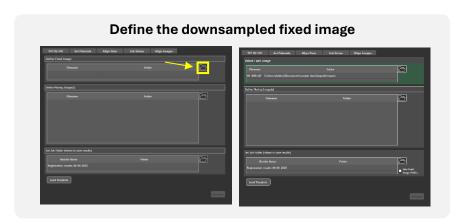

STEP 1B. COMPLETE THE "DEFINE MOVING IMAGE(S)" PANEL


Select the folder icon button inside the moving image panel and navigate to a folder containing a downsampled copy of an image that will be registered to the fixed image. Select the image, which will populate the "Filename"

and "Folder" cells of the table. Continue adding moving images by repeating this process until all desired images are defined. To delete a moving image from the table, double click the filename of the image you wish to delete, then press the "Delete" button when it appears.

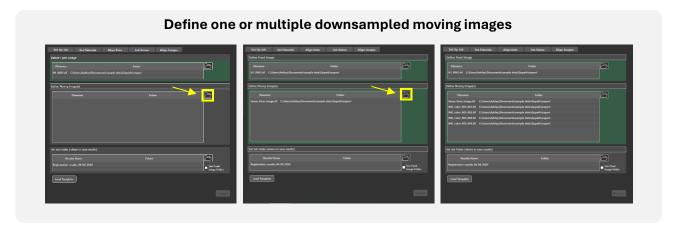


STEP 1C. COMPLETE THE "WHERE TO SAVE RESULTS" PANEL

Finally, define the folder where the registration results should be saved. Either select the "Choose folder" button and browse or check the "Use fixed image folder" checkbox to save the results in the same folder as the fixed image. By default, the registration results name is set to "Registration [TODAY'S DATE]", but this may be changed by double clicking the "Results name" cell in the table and defining a custom project name. The outputs of this project will be saved inside of a folder with the results name in the defined results folder.

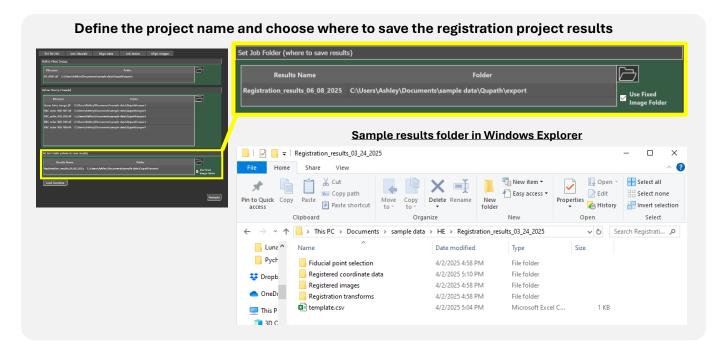

OPTION 2. LOAD INPUTS FROM A PREVIOUS PROJECT


Where a user has previously started a project and would like to continue or modify it, the user may reload previous inputs. Select the "Load template" button on the bottom left corner of the tab. Navigate to the folder containing the registration results of the desired project and select the "template.csv" file. This will autopopulate the three panels, which will turn green if all inputs are defined correctly. Edit these inputs as desired.

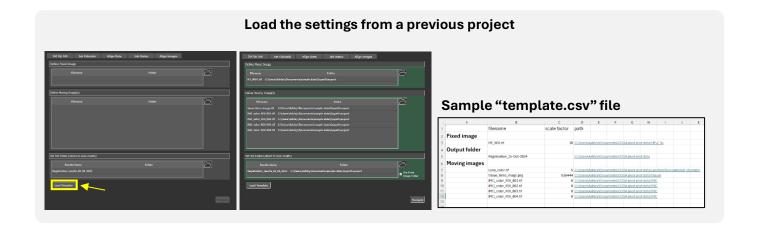

STEP 2. NAVIGATE ACROSS VARIOUS TABS TO PERFORM IMAGE OR COORDINATE REGISTRATION

Once all inputs are defined, the user may move across the tabs of the interface using the "Navigate" button. When the user navigates away from this tab, the inputs will be saved in the project folder as a "template.csv" file. If the user exits the interface and rejoins, this project may be continued by importing the template.

- 1. To view the project settings, select the "Set up" button to proceed to Tab 1: Define Project.
- 2. To compute image registration between the fixed and moving images, select the "Fiducials" button to proceed to **Tab 2: Set Fiducials**
- 3. To apply previously calculated registration transforms to coordinate data, select the "Align Data" button to proceed to **Tab 3: Apply Registration to Coordinate Data**. Note: In order to apply transforms to coordinate data, transforms must first be calculated in tab 2.
- 4. To apply previously calculated registration transforms to high-resolution images, select the "Align Images" button to proceed to **Tab 4: Apply Registration to Image Data**. Note: In order to apply transforms to image files, , transforms must first be calculated in tab 2.
- 5. To view the current progress, select the "Status" button to proceed to **Tab 5: Project Status**. This tab contains a table summarizing the relevant image and coordinate registration information for the current project.

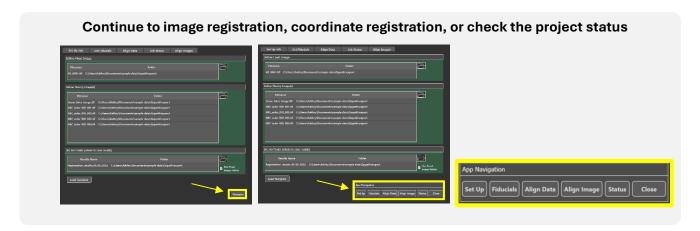


TAB 2: CALCULATE IMAGE REGISTRATION

The purpose of this tab is to enable users to view the fixed image and moving images side-by-side to guide rapid and high-accuracy fiducial point placement. Following fiducial point placement, this tab calculates point-cloud-based affine registration of the fixed and moving images, followed by optional finetuning via automatic calculation of nonlinear registration to account for user-error in fiducial placement and local distortion (pulling or folding) within the images. To complete this tab, follow the steps below.


STEP 1. SELECT A MOVING IMAGE TO REGISTER (OR RE-REGISTER)

Upon start-up, this tab will display the fixed image on the left, and a blank frame on the right. The "Navigation" button on the bottom right corner of the tab may be used at any time to move to another tab of the interface.

To load a moving image, select a file from either the "Register moving image" or "Re-register completed moving image" dropdown menus on the bottom left corner of the tab. To display a selected image, select the "Load image" button. The image will load and display on the right image panel. If a previously registered image was selected, existing fiducial pairs and view settings will be present.

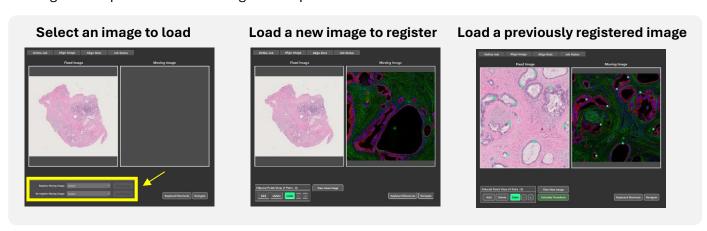


When a moving image is loaded, the "Fiducial point controls" panel will replace the "Moving image selection panel" in the bottom left corner. To the right of the "Fiducial point controls" panel two buttons will appear: "View new image" and "Calculate registration." Select the "View new image" button anytime to close the current moving image and choose another. The "Calculate registration" button will be disabled until at least 6 fiducial pairs are clicked. If enabled, this button will prompt calculation of point-cloud registration of the fixed and moving image.

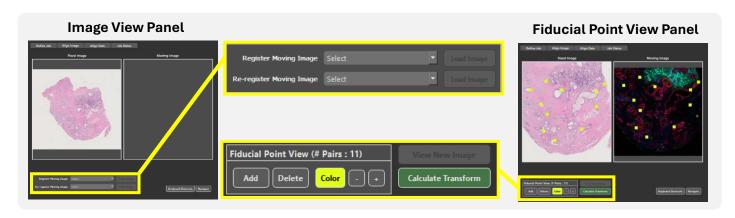

STEP 2. MANIPULATE FIXED AND MOVING IMAGE VIEWS TO DISPLAY SIMILAR REGIONS

After the moving image is displayed, the user may apply various transformations to the images with the goal of displaying the same region of interest in each panel and adjusting the brightness and contrast to facilitate efficient fiducial pair placement. Select the "Keyboard Shortcuts" button in the bottom right corner to view the available transformations (and see them copied below in Table 1). Use these commands to adjust the fixed and moving image if necessary to visualize the same region of interest.

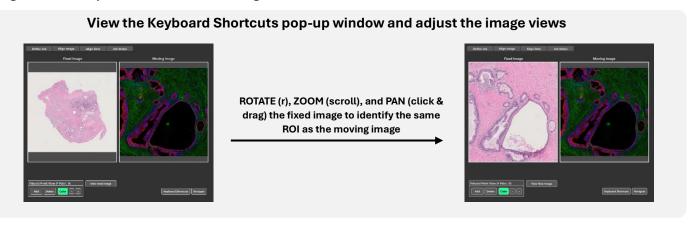

Command		Act	tion	
Zoom	Hover mouse ove	r desired image an	d scroll	
Pan	Click and drag on	desired image		
Save a screenshot	S			
	Left I	mage	Right	Image
Rotate +90°	F	3	Shif	t + R
Flip on vertical axis	F	F	Shif	t+F
Auto-adjust	ļ ,	4	Shif	t + A
contrast				
Return to default)	Shif	t + D
view				
	Small effect	Large effect	Small effect	Large effect
Increase brightness	B+>	B+L	Shift + B + >	Shift + B + L
Decrease	B + <	B + K	Shift + B + <	Shift + B + K
brightness				
Increase contrast	C+>	C + L	Shift + C + >	Shift + C + L
Decrease contrast	C + <	C + K	Shift + C + <	Shift + C + K

Table 1: Image View Command Shortcuts

STEP 3. SELECT FIDUCIAL POINT PAIRS

Once the fixed and moving images display similar regions of interest, fiducial point selection may begin.

Note: We suggest a minimum of 6 fiducial points for high quality registration. As the accuracy of the point-cloud-registration depends on the accurate placement of fiducial pairs, we strongly suggest users utilize the zoom and pan features to select fiducials at a high magnification.


STEP 3A. ADD FIDUCIAL POINT PAIRS

To add a point pair, select the "Add" button in the "Fiducial point controls" panel. The fixed image will be highlighted in **green**, and the mouse icon will be replaced by crosshairs. The user should click a fiducial landmark in the fixed image. Next, the moving image will be highlighted in **green**. The user should click **the same structure** in the moving image as was selected in the fixed image. Following selection of the paired point, the app will switch back to the fixed image to allow the user to define another point pair. Continue selecting point pairs until the desired number (minimum of 6) is obtained. Image View commands are active during fiducial selection, enabling users to zoom, pan, rotate, and flip images to better support accurate point placement. When the desired number of points have been selected, click "esc" or press the "Quit" button to exit fiducial point selection mode.



STEP 3B. DELETE FIDUCIAL POINT PAIRS

To remove a fiducial point pair, select the "<u>Delete</u>" button in the "<u>Fiducial point controls</u>" panel. Select "<u>Delete one point</u>" or "<u>Delete all points</u>" in the pop-up window as desired. If "<u>Delete one point</u>" was selected, the mouse icon will be replaced by crosshairs. Click near the point you wish to delete in either the fixed or the moving image. The nearest point to the coordinates clicked will be highlighted, and the user will be asked to confirm or cancel the deletion. If confirmed, the selected point, and its corresponding paired point in the other image, will be deleted.

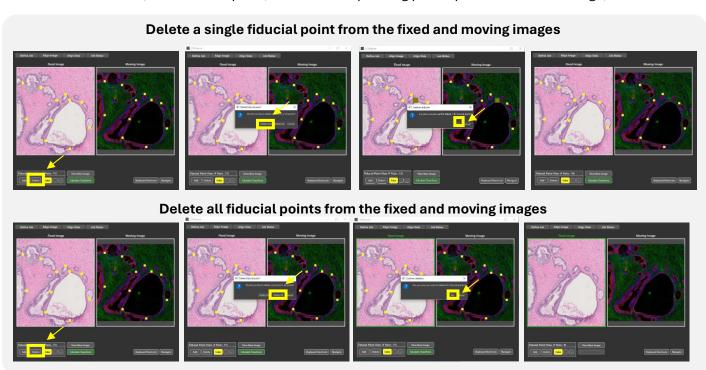


STEP 3C. FIDUCIAL POINT VISIBILITY

To improve marker visibility, the user may change the "<u>Color</u>" or "<u>Size</u>" of the points via the corresponding buttons within the "<u>Fiducials point controls</u>" panel.



STEP 4. CALCULATE POINT-CLOUD-BASED IMAGE REGISTRATION

Once the user has annotated a minimum of six fiducial point pairs, the "<u>Calculate registration</u>" button will be enabled. Select this button to calculate the point-cloud-based affine registration and apply the affine transform to the moving image. Here, the selected fiducial point pairs and view settings will be saved to a "<u>.pkl</u>" file. The user will be directed to a tab displaying to compare the pre- and post-registration image overlays.

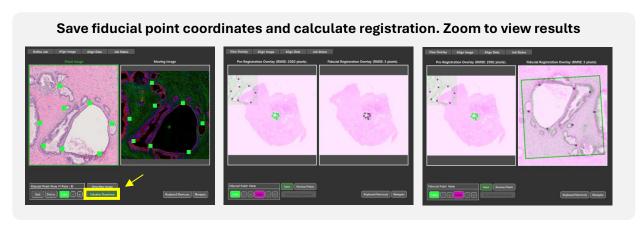

STEP 4A. DETERMINE WHETHER THE POINT-CLOUD-BASED REGISTRATION IS ACCEPTABLE

The layout of the image overlay sub-tab should look similar to tab two, with images displayed on the left and right side of the screen. Displayed are overlays of the fixed image (in **green**) and the moving image (in **pink**), with their corresponding fiducial points. On the left side of the screen is the overlay of the **unregistered** images, and on the right is the overlay of the **registered** images. In the text above the left and the right image panel the <u>root mean squared error (RMSE)</u> of the unregistered and registered fiducial point pairs is printed. An RMSE of 0 represents perfect alignment, while a large RMSE represents poorly aligned images. In the below example, the original RMSE of 32,647 pixels is reduced to 4 pixels through the point cloud registration.

As during fiducial pair placement, the user may edit the <u>view</u> of the image overlays using the keyboard shortcuts, and may change the <u>size</u> or <u>color</u> of the fiducial point pairs to improve the interpretability of the results. The user should review the image and fiducial point pair overlays to determine whether the alignment is of sufficient quality.

STEP 4B. SAVE THE POINT-CLOUD-BASED REGISTRATION RESULTS OR RETURN TO EDIT FIDUCIAL PAIRS


After assessing the quality of the registration by reviewing the pre- and post-registration RMSE and visualizing the image overlay, the user can either save the calculated registration transformation matrix by selecting the "Save" button, may return to adjust their fiducial point pair selection by selecting the "Edit Results" button, or may move to another tab altogether by selecting the "Navigate" button.

The "<u>Save</u>" button is highlighted in **green** if the user has not yet saved these results, and will turn **grey** after the results have been saved. If the results are saved, the "<u>Calculate Elastic Registration</u>" button will be enabled and will turn **green**. If desired, the user may select this button to attempt elastic registration to finetune the results of the affine registration. Alternatively, the user may select the "<u>Navigate</u>" button to move to another tab.



STEP 5. OPTIONAL: CALCULATE ELASTIC IMAGE REGISTRATION

If the "Calculate Elastic Registration" button was selected, the user will be taken to another tab, this one enabling the user to adjust parameters and calculate the elastic image registration. Again, there will be two image panels. The left panel will be populated with an overlay of the point-cloud-based registration results, and the right panel will be empty. Within the left panel, there will be two square outlines present, representing the size and spacing of tiles that will be used for the elastic registration calculation. The user may adjust the size and spacing of these tiles, or change their color to improve visibility, using the buttons inside the "Elastic registration controls" panel. For brightfield-to-brightfield registration (H&E to H&E or H&E to IHC) we suggest a tile size of 150 – 250. For brightfield-to-fluorescent registration, we suggest a larger tile size of 400-600.

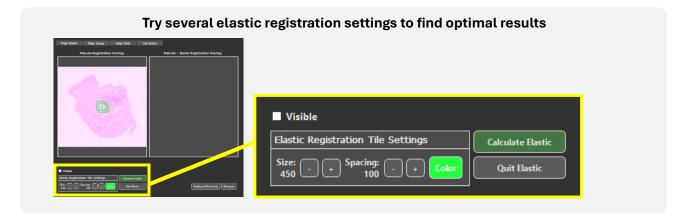

To calculate registration using the default or selected parameters, select the "Calculate transform" button. This will initiate tile-wise calculation of image registration, which will be concatenated and interpolated to generate a

nonlinear transformation matrix. Select the 'Visible' checkbox to view the tile-wise progress of the algorithm while it calculates. Following calculation of the nonlinear transform, the moving image will be transformed, and the inverse of the transform will be determined for registration of the fiducial markers and for downstream application to coordinate data. Once the fiducial points and moving image are transformed, they will be overlaid with the fixed image in the right panel, and the RMSE of the elastic registration will be displayed above the image panel.

STEP 5A. DETERMINE WHETHER THE ELASTIC REGISTRATION IS ACCEPTABLE

As in the overlay for the point-cloud-based registration, the user should review the image and fiducial point pair overlays to determine whether the elastic alignment is of sufficient quality. Here, the user should note whether the RMSE improved from the point-cloud-based registration to the elastic registration and should review the image overlays to determine whether the moving image was improperly warped. If warping is present, we suggest the user calibrate the elastic registration by increasing the tile size. If the results are not locally warping enough, we suggest the user calibrate the elastic registration by decreasing the tile size. As the tile spacing can have non-intuitive effects on the registration results, we suggest users test a few values to optimize to their dataset.

STEP 5B. SAVE THE ELASTIC REGISTRATION RESULTS OR RETURN

After assessing the quality of the registration by reviewing the pre- and post-registration RMSE and visualizing the image overlay, the user can either save the calculated nonlinear displacement field by selecting the "Save" button, may return to adjust the elastic registration settings by selecting "Review Tiles" button, may return to the sub-tab overlay of the point-cloud-based registration results by selecting the "Quit Elastic" button, or may move to another tab altogether by selecting the "Navigate" button. The "Save" button is highlighted in green if the user has not yet saved these results and will turn grey after the results have been saved.



TAB 3. APPLY REGISTRATION TO COORDINATE DATA

The purpose of this tab is to register coordinate data into the fixed image space using the transforms calculated from the fiducial point annotation and elastic registration. To complete this tab, follow the steps below.


STEP 1. LOAD A COORDINATES FILE AND CORRESPONDING MOVING IMAGE

The first step is to identify the coordinates to register and to define which moving image they correspond to. Select the Folder icon button to identify the ".csv" or ".xlsx" file containing the coordinate data. Inside this file, each row should contain information for one coordinate. The "x" coordinate should be listed in one column and the "y" coordinate should be listed in a separate column (see a sample coordinate file below). By selecting a coordinate file the "Data filename" cell in the table will be populated.

	A	В	C	D	E	F	G	H	
1	barcode	in_tissue	array_row	array_col	pxl_row_in_fullres	pxl_col_in_fullres			
2	GTCACTTC	0	0	0	1300	969			
3	CACGGTCT	(0	0	2	1300	980			
4	ATAGCTGC	6 0	0	4	1300	991			
5	GTCAGTAT	G 0	0	6	1300	1002			
6	ATGTACCA	9 0	0	8	1300	1014			
7	ACGCTCAG	1 0	0	10	1300	1025			
8	TCACTAACO	3 0	0	12	1300	1036			
9	CGGTTAGG	(0	0	14	1300	1047			
10	GATATCAC			16	1300	1058			
11	TCGCCTTG								
	CATACCTAC								
	TATCCGGA								
14	CTCCAAGT	0 0	0	24	1300	1102			


Next, use the dropdown list, which contains all moving images for which registration has been calculated, to select the moving image corresponding to the coordinates file that was loaded. This will populate the "Moving image filename" and "Scale" cells of the table. Here, the "Scale" assumes the coordinate data are at full resolution. If the QuPath GROOVY script was used to downsample the images, the QuPath downsample factor will be loaded automatically. this is incorrect, the user may double click the "Scale" cell and input the correct scale factor between the coordinate data and the moving image used for registration.

Double click the "X column" and "Y column" cells to input the letter or number of the column corresponding to the coordinates. For example, in the sample template file below, the coordinate rows are defined in column "E", so the user may enter "E", "e", or "5". Similarly, the coordinate columns are defined in column "E", so the user may enter "E", "f", or "6" to the "Y column" cell. Once the "Data filename", "Moving image filename", "Scale", "X column", and "Y column" are defined, the panel will turn green to indicate the coordinates and moving image file may now be read into memory. Select the "Load" button to load the coordinates and corresponding images.

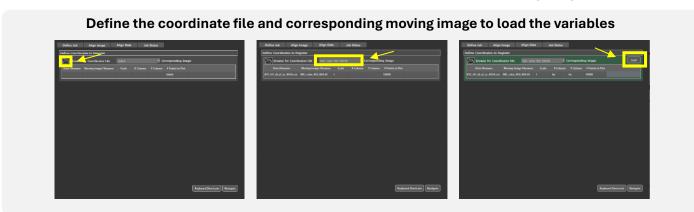


STEP 2. CONFIRM THE COORDINATES OVERLAY ON THE UNREGISTERED MOVING IMAGE

When all inputs from **STEP 1** are defined correctly, the user may press "Load" to read the coordinates and corresponding images into memory. The unregistered image will be displayed in the panel on the left side of the tab and the coordinates will be overlayed as a scatter plot. The user should confirm that the coordinates correctly overlay on the image or select the "Edit Table" or "Swap XY" buttons to edit the coordinates appearance if they do not correctly overlay. The user may adjust the view of the image using the previously described keyboard shortcuts, and may adjust the point data color and size using the "Fiducial Point View" tab under the image panel. When the coordinates correctly overlay on the image, select check the box next to the "Unregistered moving image" button.

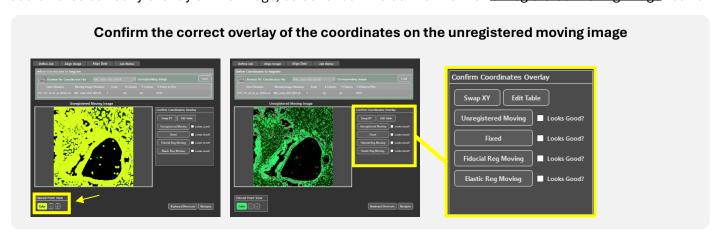


STEP 3. CONFIRM COORDINATES OVERLAY CORRECTLY IN REGISTERED SPACE

Next, select the "Fixed Image," "Registered moving image", and "Elastic moving image" (if elastic registration was calculated, to confirm that the registered coordinates overlay as expected. The user should check each overlay carefully to confirm that the registration is of sufficient quality for downstream analyses. If the quality is not sufficient, the user may select return to adjust the fiducial points and recalculate the registration by selecting the "Navigate" button on the bottom right corner of the tab. If the overlays are satisfactory for each button selected, check the corresponding checkbox to the right of the button to confirm correct overlay.

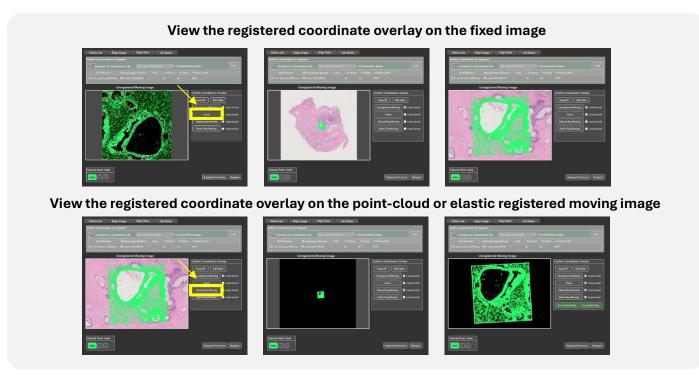

STEP 4. SAVE THE REGISTERED COORDINATES

Once all boxes are checked, two buttons will appear allowing the user to save the registered coordinates: "Save Affine Reg" and the "Save Elastic Reg" (if the elastic registration was calculated). Either or both of the affine and elastic registered coordinates may be saved. The coordinates will save inside the output folder defined in **Tab 1**. The filename will be the same as the input filename, appended with either "Registered" or "Elastic registered" depending on which button was selected The format of the file will be the same as the input format, with the unregistered coordinate values replaced with registered coordinate values at the scale of the full resolution fixed image as defined in **Tab 1**. After saving the coordinates, the user may move to another tab in the interface or restart this tab to register more coordinate files by selecting the "Navigate" button.

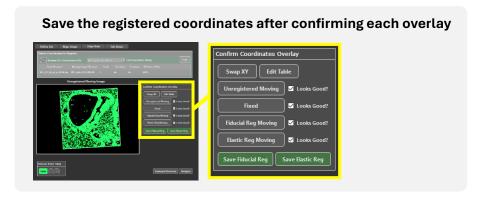


TAB 4. APPLY REGISTRATION TO IMAGE DATA

The purpose of this tab is to register high-resolution images to fixed image space using the transforms calculated from the fiducial point annotation and elastic registration. Examples of images a user may wish to apply registration transforms to are high-resolution copies of the low-resolution images that were used during registration, or high-resolution image masks containing segmentation outputs from analysis of the original tissue image. Importantly, this tab will not scale images. For example, an image input at a resolution of 1µm per pixel will be rotated, translated, and nonlinearly warped according to the calculated transformation matrix, but it will not be scaled. This is to preserve resolution-specific information such as cellular coordinates. To complete this tab, follow the steps below.

STEP 1. POPULATE THE TABLE WITH IMAGES TO REGISTER

Press the folder icon to browse for images to register. Select one or multiple images. Next, double-click the second column next to each image file and select the corresponding moving image from the drop-down menu. Finally, double-click the third column next to each image file and select to apply either affine (point-cloud based) or elastic registration to each image. If elastic registration was not calculated for the corresponding moving image, affine registration will be automatically selected.

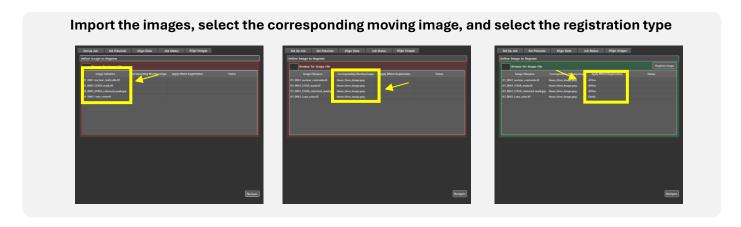

STEP 2. SELECT RUN TO INITIATE THE ALIGNMENT CALCULATION

Once all images and alignment settings are defined, select the "Register images" button to start the registration process. Each registered image will be saved in a subfolder containing the project name in the original folder where the image was imported from.

TAB 5. VIEW PROJECT STATUS

The purpose of this tab is to enable users to view the status of their project. No actions are completed in this tab, but a table is present which will display the name of the fixed image, the name of each moving image, and for each moving image: the number of fiducial pairs that have been saved, the calculated RMSE for the point-cloud-based and elastic registration, and whether or not coordinate data has been registered with the resulting registration transforms. This tab may be used at anytime to view the progress and validation (RMSE) of the project.

