
```
M = 4 % Number of Bits per Symbol
M = 4
BAUD_RATE = 1 % Symbols transmitted per second
BAUD RATE = 1
L = 50 % Number of Symbols to be transmitted
L = 50
SAMPLING_RATE = 20 % Samples per second in Khz
SAMPLING_RATE = 20
Fc = 1 % Carrier Frequency in Khz
Fc = 1
Ac = 1 % Carrier Amplitude
Ac = 1
T = L / BAUD_RATE; % tx signal length in seconds
N = SAMPLING_RATE * T * 1000; % Number of samples required
samples_per_symbol = N/L;
n = 0:N-1;
% Carrier Signals
in_phase = Ac*cos(2*pi*Fc*n/N*T);
quadrature = Ac*sin(2*pi*Fc*n/N*T);
figure
subplot(2,1,1)
plot(in_phase)
title("In-Phase Carrier")
```

subplot(2,1,2)
plot(quadrature)


sgtitle("Carrier")

title("Quadrature Carrier")


## Carrier

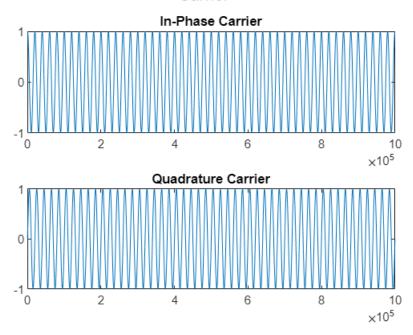

```
symbols = qammod(0:2^M-1,2^M,"UnitAveragePower",true);
% Generating a random input message signal
message_signal = randi([0 2^M-1],L,1);
encoded_message_signal = zeros(L,1);
tx_signal = zeros(N,1);
for i = 1:L
  encoded_message_signal(i) = symbols(message_signal(i)+1);
  for j = 1:samples_per_symbol
       k = (i-1)*samples_per_symbol + j; % Index of the tx sample
      tx_signal(k) = real(encoded_message_signal(i)) * in_phase(k) + ...
           imag(encoded message signal(i)) * quadrature(k);
   end
end
figure
scatterplot(symbols)
title("Constellation Diagram")
```

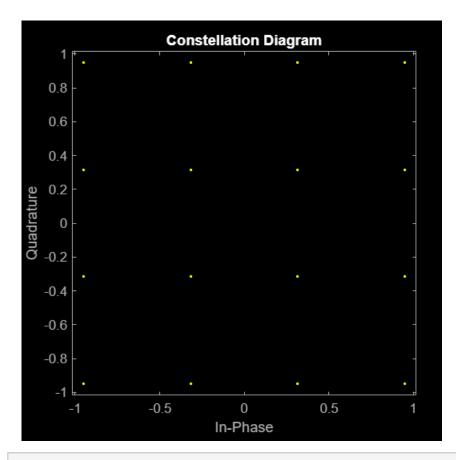

```
figure
plot(tx_signal)
title("Transmitted Modulated Signal")
```

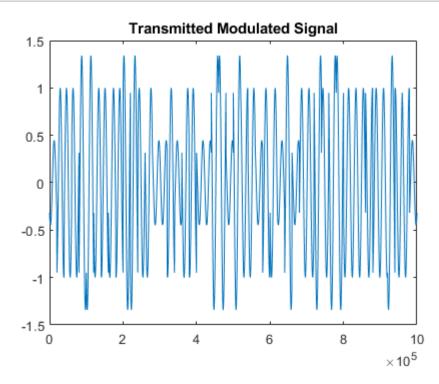

```
% Passing through AWGN Channel
SNR = 25 % Db
```

SNR = 25

```
encoded_message_signal_with_noise = AWGN_Custom(encoded_message_signal,SNR);
figure
scatterplot(encoded_message_signal_with_noise)
title("Message Symbols with Noise")
```

