# Solfec User Manual

Tomasz Koziara

6th February 2010

# Contents

1	Introduction	3
<b>2</b>	Installation	6
3	Running Solfec	9
4	Input language	10
	4.1 Solfec objects	 10
	4.1.1 CONVEX	 10
	4.1.2 MESH	 11
	4.1.3 SPHERE	 12
	4.1.4 SOLFEC	 13
	4.1.5 SURFACE MATERIAL	 13
	4.1.6 BULK MATERIAL	
	4.1.7 BODY	
	4.1.8 TIME SERIES	
	4.1.9 GAUSS SEIDEL SOLVER	
	4.1.10 EXPLICIT SOLVER	
	4.1.11 CONSTRAINT	
	4.2 Applying loads	
	4.3 Running simulations	
	4.4 Utilities	
	4.5 Results access	
_		
5	Tutorials	30
	5.1 Three basic geometric objects	
	5.2 Ball impact	 33
6	Contact points	37
	6.1 Contacts from overlaps	 37
	6.2 Contact sparsification	 37
7	Materials	39
•	7.1 Surface materials	
	7.1.1 Signorini-Coulomb	
	7.1.2 Spring-dashpot	
	7.1.2 Spring-dashpot	
	7.2 Bulk materials	

CONTENTS	0
CONTENTS	<u> </u>

8	Solv	vers	42
	8.1	Gauss-Seidel solver	42
	8.2	Explicit solver	46


## Chapter 1

# Introduction

Solfec is a computational code aimed at simulation of multi-body systems with constraints. It implements an instance of the Contact Dynamics (CD) method by Moreau [6] and Jean [3], hence the constraints are solved implicitly. One of the main goals of the software is to provide a user friendly platform for testing formulations and solution methods for the (dynamic) frictional contact problem. It is also meant to serve as a development platform for other aspects of time-stepping methods (e.g. contact detection, time integration). The code implements several kinematic models (rigid, pseudo-rigid, finite element), few contact detection algorithms, several time integrators and a couple of constraint solvers (e.g. penalty, Gauss-Seidel). A distributed memory and a serial versions of the code are available. Solfec is an open-source software and can be downloaded from http://code.google.com/p/solfec.

#### **Basics**

It will be useful to introduce some basic notions here. Let us have a look at a figure below

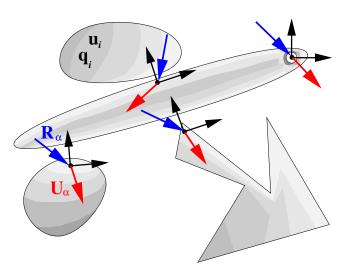

There are four bodies in the figure. Placement of each point of every body is determined by the configuration  $\mathbf{q}_i$ . Velocity of each point of every body is determined by the velocity  $\mathbf{u}_i$ . Let  $\mathbf{q}$  and  $\mathbf{u}$  collect configurations and velocities of all bodies. If the time history of velocity is known, the configuration can be computed as

$$\mathbf{q}(t) = \mathbf{q}(0) + \int_{0}^{t} \mathbf{u} dt \tag{1.1}$$

The velocity is determined by integrating Newton's law

$$\mathbf{u}(t) = \mathbf{u}(0) + \mathbf{M}^{-1} \int_{0}^{t} \mathbf{f} + \mathbf{H}^{T} \mathbf{R} dt$$
(1.2)

where  $\mathbf{M}$  is an inertia operator,  $\mathbf{f}$  is an out of balance force,  $\mathbf{H}$  is a linear operator, while  $\mathbf{R}$  collects some point forces  $\mathbf{R}_{\alpha}$ . While integrating the motion of bodies, one keeps track of a number of local coordinate systems (local frames). There are four of them in the figure. Each local frame is related to a pair of points, belonging to two distinct bodies. An observer embedded at a local frame calculates the local relative velocity  $\mathbf{U}_{\alpha}$  of one of the points, viewed from the perspective of the other point. Let  $\mathbf{U}$  collect all local velocities. Then, we can find a linear transformation  $\mathbf{H}$ , such that

$$\mathbf{U} = \mathbf{H}\mathbf{u} \tag{1.3}$$

In our case local frames correspond to *constraints*. We influence the local relative velocities by applying local forces  $\mathbf{R}_{\alpha}$ . This can be collectively described by an implicit relation

$$\mathbf{C}\left(\mathbf{U},\mathbf{R}\right) = \mathbf{0}\tag{1.4}$$

Hence, in order to integrate equations (1.1) and (1.2) at every instant of time we need to solve the implicit relation (1.4). Here is an example of a numerical approximation of such procedure

$$\mathbf{q}^{t+\frac{h}{2}} = \mathbf{q}^t + \frac{h}{2}\mathbf{u}^t \tag{1.5}$$

$$\mathbf{u}^{t+h} = \mathbf{u}^t + \mathbf{M}^{-1}h\mathbf{f}^{t+\frac{h}{2}} + \mathbf{M}^{-1}\mathbf{H}^T\mathbf{R}$$
(1.6)

$$\mathbf{q}^{t+h} = \mathbf{q}^{t+\frac{h}{2}} + \frac{h}{2}\mathbf{u}^{t+h} \tag{1.7}$$

where h is a discrete time step. As the time step h does not appear by  $\mathbf{M}^{-1}\mathbf{H}^{T}\mathbf{R}$ ,  $\mathbf{R}$  should be interpreted as an *integral* of reactions over [t, t+h]. At a start we have

$$\mathbf{q}^0$$
 and  $\mathbf{u}^0$  as prescribed initial conditions. (1.8)

The out of balance force

$$\mathbf{f}^{t+\frac{h}{2}} = \mathbf{f}\left(\mathbf{q}^{t+\frac{h}{2}}, t + \frac{h}{2}\right) \tag{1.9}$$

incorporates both internal and external forces. The symmetric and positive-definite inertia operator

$$\mathbf{M} = \mathbf{M} \left( \mathbf{q}^0 \right) \tag{1.10}$$

is computed once. The linear operator

$$\mathbf{H} = \mathbf{H} \left( \mathbf{q}^{t + \frac{h}{2}} \right) \tag{1.11}$$

is computed at every time step. The number of rows of  ${\bf H}$  depends on the number of constraints, while its rank is related to their linear independence. We then compute

$$\mathbf{B} = \mathbf{H} \left( \mathbf{u}^t + \mathbf{M}^{-1} h \mathbf{f}^{t + \frac{h}{2}} \right) \tag{1.12}$$

and

$$\mathbf{W} = \mathbf{H}\mathbf{M}^{-1}\mathbf{H}^T \tag{1.13}$$

which is a symmetric and semi-positive definite. The linear transformation

$$\mathbf{U} = \mathbf{B} + \mathbf{WR} \tag{1.14}$$

maps constraint reactions **R** into local relative velocities  $\mathbf{U} = \mathbf{H}\mathbf{u}^{t+h}$  at time t+h. Finally

$$\mathbf{R}$$
 is such that  $\mathbf{C}(\mathbf{U}, \mathbf{R}) = \mathbf{C}(\mathbf{B} + \mathbf{W}\mathbf{R}, \mathbf{R}) = \mathbf{C}(\mathbf{R}) = \mathbf{0}$  (1.15)

where  $\mathbf{C}$  is a nonlinear and usually nonsmooth operator. A basic Contact Dynamics algorithm can be summarised as follows:

- 1. Perform first half-step  $\mathbf{q}^{t+\frac{h}{2}}=\mathbf{q}^t+\frac{h}{2}\mathbf{u}^t.$
- 2. Update existing constraints and detect new contact points.
- 3. Compute W, B.
- 4. Solve  $\mathbf{C}(\mathbf{R}) = \mathbf{0}$ .
- 5. Update velocity  $\mathbf{u}^{t+h} = \mathbf{u}^t + \mathbf{M}^{-1}h\mathbf{f}^{t+\frac{h}{2}} + \mathbf{M}^{-1}\mathbf{H}^T\mathbf{R}$ .
- 6. Perform second half-step  $\mathbf{q}^{t+h} = \mathbf{q}^{t+\frac{h}{2}} + \frac{h}{2}\mathbf{u}^{t+h}$ .

Let us refer the reader to [4] and references therein for more details.

## Chapter 2

# Installation

Although there will be perpetual releases of Solfec with some fixed version numbers, it is best to use the most recent development version of the code. This is because Solfec is in active "beta" stage of development for the moment. In order to download the most recent sources, you first need to install Mercurial. Have a look at http://mercurial.selenic.com/ for instructions. Once the hg command is available on your command line, type

```
hg clone https://solfec.googlecode.com/hg/ solfec
```

This will create a directory solfec in your current directory. The next thing you need is an ANSI C (and prospectively also FORTRAN) development environment at your command line. Users of UNIX-like systems (Linux, FreeBSD, Mac OS X, etc.) are in privileged position here. Windows users can cope by installing Cygwin (tested) from http://www.cygwin.com/ or Mingw (not tested) from http://www.mingw.org/.

Solfec is written in C and it uses a simple makefile to get compiled. The file solfec/Config.mak needs to be modified on a new machine so that to set up library paths and compilation flags. Let us have a look at the file solfec/Config.mak

```
#
# Specify C compiler here
#
CC = cc
#
# Specify FORTRAN compiler here
#
FF = g95
#
# Debug or optimized version switch (yes/no)
#
DEBUG = yes
PROFILE = no
MEMDEBUG = no
GEOMDEBUG = no
PARDEBUG = no
NOTHROW = no
#
# POSIX
#
POSIX = yes
#
```

```
# BLAS
#
BLAS = -L/usr/lib -lblas
#
# LAPACK
#
LAPACK = -L/usr/lib -llapack
#
# Python
#
PYTHON = -I/usr/include/python2.5
PYTHONLIB = -L/usr/lib -lpython2.5
#
# OpenGL (yes/no)
#
OPENGL = yes
GLINC =
GLLIB = -framework GLUT -framework OpenGL
#
# MPI (yes/no)
#
MPI = yes
MPICC = mpicc
ZOLTANINC = -I/Users/tomek/Devel/lib/zoltan/include
ZOLTANLIB = -L/Users/tomek/Devel/lib/zoltan/lib -lzoltan
```

The above configuration works on Mac OS X. Examples for Linux and Cygwin can be found in *solfec/cfg*. At the current point a FORTRAN compiler is not really needed (there will be a need for it soon though due to planned work). What you need is:

- A C compiler
- BLAS and LAPACK libraries (standard on most systems)
- Python together with development files and libraries
- OpenGL libraries and developments files
- MPI libraries and development files
- Zoltan load balancing library

All of them, but Zoltan, should be already installed on your system or are quite easy to install otherwise. Zoltan on the other hand can be obtained from http://www.cs.sandia.gov/Zoltan/. In case of troubles - use the Solfec mailing list at http://groups.google.com/group/solfec.

Use "DEBUG = yes" most of the time (this is slower but outputs more information in case you would encounter a bug), but for "proper computations" compile optimized code by selecting "DEBUG = no". After you edit the Config.mak file, the first compilation should look like

```
cd solfec make all
```

This will create files solfec/solfec and solec/solfec-mpi, that is the serial and the parallel versions of the code. For every subsequent code update and compilation you will like to do the following

• Back up your *Config.mak* file. For example

```
cd solfec
cp Config.mak ..
```

• Now update the sources

```
hg pull
hg update -C
```

• Recover your Config.mak file

```
cp ../Congig.mak ./
```

• And finally compile again

```
make clean make all
```

The solfec/inp directory contains example input files. If you haven't used the "POSIX = yes" flag, you will need to create all output directories yourself. Normally though this should be done automatically. If you wish to move solfec, solfec-mpi and the input files to some other directory - you need to do it by hand. I recommend setting the PATH variable so that the solfec directory is included. This way some computations not related to development can be done "outside".

## Chapter 3

# Running Solfec

Solfec is a command line program. It can be run sequentially (command: solfec) or in parallel using the MPI runtime environment (command: solfec-mpi). Running it without parameters

```
./solfec
```

results in the hint

```
SYNOPSIS: solfec [-v] [-s sub-directory] path
```

The -v switch opens the interactive graphical viewer (cf. Figure 3.1). In this mode the user can view the geometrical mode, run or step through analysis, and view results. The right mouse click on the viewer window expands the menu. The -s switch allows to output or read the results from a sub-directory. This option is useful when one wishes to output results of similar analyses to different sub-directories of a common root directory specified when creating a SOLFEC object (cf. Section 4.1.4). For example, the bellow commands would run a parallel example and output the results into different sub-directories denoted by the number of processors involved in the analysis

```
mpirun -np 4 solfec-mpi -s 4 inp/cubes.py
mpirun -np 16 solfec-mpi -s 16 inp/cubes.py
```

Because the directory out/cubes is specified when creating the SOLFEC obeject in the inp/cubes.py input file, the above commands result in creation of two output directories: out/cubes/4 and out/cubes/16. One can then view a specific set of results by running

```
./solfec -v -s 16 inp/cubes.py
```

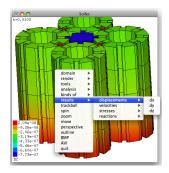


Figure 3.1: Solfec viewer window.

## Chapter 4

# Input language

Solfec input file is essentially a Python source code. Python interpreter is embedded in Solfec. At the same time Solfec extends Python by adding a number of objects and routines. There are few general principles to remember:

- Zero based indexing is observed in routine arguments.
- Parameters after the bar | are optional. For example FUNCTION (a, b/c, d) has two optional parameters c, d.
- Passing Solfec objects to some routines *empties* them. This means that a variable, that was passed as an argument, no longer stores data. For example: let x = CREATE1 () create an object x, and let y = CREATE2 (x) create an object y, using x. If CREATE2 (x) empties x, then after the call x becomes an empty placeholder. One can use it to assign value, x = CREATE1 (), but using it as an argument, z = CREATE2 (x), will cause an abnormal termination. One can create a copy of an object by calling z = COPY (x), hence using y = CREATE2 (x) leaves x intact.

Sections below document Solfec objects and routines used for their manipulation.

## 4.1 Solfec objects

#### 4.1.1 CONVEX

An object of type CONVEX is either an arbitrary convex polyhedron, or it is a collection of such polyhedrons.

#### obj = CONVEX (vertices, faces, volid | convex)

This routine creates a CONVEX object from a detailed input data.

- obj created CONVEX object
- vertices list of vertices: [x0, y0, z0, x1, y1, z1, ...]
- faces list of faces: [n1, v1, v2, ..., vn1, s1, n2, v1, v2, ..., vn2, s2, ...], where n1 is the number of vertices of the first face, v1, v2, ..., vn1 enumerate the vertices in the CCW order when looking from the outside, and s1 is the surface identifier of the face. Similarly for the second face and so on.
- volid volume identifier
- convex (emptied) collection of CONVEX objects appending obj

Some parameters can also be accessed as members and methods of a CONVEX object. These are

Read-only members and methods

obj.nver - number of convex vertices

obj.vertex (n) - returns a (x, y, z) tuple storing coordinates of nth vertex

#### obj = HULL (points, volid, surfid | convex)

This routine creates a CONVEX object as a convex hull of a point set.

- obj created CONVEX object
- **points** list of points: [x0, y0, z0, x1, y1, z1, ...]
- volid volume identifier
- surfid surface identifier common to all faces
- convex (emptied) collection of CONVEX objects appending obj

#### 4.1.2 MESH

An object of type MESH describes an arbitrary volumetric mesh, comprising tetrahedrons, pyramids, wedges, and hexahedrons (Figure 4.1).



Figure 4.1: Element types in Solfec.

#### obj = MESH (nodes, elements, surfids)

This routine creates a MESH object from a detailed input data.

- ullet obj created MESH object
- nodes list of nodes: [x0, y0, z0, x1, y1, z1, ...]
- elements list of elements: [e1, n1, n2, ..., ne1, v1, e2, n1, n2, ..., ne2, v2, ...], where e1 is the number of nodes of the first element, n1, n2, ..., ne1 enumerate the element nodes, and v1 is the volume identifier of the element. Similarly for the second element and so on.
- surfids list of surface identifiers: [gid, f1, n1, n2, ..., nf1, s1, f2, n1, n2, ..., nf2, s2, ...], where gid is the global surface identifier for all not specified faces, f1 is the number of nodes in the first specified face, n1, n2, ..., nf1 enumerate the face nodes, and s1 is the surface identifier of the face. Similarly for other specified faces. If only the gid is given, this can be done either as [gid] or as gid alone.

Some parameters can also be accessed as members and methods of a MESH object. These are

Read-only members and methods	
obj.nnod - number of mesh nodes	
obj.node (n) - returns a (x, y, z) tuple storing coordinates of nth node	

## obj = HEX (nodes, i, j, k, volid, surfids | dx, dy, dz)

This routine creates a MESH object corresponding to a hexahedral shape (hexahedral elements are used).

- obj created MESH object
- nodes list of 8 nodes: [x0, y0, z0, x1, y1, z1, ..., x7, y7, z7]. The hexahedral shape will be stretched between those nodes using a linear interpolation.
- i, j, k numbers of subdivisions along the local x, y, z directions.
- volid volume identifier
- surfids list of six surface identifiers: [s1, s2, ..., s6], corresponding to the faces of the hexahedral shape
- dx, dy, dz lists of subdivision schemes along local x, y, z directions. By default a subdivision is uniform. When dx = [1, 1, 5, 5, 1, 1] is present, then this scheme will be normalised (actual numbers do not matter, but their ratios) and applied to the local x direction of the generated shape.

## $obj = ROUGH\_HEX$ (shape, i, j, k | dx, dy, dz)

This routine creates a hexahedral MESH object corresponding to a given shape. The resultant mesh properly contains the input shape and with its orientation (which is based on the inertia properties of the shape).

- ullet obj created MESH object
- **shape** an input shape defined by a collection of CONVEX objects; a list of CONVEX objects (or their collections) [cvx1, cvx2, cvx3, ....] is as well accepted.
- i, j, k numbers of subdivisions along the local x, y, z directions of the principal inertia axes
- dx, dy, dz lists of subdivision schemes along local x, y, z directions. By default a subdivision is uniform. When dx = [1, 1, 5, 5, 1, 1] is present, then this scheme will be normalised (actual numbers do not matter, but their ratios) and applied to the local x direction of the generated shape.

#### 4.1.3 **SPHERE**

An object of type SPHERE is either a sphere, or it is a collections of spheres.

#### obj = SPHERE (center, radius, volid, surfid | sphere)

This routine creates a SPHERE object.

- obj created SPHERE object
- center tuple (x, y, z) defining the center
- radius sphere radius
- volid volume identifier

- surfid surface identifier
- sphere (emptied) collection of SPHERE objects appending obj

Some parameters can also be accessed as members of a MESH object. These are

Read-only members and methods	
obj.center, obj.radius	

#### 4.1.4 **SOLFEC**

An object of type SOLFEC represents the Solfec algorithm. One can use several SOLFEC objects to run several analyses from a single input file.

## obj = SOLFEC (analysis, step, output)

This routine creates a SOLFEC object.

- obj created SOLFEC object
- analysis 'DYNAMIC' or 'QUASI STATIC' analysis kind
- step initially assumed time step, regarded as an upper bound
- output defines the output directory path (Important note: if this directory exists and contains valid output data SOLFEC is created in 'READ' mode, otherwise SOLFEC is created in 'WRITE' mode)

Some parameters can also be accessed as members of a SOLFEC object. These are

Read-only members		
obj.analysis		
obj.time - current time		
obj.mode - either 'READ' or 'WRITE' as described above		
obj.constraints - list of constraints (cf. Section 4.1.11)		
obj.ncon - number of constraints		
obj.bodies - list of bodies (cf. Section 4.1.7)		
obj.nbod - number of bodies		

Read/write members
obj.step
obj.verbose - either 'ON' or 'OFF' enabling or disabling writing to standard output
(default: 'ON')

#### 4.1.5 SURFACE MATERIAL

An object of type SURFACE\_MATERIAL represents material properties on the interface between two surfaces. Surfaces identifiers were included in definitions of all geometric objects.

# obj = SURFACE\_MATERIAL (solfec | surf1, surf2, model, label, friction, cohesion, restitution, spring, dashpot)

This routine creates a SURFACE MATERIAL object.

• obj - created SURFACE MATERIAL object

Model name	Employs variables
'SIGNORINI_COULOMB'	friction, cohesion, restitution (cf. Section
	7.1.1)
'SPRING_DASHPOT'	spring, dashpot, friction, cohesion (cf.
	Section 7.1.2)

Table 4.1: Surface material models.

- solfec obj is created for this SOLFEC object
- surf1 first surface identifier (default: 0)
- **surf2** second surface identifier (default: 0). If **surf1** or **surf2** (or both) are not specified, a *default* surface material is being defined (one used when a specific surface pairing cannot be found for a new contact point).
- model material model name (default: 'SIGNORINI COULOMB'), see Table 4.1 and Chapter 7
- label label string (default: 'SURFACE MATERIAL i', where i is incremented for each call)
- friction friction coefficient (default: 0.0)
- cohesion cohesion per unit area (default: 0.0)
- restitution velocity restitution (default: 0.0)
- spring spring stiffness (default: 0.0)
- dashpot dashpot stiffness (default: 0.0)

Some parameters can also be accessed as members of a SURFACE MATERIAL object. These are

Read-only members		
obj.surf1, obj.surf2, obj.label		
Read/write members		
obj.model,obj.friction, obj.cohesion, obj.restitution, obj.spring, obj.dashpot		

#### 4.1.6 BULK MATERIAL

An object of type BULK MATERIAL represents material properties of a volume.

#### obj = BULK MATERIAL (solfec model, label, young, poisson, density)

This routine creates a BULK MATERIAL object.

- obj created BULK MATERIAL object
- ullet solfec obj is created for this SOLFEC object
- model material model name (default: 'KIRCHHOFF'), see Table 4.2 and Chapter 7
- label label string (default: 'BULK\_MATERIAL\_i', where i is incremented for each call)
- young Young's modulus (default: 1E6)
- poisson Poisson's coefficient (default: 0.25)

Model name	Employs variables
'KIRCHHOFF'	young, poisson, density (cf. Section 7.2.1)

Table 4.2: Bulk material models.

• density - material density (default: 1E3)

Some parameters can also be accessed as members of a BULK MATERIAL object. These are

Read-only members	
obj.model, obj.label	
Read/write members	
obj.young, obj.poisson, obj.density	

#### 4.1.7 BODY

An object of type BODY represents a solid body.

#### obj = BODY (solfec, kind, shape, material | label, formulation, mesh)

This routine creates a body.

- obj created BODY object
- solfec obj is created for this SOLFEC object
- kind a string: 'RIGID', 'PSEUDO\_RIGID', 'FINITE\_ELEMENT' or 'OBSTACLE' describing the kinematic model
- **shape** (emptied) this is can be a CONVEX/MESH/SPHERE object, or a list [obj1, obj2, ...], where each object is of type CONVEX/MESH/SPHERE. If the **kind** is 'FINITE\_ELEMENT', then two cases are possible:
  - shape is a single MESH object: the mesh describes both the shape and the discretisation of the motion of a body
  - shape is solely composed of CONVEX objects: here a separate mesh must be given to discretise motion of a body (see the mesh argument below)
- material a BULK\_MATERIAL object or a label of a bulk material (specifies an initial body-wise material, see also the MATERIAL (...) routine in Section 4.4)
- $\bullet \ \mathbf{label}$  a label string (no label is assigned by default)
- formulation valid when kind equals 'FINITE\_ELEMENT', ignored otherwise (default: 'FEM\_O1'). This argument specifies a formulation of the finite element method. See Table 4.3.
- mesh optional when kind equals 'FINITE\_ELEMENT', ignored otherwise. This variable must be a MESH object describing a finite element mesh properly containing the shape composed solely of CONVEX objects. This way the 'FINITE\_ELEMENT' model allows to handle complicated shapes with less finite elements, e.g. an arbitrary shape could be contained in just one hexahedron.

Some parameters can also be accessed as members of a BODY object. These are

Formulation	Remarks
'FEM_O1'	Use first order elements
'FEM_O2'	Use second order elements <b>TODO</b>

Table 4.3: Bulk material models.

Read-only members
obj.kind, obj.label
obj.conf - tuple $(q1, q2,, qN)$ storing configuration of the body. See Table 4.4.
obj.velo - tuple (u1, u2,, uN) storing velocity of the body. See Table 4.5.
obj.mass - referential mass of the body
obj.volume - referential volume of the body
obj.center - referential mass center of the body
obj.tensor - referential Euler (pseudo-rigid, finite element kinematics) or inertia tensor
(rigid kinematics) of the body

Read/write members
obj.selfcontact - self-contact detection flag (default: 'OFF") taking values 'ON' or
'OFF'.
obj.scheme - time integration scheme (default: 'DEFAULT') used to integrate motion.
See Table 4.6.
obj.damping - mass proportional damping coefficient (default: 0.0) for the dynamic
case.

Body kind	Configuration description
'RIGID'	Column-wise rotation matrix followed by the current
	mass center.
'PSEUDO_RIGID'	Column-wise deformation gradient followed by the
	current mass center.
'FINITE_ELEMENT'	Current coordinates x, y, z of mesh nodes.
'OBSTACLE'	Python None object.

Table 4.4: Types of configurations.

Body kind	Velocity description
'RIGID'	Referential angular velocity followed by the spatial
	velocity of mass center.
'PSEUDO_RIGID'	Deformation gradient velocity followed by the spatial
	velocity of mass center.
'FINITE_ELEMENT'	Components x, y, z of spatial velocities of mesh nodes.
'OBSTACLE'	Python None object.

Table 4.5: Types of velocities.

## 4.1.8 TIME SERIES

An object of type TIME\_SERIES is a linear spline based on a series of 2-points.

Scheme	Kinematics	Remarks
'DEFAULT'	all	Use a default time integrator regardless of underlying
		kinematics.
'RIG_POS'	rigid	NEW1 in [5]: explicit, positive energy drift, no
		momentum conservation
'RIG_NEG'	rigid	NEW2 in [5]: explicit, negative energy drift, exact
		momentum conservation; default for rigid kinematics
'RIG_IMP'	rigid	NEW3 in [5]: semi-explicit, no energy drift and exact
		momentum conservation
'DEF_EXP'	pseudo-rigid, finite	Explicit scheme described in Chapter 5 of [4]; default
	element	for deformable kinematics
'DEF_LIM'	pseudo-rigid, finite	Linearly implicit scheme similar to [2]
	element	
'DEF_IMP'	pseudo-rigid, finite	Implicit scheme similar to [7]
	element	

Table 4.6: Time integration schema.

## obj = TIME SERIES (points)

This routine creates a TIME SERIES object.

- $\bullet$   $\mathbf{obj}$  created TIME\_SERIES object
- **points** either a list [t0, v0, t1, v1, ...] of points (where ti < tj, when i < j), or a path to a file storing times and values pairs

#### 4.1.9 GAUSS SEIDEL SOLVER

An object of type GAUSS\_SEIDEL\_SOLVER represents a nonlinear block Gauss-Seidel solver, employed for the calculation of constraint reactions (cd. Section 8.1).

# obj = GAUSS\_SEIDEL\_SOLVER (epsilon, maxiter | failure, diagepsilon, diagmaxiter, diagsolver, data, callback)

This routine creates a GAUSS SEIDEL SOLVER object.

- obj created GAUSS\_SEIDEL\_SOLVER object
- epsilon relative accuracy of constraint reactions sufficient for termination
- maxiter maximal number of iterations before termination
- failure failure (lack of convergence) action (default: 'CONTINUE'). Available failure actions are: 'CONTINUE' (simulation is continued), 'EXIT' (simulation is stopped and Solfec exits), 'CALLBACK' (a callback function is called if it was set or otherwise the 'EXIT' scenario is executed). In all cases *obj.error* variable is set up, cf. Table 4.7.
- diagepsilon diagonal block solver relative accuracy of constraint reactions (default: epsilon / 100)
- diagmaxiter diagonal block solver maximal number of iterations (default: max (100, maxiter / 100))
- diagsolver diagonal block solver kind (default: 'SEMISMOOTH\_NEWTON'). Available diagonal solvers are 'SEMISMOOTH\_NEWTON', 'PROJECTED\_GRADIENT', 'DE\_SAXE\_AND\_FENG', cf. Chapter 8.

- data data passed to the failure callback function (if this is a tuple it will accordingly expand the parameter list of the callback routine)
- $\bullet$  callback failure callback function of form:  $value = callback \ (obj, \ data)$ , where for the returned value equal zero Solfec run is stopped

Some parameters can also be accessed as members of a GAUSS\_SEIDEL\_SOLVER object. These are

Read-only members
obj.failure
obj.error - current error code, cf. Table 4.7
obj.iters - number of iterations during a last run of solver
obj.rerhist - if history recording is on, this is a list of relative error values for each iteration of the last
run. Otherwise a <i>None</i> object is returned.

Read/write members
obj.epsilon, obj.maxiter, obj.diagepsilon, obj.diagmaxiter, obj.diagsolver
obj.history - 'ON' or 'OFF' flag switching history recording (default is 'OFF')
obj.reverse - 'ON' or 'OFF' flag switching iteration reversion modes (whether to alternate backward
and forward or not, default is 'OFF')
abi variant variant of parallel Causs Saidel undate (default: 'FILLL') of Table 4.8 Impored in

obj.variant - variant of parallel Gauss-Seidel update (default: 'FULL'), cf. Table 4.8. Ignored in sequential mode.

obj.innerloops - number of inner Gauss-Seidel loops per one global step during a parallel run (default: 1). Ignored in sequential mode.

'OK'	No error has occurred
'DIVERGED'	Global iteration loop divergence
'DIAGONAL_DIVERGED'	Diagonal solver iteration loop divergence
'DIAGONAL_FAILED'	Failure of a diagonal solver (e.g. singularity)

Table 4.7: Error codes of GAUSS\_SEIDEL\_SOLVER object.

'FULL'	Full Gauss-Seidel update as in sequential case. Although the
	slowest, it works in all cases. It should be noted, that all of the
	below variants will usually fail for all-rigid-body models.
'MIDDLE_JACOBI'	Jacobi update for off-processor data of W matrix blocks
	communicating with processors of higher and lower colors. Of use
	for deformable kinematics, where off-diagonal interactions are
	weaker. The Gauss-Seidel run-time should be halved for large
	numbers of processors.
'BOUNDARY_JACOBI'	Use Jacobi update for all off-processor data. This approach will
	fail in most cases. It servers as illustration.
'SIMPLIFIED'	A single sweep over contacts is done with previous values of
	off-processor data. This is followed by local Gauss-Seidel
	iterations for all non-contact constraints. This is the fastest and
	least consistent approach, of use for deformable kinematics
	dominated models.

Table 4.8: Variants of parallel Gauss-Seidel update.

## 4.1.10 EXPLICIT SOLVER

An object of type EXPLICIT\_SOLVER represents a penalty based constraint solver (cf. Section 8.2). When in use, all 'SIGNORONI\_COULOMB' type contact interfaces are regarded as 'SPRING\_DASHPOT' ones. One should then remember about specifying the *spring* value for those.

## obj = EXPLICIT SOLVER ()

ullet obj - created EXPLICIT\_SOLVER object

#### 4.1.11 CONSTRAINT

An object of type CONSTRAINT represents a constraint and some of its associated data (e.g. constraint reaction). Both user prescribed constraints and contact constraints are represented by an object of the same type.

## obj = FIX POINT (solfec, body, point)

This routine creates a fixed point constraint.

- obj created CONSTRAINT object
- solfec obj is created for this SOLFEC object
- body BODY object whose motion is constrained
- **point** (x, y, z) tuple with referential point coordinates

## obj = FIX\_DIRECTION (solfec, body, point, direction)

This routine fixes the motion of a referential point along a specified spatial direction.

- obj created CONSTRAINT object
- solfec obj is created for this SOLFEC object
- $\bullet$   $\mathbf{body}$  BODY object whose motion is constrained
- point (x, y, z) tuple with referential point coordinates
- direction (vx, vy, vz) tuple with spatial direction components

## obj = FIX SURFACE (solfec, body, surfid, direction) TODO

This routine fixes the motion of a referential surface along a specified spatial direction.

- ullet obj list of created point CONSTRAINT objects
- solfec obj is created for this SOLFEC object
- body BODY object whose motion is constrained
- surfid surface identifier
- direction (vx, vy, vz) tuple defining the direction of load, or 'NORMAL' if load is normal to the surface, or 'TANGENT1' if load acts along the first tangent direction, or 'TANGENT2' if it acts along the second tangent direction. The normal direction ('NORMAL') is outward. The first tangent direction ('TANGENT1') is the one of the steepest descent, or a global x direction if the surface is horizontal. The second tangent direction ('TANGENT2') is such that the local ('TANGENT1', 'TANGENT2', 'NORMAL') coordinate system is right-handed.

## obj = SET DISPLACEMENT (solfec, body, point, direction, tms)

This routine prescribes a displacement history of a referential point along a specified spacial direction.

- obj created CONSTRAINT object
- solfec obj is created for this SOLFEC object
- body BODY object whose motion is constrained
- **point** (x, y, z) tuple with referential point coordinates
- direction (vx, vy, vz) tuple with spatial direction components
- tms TIME\_SERIES object with the displacement history

#### obj = SET VELOCITY (solfec, body, point, direction, value)

This routine prescribes a velocity history of a referential point along a specified spacial direction.

- obj created CONSTRAINT object
- solfec obj is created for this SOLFEC object
- body BODY object whose motion is constrained
- point (x, y, z) tuple with referential point coordinates
- direction (vx, vy, vz) tuple with spatial direction components
- value a constant value or a TIME\_SERIES object with the velocity history

#### obj = SET ACCELERATION (solfec, body, point, direction, tms)

This routine prescribes an acceleration history of a referential point along a specified spacial direction.

- obj created CONSTRAINT object
- solfec obj is created for this SOLFEC object
- body BODY object whose motion is constrained
- **point** (x, y, z) tuple with referential point coordinates
- direction (vx, vy, vz) tuple with spatial direction components
- tms TIME SERIES object with the acceleration history

#### obj = PUT RIGID LINK (solfec, body1, body2, point1, point2)

This routine creates a rigid link constraints between two referential points of two distinct bodies.

- obj created CONSTRAINT object
- solfec obj is created for this SOLFEC object
- **body1** BODY object one whose motion is constrained (could be *None* when **body2** is not *None* then one of the points is fixed "in the air")
- body2 BODY object two whose motion is constrained (could be *None* when body1 is not *None*)

- point1 (x1, y1, z1) tuple with the first referential point coordinates
- point2 (x2, y2, z2) tuple with the second referential point coordinates

Some parameters can also be accessed as members of a CONSTRAINT object. These are

#### Read-only members

obj.kind - kind of constraint: 'CONTACT', 'FIXPNT' (fixed point), 'FIXDIR' (fixed direction), 'VELODIR' (prescribed velocity; note that prescribed displacement and acceleration are converted into this case), 'RIGLNK' (rigid link)

obj.R - current average constraint reaction in a form of a tuple:  $(RT1,\,RT2,\,RN)$  given with respect to a local base stored at obj.base

**obj.base** - current spatial coordinate system in a form of a tuple: (eT1x, eT2x, eNx, eT1y, eT2y, eNy, eT1z, eT2z, eNz) where x, y, z components are global

**obj.point** - current spatial point where the constraint force acts. This is a (x, y, z) tuple for all constraint types, but 'RIGLNK' for which this is a (x1, y1, z1, x2, y2, z2) tuple.

obj.adjbod - adjacent bodies. This is a tuple (body1, body2) of BODY objects for 'CONTACT' and 'RIGLNK' or a single BODY object otherwise.

*obj.matlab* - surface material label for constraints of kind 'CONTACT', or a *None* object otherwise.

## 4.2 Applying loads

Routines listed in this section apply loads.

## GRAVITY (solfec, direction, value)

This routine sets up the gravitational acceleration.

- solfec SOLFEC object for which the acceleration is set up
- direction (vx, vy, vz) tuple defining the direction
- value a number or a TIME SERIES object defining the value of the acceleration

#### FORCE (body, kind, point, direction, value data)

This routine applies a point force to a body.

- body BODY object to which the force is applied
- kind either 'SPATIAL' or 'CONVECTED'; the *spatial* direction remains fixed, while the *convected* one follows deformation
- **point** (x, y, z) tuple with the referential point where the force is applied
- direction (vx, vy, vz) tuple defining the direction of force
- value a number, a TIME\_SERIES object or a callback routine defining the value of the applied force. In case of a callback routine, the following format is assumed:

#### $force = value \ callback \ (data, \ q, \ u, \ time, \ step)$

where: **data** is the optional user data passed to **FORCE** routine (if **data** is a tuple it will expand the list of parameters to the callback), **q** is the configuration of the body passed to the callback, **u** is the velocity of the body passed to the callback, **time** is the current time passed to the callback and **step** is the current time step passed to the callback. The callback returnes a **force** tuple. For rigid body the force reads (spatial force, spatial torque, referential torque), while for other hinds of bodies this is a generalised force of the same dimension as the velocity **u** (power conjugate to it).

• data - callback routine user data

## TORQUE (body, kind, direction, value)

This routine applies a torque to a *rigid* body.

- body BODY object of kind 'RIGID' to which the torque is applied
- kind either 'SPATIAL' or 'CONVECTED'; the *spatial* direction remains fixed, while the *convected* one follows deformation
- direction (vx, vy, vz) tuple defining the direction of torque
- value a number or a TIME SERIES object defining the value of the applied torque

#### LOAD (body, kind, surfid, direction, value) TODO

This routine applies a surface load.

- body BODY object to which the load is applied
- kind either 'SPATIAL' or 'CONVECTED'; the *spatial* direction remains fixed, while the *convected* one follows deformation
- surfid the integer surface identifier
- direction (vx, vy, vz) tuple defining the direction of load, or 'NORMAL' if load is normal to the surface, or 'TANGENT1' if load acts along the first tangent direction, or 'TANGENT2' if it acts along the second tangent direction. The normal direction ('NORMAL') is outward. The first tangent direction ('TANGENT1') is the one of the steepest descent, or a global x direction if the surface is horizontal. The second tangent direction ('TANGENT2') is such that the local ('TANGENT1', 'TANGENT2', 'NORMAL') coordinate system is right-handed.
- value a number or a TIME SERIES object defining the value of the applied load

## 4.3 Running simulations

Routines listed in this section control the solution process.

#### RUN (solfec, solver, duration)

This routine runs a simulation.

- solfec SOLFEC object
- solver constraint solver object (e.g. GAUSS SEIDEL SOLVER, EXPLICIT SOLVER)
- duration duration of analysis

#### OUTPUT (solfec, interval | compression)

This routine specifies the frequency of writing to the output file.

- solfec SOLFEC object
- interval length of the time interval elapsing before consecutive output file writes
- compression output compression mode: 'OFF' (default) or 'FASTLZ'. Compressed output files are smaller, although they might not be portable between hardware platforms.

#### EXTENTS (solfec, extents)

This routine bounds the simulation space. Bodies falling outside of the extents are deleted from the simulation.

- solfec SOLFEC object
- extents (xmin, ymin, zmin, xmax, ymax, zmax) tuple

#### CALLBACK (solfec, interval, data, callback)

This routine defines a callback function, invoked during a run of Solfec every interval of time. A callback routine can interrupt the course of **RUN** command by returning 0.

- solfec SOLFEC object
- interval length of the time interval elapsing before consecutive callback calls
- data data passed to the callback function
- callback callback function of form:  $value = callback \ (data)$ , where for the returned value equal zero Solfec run is stopped

#### UNPHYSICAL PENETRATION (solfec, depth)

This routine sets a depth of an unphysical interpenetration. Once it is exceeded, the simulation is stopped and a suitable error message printed out.

- solfec SOLFEC object
- depth interpenetration depth bound (default:  $\infty$ )

#### 4.4 Utilities

Various utility routines are listed below.

## IMBALANCE TOLERANCE (solfec, tolerance | lockdir, degenratio)

This routine sets the imbalance tolerance for parallel balancing of Solfec data. A ratio of maximal to minimal per processor count of objects used. Hence, 1.0 indicates perfect balance, while any ratio > 1.0 indicates an imbalance. Initially imbalance tolerances are all set to 1.3. This routine is ignored during sequential runs.

- solfec SOLFEC object
- tolerance data imbalance tolerance (default: 1.3)

- lockdir 'TRUE' or 'FALSE' flag indicating whether to lock initial space subdivision directions (default: 'FALSE'). Locked directions can decrease the communication needs at the cost of a lower quality of the domain partitioning.
- degenratio a number bigger than 1.0 (default: 10.0). If the domain bounding box has an edge ratio smaller than 1.0 / degenratio, a lower-dimensional load balancing algorithm is invoked.

#### num = NCPU (solfec)

This routine returns the number CPUs used in the analysis.

- num the number of CPUs
- solfec SOLFEC object

#### ret = HERE (solfec, object)

This routine tests whether an object is located on the current processor. During parallel runs objects migrate between processors. When calling a function (or a member) for an object not present on the current processor, the call will usually return None or be ignored. Hence, it is convenient to check whether an object resides on the current processor.

- ret True or False
- solfec SOLFEC object
- object BODY or CONSTRAINT object

#### obj = VIEWER ()

This routine tests whether the viewer is enabled.

• obj - True or False depending on whether the viewer (-v command line option) was enabled

#### BODY CHARS (body, mass, volume, center, tensor)

This routine overwrites referential characteristics of a body.

- body BODY object
- mass body mass
- volume body volume
- center (x, y, z) mass center
- tensor  $(t_{11}, t_{21}, \dots, t_{33})$  column-wise inertia tensor for a rigid body or Euler tensor otherwise

#### INITIAL VELOCITY (body, linear, angular)

This routine applies initial (at time zero) linear and angular (in the sense of rigid motion) velocity to a body.

- body BODY object
- linear linear velocity  $(v_x, v_u, v_z)$
- angular angular velocity  $(\omega_x, \omega_y, \omega_z)$

#### MATERIAL (solfec, body, volid, material)

This routine applies material to a subset of geometric objects with the given volume identifier.

- solfec SOLFEC object
- body BODY object
- volid volume identifier
- material MATERIAL object or material label

#### DELETE (solfec, object)

This routine deletes a BODY object or a CONSTRAINT object from a SOLFEC object.

- solfec SOLFEC object
- object (emptied) BODY or CONSTRAINT object

#### obj = SCALE (shape, coefs)

This routine scales a geometrical object or a collection of such objects.

- **obj** when **shape** is not (x, y, z) tuple: same as **shape**, returned for convenience. Otherwise the  $(x \cdot coefs[0], y \cdot coefs[1], z \cdot coefs[2])$  tuple.
- **shape** object, collection of objects, or a list [a, b, c, ...] of objects of type CONVEX, MESH, SPHERE. Alternately this can be a single (x, y, z) tuple, but then one must use **point** = **SCALE** (**point**, **coefs**) in order to modify the **point** (Python tuples are immutable they cannot be modified "in place" after creation).
- coefs (cx, cy, cz) tuple of scaling factors along each axis

#### obj = TRANSLATE (shape, vector)

This routine translates a geometrical object or a collection of such objects.

- **obj** when **shape** is not (x, y, z) tuple: same as **shape**, returned for convenience. Otherwise the (x + vector[0], y + vector[1], z + vector[2]) tuple.
- **shape** object, collection of objects, or a list [a, b, c, ...] of objects of type CONVEX, MESH, SPHERE. Alternately this can be a single (x, y, z) tuple, but then one must use **point** = **TRANSLATE** (**point**, **vector**) in order to modify the **point** (Python tuples are immutable they cannot be modified "in place" after creation).
- vector (vx, vy, vz) tuple defining the translation

#### obj = ROTATE (shape, point, vector, angle)

This routine rotates a geometrical object or a collection of such objects.

• **obj** - when **shape** is not (x, y, z) tuple: same as **shape**, returned for convenience. Otherwise the rotated (x1, y1, z1) image of (x, y, z).

- shape object, collection of objects, or a list [a, b, c, ...] of objects of type CONVEX, MESH, SPHERE. Alternately this can be a single (x, y, z) tuple, but then one must use point1 = ROTATE (point1, point2, vector, angle) in order to modify point1 (Python tuples are immutable they cannot be modified "in place" after creation).
- point (px, py, pz) tuple defining a point passed by the rotation axis
- vector (vx, vy, vz) tuple defining a direction of the rotation axis
- angle rotation angle in degrees

#### (one, two) = SPLIT (shape, point, normal)

This routine splits a geometrical object (or a collection of objects) by a plane passing by a point.

- one objects placed below the splitting plane (None if no objects were placed below)
- two objects placed above the splitting plane (None if no objects were placed above)
- ullet shape (emptied) object, collection of objects, or a list  $[a,\ b,\ c,\ ...]$  of objects of type CONVEX or SPHERE
- **point** (px, py, pz) tuple defining a point passed by the splitting plane
- normal (nx, ny, nz) tuple defining the splitting plane normal

#### obj = COPY (shape)

This routine makes a copy of input objects.

- obj created collection of copied objects
- shape object, collection of objects, or a list [a, b, c, ...] of objects of type CONVEX, MESH, SPHERE

#### obj = BYLABEL (solfec, kind, label)

This routine finds a labelled object inside of a SOLFEC object.

- **obj** returned object (*None* if a labelled object was not found)
- solfec SOLFEC object
- kind labelled object: 'SURFACE MATERIAL', 'BULK MATERIAL', 'BODY'
- label the label string

## obj = MASS CENTER (shape)

This routine calculates the mass center of a geometrical object or a collection of such objects.

- ullet obj (x, y, z) tuple storing the mass center
- **shape** object, collection of objects, or a list [a, b, c, ...] of objects of type CONVEX, MESH, SPHERE. Alternately this can be a single BODY object.

## CONTACT EXCLUDE BODIES (solfec, body1, body2)

This routine disables contact detection for a specific pair of bodies. By default contact detection is enabled for all possible body pairs. **NOTE:** must be invoked on all processors during a parallel run (do not use from within a callback).

- solfec SOLFEC object
- body1 first BODY object
- body2 second BODY object

## CONTACT EXCLUDE OBJECTS (solfec, body1, point1, body2, point2)

This routine disables contact detection for a specific pair of geometric objects (e.g. elements, convices, sheres). By default, between different bodies, contact detection is enabled for all possible object pairs. **NOTE:** must be invoked on all processors during a parallel run (do not use from within a callback).

- solfec SOLFEC object
- body1 first BODY object
- point1 referential point properly contained in the 1st geometric object
- bod2 second BODY object
- point2 referential point properly contained in the 2nd geometric object

## CONTACT SPARSIFY (solfec, threshold)

This routine modifies contact filtering (sparsification) behaviour. Generally speaking, some contact points are filtered out in order to avoid unnecessary dense contact point clusters. If a pair of bodies is connected by two or more contact points, one of the points generated by topologically adjacent entities (elements, convices) will be removed (sparsified) if the ratio of contact areas of is smaller than the prescribed threshold (cf. Section 6.2).

- solfec SOLFEC object
- threshold sparsification threshold (default: 0.01) from within the interval [0, 1]. Zero corresponds to the lack of sparsification.

#### 4.5 Results access

Results can be accessed either in the 'READ' mode of a SOLFEC object, or in the 'WRITE' mode once some analysis has been run.

#### value = DURATION (solfec)

This routine returns the duration of a simulation in SOLFEC's 'READ' mode, or **solfec.time** in the 'WRITE' mode.

- value (t0, t1) duration limits of the simulation in 'READ' mode or current time in 'WRITE' mode
- solfec SOLFEC object

## FORWARD (solfec, steps)

This routine steps forward within the simulation output file. Ignored in SOLFEC's 'WRITE' mode.

- $\bullet \ \mathbf{solfec}$  SOLFEC object
- steps numbers of steps forward

## BACKWARD (solfec, steps)

This routine steps backward within the simulation output file. Ignored in SOLFEC's 'WRITE' mode.

- solfec SOLFEC object
- $\bullet$  steps number of steps backward

#### SEEK (solfec, time)

This routine to a specific time within the simulation output file. Ignored in SOLFEC's 'WRITE' mode.

- solfec SOLFEC object
- time time to start reading at

#### disp = DISPLACEMENT (body, point)

This routine outputs the displacement of a referential point.

- $\operatorname{\mathbf{disp}}$  (dx, dy, dz) tuple storing the displacement
- body BODY object
- point (x, y, z) tuple storing the referential point

#### velo = VELOCITY (body, point)

This routine outputs the velocity of a referential point.

- velo (vx, vy, vz) tuple storing the velocity
- body BODY object
- point (x, y, z) tuple storing the referential point

#### stre = STRESS (body, point)

This routine outputs the Cauchy stress of a referential point.

- stre (sx, sy, sz, sxy, sxz, syz, mises) tuple storing the Cauchy stress and the von Mises norm of it
- $\bullet \ \mathbf{body} \ \text{-} \ \mathrm{BODY} \ \mathrm{object}$
- point (x, y, z) tuple storing the referential point

### ene = ENERGY (solfec | object)

The routine outputs the value of energy of a specific object.

- ene (kinetic, internal, external, contact, friction) tuple of energy values; internal energy corresponds to the work of internal forces, external energy corresponds to the work of external forces (including constraint reactions), contact energy corresponds to the work of normal contact reactions, friction energy corresponds to the work of tangential contact reactions
- solfec SOLFEC object
- object SOLFEC object, BODY object or a list of BODY objects

#### tim = TIMING (solfec, kind)

The routine outputs the value of a specific action timing per time step.

- tim value of timing
- solfec SOLFEC object
- kind this is one of: 'TIMINT' (time integration), 'CONUPD' (constraints update), 'CONDET' (contact detection), 'LOCDYN' (local dynamics setup), 'CONSOL' (constraints solution), 'PARBAL' (parallel load balancing). The load balancing timing is non-zero only for parallel runs.

#### hist = HISTORY (solfec, list, t0, t1 | skip)

This routine outputs time histories of entities.

- hist a tuple of list objects storing the histories: (times, values1, values2, ..., valuesN)
- solfec SOLFEC object
- list list of objects /object1, object2, ..., objectN/ indicating requested values. The valid objects are:
  - a tuple (body, point, entity) where body is a BODY object, point is a (x, y, z) tuple storing the referential point, and entity is one of: 'DX', 'DY', 'DZ' (displacement), 'VX', 'VY', 'VZ' (velocity), 'SX', 'SY', 'SZ', 'SXY', 'SXZ', 'SYZ' (stress), 'MISES' (von Mises norm of stress)
  - a tuple (object, kind) where object is a SOLFEC object, a BODY object or a list of BODY objects, and kind is a string 'KINETIC', 'INTERNAL', 'EXTERNAL', 'CONTACT', 'FRICTION' and it corresponds to the energy kind
  - a string 'TIMINT', 'CONUPD', 'CONDET', 'LOCDYN', 'CONSOL', 'PARBAL' for timing histories
  - a string 'STEP' for time step history
  - a string 'CONS', 'BODS' for constraint and body number histories
  - a string 'DELBODS', 'NEWBODS' for deleted and inserted (after time 0) body number histories (nonzero only for uncompressed outputs)
  - a string 'GSITERS' (Gauss-Seidel iterations count), 'GSCOLORS' (Gauss-Seidel processor colors count), 'GSBOT', 'GSMID', 'GSTOP', 'GSINN' (Gauss-Seidel bottom, middle, top and inner set sizes), 'GSINIT' (Gauss-Seidel setup time), 'GSRUN' (Gauss-Seidel computations time), 'GSCOM' (Gauss-Seidel communication time, except the middle set), 'GSMCOM' (Gauss-Seidel middle set communication time); values other than 'GSITERS' are non-zero only for parallel runs
- $\bullet$  **t0** time interval start
- $\bullet$  **t1** time interval end
- skip number of steps to skip between two time instants

## Chapter 5

# **Tutorials**

## 5.1 Three basic geometric objects

This example illustrates the three basic geometric objects: CONVEX, MESH and SPHERE. We are going to construct a simple structure and hit it with a ball. Let us first create a horizontal floor.

We simply created a convex hull about eight points. This is only a geometric object for the moment. It exists only in Python interpreter, but not yet inside of a Solfec model. In order to insert it into a model, we need first to create a SOLFEC object, a BULK\_MATERIAL object, and finally a BODY object having the shape described by the *floor*. Here we go.

Note, that the floor is simply an obstacle - it does not move. Before creating the floor body we had to create a SOLFEC object. This object gather all necessary data for an individual simulation. In our case this will be a dynamic simulation, pursued with the time step at least as small as the specified one. The time step can be automatically decreased during a simulation due to stability requirements. The result files of this tutorial will

be written to the specified path - relative to from there the 'solfec' command was involved. Once a body has been inserted into a model, we can view the effect as follows

```
> ./solfec -v inp/tutorial/three-basic-geometric-objects.py
```

This will create a Solfec viewer, which should result in the following picture

t=0



Le us now construct a stack made of two bodies. The first one comprises four juxtaposed convex objects.

```
a = 2
b = 2
c = 2
brick\_vid = 2
brick\_sid = 2
brick = CONVEX ([0, 0, 0,
                 a/2, 0, 0,
                 a/2, b/2, 0,
                 0, b/2, 0,
                 0, 0, c/2,
                 a/2, 0, c/2,
                 a/2, b/2, c/2,
                 0, b/2, c/2],
                 [4, 0, 3, 2, 1, brick_sid,
                 4, 1, 2, 6, 5, brick_sid,
                 4, 2, 3, 7, 6, brick_sid,
                 4, 3, 0, 4, 7, brick_sid,
                 4, 0, 1, 5, 4, brick_sid,
                 4, 4, 5, 6, 7, brick_sid], brick_vid)
b1 = COPY (brick)
b2 = TRANSLATE (COPY (brick), (a, 0, 0))
b3 = TRANSLATE (COPY (brick), (0, b, 0))
```

```
b4 = TRANSLATE (COPY (brick), (a, b, 0))
shape = [b1, b2, b3, b4]
TRANSLATE (shape, (-a, -b, 0))
BODY (solfec, 'RIGID', shape, bulk)
```


Note, that a base brick was created first. Then this brick was copied and manipulated into four different objects: b1,b2, ..., b4. The list of those objects was passed as a shape when creating the first rigid body. The second body will be pseudo-rigid and will have its shape defined by a mesh.

The hexahedral mesh is spanned on eight nodes and has an inclined shape due to z level slope. Note, that we have specified the "dy" argument of the HEX command, so to illustrate non-uniform meshing along one of the directions. The mesh is translated to rest on top of the previous body. Then a pseudo-rigid body is created. Now, let us create the sphere.

```
sphere = SPHERE ((0, 0, 5), 1, 1, 1)
body = BODY (solfec, 'RIGID', sphere, bulk)
INITIAL_VELOCITY (body, (0, 0, -10), (0, 0, 0))
```

When creating the rigid body corresponding to the sphere, we have now retrieved the *body* object. It is needed in order to prescribe the initial velocity. The sphere has the initial linear velocity  $v_z = -10$  m/s. Let us have a look at the model so far.



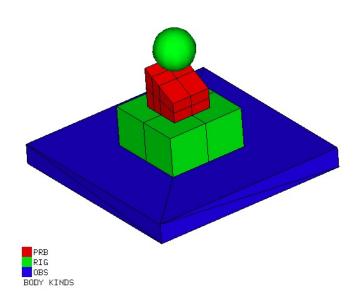

Now, in order to be able to control contact behaviour, we need to define a surface material. This will be a default material, hence we shall not specify a surface pairing (int this example surface identifiers are not used). Whenever a contact is detected, the following Signorini-Coulomb model is employed

It will be also of use to apply some gravity loading.

```
GRAVITY (solfec, (0, 0, -1), 10)
```

Before running the actual simulation, it remains to create a solver object. We use the Gauss-Seidel solver here.

```
gs = GAUSS_SEIDEL_SOLVER (1E-3, 1000)
```

The relative constraint reaction accuracy was set to 1E-3, while the maximal the maximal number of iterations is 1000. It remains to run the simulation.

```
RUN (solfec, gs, 1.0)
```

And then actually run solfec from the command line

```
./solfec inp/tutorial/three-basic-geometric-objects.py
```

One second of the simulation was computed. Let us have a look at the displacement along z at the end of this time



## 5.2 Ball impact

This example illustrates using multiple SOLFEC objects, application of the EXPLICIT\_SOLVER, and using HISTORY to retrieve and then plot time histories. First we define a Python function that will create a model of ball impacting a plate for a specific set of parameters.

```
def ball_impact (step, stop, spring_value, dashpot_value, output):
  w = 2
 1 = 2
 h = 1
  floor_vid = 1
  floor_sid = 1
  floor = HULL ([-w/2, -1/2, -h],
                  w/2, -1/2, -h,
                  w/2, 1/2, -h,
                 -w/2, 1/2, -h,
                 -w/2, -1/2, 0,
                  w/2, -1/2, 0,
                  w/2, 1/2, 0,
                 -w/2, 1/2, 0], floor_vid, floor_sid)
  solfec = SOLFEC ('DYNAMIC', step, output)
  bulk = BULK_MATERIAL (solfec, model = 'KIRCHHOFF',
                        young = 15E9, poisson = 0.3, density = 2E3)
  BODY (solfec, 'OBSTACLE', floor, bulk)
  sphere = SPHERE ((0, 0, 1.0), 1, 1, 1)
  body = BODY (solfec, 'RIGID', sphere, bulk)
  INITIAL_VELOCITY (body, (0, 0, -5), (0, 0, 0))
  SURFACE_MATERIAL (solfec, model = 'SPRING_DASHPOT', friction = 0.0,
                    spring = spring_value, dashpot = dashpot_value)
  GRAVITY (solfec, (0, 0, -1), 10)
  xs = EXPLICIT_SOLVER ()
  RUN (solfec, xs, stop)
  return solfec
```


The above code is similar to the previous example. Here though the complete model is created inside of a Python function called <code>ball\_impact</code>. By itself this will not run any simulation - this function needs to be called from the main module of the input file (we remind that Python uses indentation to decide upon code blocking - in our case no indentation indicates the main module). Above the 'SPRING\_DASHPOT' material model is used for the contact interface. The parameters of the spring and damper are passed as arguments of the <code>ball\_impact</code> function. It should be noted, that the SOLFEC object is returned from the routine. Now, here is the main module

```
step = 1E-3
stop = 2.0
spring = 1E+9
sol1 = ball_impact (step, stop, spring, 0E0, 'out/tutorial/ball-impact-1')
sol2 = ball_impact (step, stop, spring, 1E6, 'out/tutorial/ball-impact-2')
sol3 = ball_impact (step, stop, spring, 1E7, 'out/tutorial/ball-impact-3')
```

We simply run three different simulations for three values of the dashpot parameter. We can now view the three models by typing

#### ./solfec -v ./inp/tutorial/ball-impact.py

The viewer allows change the current model by using '<' and '>' keyboard shortcuts, or using the right-mouse click for the drop-down menu and then selecting *menu: domain: previous* or *menu: domain: next*. In this example the three models do not visibly differ.

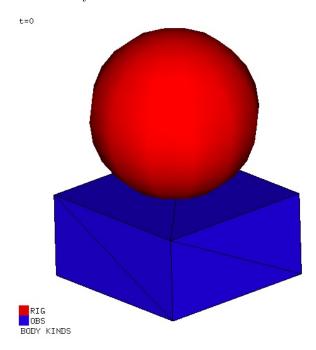

We could now run each model in the viewer mode (menu: analysis: run), but it will be more useful to plot kinetic energy and compare it for all the three values of the dashpot parameter. The code below does the job

```
if not VIEWER() and sol1.mode == 'READ':
   import matplotlib.pyplot as plt
   th = HISTORY (sol1, (sol1, 'KINETIC'), 0, stop)
   plt.plot (th [0], th [1], lw = 2, label='kin (0)')
   th = HISTORY (sol2, (sol2, 'KINETIC'), 0, stop)
   plt.plot (th [0], th [1], lw = 2, label='kin (1E6)')
   th = HISTORY (sol3, (sol3, 'KINETIC'), 0, stop)
   plt.plot (th [0], th [1], lw = 2, label='kin (1E7)')
   plt.axis (xmin = 0, xmax = 2, ymin=-10000, ymax=110000)
   plt.legend(loc = 'upper right')
   plt.savefig ('doc/figures/ball-impact.eps')
```

First, we check whether Solfec is not run with the -v option and whether it is in 'READ' mode. This is the case, when after running the complete analysis


```
./solfec ./inp/tutorial/ball-impact.py
```

we again run

```
./solfec ./inp/tutorial/ball-impact.py
```

Now, Solfec will find out that the output files in out/tutorial/ball-impact-(1,2,3) are present. It will open in 'READ' mode. In order to create the plot we are going to use the matplotlib Python package - please refer to

http://matplotlib.sourceforge.net/index.html in order to learn how to install it. We next use the HISTORY command in order to retrieve the time histories of the kinetic energy for all three created SOLFEC objects. The result in plotted into an EPS file, visible below.

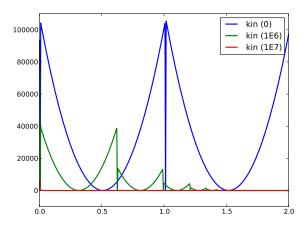

We can see that the dashpot=0 results in a fully elastic impact (energy conserving behaviour), dahspot=1E6 introduces some fractional energy restitution after impacts, while dashpot=1E7 results in a nearly plastic impact.

## Chapter 6

# Contact points

#### 6.1 Contacts from overlaps

Body shapes are juxtapositions of convex objects (Sections 4.1.1, 4.1.2, 4.1.3). A contact point and normal direction result from an overlap of two convex objects (Figure 6.1). This is motivated by two factors. Firstly, the point and the normal direction derived from an overlap are well defined for nonsmooth geometry. Secondly, we wish to use as few contact points as possible, but still be able to control the accuracy of contact resolution by mesh refinement. A non-positive gap function is suitably derived from such overlap. We refer the reader to Chapter 9 of [4] for more details.



Figure 6.1: A contact point and normal direction extracted from an intersection of two convex objects.

### 6.2 Contact sparsification

Let us have a look at an arch in Figure 6.2. The detail of two bricks shows narrow meshing near the inner and outer boundaries. This will allow to better reproduce the hinging mechanism of arch collapse. A single brick is composed of six elements: the two large middle elements and the four narrow inner and outer elements. If we now apply contact detection algorithm, all possible volumetric overlaps will be detected. Because identically meshed bodies are perfectly adjacent to each other we shall end up with a clutter of contact points, generated by all of the adjacent element volumes. This is visible on the left in Figure 6.3. If one would have to generate contact points by hand, they would probably look like those on the right in Figure 6.3. A heuristic sparsification algorithm filters out redundant contact points (cf. Algorithm 6.1).

#### Algorithm 6.1 Contact sparsification algorithm.

```
SPARSIFY ()
for each contact1 do
for each body adjacent to contact1 do
for each contact2 adjacent to body do
if contact1 = contact2 skip
if area\left(contact1\right) < threshold \cdot area\left(contact2\right) and
topologically\_adjacent\left(contact1, contact2\right) then remove contact1
else if point\left(contact1\right) = point\left(contact2\right) then remove contact1
```

We walk over all contact points and compare each of them with other contacts adjacent through common bodies. If the area of a contact is a smaller than an area of a topologically adjacent neighbouring contact, then we remove it. The same happens if the two contact points coincide. Topological adjacency of contact points indicates that they have been created between the mesh elements that are topologically adjacent. We know then, that next to a contact point with a small supporting area there is another one with a suitably larger contact area. The Solfec command CONTACT\_SPARSIFY sets the *threshold* value (cf. Section 4.4).



Figure 6.2: An arch and a detail of two bricks. Note the narrow meshing near the edge of inner and outer boundaries.



Figure 6.3: A detail of the arch from Figure 6.2. Contact points on the left are not sparsified. Contact points on the right are sparsified.

### Chapter 7

### **Materials**

#### 7.1 Surface materials

A surface material is assigned to a pairing of surfaces. See Section 4.1.5 for the input syntax.

#### 7.1.1 Signorini-Coulomb

The velocity Signorini condition reads

$$\bar{U}_N \ge 0 \ R_N \ge 0 \ \bar{U}_N R_N = 0$$
 (7.1)

where  $\bar{U}_N = U_N^{t+h} + \eta \min{(0, U_N^t)}$ ,  $\eta$  is the velocity restitution coefficient,  $U_N$  is the the normal relative velocity, and  $R_N$  is the normal reaction. The normal direction is consistent with the positive gap velocity so that (7.1) states, that any violation of the non-penetration results in a reactive force or velocity driving at the penetration-free configuration. Using  $\bar{U}_N$  allows to account for the Newton impact law. Only restitution = 0 or 1 is energy consistent TODO (cf. Section 10.5 of [4]). The Coulomb's friction law reads

$$\begin{cases}
\|\mathbf{R}_T\| \le \mu R_N \\
\|\mathbf{R}_T\| < \mu R_N \Rightarrow \mathbf{U}_T = \mathbf{0} \\
\|\mathbf{R}_T\| = \mu R_N \Rightarrow \exists_{\lambda \ge 0} \mathbf{U}_T = -\lambda \mathbf{R}_T
\end{cases}$$
(7.2)

A friction force smaller than  $\mu R_N$  implies sticking, while sliding occurs with the force of value  $\mu R_N$  and direction opposite to the slip velocity. The two laws can expressed in a compact from  $\mathbf{C}(\mathbf{U}, \mathbf{R}) = \mathbf{0}$ . An examples is

$$\mathbf{C}(\mathbf{U}, \mathbf{R}) = \begin{bmatrix} \max(\mu d_N, \|\mathbf{d}_T\|) \mathbf{R}_T - \mu \max(0, d_N) \mathbf{d}_T \\ R_N - \max(0, d_N) \end{bmatrix}$$
(7.3)

where  $\rho > 0$  and

$$d_N = R_N - \rho \bar{U}_N \tag{7.4}$$

$$\mathbf{d}_T = \mathbf{R}_T - \rho \mathbf{U}_T \tag{7.5}$$

We refer the reader to Chapter 10 of [4] for more details.

#### 7.1.2 Spring-dashpot

Let

$$s = spring \text{ and } d = dashpot \text{ and } g = gap$$
 (7.6)

The normal reaction is computed as follows

$$R_N = -s \cdot \frac{g^{t+h} + g^t}{2} - d \cdot \frac{U_N^{t+h} + U_N^t}{2}$$
 (7.7)

where  $U_N$  is the normal relative velocity. Recall, that the gap function is computed for the configuration  $\mathbf{q}^t + \frac{h}{2}\mathbf{u}^t$ , so that the gap function value computed during geometrical contact detection reads

$$g = g^t + \frac{h}{2}U_N^t \tag{7.8}$$

We then have

$$g^{t+h} = g^t + \frac{h}{2} \left( U_N^{t+h} + U_N^t \right) = g + \frac{h}{2} U_N^{t+h}$$
 (7.9)

and since  $g^t = g - \frac{h}{2}U_N^t$  we can estimate

$$R_N = -s \cdot \left( g + \frac{h}{4} \left( U_N^{t+h} - U_N^t \right) \right) - \frac{d}{2} \cdot \left( U_N^{t+h} + U_N^t \right)$$
 (7.10)

We then use the diagonal block of local dynamics

$$\mathbf{U}^{t+h} = \mathbf{B} + \mathbf{WR} \tag{7.11}$$

in order to estimate  $U_N^{t+h}$  as follows

$$U_N^{t+h} = B_N + \mathbf{W}_{NT} \mathbf{R}_T + W_{NN} R_N \tag{7.12}$$

where a previous tangential reaction  $\mathbf{R}_T$  is employed. Inserting this it into (7.10) results in

$$\bar{B}_N = B_N + \mathbf{W}_{NT} \mathbf{R}_T \tag{7.13}$$

$$R_N = \left[ -s \cdot \left( g + \frac{h}{4} \left( \bar{B}_N - U_N^t \right) \right) - \frac{d}{2} \cdot \left( \bar{B}_N + U_N^t \right) \right] / \left[ 1 + \left( s \cdot \frac{h}{4} + \frac{d}{2} \right) \cdot W_{NN} \right]$$
 (7.14)

The reason for using the above, rather than the classical  $R_N = -s \cdot g - d \cdot U_N^t$  is in an increased stability of the current approach. Assuming  $\mathbf{U}_T^{t+h} = 0$  we then estimate the tangential stick reaction

$$\mathbf{R}_T = -\mathbf{W}_{TT}^{-1} \left( \mathbf{B}_T + \mathbf{W}_{TN} R_N \right) \tag{7.15}$$

The complete interface law is expressed in Algorithm 7.1 ( $\mu$  refers there to the coefficient of friction). We refer the reader to Chapter 7 of [4] for more details on local dynamics.

#### **Algorithm 7.1** Spring-dashpot reaction calculation.

SPRING\_DASHPOT  $(h, g, s, d, \mu, cohesion, cohesive)$ 

$$\bar{B}_N = B_N + \mathbf{W}_{NT} \mathbf{R}_T$$

$$R_N = \left[ -s \cdot \left( g + \frac{h}{4} \left( \bar{B}_N - U_N^t \right) \right) - \frac{d}{2} \cdot \left( \bar{B}_N + U_N^t \right) \right] / \left[ 1 + \left( s \cdot \frac{h}{4} + \frac{d}{2} \right) \cdot W_{NN} \right]$$
 if not  $cohesive$  and  $R_N < 0$  then  $\mathbf{R} = 0$  return

$$\mathbf{R}_T = -\mathbf{W}_{TT}^{-1} \left( \mathbf{B}_T + \mathbf{W}_{TN} R_N \right)$$

if cohesive and  $R_N < -cohesion$  then cohesive = false and  $R_N = -cohesion$ 

$$ext{if} \|\mathbf{R}_T\| > \mu \, |R_N| ext{ then}$$

$$\mathbf{R}_T = \mu R_N \mathbf{R}_T / \|\mathbf{R}_T\|$$

if cohesive then cohesive = false

#### 7.2 Bulk materials

A bulk material is assigned to a volume. See Section 4.1.6 for the input syntax.

#### 7.2.1 Kirchhoff - Saint Venant

This is a simple extension of the linearly elastic material to the large deformation regime. Suitable for large rotation, small strain problems. The strain energy function  $\Psi$  of the Kirchhoff - Saint Venant materials reads

$$\Psi = \frac{1}{4} \left[ \mathbf{F}^T \mathbf{F} - \mathbf{I} \right] : \mathbf{C} : \left[ \mathbf{F}^T \mathbf{F} - \mathbf{I} \right]$$
 (7.16)

where

$$C_{ijkl} = \lambda \delta_{ij} \delta_{kl} + \mu \left[ \delta_{ik} \delta_{jl} + \delta_{il} \delta_{jk} \right]$$
(7.17)

In the above  $\lambda$  and  $\mu$  are Lamé constants, while  $\delta_{ij}$  is the Kronecker delta. The Lamé constants can be expressed in terms of the Young modulus E and the Poisson ratio  $\nu$  as

$$\lambda = \frac{E\nu}{(1+\nu)(1-2\nu)}\tag{7.18}$$

$$\mu = \frac{E}{2 + 2\nu} \tag{7.19}$$

The first Piola stress tensor is computed as a gradient of the hyperelastic potential  $\Psi$ 

$$\mathbf{P} = \partial_{\mathbf{F}} \Psi \left( \mathbf{F} \right) \tag{7.20}$$

where  $\mathbf{F}$  is the deformation gradient.

### Chapter 8

## Solvers

Development of solvers for unilateral dynamics is one of the main driving forces behind Solfec. The two solvers described in Sections 8.1 and 8.2 are the classical Gauss-Seidel approach of Contact Dynamics and a somewhat modified penalty solver of the Discrete Element Method.

#### 8.1 Gauss-Seidel solver

The equations of local dynamics (1.14) read

$$\mathbf{U}_{\alpha} = \mathbf{B}_{\alpha} + \sum_{\beta} \mathbf{W}_{\alpha\beta} \mathbf{R}_{\beta} \tag{8.1}$$

where  $\mathbf{U}_{\alpha}$  are relative velocities and  $\mathbf{R}_{\alpha}$  are reactions at constraint points.  $\mathbf{U}_{\alpha}, \mathbf{R}_{\alpha}, \mathbf{B}_{\alpha}$  are 3-vectors, while  $\mathbf{W}_{\alpha\beta}$  are  $3 \times 3$  matrix blocks. Each constraint equation can be formulated as

$$\mathbf{C}_{\alpha}\left(\mathbf{U}_{\alpha}, \mathbf{R}_{\alpha}\right) = \mathbf{0} \tag{8.2}$$

or in other words

$$\mathbf{C}_{\alpha} \left( \mathbf{B}_{\alpha} + \sum_{\beta} \mathbf{W}_{\alpha\beta} \mathbf{R}_{\beta}, \mathbf{R}_{\alpha} \right) = \mathbf{0}$$
(8.3)

Algorithm 8.1 is quite simple: diagonal block problems are solved until reaction change is small enough. The Gauss-Seidel paradigm corresponds to the fact, that the most recent off-diagonal reactions are used when solving the diagonal problem. Of course, because of that, a perfectly parallel implementation is not possible. After all, reactions are updated in a sequence. We can nevertheless relax the need for sequential processing. Perhaps the most scalable Gauss-Seidel approach to date was devised by Adams [1]. Although originally it was

#### Algorithm 8.1 Serial Gauss-Seidel algorithm

```
SERIAL_GAUSS_SEIDEL (Constraints, \epsilon)
1 do
2 for each \alpha in Constraints do
3 \mathbf{S}_{\alpha} = \mathbf{R}_{\alpha}
4 find \mathbf{R}_{\alpha} such that \mathbf{C}_{\alpha} \left( \mathbf{B}_{\alpha} + \sum_{\beta} \mathbf{W}_{\alpha\beta} \mathbf{R}_{\beta}, \mathbf{R}_{\alpha} \right) = \mathbf{0}
5 assuming \mathbf{R}_{\beta} = \mathrm{constant} for \beta \neq \alpha
6 while \|\mathbf{S} - \mathbf{R}\| / \|\mathbf{R}\| > \epsilon
```

#### **Algorithm 8.2** Simple processor coloring.

```
COLOR ()  \begin{array}{lll} \text{1} & \text{for } i=1,...,n \text{ do } color\left[i\right]=0 \\ \text{2} & \text{for } i=1,...,n \text{ do} \\ \text{3} & \text{do} \\ \text{4} & & color\left[i\right]=color\left[i\right]+1 \\ \text{5} & \text{while for any } j\in adj\left(i\right) \text{ there holds } color\left[i\right]=color\left[j\right] \\ \end{array}
```

used as a multi-grid smoother, the core idea can be as well applied in our context. Each processor owes a subset of (internal) constraints  $Q_i$ , where i = 1, 2, ..., n are the processors indices. Therefore the local velocity update can be rewritten as

$$\mathbf{U}_{\alpha} = \mathbf{B}_{\alpha} + \sum_{\beta \in Q_i} \mathbf{W}_{\alpha\beta} \mathbf{R}_{\beta} + \sum_{\beta \notin Q_i} \mathbf{W}_{\alpha\beta} \mathbf{R}_{\beta}$$
(8.4)

Some of the  $\mathbf{W}_{\alpha\beta}$  blocks and reactions  $\mathbf{R}_{\beta}$  correspond to the (external) constraints stored on other processors  $(\beta \notin Q_i)$ . Let us denote the set of corresponding reaction indices by  $P_i$ . That is

$$P_i = \{\beta : \exists \mathbf{W}_{\alpha\beta} \neq \mathbf{0} \text{ and } \alpha \in Q_i \text{ and } \beta \notin Q_i\}$$
 (8.5)

For each  $\beta \in P_i$  we know an index of processor  $cpu(\beta)$  storing the constraint with index  $\beta$ . For processor i we can then define a set of adjacent processors as follows

$$adj(i) = \{cpu(\beta) : \beta \in P_i\}$$
(8.6)

When updating reactions, a processor needs to communicate only with other adjacent processors. We are going to optimise a pattern of this communication by *coloring* the processors. We shall then assign to each processor a color, such that no two adjacent processors have the same color. A simple coloring method is summarised in Algorithm 8.2. We try to assign as few colors as possible. We then split the index sets  $Q_i$  as follows

$$Top_{i} = \{\alpha : \forall \mathbf{W}_{\alpha\beta} : \beta \in P_{i} \land color [cpu (\beta)] < color [i]\}$$

$$(8.7)$$

$$Bottom_{i} = \{\alpha : \forall \mathbf{W}_{\alpha\beta} : \beta \in P_{i} \land color [cpu (\beta)] > color [i] \}$$

$$(8.8)$$

$$Middle_i = \{\alpha : \forall \mathbf{W}_{\alpha\beta} : \beta \in P_i \land \alpha \notin Top_i \cup Bottom_i\}$$
 (8.9)

$$Inner_i = Q_i \setminus \{Top_i \cup Bottom_i \cup Middle_i\}$$
(8.10)

The top constraints require communication only with processors of lower colors. The bottom constraints require communication only with processors of higher colors. The middle constraints require communication with either. The inner constraints require no communication. The inner reactions are further split in two sets

$$Inner_i = Inner1_i \cup Inner2_i \tag{8.11}$$

so that

$$|Bottom_i| + |Inner2_i| = |Top_i| + |Inner1_i|$$
(8.12)

The parallel Gauss-Seidel scheme is summarised in Algorithm 8.3. The presented version is simplified in the respect, that alternate forward and backward runs are not accounted for (in terms of constraints ordering). We first process the  $Top_i$  set: a single sweep over the corresponding diagonal block problems is performed

#### Algorithm 8.3 Parallel Gauss-Seidel algorithm.

```
SWEEP (Set)
     for each \alpha \in Set do
2
           \mathbf{S}_{\alpha} = \mathbf{R}_{\alpha}
          find \mathbf{R}_{\alpha} such that \mathbf{C}_{\alpha}\left(\mathbf{B}_{\alpha}+\sum_{\beta}\mathbf{W}_{\alpha\beta}\mathbf{R}_{\beta},\mathbf{R}_{\alpha}\right)=\mathbf{0} assuming \mathbf{R}_{\beta}=\mathrm{constant} for \beta\neq\alpha
3
4
LOOP (Set)
      descending sort of \alpha \in Set based on \max\left(color\left[cpu\left(\beta\right)\right]\right) where \exists \mathbf{W}_{\alpha\beta}
      for each ordered \alpha in Set do
           for each \beta such that \exists \mathbf{W}_{\alpha\beta} and color\left[cpu\left(\alpha\right)\right] < color\left[cpu\left(\beta\right)\right] do
               if not received (\mathbf{R}_{eta}) then receive (\mathbf{R}_{eta})
4
          find \mathbf{R}_{\alpha} such that \mathbf{C}_{\alpha}\left(\mathbf{B}_{\alpha}+\sum_{\beta}\mathbf{W}_{\alpha\beta}\mathbf{R}_{\beta},\mathbf{R}_{\alpha}\right)=\mathbf{0} assuming \mathbf{R}_{\beta}=\mathrm{constant} for \beta\neq\alpha
5
6
7
           send (\mathbf{R}_{\alpha})
      receive all remaining \mathbf{R}_{eta}
PARALLEL_GAUSS_SEIDEL (\epsilon)
        COLOR ()
2
        do
3
             SWEEP (Top_i)
             {\tt send}\ (Top_i)
4
5
             SWEEP (Inner2_i)
             receive (Top_i)
6
             LOOP (Middle_i)
7
             SWEEP (Bottom_i)
8
             send (Bottom_i)
9
             SWEEP (Inner1_i)
10
             receive (Bottom_i)
12 while \|\mathbf{S} - \mathbf{R}\| / \|\mathbf{R}\| > \epsilon
```

in line 3. Then we send the computed top reactions to the processors with lower colors. We try to overlap communication and computation, hence we sweep over the  $Inner2_i$  set (line 5) while sending. We then receive the top reactions. It should be noted that all communication is asynchronous - we only wait to receive reactions immediately necessary for computations. In line 7 we enter the loop processing the  $Middle_i$  set. This is the location of the computational bottleneck. Middle nodes communicate with processors of higher and lower colors and hence, they need to be processed in a sequence. The sequential processing is still relaxed by using processor coloring. In the LOOP algorithm we first sort the constraints according to the descending order of maximal colors of their adjacent processors (line 1). We then maintain this ordering while processing constraints. As the top reactions were already sent, some of the constraints from the middle set will have their external reactions from higher colors fully updated. These will be processed first in line 5 of LOOP and then sent to lower and higher (by color) processors in line 7. This way some processors with lower colors will have their higher color off-diagonal reactions of middle set constraints fully updated and they will proceed next. And so on. At the end (line 8), we need to receive all remaining reactions that have been sent in line 7 of LOOP. Coming back to PARALLEL\_GAUSS\_SEIDEL, after the bottleneck of the LOOP, in lines 8-11 we process the  $Bottom_i$  and  $Inner1_i$  sets in the same way as we did with the  $Top_i$  and  $Inner2_i$  sets. The condition (8.12) attempts to balance the amount of computations needed to hide the communication (e.g. the larger the  $Top_i$  set is, the larger the  $Inner2_i$  set becomes). It should be noted that the convergence criterion in line 12 is global across all processors.

In Section 4.1.9 several variants of the parallel algorithm are listed. Algorithm 8.3 corresponds to the FULL variant. We might like to relax the bottleneck of LOOP in line 7 of Algorithm 8.3 by replacing it with

```
7.1 SWEEP (Middle_i)
7.2 send (Middle_i)
7.3 receive (Middle_i)
```

so that the middle nodes are processed in an inconsistent manner: the off-processor information corresponds to the previous iteration (just like in the Jacobi method). Usually the  $Middle_i$  sets are small and hence this inconsistency does not have to lead to divergence (especially for deformable kinematics, where constraint interactions are weak, while  $\mathbf{W}$  is diagonally dominant). This is the MIDDLE\_JACOBI variant of the algorithm. The last variant corresponds to a rather gross inconsistency: something usually called "a processor Gauss-Seidel method". Let us define the set

$$All_i = Top_i \cup Bottom_i \cup Middle_i \cup Inner_i$$

$$\tag{8.13}$$

In this case, lines 3-11 of PARALLEL GAUSS SEIDEL from Algorithm 8.3 need to be replaced with

```
3 SWEEP (All_i)
4 send (All_i)
5 receive (All_i)
```

Although this kind of approach does work as a multi-grid smoother, it has little use in our context. Nevertheless, we use for illustration sake and name the BOUNDARY\_JACOBI. The final and crudest variant of the solver is called SIMPLIFIED. This variant is devised with soft deformable models in mind. We split constraints into  $Contacts_i$  and  $Others_i$ , hence we separate contact constraints from bilateral ones. We then do the following

```
 \begin{array}{lll} 1 & \text{SWEEP} & (Contacts_i) \\ 2 & \text{send} & (Contacts_i) \\ 3 & \text{receive} & (Contacts_i) \\ 4 & \text{do} \\ 5 & \text{SWEEP} & (Others_i) \\ 6 & \text{while} \|\mathbf{S} - \mathbf{R}\| \, / \, \|\mathbf{R}\| > \epsilon \\ \end{array}
```

A single sweep over contacts is followed by the Gauss-Seidel loop over bilateral constraints. This is possible because bilateral constraints migrate together with bodies and hence are local to the processor (an exception is for the rigid link constraint, for which this approach might break down **TODO**).

#### Algorithm 8.4 Parallel explicit solver.

```
\begin{array}{lll} \operatorname{PARALLEL\_EXPLICIT\_SOLVER} \ (\epsilon) \\ 1 & \text{for all } \alpha \text{ in } Contacts_i \text{ do} \\ 2 & \operatorname{SPRING\_DASHPOT} \ (h, gap_\alpha, spring_\alpha, dashpot_\alpha, friction_\alpha, cohesion_\alpha, cohesive_\alpha) \\ 3 & \operatorname{send} \ (Contacts_i) \\ 4 & \operatorname{receive} \ (Contacts_i) \\ 5 & \operatorname{SERIAL\_GAUSS\_SEIDEL} \ (Others_i, \epsilon) \\ 6 & \operatorname{send} \ (Others_i) \\ 7 & \operatorname{receive} \ (Others_i) \end{array}
```

### 8.2 Explicit solver

The explicit solver is quite straightforward. On each processor we split the constraints into  $Contacts_i$  and  $Others_i$ , hence we separate contact constraints from bilateral ones. We then update the contacts using the spring-dashpot model and calculate reactions of bilateral constraints using a local Gauss-Seidel solver. We use the Gauss-Seidel approach for non-contacts because in this case it is quite fast, while it avoids issues related to penalisation of bilateral constraints. Using Gauss-Seidel is possible because bilateral constraints migrate together with bodies and hence are local to the processor (an exception is for the rigid link constraint, for which this approach might break down **TODO**). Algorithm 8.4 summarises the method.

# Bibliography

- [1] Mark F. Adams. A distributed memory unstructured Gauss-Seidel algorithm for multigrid smoothers. In Supercomputing '01: Proceedings of the 2001 ACM/IEEE conference on Supercomputing (CDROM), pages 4–4, New York, NY, USA, 2001. ACM Press.
- [2] Mihai Anitescu Bogdan Gavrea Jeff Trinkle Florian A. Potra. A linearly implicit trapezoidal method for integrating stiff multibody dynamics with contact, joints, and friction. *International Journal for Numerical Methods in Engineering*, 66:1079–1124, 2006.
- [3] M. Jean. The non-smooth contact dynamics method. Computer Methods in Applied Mechanics and Engineering, 177(3-4):235–257, 1999.
- [4] Tomasz Koziara. Aspects of computational contact dynamics. PhD thesis, University of Glasgow, http://theses.gla.ac.uk/429/, 2008.
- [5] Tomasz Koziara and Nenad Bićanić. Simple and efficient integration of rigid rotations suitable for constraint solvers. To appear in the International Journal for Numerical Methods in Engineering, 2009.
- [6] J. J. Moreau. Numerical aspects of the sweeping process. Computer Methods in Applied Mechanics and Engineering, 177(3-4):329–349, 1999.
- [7] T. A. Laursen V. Chawla. Energy consistent algorithms for frictional contact problems. *International Journal for Numerical Methods in Engineering*, 42:799–827, 1998.