Engineering Mechanics - GATE

Kulasekaran

February 10, 2023

Contents

1 Composition, Resolution and Equilibrium of Forces			3
	1.1	Force	3
	1.2	Force systems	3
		1.2.1 Collinear	$\frac{3}{3}$
		1.2.2 Concurrent	3 3
		1.2.3 Coplanar Coplanar Concurrent 1.2.4 Coplanar Concurrent	4
		1.2.5 Non-Coplanar Concurrent	4
		1.2.5 Non-Coplanar Concurrent 1.2.6 Coplanar Non-Concurrent	4
		1.2.7 Non-Coplanar Non-Concurrent	$\overline{4}$
	1.3	Triangular Law of forces	4
	1.4	Parallelogram Law of forces	4
	1.5	Polygon Law of forces	5
	1.6	Resolution of Forces	5
	1.7	Equilibrium state	5
	1.8	Lami's Theorem	5
2	1 22	alwais of Simple thusses	6
4	2.1	alysis of Simple trusses Plane Trusses	6
	4.1	2.1.1 Perfect Trusses	6
	2.2	Types of Supports	6
		2.2.1 Roller support	6
		2.2.2 Hinged support	6
	2.3	Truss Analysis	6
		2.3.1 Method of Joints	7
		2.3.2 Method of Sections	7
		2.3.3 Tricks for finding Zero Force Member	7
3	Friction 8		
3	3.1	Introduction	8
	0.1	3.1.1 Dry Friction	8
		3.1.2 Fluid Friction	8
		3.1.3 Static Friction and Static Friction laws	8
		3.1.4 Dynamic Friction	8
	3.2	Coefficient of Friction	8
	3.3	Angle of Friction (ϕ)	9
	3.4	Angle of repose (α)	9
	3.5	Wedge	9
		$3.5.1 \text{Load}(W) \dots \dots \dots \dots \dots \dots \dots \dots \dots $	9
		3.5.2 Effort(P)	9
		3.5.3 Mechanical Advantage	10
		3.5.5 Output	10 10
		3.5.6 Efficiency (η)	10
		3.5.7 Velocity ratio(VR)	10
	3.6	Rolling friction	10
	$\frac{3.7}{3.7}$	Motion of a cyclist on a circular level road	11
	• • •	3.7.1 Angle of Leaning	11
		3.7.2 Maximum speed (v_{max}) to avoid skidding	11
4	Wo	rk and Energy	12
5	Vir	tual work	13
6	Cen	nter of Gravity and Moment of Inertia	14
7	Imr	oulse and Momentum	15

Composition, Resolution and Equilibrium of Forces

1.1 Force


- It is the action of one body on another that changes the state of being (rest/uniform motion) of the object on which it is being applied
- 3 things are needed to define a force: Magnitude, direction, Point of application
- According to Newton's first law: Force = Mass * Acceleration

1.2 Force systems

- Coplanar 2D system
- Non-Coplanar 3D system


1.2.1 Collinear

• Two are more forces whose line of action is same

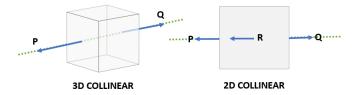

1.2.2 Concurrent

• Two are more forces which meet at a common point

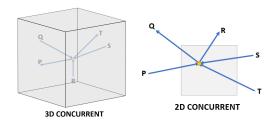

1.2.3 Coplanar

• Forces that are on the same plane

1.2.4 Coplanar Concurrent

• Forces that are on the same plane and meet at a common point as well

1.2.5 Non-Coplanar Concurrent

• Forces are not on the same plane but meet at a common point


1.2.6 Coplanar Non-Concurrent

• Forces are on the same plane but don't meet at a common point

1.2.7 Non-Coplanar Non-Concurrent

• Forces are neither on the same plane nor meet at a common point

1.3 Triangular Law of forces

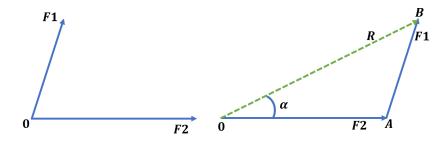


• Two concurrent forces acting on a body is represented in magnitude and direction by two sides of a triangle taken in order, then their third side will represent the resultant of two forces in the direction and magnitude taken in opposite order

$$\boxed{R = \sqrt{F_1^2 + F_2^2}} \qquad \alpha = \cos^{-1}\left(\frac{F_1}{R}\right) = \sin^{-1}\left(\frac{F_2}{R}\right)$$


1.4 Parallelogram Law of forces

• If two concurrent forces are represented in magnitude as the two sides of a parallelogram, then the resultant of these two forces is the diagonal of the parallelogram

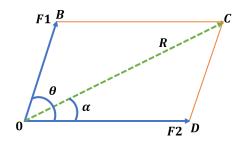

$$R = \sqrt{F_1^2 + 2F_1F_2\cos\theta + F_2^2}$$


1.5 Polygon Law of forces

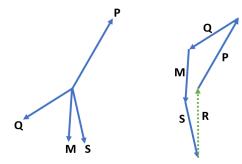

• The triangular law can be extended to the polygon law. If a number of coplanar concurrent forces are represented in magnitude and direction by the sides of a polygon, taken in order, then their resultant can be represented by the closing side of the polygon

1.6 Resolution of Forces

• The concept of replacing a single force at some angle with two of its component in the vertical and horizontal direction is called Resolution of forces.

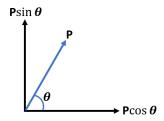


1.7 Equilibrium state

• A body is said to be in equilibrium if it is at rest or moving with uniform velocity. Under equilibrium state, the resultant of the force system will be zero.

5

1.8 Lami's Theorem

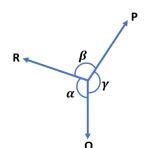

If 3 coplanar concurrent forces are in equilibrium, then each force is proportional to the sine of the angle between the other two sides

$$\frac{P}{\sin \alpha} = \frac{Q}{\sin \beta} = \frac{R}{\sin \gamma}$$

Analysis of Simple trusses

2.1 Plane Trusses

- Plane Trusses 2D trusses All members lie on the same plane
- Designed to resist Geometrical distortion under loading
- Usually slender CS Area very less compared to length
- Two force members Theoretically carry only axial forces, Either in tension or in compression

2.1.1 Perfect Trusses

- Truss with just the right amount of members to avoid any distortion under loading
- Simplest perfect truss = Triangle
- | Maxwell's Truss equation: $m = 2j 3 \iff (m=\text{No. of member, } j = \text{No. of joints})$
 - Perfect truss $\implies m = 2j 3$ (Do not change in shape, right no of members)
 - Imperfect truss $\implies m < 2j 3$ (change in shape, deficient members)
 - Redundant truss $\implies m > 2j 3$ (Do not change in shape, extra members)

2.2 Types of Supports

2.2.1 Roller support

• They are frictionless and provide only one reaction component that is vertical to its base

2.2.2 Hinged support

They are fixed to their base and provide both horizontal and vertical reaction forces

2.3 Truss Analysis

- Involves finding support reactions and force in members
- Assumptions:
 - Members are **Rigid** and lie in one plane (in case of plane truss)
 - Members are slender, Uniform cross-section
 - Members are subjected to pure axial force and cannot develop moments at ends

- External loads and reactions act at the joints only
- Self weight of the members is negligible
- Forces are transmitted from one member to another via frictionless pins connecting the members
- Methods to Analyse Trusses
 - Method of Joints
 - Method of Sections
- Mostly questions in this topic is focused on:
 - **Zero force member** Member that is not under any force
 - whether a member is under tension or compression

2.3.1 Method of Joints


- In this method, $\sum F_x$ and $\sum F_y$ for any joint, must be equal to Zero. (Static equilibrium)
- FBD of entire truss is drawn and the support reactions are found first using $\sum F_x = 0, \sum F_y = 0, \sum M = 0$
- Then start from a joint where there are not more than 2 unknown forces. Assume the direction of the forces of the members and in the end if they come out to be positive, then the assumed direction is right, else, the assumed direction is wrong.
- If a member pulls the joint to which it is connected, then it is subjected to Tensile force.
- If a member pushes the joint to which it is connected, then it is subjected to compressive force.
- Tie Member under Tension, Strut Member under Compression

2.3.2 Method of Sections

- The truss is split into 2 parts by an imaginary section
- The section must not cut through more than 3 members with unknown forces
- The equilibrium conditions are applied for one part and the unknown forces in that part are determined
- Similar to the Method of joints, here also, at first the forces are assumed directions and based on its outcome its verified/changed

2.3.3 Tricks for finding Zero Force Member

- If at a an unloaded joint (a joint with no external load) with three members, two collinear forces are acting, then the third member will be a Zero Force member
- In the below shown example, in Left figure, Member **DC**, **EF**, **HG** are Zero force members and in the right figure, Member **AC**, **CD** are Zero force members

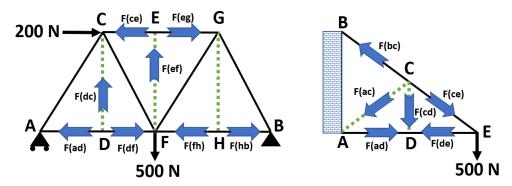

Friction

3.1 Introduction

- When two bodies are in contact and when one body is moved with respect to another, there develops a tangential force between the bodies trying to prevent motion.
- Friction always develops opposite to the direction of motion
- The rougher the surface, more will be the friction
- Only when applied force is higher than the frictional force, there will be motion

3.1.1 Dry Friction

• Friction between two Non-lubricated solids with motion or tendency of motion

3.1.2 Fluid Friction

• Friction between two layers of liquid in a flow. Also known as Viscosity. Dealt with in Fluid Mechanics

3.1.3 Static Friction and Static Friction laws

- When applied force is less than the frictional force and so the body is not set in motion, that frictional force is called Static friction
- \implies Limiting frictional force \propto Normal reaction between two contact surfaces
- ⇒ Friction is independent of area of contact/shape


3.1.4 Dynamic Friction

• If the body was set in motion due to applied force being higher than the frictional force between them, then that frictional force still being experience by the moving body is called dynamic friction

3.2 Coefficient of Friction

- We know Limiting friction \propto Normal Force \Longrightarrow $F_{SL} = \mu_{SF}N$ \iff $(\mu_{SF} = \text{Coefficient of static friction})$
- $F_{DL} = \mu_{DF} N$ \iff $(\mu_{DF} = \text{Coefficient of Dynamic friction})$
- $\mu_{SF} > \mu_{DF}$ \iff as $(F_{SL} > F_{DL})$ \iff $F_{SL} =$ Static Limiting friction, $F_{DL} =$ Dynamic Limiting friction


3.3 Angle of Friction (ϕ)

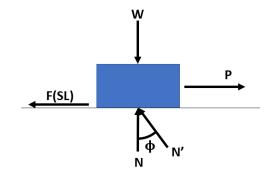

- It is the angle between the resultant(N') of limiting friction(F_{SL}) and Normal force(N) and the Normal force(N). $N' = \sqrt{N^2 + F_{SL}^2}$
- $\left[\tan \phi = \frac{F_{SL}}{N}\right] \implies \tan \phi = \mu_{SF} \implies \left[\phi = \tan^{-1}(\mu_{SF})\right]$

3.4 Angle of repose (α)

• The max angle of plane inclination for which a body resting on such plane will not slide due to its own weight is called **Angle of Repose**

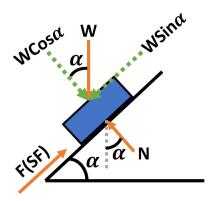

9

- $W \cos \alpha = N$ and $W \sin \alpha = F_{SF} \implies W \sin \alpha = \mu_{SF} N$
- Dividing the above will give us $\tan \alpha = \mu_{SF}$ But $\mu_{SF} = \tan \phi$
- So, it can be stated that Angle of repose = Angle of friction

3.5 Wedge

3.5.1 Load(W)

• Weight lifted (or) resistance overcome by the machine

3.5.2 Effort(P)

• Force required by the machine to lift the load $P = W \tan(2\phi + \alpha)$

3.5.3 Mechanical Advantage

$$\bullet \ MA = \frac{W}{P}$$

• Changes wrt to changes in friction

ullet Some machines have MA less than 1 \Longrightarrow They require more effort than load lifted.

• For a wedge, if $\alpha \downarrow$, then $MA \uparrow$

• MA for both single and double wedge is same for same α

3.5.4 Input

• Work done by effort(P) \implies (P * Distance of movement = P * x)

3.5.5 Output

• Work done by machine \implies (W * Distance of movement = W * y)

3.5.6 Efficiency(η)

 $\bullet \ \ \, \boxed{ \eta = \frac{Output}{Input} = \frac{W*y}{P*x} = \frac{MA}{VR} }$

• As Efficiency for a machine is always less than one, this implies MA is always less than VR

3.5.7 Velocity ratio(VR)

 $\bullet \quad VR = \frac{Velocity \ of \ effort}{Velocity \ of \ load} = \frac{x/t}{y/t} = \frac{x}{y}$


• Depends only on geometrical features of the machine

• Constant for a machine

• For a wedge, $\overline{VR = \frac{L}{W}} = Slope^{-1} \iff (L = length, W = Width)$

• VR is different for single wedge and double wedge with same α

3.6 Rolling friction

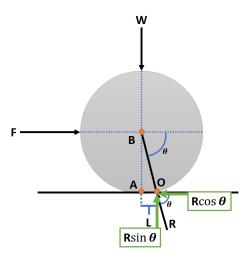

Consider a wheel of radius r and Weight(W)

Taking moment about O, we get F.r = W.L and by $\sum F_x = 0 \implies F = R\cos\theta$


Rolling resistance = $R\cos\theta$

Coefficient of Rolling resistance = L

It may be noted that rolling motion is caused by a couple of applied force and rolling resistance

Rolling friction always greater than Sliding friction

3.7 Motion of a cyclist on a circular level road

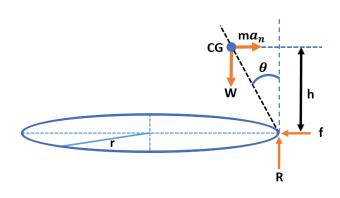

- \rightarrow Cyclist of weight (W) and mass (m)
- \rightarrow moving on a circular path with radius (r)
- \rightarrow at a constant velocity (v)
- \rightarrow distance between CG of the cyclist and ground = h
- \rightarrow Angle of leaning with respect to vertical = θ

3.7.1 Angle of Leaning(θ)

- Centripetal acceleration developed would be : $a_n = \frac{v^2}{r}$
- The cyclist has to lean inward to maintain dynamic equilibrium and an inertial force ma_n is acting on the cyclist
- By applying $\sum M = 0$ about the point of contact, we get: $W(h \tan \theta) (ma_n)h = 0 \implies \theta = \tan^{-1}\left(\frac{v^2}{rg}\right)$

3.7.2 Maximum speed (v_{max}) to avoid skidding

- By $\sum F_y = 0 \implies R = W$ and $\sum F_x = 0 \implies ma_n = f$
- Skidding is avoided if the frictional force(f) is greater than or equal to centrifugal force
- $\Longrightarrow f_{max} = \mu R = \mu W$
- So, to avoid skidding : $\mu W \ge \frac{W}{g} \left(\frac{V^2}{r} \right) \implies \boxed{v_{max} \le \sqrt{\mu gr}}$

Work and Energy

Virtual work

Center of Gravity and Moment of Inertia

Impulse and Momentum

Lagrangian Equation