## **Compact Photoelectric Sensor with Built-in Amplifier**

# E3Z-LS

CSM\_E3Z-LS\_DS\_E\_9\_2

# Distance-settable Sensor Unaffected by Workpiece Color and Background

- Distance-settable triangulation model unaffected by color.
- Simple positioning settings using a clear LED spot. (E3Z-LS\(\sigma\)3/LS\(\sigma\)8)
- Detect minute steps.





Be sure to read *Safety Precautions* on page 8.

For the most recent information on models that have been certified for safety standards, refer to your OMRON website.

## **Ordering Information**

## Sensors (Refer to Dimensions on page 10.)

Red light

Sensing	Appearance	Connection method	Sensing distance (white paper)	Model	
method	Appearance	Connection method	Sensing distance (write paper)	NPN output	PNP output
Distance- settable	<b>→</b>	Pre-wired (2 m)	20 mm 40 mm 200 mm Incident light level threshold (fixed)	E3Z-LS61 2M *1	E3Z-LS81 2M *1
		Connector (M8, 4 pins)	FGS (at min. setting) FGS (at max. setting)	E3Z-LS66	E3Z-LS86
	<b>↓</b>	Pre-wired (2 m)	2 mm 20 mm 80 mm BGS (at min. setting)	E3Z-LS63 2M	E3Z-LS83 2M *2
		Connector (M8, 4 pins)	BGS (at max. setting)	E3Z-LS68	E3Z-LS88

<sup>\*1.</sup> M12 Standard Pre-wired Connector Models are also available. When ordering, add "-M1J 0.3M" to the end of the model number (e.g., E3Z-LS61-M1J 0.3M). The cable is 0.3 m long.

## **Accessories (Order Separately)**

**Mounting Brackets** 

## Sensor I/O Connectors (Sockets on One Cable End)

(Models for Connectors: A Connector is not provided with the Sensor. Be sure to order a Connector separately.) (Refer to Dimensions on XS3)

Cable specification	Appearance		Type of cable		Model
	Straight *1		2 m	4-wire	XS3F-M421-402-A
Standard M8 cable			5 m		XS3F-M421-405-A
Statidatu ivio Cable	L shaped *1 *0		2 m		XS3F-M422-402-A
	L-shaped *1 *2		5 m		XS3F-M422-405-A

<sup>\*1.</sup> The connector will not rotate after connecting.

OMRON 1

<sup>\*2.</sup> M12 Pre-wired Smartclick Connector Models are also available.
When ordering, add "-M1TJ 0.3M" to the end of the model number (e.g., E3Z-LS83-M1TJ 0.3M).
The cable is 0.3 m long.

<sup>\*2.</sup> The cable is fixed at an angle of 180° from the sensor emitter/receiver surface.


## **Ratings and Specifications**

Sensing method		Distance-settable						
Model NPN output		E3Z-LS61 E3Z-LS66 E3Z-LS63 E3Z-LS						
Item	PNP output	E3Z-LS81	E3Z-LS86	E3Z-LS83	E3Z-LS88			
	BGS	tance	100 mm): 20 mm to set dis-	2 mm to set distance (80 mm max.)				
Sensing distance FGS		min.	m): Set distance to 200 mm m): Set distance to 160 mm					
Setting ran	ge	White paper (100 $\times$ 100 mr Black paper (100 $\times$ 100 mr		White paper (25 × 25 mm): 20 to 80 mm				
Differential	travel	10% of set distance max. ( vs. Sensing Distance on pa		2% of set distance max.				
(black/whit	•	10% of set distance max.		5% of set distance max.	5% of set distance max.			
Light source	ce (wavelength)	Red LED (680 nm)		Red LED (650 nm)				
Power sup	ply voltage	12 to 24 VDC ±10%, ripple	(p-p): 10% max.					
Current co	nsumption	30 mA max.						
Control output		Load power supply voltage: 26.4 VDC max., Load current: 100 mA max. (residual voltage 1 V max.), Open collector output (NPN or PNP depending on model) Light-ON/Dark-ON switch selectable						
BGS/FGS selection		BGS: Open or connected to GND FGS: Connected to Vcc		BGS: Open or connected to GND				
Protection circuits		Reversed power supply polarity protection, Output short-circuit protection, Mutual interference prevention						
Response time		Operate or reset: 1 ms max.						
Distance se	etting	5-turn endless adjuster						
Ambient ill (Receiver s		Incandescent lamp: 3,000 lx max.; Sunlight: 10,000 lx max.						
Ambient te	mperature range	Operating: –25 to 55°C, Storage: –40 to 70°C (with no icing or condensation)						
Ambient hu	umidity range	Operating: 35% to 85%, Storage: 35% to 95% (with no condensation)						
Insulation i	resistance	20 MΩ min. at 500 VDC						
Dielectric s	strength	1,000 VAC at 50/60 Hz for 1 minute						
Vibration resistance		Destruction: 10 to 55 Hz, 1.5-mm double amplitude for 2 hours each in X, Y, and Z directions						
Shock resistance		Destruction: 500 m/s² for 3 times each in X, Y, and Z directions						
Degree of protection		IP67 (IEC 60529)						
Connection method		Pre-wired (standard lengths: 2 m and 0.5 m)	Connector (M8, 4 pins)	Pre-wired (standard lengths: 2 m and 0.5 m)	Connector (M8, 4 pins)			
Indicators		Operation indicator (orange), Stability indicator (green)						
Weight (packed state)		Pre-wired Sensors, 2 m: Approx. 65 g	Approx. 20 g	Pre-wired Sensors, 2 m: Approx. 65 g	Approx. 20 g			
Material	Case	PBT (polybutylene terephthalate)						
wateriai	Lens	Modified polyarylate resin						
Accessorie	es	Instruction manual (Mounting Brackets must be ordered separately.)						


## **Engineering Data (Reference Value)**

## **Operating Range**


## E3Z-LS□1/LS□6 BGS

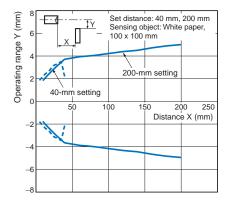

#### **FGS**

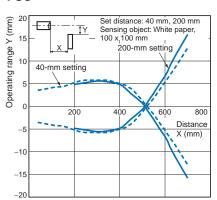


## E3Z-LS 3/LS 8

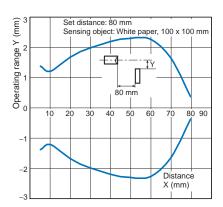


## **Spot Diameter vs. Sensing Distance**

## E3Z-LS 1/LS 6

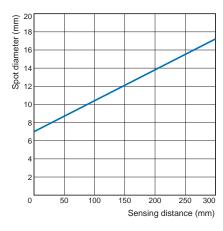


E3Z-LS 3/LS 8

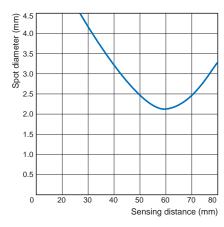


## **Close-range Characteristics**

## E3Z-LS 1/LS 6

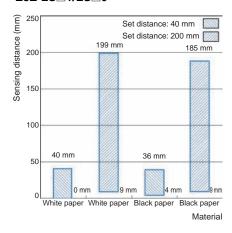


## E3Z-LS 3/LS 8

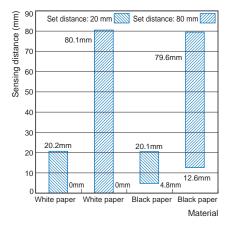


## **Differential Travel vs. Sensing Distance**

## E3Z-LS 1/LS 6

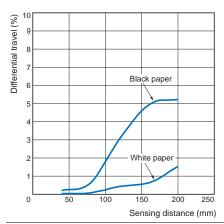


## E3Z-LS 3/LS 8

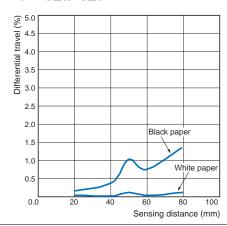


## **Sensing Object Angle Characteristics**

## E3Z-LS 1/LS 6

## Vertical

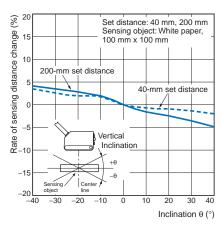


## Horizontal

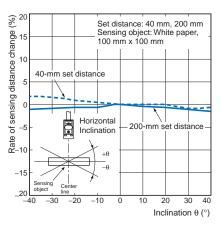


## E3Z-LS 3/LS 8

#### Vertical

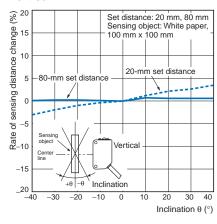


#### Horizontal

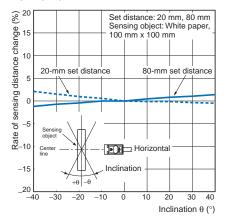


## **FGS Mode Set Distance**

## E3Z-LS□1/LS□6 White Paper

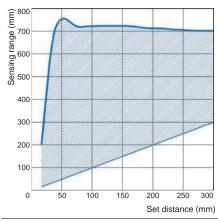


## **Black Paper**

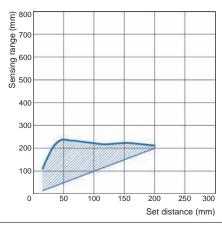


## Sensing Distance vs. Sensing Object Material

E3Z-LS 1/LS 6


## Set Distance of 40 mm using White Paper

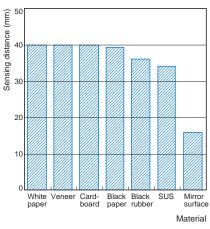


Set Distance of 200 mm using White Paper

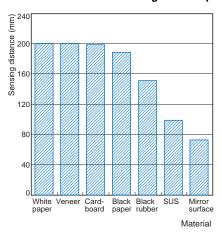


E3Z-LS□3/LS□8
Set Distance of 20 mm using White Paper

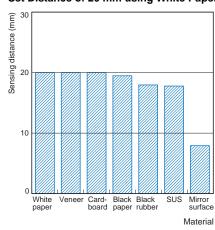

Set Distance of 80 mm using White Paper

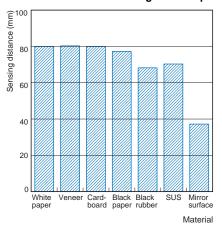

## I/O Circuit Diagrams

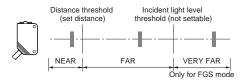

Note: The VERY FAR region is supported only for FGS.
The incident light level threshold is fixed and cannot be set.

## **NPN Output**


Model	Operation mode	Timing charts	Operation selector	BGS/FGS selection method	Output circuit
E3Z-LS61 E3Z-LS66 E3Z-LS63 E3Z-LS68	Light-ON	Operation indicator (orange) OFF Output ON transistor OFF Load ON (e.g., relay) OFF (Between brown (1) and black (4) leads)	L side (LIGHT ON)	BGS: Either leave the pink wire (2) open or connect it to the blue wire (3).	Operation indicator (orange)  Stability indicator (green)  Photo-electric Sensor (Control output)  Brown  12 to 24 VDC  Pink  FGS  Load (relay)  100 mA  max.
	Dark-ON	Operation indicator (orange) OFF Output ON transistor OFF Load ON (e.g., relay) OFF (Between brown (1) and black (4) leads)	D side (DARK ON)		
E3Z-LS61 E3Z-LS66	Light-ON	Operation indicator (orange) OFF Output transistor OFF Load ON (e.g., relay) OFF (Between brown (1) and black (4) leads)	L side (LIGHT ON)	FGS: Connect the pink	Connector Pin Arrangement  (2 4) (1) (3)
	Dark-ON	Operation indicator (orange) OFF Output ON transistor OFF Load ON (e.g., relay) OFF (Between brown (1) and black (4) leads)	D side (DARK ON)	wire (2) to the brown wire (1).	

## **PNP Output**

Model	Operation mode	Timing charts	Operation selector	BGS/FGS selection method	Output circuit	
E3Z-LS81 E3Z-LS86	Light-ON	Operation ON indicator OFF Output transistor OFF Load ON (e.g., relay) OFF (Between blue (3) and black (4) leads)	L side (LIGHT ON)	BHT ON) BGS: Either leave the pink wire (2) open or connect it to the blue 0 side wire (3).		
E3Z-LS83 E3Z-LS88	Dark-ON	Operation on indicator (orange) OFF Output ON transistor OFF Load ON (e.g., relay) OFF (Between blue (3) and black (4) leads)	D side (DARK ON)		Operation Stability Brown 12 to 24 VDC indicator (green)  Photo-electric Sensor Main Circuit  Pink  Defection of the control output)  Blue  BGS  ON  Blue  BGS  ON  Defection of the control output)  Blue  BGS  ON  Defection of the control output)  Blue  BGS  ON  ON  Defection of the control output)  Blue  BGS  ON  ON  Defection of the control output)  Blue  BGS  ON  ON  Defection of the control output)  Blue  BGS  ON  ON  Defection of the control output)  Blue  BGS  ON  ON  Defection of the control output)  Blue  BGS  ON  ON  Defection of the control output)  Blue  BGS  ON  ON  Defection of the control output)  Blue  BGS  ON  ON  Defection of the control output)  Blue  BGS  ON  ON  Defection output)	
E3Z-LS81 E3Z-LS86	Light-ON	Operation indicator (orange) ON Use transistor OFF OPF (Between blue (3) and black (4) leads)	L side (LIGHT ON)	FGS: Connect the pink	Connector Pin Arrangement  (2) (3) (1) (3)	
	Dark-ON	Operation indicator (orange) Output ON transistor OFF Load ON (e.g., relay) OFF (Between blue (3) and black (4) leads)	D side (DARK ON)			

## Plugs (Sensor I/O Connectors)

## M8 connector

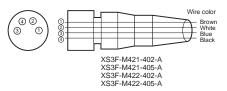

## Pin arrangement

Classifi- cation	Wire color	Connector pin No.	Application
DC	Brown	1	Power supply (+V)
	White	2	BGS/FGS selection
	Blue	3	Power supply (0 V)
	Black	4	Output

## Nomenclature



## **Safety Precautions**

## Refer to Safety Precautions of the E3Z and Warranty and Limitations of Liability.

## **⚠** WARNING

This product is not designed or rated for ensuring safety of persons either directly or indirectly. Do not use it for such purposes.



## <u> (</u> Caution

Do not connect an AC power supply to the Sensor. If AC power (100 VAC or more) is supplied to the Sensor, it may explode or burn.



## **Precautions for Safe Use**

Be sure to abide by the following precautions for the safe operation of the Sensor.

#### Wiring

## Power Supply Voltage and Output Load Power Supply Voltage

Make sure that the power supply to the Sensor is within the rated voltage range. If a voltage exceeding the rated voltage range is supplied to the Sensor, it may explode or burn.

#### **Load Short-circuiting**

Do not short-circuit the load, otherwise the Sensor may be damaged.

#### **Connection without Load**

Do not connect the power supply to the Sensor with no load connected, otherwise the internal elements may explode or burn.

#### Operating Environment

Do not use the Sensor in locations with explosive or flammable gas.

## **Precautions for Correct Use**

Do not use the product in atmospheres or environments that exceed product ratings.

## Designing

## **Power Reset Time**

The Sensor is ready to operate 100 ms after the Sensor is turned ON. If the load and Sensor are connected to independent power supplies respectively, be sure to turn ON the Sensor before supplying power to the load.

#### Wiring

#### **Avoiding Malfunctions**

If using the Sensor with an inverter or servomotor, always ground the FG (frame ground) and G (ground) terminals, otherwise the Sensor may malfunction.

## Mounting

## **Mounting the Sensor**

- If Sensors are mounted face-to-face, make sure that the optical axes are not in opposition to each other. Otherwise, mutual interference may result.
- Always install the Sensor carefully so that the aperture angle range
  of the Sensor will not cause it to be directly exposed to intensive
  light, such as sunlight, fluorescent light, or incandescent light.
- Do not strike the Photoelectric Sensor with a hammer or any other tool during the installation of the Sensor, or the Sensor will lose its water-resistive properties.
- Use M3 screws to mount the Sensor.
- When mounting the case, make sure that the tightening torque applied to each screw does not exceed 0.54 N-m.

#### **M8 Connector**


- Always turn OFF the power supply to the Sensor before connecting or disconnecting the metal connector.
- Hold the connector cover to connect or disconnect it.
   If the XS3F is used, always tighten the connector cover by hand. Do not use pliers.

If the connector is not connected securely, it may be disconnected by vibration or the proper degree of protection of the Sensor may not be maintained. The appropriate tightening torque is 0.3 to 0.4 N.m

If other commercially available connectors are used, follow the recommended connector application conditions and recommended tightening torque specifications.

#### **Mounting Directions**

 Make sure that the sensing side of the Sensor is parallel with the surface of the sensing objects.
 Normally, do not incline the Sensor towards the sensing object.

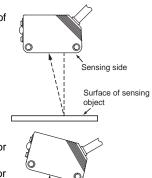


Glossy object

If the sensing object has a glossy surface, however, incline the Sensor by 5° to 10° as shown in the illustration, provided that the Sensor is not influenced by background objects.


 If there is a mirror-like object below the Sensor, the Sensor may not operate stably. Therefore, incline the Sensor or separate the Sensor

the Sensor or separate the Sensor from the mirror-like object as shown below.

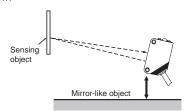




• Do not install the Sensor in the wrong direction. Refer to the following illustration.

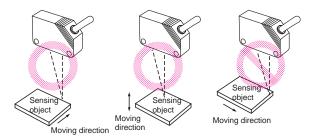


Install the Sensor as shown in the following illustration if each sensing object greatly differs in color or material.

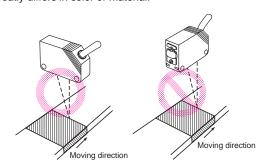

## Adjusting

## **Indicator Operation**

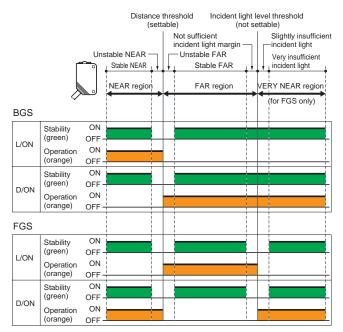

Note: 1. If the stability indicator is lit, the detection/no detection status is stable within the rated ambient operating temperature (-25 to  $55^{\circ}$ C).


The VERY FAR region is supported only for FGS. The incident light threshold is fixed and cannot be set. The distance to the incident light threshold depends on the color and gloss of the sensing object's surface.


## • Inspection and Maintenance

## **Cleaning**

Never use paint thinners or other organic solvents to clean the surface of the product.

## **Dimensions**

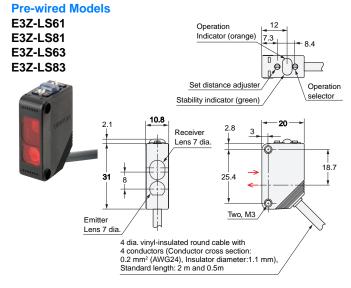

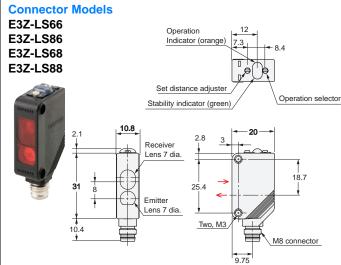

Terminal No.	Specifications
1	+V
2	BGS/FGS switchable
3	0 V
4	Output

## Terms and Conditions Agreement

#### Read and understand this catalog.

Please read and understand this catalog before purchasing the products. Please consult your OMRON representative if you have any questions or comments.

## Warranties.

- (a) Exclusive Warranty. Omron's exclusive warranty is that the Products will be free from defects in materials and workmanship for a period of twelve months from the date of sale by Omron (or such other period expressed in writing by Omron). Omron disclaims all other warranties, express or implied.
- (b) Limitations. OMRON MAKES NO WARRANTY OR REPRESENTATION, EXPRESS OR IMPLIED, ABOUT NON-INFRINGEMENT, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OF THE PRODUCTS. BUYER ACKNOWLEDGES THAT IT ALONE HAS DETERMINED THAT THE

PRODUCTS WILL SUITABLY MEET THE REQUIREMENTS OF THEIR INTENDED USE.

Omron further disclaims all warranties and responsibility of any type for claims or expenses based on infringement by the Products or otherwise of any intellectual property right. (c) Buyer Remedy. Omron's sole obligation hereunder shall be, at Omron's election, to (i) replace (in the form originally shipped with Buyer responsible for labor charges for removal or replacement thereof) the non-complying Product, (ii) repair the non-complying Product, or (iii) repay or credit Buyer an amount equal to the purchase price of the non-complying Product; provided that in no event shall Omron be responsible for warranty, repair, indemnity or any other claims or expenses regarding the Products unless Omron's analysis confirms that the Products were properly handled, stored, installed and maintained and not subject to contamination, abuse, misuse or inappropriate modification. Return of any Products by Buyer must be approved in writing by Omron before shipment. Omron Companies shall not be liable for the suitability or unsuitability or the results from the use of Products in combination with any electrical or electronic components, circuits, system assemblies or any other materials or substances or environments. Any advice, recommendations or information given orally or in writing, are not to be construed as an amendment or addition to the above warranty.

See http://www.omron.com/global/ or contact your Omron representative for published information.

## Limitation on Liability; Etc.

OMRON COMPANIES SHALL NOT BE LIABLE FOR SPECIAL, INDIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, LOSS OF PROFITS OR PRODUCTION OR COMMERCIAL LOSS IN ANY WAY CONNECTED WITH THE PRODUCTS, WHETHER SUCH CLAIM IS BASED IN CONTRACT, WARRANTY, NEGLIGENCE OR STRICT LIABILITY.

Further, in no event shall liability of Omron Companies exceed the individual price of the Product on which liability is asserted.

## Suitability of Use.

Omron Companies shall not be responsible for conformity with any standards, codes or regulations which apply to the combination of the Product in the Buyer's application or use of the Product. At Buyer's request, Omron will provide applicable third party certification documents identifying ratings and limitations of use which apply to the Product. This information by itself is not sufficient for a complete determination of the suitability of the Product in combination with the end product, machine, system, or other application or use. Buyer shall be solely responsible for determining appropriateness of the particular Product with respect to Buyer's application, product or system. Buyer shall take application responsibility in all cases.

NEVER USE THE PRODUCT FOR AN APPLICATION INVOLVING SERIOUS RISK TO LIFE OR PROPERTY OR IN LARGE QUANTITIES WITHOUT ENSURING THAT THE SYSTEM AS A WHOLE HAS BEEN DESIGNED TO ADDRESS THE RISKS, AND THAT THE OMRON PRODUCT(S) IS PROPERLY RATED AND INSTALLED FOR THE INTENDED USE WITHIN THE OVERALL EQUIPMENT OR SYSTEM.

## Programmable Products.

Omron Companies shall not be responsible for the user's programming of a programmable Product, or any consequence thereof.

#### Performance Data.

Data presented in Omron Company websites, catalogs and other materials is provided as a guide for the user in determining suitability and does not constitute a warranty. It may represent the result of Omron's test conditions, and the user must correlate it to actual application requirements. Actual performance is subject to the Omron's Warranty and Limitations of Liability.

## Change in Specifications.

Product specifications and accessories may be changed at any time based on improvements and other reasons. It is our practice to change part numbers when published ratings or features are changed, or when significant construction changes are made. However, some specifications of the Product may be changed without any notice. When in doubt, special part numbers may be assigned to fix or establish key specifications for your application. Please consult with your Omron's representative at any time to confirm actual specifications of purchased Product.

<u>Errors and Omissions.</u> <u>Information presented by Omron Companies has been checked and is believed to be accurate; however, no responsibility is accurate.</u> assumed for clerical, typographical or proofreading errors or omissions.

2015.10

In the interest of product improvement, specifications are subject to change without notice.

