C++ interface for working with binary data files produced by CAEN WaveDump software

LRDPRDX

November 11, 2019

Contents

1	Introduction	2
2	Installation2.1 Stand-alone2.2 ROOT-compatible	
3	Usage	2
	3.1 Stand-alone 3.1.1 Entire structure 3.1.2 Read an event 3.1.3 Analyse an event 3.1.4 Compilation 3.2 ROOT-compatible	(
4	Reference guide	1
	4.2 Struct Point 4.3 Class Event 4.4 Class Parser	11 13 14 17 19 22

1 Introduction

CAEN provides several softwares that a digitizer can run for data acquisition: DPP-CI (now deprecated), DPP-PSD, CAENScope, WaveDump (https://www.caen.it/products/caen-wavedump/) (hereinafter the WD), etc. The software described in this document is designed to work with the data acquired with WD software. WD allows user to save the acquired data in two formats: either binary or ASCII. Since saving data in binary format provides higher record rate and more information about the data, and takes less space on disk, one should choose it in order to get better performance in case when analysis of large number of events is needed (for example, to get integral spectrum or average waveform).

However, parsing of binary files requires a bit more complicated algorithms comparing with those needed in case of using ASCII files. So this software is intended to provide a simple C++ interface to work with WD's binary data files. Moreover, this software can be easily "extended" by user in the following sense. Each event consisting of data points (or a waveform) and some additional info is represented by and accessible through the **Event** class (described below). This allows user to write his/her own functions to perform any kind of analysis on an event using only **Event** object which stores given event.

WARNING: This software is NOT considered to work with ASCII files. So use it only with binaries produced by the WD software.

Operating CAEN digitizer with WD software for data acquisition requires a configuration file containing device settings. This file is just a text file which (mostly) consists of lines like this

```
<parameter> <value>
```

that define digitizer's behavior.

Of course, it is possible to create such file directly using a text editor just once and any time another configuration is needed just copy and change it. However, it would be a bit more convenient to have a tool that constructs configuration file automatically.

2 Installation

2.1 Stand-alone

Assuming you have unpacked the package into the directory <package_dir> the installation is the following:

```
> cd <package_dir>/make
> make compile
> make link
> make clean
```

The first **make** line compiles dynamic library. The second one places it into standard location (**/usr/lib** in this case); here you probably need root privileges. The third one deletes object files that are no longer needed.

That's all! At this point you should be able to use the library. However, the following step is recommended. It is useful to add package's include to standard C++ include path of your system. On Ubuntu adding the following lines in .profile (or .bash_profile) does the work:

```
if [[ -n "$CPLUS_INCLUDE_PATH" ]]; then
    CPLUS_INCLUDE_PATH=$CPLUS_INCLUDE_PATH:/path/to/<package_dir>/inc
else
    export CPLUS_INCLUDE_PATH=/path/to/<package_dir>/inc
fi;
```

with path/to/<package_dir> replaced with the correct path to <package_dir> directory.

Now logout and login back.

In other Linux distribution you probably would have to use similar procedure.

2.2 ROOT-compatible

Read this section only if you intend to use ROOT CERN framework to create **TTree**s from several binary file. For more details, see Sec. 3.2. At this stage you need to know the location of the following library in your system:

```
libstdc++fs.a
```

You could find it, for example, by using the **find** command:

```
find /usr/lib -name "libstdc++fs.a"
```

In my case it prints

```
/usr/lib/gcc/x86_64-linux-gnu/5/libstdc++fs.a
```

Once you know the location place it in the <package_dir>/make/CompileROOT.C file (line 2 in the below code):

```
1 {
2    gSystem->AddLinkedLibs( "/usr/lib/gcc/x86_64-linux-gnu/5/libstdc++fs.a" );//place the correct
    path to the libstdc++fs.a
3    gSystem->AddLinkedLibs( "/usr/lib/libcaenparse.so" );
4    gSystem->AddIncludePath( "-I../inc");
5    gR00T->LoadMacro( "../src/R00T/CaenTreeCreator/CaenTreeCreator.cpp+" );
6 }
```

The final step is to compile everything:

```
cd <package_dir>/make
root -1 CompileROOT.C
```

3 Usage

3.1 Stand-alone

3.1.1 Entire structure

In order to prevent name conflicts and keep global scope clean everything is placed into namespace **caen**. This chapter covers two forms of usage:

- as a stand-alone pure C++ software
- as a part of the software based on the ROOT CERN framework

NOTE: In the below code the **using** declaration is *not* assumed so each entity of the library appears with the **caen:**: prefix.

So far there are three main classes on the scene. Those are: **Event**, **Parser**, **Analyzer**. The diagram on Fig.1 illustrates how they interact.

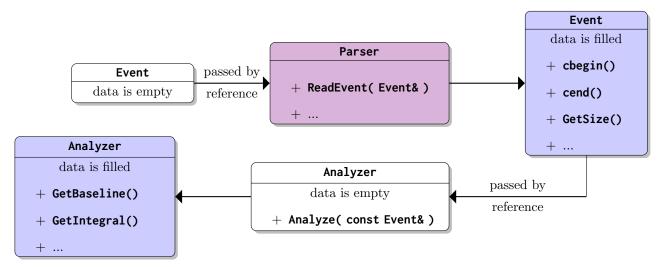


Figure 1: Interaction between classes during processing an event.

In this section one will find a brief description of the abovementioned classes and how to work with them. For more details see sec 4.

Event class. The **Event** class represents a single event. It serves to store primary information of an event: its size, trigger time tag, ..., and data points. Also it has some additional member functions that might be useful (see sec.4). One usually needs only one instance of this class (see below).

Parser class. The **Parser** class is designed for event construction. More precisely it takes an empty event and *fill* it according to the data in a binary file produced by WD.

Analyzer class. The **Analyzer** class is designed for (no surprise) performing simple analysis on the event data. Unlike the **Parser** class this class deals with events which are already constructed and filled by the **Parser** object. **Analyzer** doesn't change an event. In other words, events are read-only for **Analyzer**.

Board class. There is one more class which must be mentioned. It is the **Board** class. It represents a digitizer's model and serves as a translator between abstract digital and physical scales. For example, the same waveform may be of different length (having the same number of points) depending on a digitizer which produced it because the length (or sample time) depends on the sample rate.

3.1.2 Read an event

In order to be able to read an event from WD's binary file user should follow these steps:

1. Choose correct digitizer's model

- 2. Create Parser object
- 3. Set path to file to parse using Parser::SetPathToFile member function
- 4. Create **Event** object
- 5. Call Parser::ReadEvent or Parser::ReadEventAt member function with previously created Event object as an argument
- 6. Use **Event**'s member functions to retrieve information about the read event

Algorithm 1: Reading an event from a binary

Let us describe each step in detail below.

Choosing digitizer's model. In order to select digitizer's model user has to pass object of **Board** class as an argument to the constructor of **Parser** class (see below). **Board** class can be instantiated using either of two constructors. The first one allows user to choose a model from a list of known digitizers (constructed from this list). The second one is used when the desired model is not present in the list. For more details see sec.4.

```
#include "CaenParser.h"//CaenBoard.h header included here

caen::Board boardOne( caen::Board::N6720 );//using built-in enum
caen::Board boardTwo( 12, 250000000, 2.0 );//providing board's characteristics by hand
```

NOTE: If you didn't set the include path as it was recommended in Sec.2 you would probably have to provide full path in the **include** directive. However, it is not the case if you specify the include path (with **-I** option) when compiling.

Creating Parser object. Parser class has the only constructor that takes Board object as an argument:

```
#include "CaenParser.h"
caen::Parser parser( caen::Board::N6720 );//note copy-initialization for Board class
```

Setting path to binary. Once you have chosen the board's model it's time to specify file to work with. Its type must be std::string. Most probably the name of such file would be waveN.dat (unless has been changed by user) where N is channel number (starts from 0):

```
parser.SetPathToFile( "path/to/waveN.dat" );//note extension
```

The path may be either absolute or relative.

Creating Event object. The Event class has the only constructor that takes no arguments:

```
#include "CaenEvent.h"
caen::Event event;
```

As it was mentioned in Sec.3.1.1 one usually needs only one instance of each **Event** and **Parser** class. But there are cases when several instances are useful (or even necessary). For example, in case when comparing several channels is required. As far as WD produces separate data file per channel one should have its own **Parser** instance for each channel. And as it will be clear from the below text in this case one should also use its own **Event** instance for each channel.

Reading an event

Next step is to read an event from a binary file produced by WD. To do this user should call **ReadEvent** member function with **Event** object as an argument (passed by reference):

```
parser.ReadEvent( event );
//OR
parser.ReadEventAt( 0, event );
```

ReadEvent member function returns **true** if the event has been successfully read and **false** otherwise. Here are some steps that **ReadEvent** member function performs:

- 1. Reset current event
- 2. (ReadEvent) Try to read and fill the event from the position followed after the end of previous event current position indicator (or from the beginning of the file in case when no event hasn't been read yet)
 - (ReadEventAt) Try to read and fill the event from the specified position in binary file
- 3. (ReadEvent only) If 2. succeeded then update position indicator

The above algorithm is not exactly what **ReadEvent** does but here are several things to note. First of all, it resets the current event. This means that at the moment of invocation of **ReadEvent** member function a variable that was passed to it is no longer stores whatever it did before the invocation even if reading failed. The second thing to note is that **ReadEvent** member function reads one event at a time. You could only read events one-by-one, one after another. Every time you want to read new event you must invoke **ReadEvent** member function.

Eventually the complete program may look like this:

```
#include "CaenParser.h"
2
    #include "CaenEvent.h"
3
4
5
    int main()
6
7
       caen::Parser parser( caen::Board::N6720 );
           parser.SetPathToFile( "path/to/waveN.dat" );
8
9
       caen::Event event;
10
11
       while( parser.ReadEvent( event ) )//read event by event
12
13
           //Information about the current event is accessible
14
           //through Event's member functions
15
           std::cout << event.GetSize() << "\n";</pre>
16
       }
17
18
        return 0;
19
```

Code 1: Print size of each event stored in waveN.dat file

3.1.3 Analyse an event

Often having just primary data is not enough. One may need some property of a signal that is not in the data file. It might be integral over a given time interval or time point at the maximum displacement from the baseline. Those purposes are the <code>Analyzer</code> class was written for. It is defined in <code>CaenAnalyzer.h</code> file. This class is instantiated by calling the only constructor that takes no arguments:

```
#include "CaenAnalyzer.h"
caen::Analyzer analyzer;
```

In order to perform analysis of an event user calls corresponding mamber function of this class with the desired **Event** object as an argument (passed by reference):

```
analyzer.Analyze( event );
```

Analysis config. However the above line is not enough for complete analysis. User should provide the *analysis config*. Some of the calculations use the user-defined parameters. For example, if you want to get integral over time of a signal you should specify time range of integration. Moreover, in order to calculate integral it is required to know the baseline (or zero level). So far **Analyzer** has two simple methods to calculate zero level. For both of them user should also specify time range (see Sec.4). So the analysis config consists of the following settings (the order is not of importance):

- Method to calculate baseline. Now there are two methods (see sec.4). Member function to use: SetBaselineMethod(Analyzer::BASELINE method)
- Time interval for baseline calculation. It starts at the beginning of a signal and ends at the time defined by user. Member function to use: SetBaselineInterval(double T)
- Time interval for integral calculation. It starts and ends at time points defined by user. Member function to use: SetGate(double start, double end)

NOTE: The analysis config should be done before the invocation of Analyze member function.

So the complete program with analysis part usually contains the following lines:

```
#include "CaenParser.h"
    #include "CaenAnalyzer.h"
 2
    #include "CaenEvent.h"
 3
 4
 5
 6
    int main()
 7
8
       caen::Parser parser( caen::Board::N6720 );
9
            parser.SetPathToFile( "path/to/waveN.dat" );
10
       caen::Event event;
        caen::Analyzer analyzer;
11
12
13
       //Analysis config
       analyzer.SetBaselineInterval( 0.03 );//set range for baseline calcultation: the first 30 ns of
14
       analyzer.SetGate( 0.04, 0.1 );//set integral range between 40 and 100 ns
15
16
       while( parser.ReadEvent( event ) )
17
18
19
           //Perform analysis
20
           analyzer.Analyze( event );
21
           //Now the results are available through the getters
22
           std::cout << analyzer.GetIntegral() << "\n";</pre>
23
       }
24
25
       return 0;
26
    }
```

Code 2: Print integral of each event in waveN.dat calculated within the range from 40 to 100 nanosecs

3.1.4 Compilation

Provided you put your code in the file named **example.cpp** the following line should compile it into **example** executable:

```
g++ example.cpp -std=c++11 -I<path/to/package_dir>/inc -lcaenparse -o example
```

It is more convenient to put this in a Makefile (one may find an example of such Makefile in example/stand_alone directory).

3.2 ROOT-compatible

In this section it will be explained how to use this library together with the ROOT CERN framework, in particular, how to create a **TTree** from several binary files. Provided you have followed the instructions in Sec. 2.2 the following algorithm should be used to create a **TTree** from a set of a binary files:

- 1. Create an instance of the CaenTreeParser class using the same Board as was used to produce the binary
- 2. Set the analysis config using member-functions of the CaenTreeCreator class
- 3. Call the CreateTree member-function
- 4. Compile and run

Algorithm 2: Creation of a TTree

Below is the explanation of the above algorithm in detail.

The CaenTreeCreator class. This class is responsible for creation of a TTree from a data binary file. To create an instance of this class you, firstly, include its header:

```
#include "ROOT/CaenTreeCreator.h"
```

Then you use the only constructor of this class which takes four arguments:

where

```
board — board model which was used to record data
pathToDataDir — path to the directory containing the binaries (see the NOTE below)
pathToTreeFile — path to the location where the resulting TTree will be placed
treeFileName — name of a .root file (without an extension) with the resulting TTree
```

The meaning of the second argument requires additional explanation. There may be two cases here. The first is the one when the target directory contains no other directories (subdirectories) — only binary files. I.e. the structure is the following:

```
path
|
|_to
|
|_data <--target
|
|_wave01.dat
|_wave02.dat
|_....</pre>
```

In this case, provided the second argument in the CaenTreeCreator constructor was "path/to/data", THE ONLY TTree named tree_ would be constructed from all the binaries in the data directory. If, on the other hand, the target directory contains other directories, for example:

then, provided the second argument in the CaenTreeCreator constructor was "path/to/data", TWO TTrees named tree_data1 and tree_data2 would be constructed from all the binaries in the data1 and data2 directory (and in its subdirectories), respectively. It means that hierarchy of the subdirectories of the target directory doesn't matter: all the binaries are searched recursively in a subdirectory of the target directory. I.e. the subsubdata is expanded when constructing a TTree provided the following structure:

However, the path (see below) of the every binary is conserved in the resulting TTree.

After the instantiating the **CaenTreeCreator** you should set the analysis config (see Sec. 3.1.3) which will be used when constructing the **TTree**:

```
tc.SetIntervals( 0.1, 0.05, 0.2 );//baseline - from the beginning to 100 ns; integral - from 50 to 200 ns
```

NOTE: Setting the analysis config for the TreeCreator class differs slightly from that for the analyzer class (see Sec.4.6)

After that you call the **CreateTree** member-function. The whole code could be:

```
#include "ROOT/CaenTreeCreator.h"
#include "CaenParser.h"
```

Compile and run. To run the above example create (or append) the rootlogon.C file in the directory where you put this example with the following line:

```
{
    gSystem->AddLinkedLibs( "path/to/<package_dir>/src/ROOT/CaenTreeCreator/CaenTreeCreator_cpp.so" );
}
```

where <code>/path/to/<package_dir></code> is the absolute path to the <code><package_dir></code>.

Then type the following in your working directory (it is assumed you have saved the code in the file CreateTree.C):

```
root -l CreateTree.C+
```

After that there will appear the file (along with the others) named myFirstTree.root in the current directory with a TTree. The full example (with the demo data) see in the cpackage_dir>/example/ROOT/create_tree directory.

4 Reference guide

This reference guide is not considered to be complete. In this section only **public** members are explained. This is rather a usage reference guide.

NOTE: The **caen::** prefix is omitted in the below code

Terminology

Object of each class listed below has a state. In this context a state of an object is simply a set of values of its data members.

4.1 Class Board

Defined in CaenBoard.h

Description

Represents a digitizer's model. Needed to transform digital quantities into real time and voltage values specific to concrete digitizer.

public enums

Board::MODEL

Description: Represents a list of known CAEN digitizers

Values: DT5720, DT5724, DT5725, DT5730, DT5740, DT5740D, DT5742, DT5743,

DT5751, DT5761, N6720, N6724, N6725, N6730, N6740, N6740D, N6742, N6743, N6751, N6761, V1720, V1724, V1725, V1730, V1740, V1740D, V1742, V1743, V1751, V1761, VX1720, VX1724, VX1725, VX1730, VX1740,

VX1740D, VX1742, VX1743, VX1751, VX1761

public members

Board::Board(unsigned resolution, uint64_t sampleRate, double FSR)

Description: Constructor

Arguments: **unsigned resolution** - resolution of a digitizer in bits

uint64_t sampleRate - sampling rate of a digitizer in S/s (samples per second)

double FSR - full scale range in $V_{\rm pp}$

Board::Board(Board::MODEL model)

Description: Constructor

Arguments: Board::MODEL model - model of a digitizer from built-in list (see public enums)

unsigned Board::GetResolution() const

Description: Should be used to get resolution of a digitizer

Return: Resolution in bits (unsigned)

Arguments: None

uint64_t Board::GetSampleRate() const

Description: Should be used to get sample rate of a digitizer

Return: Sample rate in S/s (samples per second) (uint64_t)

double Board::GetSampleTime() const

Description: Should be used to get time difference between two neighboring points in a

wave form

Return: Sampling time (in μ s) (double)

Arguments: None

double Board::GetFSR() const

Description: Should be used to get full scale range of a digitizer

Return: Peak to peak voltage of a full scale range (in volts) (double)

Arguments: None

double Board::GetLSB() const

Description: Should be used to get least significant bit of a digitizer

Return: Resolution in volts (double)

4.2 Struct Point

Defined in CaenEvent.h.

Description

Represents a single data point in a waveform. Has two public data members: time and voltage

public members

Point::Point(double time, double voltage)

Description: Constructor. Not intended to be used by user

Arguments: **double time** - real time (in μ s) of the point

 $\begin{array}{lll} \mbox{double time -} & {\rm real\ time\ (in\ } \mu s)\ of\ the\ point} \\ \mbox{double voltage -} & {\rm real\ voltage\ (in\ } mV)\ of\ the\ point} \\ \end{array}$

double Point::time

Description: Real time (in μ s) of the point in a waveform

double Point::voltage

Description: Real voltage (in mV) of the point in a waveform

4.3 Class Event

Defined in CaenEvent.h

Description

Represents a single event — consists of primary information of an event: header (see WDDOC) and data points. Also contains position indicator at which an event starts and ends in binary file

public typedefs

typedef typename std::vector<Point>::const_iterator const_point_iterator

Description: Should be used to iterate over data points in a waveform

typedef typename std::fstream::pos_type pos_t

Description: Alias for **std::fstream::pos_type**

public enums

Event::POLARITY

Description: Represents signal polarity

Values: NEGATIVE, POSITIVE

public members

Event::Event()

Description: Constructor

Arguments: None

Event::const_point_iterator Event::cbegin() const

Description: Should be used to get the first point of a waveform. cbegin() of

std::vector<Point>

Return: Iterator to the beginning (std::vector<Point>::const_iterator)

Arguments: None

Event::const_point_iterator Event::cend() const

Description: Should be used to check if the end of a waveform has been reached. cend() of

std::vector<Point>

Return: Iterator to the end (std::vector<Point>::const_iterator)

Arguments: None

void Event::Clear()

Description: Resets the event. Sets all its data members to their initial values

Return: None Arguments: None

void Event::SetPolarity(Event::POLARITY pol)

Description: Sets signal polarity. The polarity matters for Analyzer when calculating inte-

gral and extremum points

Return: None

Arguments: **Event::POLARITY pol** - polarity of a signal

pos_t Event::GetStartPosition() const

Description: Getting position of the starting byte of the event

Return: Position in the file where the event starts from if the event has been read without

errors and 0 otherwise (pos_t)

Arguments: None

pos_t Event::GetEndPosition() const

Description: Getting position in the file after the last byte of the event

Return: Position in the file **next to** the end of the event if the event has been read without

errors. 0 otherwise (pos_t)

Arguments: None

size_t Event::GetSize() const

Description: Should be used to determine number of points in a waveform Return: Size of std::vector<Point> points data member (size_t)

Arguments: None

double Event::GetLength() const

Description: Should be used to get length of recording window in microseconds

Return: Time duration (in μ s) of a signal (double)

Arguments: None

Event::POLARITY Event::GetPolarity() const

Description: Should be used to get polarity of a signal

Return: Polarity of a signal (Event::POLARITY)

Arguments: None

double Event::GetTimeStep() const

Description: Should be used to get time difference between two neighboring points in a

waveform

Return: Sampling time (in μ s) (double)

Arguments: None

void Event::Print() const

Description: Prints the event in a nice human readable form

Return: None
Arguments: None

uint32_t Event::GetBoardID() const

Description:

Return: board ID (uint32_t)

Arguments: None

uint32_t Event::GetPattern() const

Description:

Return: (uint32_t)

uint32_t Event::GetChannel() const

Description: Should be used to determine to what input channel the event belongs

Return: Channel number (uint32_t)

Arguments: None

uint32_t Event::GetEventCounter() const

Description: Should be used to get counter of the event. NOTE: the first event in a file

is not necessarily has count number equal to 0. Also it resets on overflow so

several events could have the same value

Return: Count number of the event (uint32_t)

Arguments: None

uint32_t Event::GetTriggerTimeTag() const

Description:

Return: $(uint32_t)$

4.4 Class Parser

Defined in CaenParser.h

Description

This class is designed for processing binary files produced by WD. Main function of **Parser** class is to translate raw data in WD's binaries into understandable information — events — represented by **Event** class.

public members

Parser::Parser(Board board)

Description: Constructor

Arguments: **Board board** - model of a digitizer

void Parser::SetPathToFile(const std::string& pathToFile)

Description: Used to specify path to binary file to be working with. NOTE: this member

function calls **Reset** member so setting new path changes object's state

Return: None

Arguments: const std::string& pathToFile - path to WD's binary file. Could be either absolute

or relative. NOTE: it must be a full name including

the extension if present.

bool Parser::ReadEventAt(pos_t pos, Event& event) const

Description: Tries to read the event started from a given position in the file. Note const

specifier. In the context this means that this member doesn't change parser's state (in comparison with **ReadEvent** member). Usually used when reading

individual event.

Return: true if the event has been read and filled successfully. false otherwise. (bool)

Arguments: **pos_t pos -** position (absolute) in the file where reading an event

should start

Event& event - event to be filled

bool Parser::ReadEvent(Event& event)

Description: Tries to read the event started from the position next to the last byte of pre-

viously read event. If succeeded this member function *changes* parser's state (in comparison with **ReadEventAt** member): increments number of read events, updates position indicator for the next reading, etc. Usually used when reading

group of events.

Return: **true** if an event has been read and filled successfully. **false** otherwise. (bool)

Arguments: Event& event - event to be filled

size_t Parser::GetNEvents() const

Description: Should be used to determine how many events are successfully read so far.

Return: Current value of nEvents data member (size_t)

Arguments: None

void Parser::Reset()

Description: Sets all data members to their initial values

Return: None
Arguments: None

void Parser::PrintCurrentPosition() const

Description: Prints byte-position in the file is being parsed next to the last successfully

read event in hexadecimal. This member function is used, for example, in ${\tt ReadEventAt}$ member function in order to notify user where an error occured

while trying to parse the file

Return: None Arguments: None

void Parser::Print() const

Description: Prints object in a nice human-readable form

Return: None Arguments: None

4.5 Class Analyzer

Defined in CaenAnalyzer.h

Description

This class is designed to analyze events. Under analysis it is assumed obtaining some *secondary* information about an event: baseline position, integral over a given time interval, etc. This class works with **Event** objects in the *read-only* mode i.e. it doesn't change their states.

public enums

Analyzer::BASELINE

Description: Enumerates the names of available methods for baseline calculation.

AVERAGE - Calculate baseline as the average value over a given time interval:

$$V_0 = \frac{1}{N_T} \sum_{t_i \in [0,T]} V(t_i),$$

where

 $V(t_i)$ — voltage at time t_i

T — time interval in μ s

 N_T — number of points within the specified time interval T

MODE - Calculate baseline as the most frequent value (mode) in a given time

interval

Values: AVERAGE, MODE

public members

Analyzer::Analyzer()

Description: Constructor

Arguments: None

void Analyzer::Analyze(const Event& event)

Description: Performs simple analysis on a waveform:

• baseline calculation

• integral calculation

• max and min points searching

• peak-to-peak calculation

After the invocation results of analysis are available through corresponding

getterss (see below).

Note that this member function doesn't change the event's state.

Return: None

Arguments: const Event& event - event to be analysed

void Analyzer::SetGate(double start, double stop)

Description: Should be used to specify limits of integration. Integration is calculated as the sum of point displacements from the baseline:

integral =
$$\pm \sum_{t_i \in [\text{start,stop}]} (V(t_i) - V_0) \Delta t$$
,

where

 $V(t_i)$ — voltage at time t_i

 V_0 — baseline level

 Δt — sampling time

The sign — plus or minus — depends on a signal polarity and is chosen so the integral of unipolar signal is positive.

NOTE: There is no check or validation of provided values. For example, if you provided incorrect limits such as start > stop it wouldn't be a warning or anything and the integral would be equal to 0.

Return: None

Arguments: **double start** - left limit of integration (in μ s)

dobule stop - right limit of integration (in μ s)

void Analyzer::SetBaselineInterval(double T)

Description: Should be used to specify time interaval which will be used to calculate the

baseline level of a signal (see Analyzer::BASELINE). Default is AVERAGE

Return: None

Arguments: **double T -** length of the interval started from the beginning (in

 μ s) used in the baseline calculation.

void Analyzer::SetBaselineMethod(Analyzer::BASELINE method)

Description: Should be used to choose how to calculate baseline of a signal

(see Analyzer::BASELINE)

Return: None

Arguments: Analyze::BASELINE method - enumerated method's name

double Analyzer::GetGateInterval() const

Description: Should be used to get time difference between limits of integration

Return: Length of integration interval (in μ s) (double)

Arguments: None

double Analyzer::GetIntegralStart() const

Description: Should be used to get left limit of integration

Return: Start of integration (in μ s) (double)

Arguments: None

double Analyzer::GetIntegralStop() const

Description: Should be used to get right limit of integration

Return: End of integration (in μ s) (double)

double Analyzer::GetBaseline() const

Description: Should be used to get baseline (zero level) of a signal

Return: Baseline level (in mV) (double)

Arguments: None

Point Analyzer::GetMaxPoint() const

Description: Should be used to get the point with the maximum positive displacement from

baseline

Return: Maximum positive point (Point)

Arguments: None

Point Analyzer::GetMinPoint() const

Description: Should be used to get the point with the maximum negative displacement from

baseline

Return: Maximum negative point (Point)

Arguments: None

double Analyzer::GetPkPk() const

Description: Should be used to get voltage difference between positive and negative ex-

tremum in a waveform.

Return: Peak-to-peak value (in mV) (double)

Arguments: None

double Analyzer::GetIntegral() const

Description: Should be used to get result of integration

Return: Integral value (in $mV \cdot \mu s$) (double)

class CaenTreeCreator (ROOT) 4.6

Description

This class is used to create a **TTree** from binaries

public enums

CaenTreeCreator::SAMPLE

Description: Should be used to choose what directories to include when constructing a tree.

See the ${\tt CaenTreeCreator::CreateTree}$ function

Values: ALL, INCLUDE, EXCLUDE

public members

CaenTreeCreator::CaenTreeCreator(caen::Board board, const std::string& pathToDataDir, const std::string& pathToTreeFile, const std::string& treeFileName)

Description: Constructor

Arguments: caen::Board board - ADC model

Must be of the same model as the one

used to record data

const std::string& pathToDataDir

const std::string& pathToTreeFile - A valid path where the .root file will be placed const std::string& treeFileName

- Name of the .root file with the resulting Trees

- A valid path to the data directory (see Sec.3.2)

(without an extension)

void CaenTreeCreator::SetPathToDataDir(const std::string& pathToDataDir)

Description: Should be used to set path to the data directory

Return:

Arguments: const std::string& pathToDataDir - A valid path to the directory which will be used

to iterate through to create TTrees

void CaenTreeCreator::SetPathToTreeFile(const std::string& pathToTreeFile)

Should be used to set path to the file with the resulting TTrees Description:

Return: None

const std::string& pathToTreeFile - A valid path where the .root file with Arguments:

the resulting TTrees will be placed

void CaenTreeCreator::SetTreeFileName(const std::string& treeFileName)

Should be used to set the name of the resulting .root file to which the Description:

resulting **Tree**s will be written

Return: None

const std::string& treeFileName - Name of the file (without an extension) Arguments:

void CaenTreeCreator::SetIntervals(Double_t baselineTime, Double_t integralStart, Double_t integralStop

Description: Should be used to set the analysis config

Return: None

)

Arguments: Double_t baselineTime - the right edge

of the interval for the baseline calculation

Double_t integralStart - time to start integration

Double_t integralStop - time to stop integration

std::string CaenTreeCreator::GetPathToDataDir() const

Description: Should be used to get current path to the data directory

Return: Path to the data directory

Arguments: None

std::string CaenTreeCreator::GetPathToTreeFile() const

Description: Should be used to get current path to the file with the resulting TTrees

Return: Path to the file

Arguments: None

std::string CaenTreeCreator::GetTreeFileName() const

Description: Should be used to get the current name of the file which the resulting

TTrees to write to

Return: Name of the file (without an extension)

void CaenTreeCreator::CreateTree(SAMPLE mode = ALL, const std::string& target = "")

Description: Create a TTree from binaries

Return: None

Arguments: mode - CaenTreeCreator::SAMPLE::ALL,

CaenTreeCreator::SAMPLE::INCLUDE
or CaenTreeCreator::SAMPLE::EXCLUDE

target - target directory name which is used to create a TTree:

if the first argument mode is CaenTreeCreator::SAMPLE::ALL then this

argument is ignored and all the subdirectories will be used.

If mode is CaenTreeCreator::SAMPLE::INCLUDE then only the directory

named target will be used.

If mode is CaenTreeCreator::SAMPLE::EXCLUDE then all the directories

will be used except the one named target