

	ns FYVE S1 SOP	Document No – <i>LI/QM/SOP/AI/CPAP</i>	
Assembly Instructions		Version No.	03
New Effective Date:		Issuing Date: 26-09-2018	

Assembly instruction for CPAP device

Step 1.	1 Prepare the cut outs in the mai	n enclosure
Step	Instruction	Image
1.0	Make a 40mm X 50mm clearance for cable inlet at any of the side walls of the enclosure.	40mm x 50mm cutout for cable entry Fig. 0
	Note the location of the flowmeter installation cavity.	
1.2	Place it as shown	Fig.2



	ns FYVE S1 SOP	Document No – <i>LI/QM/SOP/AI/CPAP</i>	
Assembly Instructions		Version No.	03
New Revised	Effective Date:	Issuing Date	e: 26-09-2018

1.3	Fix the screws to keep the flowmeter in place.	Fig.3
1.4	Cut two PVC tubes of 250mm & 120mm length & connect the elbow connectors to the tubes as shown in the picture.	Fig.4
1.5	Connect the tubes to the flowmeter. There are no threads built in to the plastic connectors, tighten the elbow connectors carefully & the metal threads will automatically cut the plastic & make an airtight threading.	Fig.5



Lattice Innovations FYVE S1 SOP Assembly Instructions		Document No – LI/QM/SOP/AI/CPAP Version 03 No.	
New Revised Effective Date:		Issuing Date	e: 26-09-2018

1.6	Drill two holes of 5mm 65mm apart and fix the holder in that location.				
1.7	Prepare the PEEP bot assembly		Fig. 10 -1 -1 -1 -1 -1 -1 -1 -1 -1 -1 -1 -1 -1	g.6	Fig.7
	PEEP bottle to be moushown.	inted as	-10 -10 -7 -7 -6 -3 -2 -1		Fig.8



Lattice Innovations FYVE S1 SOP Assembly Instructions		Document No – LI/QM/SOP/AI/CPAP Version 03 No.	
New Revised	Effective Date:		e: 26-09-2018

Prepare the base-plate for compressor mounting.

Placement of the holes may differ depending on their actual mounting arrangement

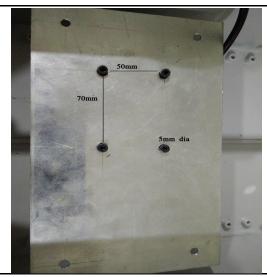


Fig.9

1.8 Assemble the pump & place it in the mounting holes.

Make 4 mounting holes for placing the baseplate inside the enclosure. Dimension: 190mm X 90mm



Fig.10

Connect the compressor outlet to the flowmeter inlet as shown.


The outlet of the flowmeter to be connected to the inlet of the humidifier.



Fig.11



	ns FYVE S1 SOP	Document No – <i>LI/QM/SOP/AI/CPAP</i>	
Assembly Instructions		Version No.	03
New Revised	Effective Date:	Issuing Date	e: 26-09-2018

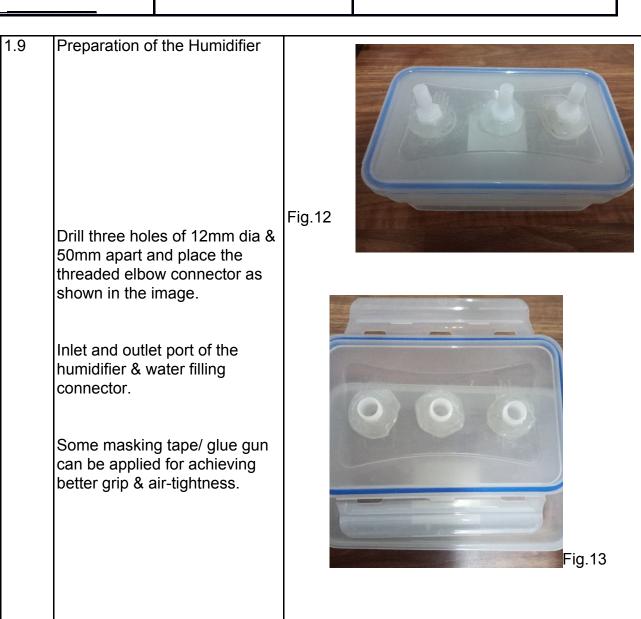



	ns FYVE S1 SOP	Document No – LI/QM/SOP/AI/CPAP	
Assembly Instructions		Version No.	03
New Revised	Effective Date:	Issuing Date	e: 26-09-2018

1.10	the system to humidifier.	s set at the top of fill water in the nidifier chamber riate place.	Fig.14	
1.11	The final plac compressor &			Fig.15
1.12	at the center of bottle & place connector & 1 of 12mm inter Drill 4 holes of at the cap of tinsert luer locatube will be confident or 100mm.	80mm PVC pipe rnal diameter. f 5mm diameter he bottle to k tubing. This onnected to a l syringe for ucing water to	DOMESTIC DESIRENC DESIRENC DESIRENCE DESIRENCE DESIRENCE DESIRENCE DE SERVICIO	Fig.16



	ns FYVE S1 SOP	Document No – <i>LI/QM/SOP/AI/CPAP</i>	
Assembly Instructions		Version No.	03
New Revised	Effective Date:	Issuing Date	e: 26-09-2018

1.13	Cut a 115mm tube & place it in between the humidifier chamber outlet & Y connector. Connect the nasal cannula & tubing to the wye connector.	Fig.17
1.14	Assembled bubble CPAP	Fig. 18