
# AC02 BLE Sugar

# 1. 概要

Silicon Labs の技的認証済み BLE モジュール BGM11S22F256GA-V2 を搭載したリーフである。 MCU リーフとは UART で接続される。

## 2. リーフ仕様

### 2-1. ブロック図

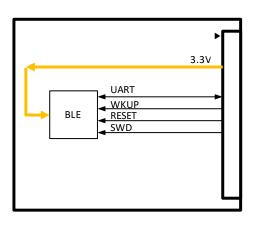


#### 2-2. 電源仕様

Symbol	Parameter	Condition	Min.	Тур.	Max.
Vdd	Power Supply Voltage	-	2.4V	3.3V	3.8V
Idd	Operating current	Active	ı	3.8mA	-
		Sleep	-	2.8uA	-

#### 2-3. 主要部品

部品番号	部品名	型番	ベンダー名	備考
IC200	BLE モジュール	BGM11S22F256GA-V2	Silicon Labs	_

### 2-4. 外観

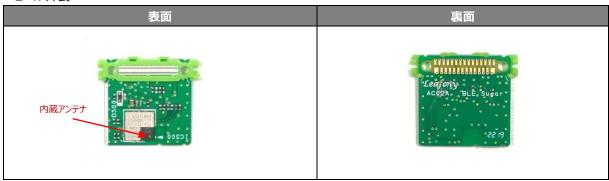

### 2-5. ピンアウト

Name	Function
A2	TXD: UART 送信 チップ抵抗の付け替えで D9 に変更可
A1	RXD: UART 受信 チップ抵抗の付け替えで D8 に変更可
D7	WAKEUP: ウエイクアップ H: ウエイクアップ
RESET	RST: リセット
SWCLK	デバッグ I/F クロック
SWDIO	デバッグ I/F データ入出力
3V3	3.3V 入力
GND	GND

# 3. BLE モジュール(BGM11S22F256GA-V2)仕様

# 3-1. 概要

項目	内容
SoC	EFR32BG1 (ARM Cortex-M4)
Bluetooth version	4.2
Frequency range	2400M ~ 2483.5MHz
Internet Security	General Purpose CRC
	Random Number Generator
	Hardware Cryptographic Acceleration for AES 128/256,SHA-1,
	SHA-2 (SHA-224 and SHA-256) and ECC
RX sensitivity	-90 dBm @ 1 Mbit/s GFSK
TX power	+8dBm
RF certification	CE, full FCC, ISED Canada, Japan and South-Korea
Flash	256KB
RAM	32KB
Interfaces	UART

### 3-2. 電気的特性

## 3-2-1. 最大定格

Parameter	Value
Operating Temperature	-40℃ to +85℃
Maximum Operation Voltage	3.8V

### 3-2-2. 定格

Symbol	Parameter	Condition	Min.	Тур.	Max.
Vdd	Power Supply Voltage	_	2.4V	3.3V	3.8V
Idd	EM0 Active mode	38 MHz HFRCO	-	3.8mA	3.99mA
		all peripherals disabled			
	EM1 Sleep mode	38 MHz HFRCO	-	1.33mA	1.44mA
		all peripherals disabled			

ıA -
ıA 6uA
ıA -
ıA 0.20uA
nA -
nA -
ıA -
nA -

### 3-3. データシートリンク先

https://jp.silabs.com/products/wireless/bluetooth/bluetooth-low-energy-modules/bgm11s-bluetooth-sip-module

#### 3-4. 主な関数とライブラリ

3-4-1. BLE の制御

include file : BGLib.h(Leaf Libraies)

関数	概要
BGLib ble112( HardwareSerial	BGLib のインスタンスを作成します
*module, HardwareSerial *output,	【構文】
uint8_t pMode )	BGLib ble112(HardwareSerial *module, HardwareSerial *output,
	pMode)
	【パラメータ】
	ble112: インスタンス名
	module: BLE リーフと通信するシリアルポートののインスタンス
	output: BLE リーフが出力するシリアルポートののインスタンス Null 固定
	pMode: パケットモード 0固定
	【戻り値】
	なし

ble112.ble_cmd_le_gap_set_adv_p	アドバタイズのパラメータ設定を行います
arameters( interval_min,	【構文】
interval_max, channnel_map )	ble_cmd_le_gap_set_adv_parameters( uint16 interval_min,
_ , _ ,	uint16 interval_max, uint8 channnel_map )
	【パラメータ】
	ble112: インスタンス名
	interval_min: Minimum advertising interval. Value in units of
	0.625 ms
	Range: 0x20 to 0xFFFF
	• Time range: 20 ms to 40.96 s
	Default value: 100 ms
	interval_max:Maxmum advertising interval. Value in units of
	0.625 ms
	Range: 0x20 to 0xFFFF
	• Time range: 20 ms to 40.96 s
	Default value: 200 ms
	channel_map: Advertising channel map which determines which
	of the three
	channels will be used for advertising. This value is given as a
	bitmask.
	• 1: Advertise on CH37
	• 2: Advertise on CH38
	• 3: Advertise on CH37 and CH38
	• 4: Advertise on CH39
	• 5: Advertise on CH37 and CH39
	6: Advertise on CH38 and CH39
	• 7: Advertise on all channels
	Default value: 7
	【戻り値】
	0
ble112.ble_cmd_le_gap_discover(	Bluetooth discovery mode 設定
mode )	【構文】
	ble_cmd_le_gap_discover( uint8 mode )
	【パラメータ】
	ble112: インスタンス名
	mode: discovery mode
	enum_le_gap_discover_mode 参照
	【戻り値】
	0

ble112.ble_cmd_le_gap_set_adv_d	アドバタイズデータの設定を行います
ata( scan_rsp, adv_data_len,	【構文】
adv_data );	ble_cmd_le_gap_set_adv_data( uint8 scan_rsp, uint8
	adv_data_len, const uint8 *adv_data_data )
	【パラメータ】
	ble112: インスタンス名
	scan_rsp: This value selects if the data is intended for
	advertising packets,scan response packets or advertising packet
	in OTA. Values:
	0: Advertising packets
	• 1: Scan response packets
	2: OTA advertising packets
	4: OTA scan response packets
	adv_data_len:設定するアドバタイズデータ長
	最大 31 バイト
	adv_data_data:アドバタイズデータ
	【戻り値】
	0
ble112.ble_cmd_le_gap_start_adve	アドバタイズを開始します
rtising(handle, discover, connect)	【構文】
	ble_cmd_le_gap_start_advertising( uint8 handle, uint8 discover,
	uint8 connect )
	【パラメータ】
	ble112: インスタンス名
	handle: BLE leaf handle
	discover:Discoverable mode
	enum_le_gap_discoverable_mode 参照
	connect: Connectable mode
	enum_le_gap_connectable_mode 参照
	【戻り値】
	0
ble112.ble_cmd_le_gap_stop_adve	アドバタイズを終了します
rtising( handle )	【構文】
	ble_cmd_le_gap_stop_advertising( uint8 handle )
	【パラメータ】
	ble112: インスタンス名
	【戻り値】
	0
L	

blotto obsol(Astivite / Line L \	ウダギャフナッチャナナ
ble112.checkActivity( timeout )	応答があるまで待ちます
	【構文】
	checkActivity( uint16_t timeout )
	【パラメータ】
	ble112: インスタンス名
	timeout: タイムアウト値 ms
	【戻り値】
	0 :nobusy
	1 :busy
ble112.ble_cmd_gatt_set_characte	GATT Server に notification を設定します
ristic_notification(connection,	【構文】
characteristic, flags)	ble_cmd_gatt_set_characteristic_notification( uint8 connection,
	uint16 characteristic, uint8 flags )
	【パラメータ】
	ble112: インスタンス名
	connection: Connection handle
	characteristic:GATT characteristic handle
	flags: Characteristic client configuration flags
	0: Disable notifications and indications
	• 1: Notification
	• 2: Indication
	【戻り値】
	【戻り値】 O
ble112.ble_cmd_gatt_server_send_	
ble112.ble_cmd_gatt_server_send_characteristic_notification( connecti	0
_	0 GATT clients に notification を送信します
characteristic_notification( connecti	0 GATT clients に notification を送信します 【構文】
characteristic_notification( connection, characteristic, value_len, (const	0 GATT clients に notification を送信します 【構文】 ble_cmd_gatt_server_send_characteristic_notification( uint8
characteristic_notification( connection, characteristic, value_len, (const	0 GATT clients に notification を送信します 【構文】 ble_cmd_gatt_server_send_characteristic_notification( uint8 connection, uint16 characteristic, uint8 value_len, const uint8
characteristic_notification( connection, characteristic, value_len, (const	0 GATT clients に notification を送信します 【構文】 ble_cmd_gatt_server_send_characteristic_notification( uint8 connection, uint16 characteristic, uint8 value_len, const uint8 *value_data )
characteristic_notification( connection, characteristic, value_len, (const	の GATT clients に notification を送信します 【構文】 ble_cmd_gatt_server_send_characteristic_notification( uint8 connection, uint16 characteristic, uint8 value_len, const uint8 *value_data ) 【パラメータ】
characteristic_notification( connection, characteristic, value_len, (const	GATT clients に notification を送信します 【構文】 ble_cmd_gatt_server_send_characteristic_notification( uint8 connection, uint16 characteristic, uint8 value_len, const uint8 *value_data ) 【パラメータ】 ble112: インスタンス名 connection: Connection handle
characteristic_notification( connection, characteristic, value_len, (const	0 GATT clients に notification を送信します 【構文】 ble_cmd_gatt_server_send_characteristic_notification( uint8 connection, uint16 characteristic, uint8 value_len, const uint8 *value_data ) 【パラメータ】 ble112: インスタンス名 connection: Connection handle • 0xff: Sends notification or indication to all connected
characteristic_notification( connection, characteristic, value_len, (const	の GATT clients に notification を送信します 【構文】 ble_cmd_gatt_server_send_characteristic_notification( uint8 connection, uint16 characteristic, uint8 value_len, const uint8 *value_data ) 【パラメータ】 ble112: インスタンス名 connection: Connection handle
characteristic_notification( connection, characteristic, value_len, (const	の GATT clients に notification を送信します 【構文】 ble_cmd_gatt_server_send_characteristic_notification( uint8 connection, uint16 characteristic, uint8 value_len, const uint8 *value_data ) 【パラメータ】 ble112: インスタンス名 connection: Connection handle  • 0xff: Sends notification or indication to all connected devices.  • Other: Connection handle
characteristic_notification( connection, characteristic, value_len, (const	の GATT clients に notification を送信します 【構文】 ble_cmd_gatt_server_send_characteristic_notification( uint8 connection, uint16 characteristic, uint8 value_len, const uint8 *value_data ) 【パラメータ】 ble112: インスタンス名 connection: Connection handle
characteristic_notification( connection, characteristic, value_len, (const	GATT clients に notification を送信します 【構文】 ble_cmd_gatt_server_send_characteristic_notification( uint8 connection, uint16 characteristic, uint8 value_len, const uint8 *value_data ) 【パラメータ】 ble112: インスタンス名 connection: Connection handle
characteristic_notification( connection, characteristic, value_len, (const	GATT clients に notification を送信します 【構文】 ble_cmd_gatt_server_send_characteristic_notification( uint8 connection, uint16 characteristic, uint8 value_len, const uint8 *value_data ) 【パラメータ】 ble112: インスタンス名 connection: Connection handle
characteristic_notification( connection, characteristic, value_len, (const	GATT clients に notification を送信します 【構文】 ble_cmd_gatt_server_send_characteristic_notification( uint8 connection, uint16 characteristic, uint8 value_len, const uint8 *value_data ) 【パラメータ】 ble112: インスタンス名 connection: Connection handle
characteristic_notification( connection, characteristic, value_len, (const	GATT clients に notification を送信します 【構文】 ble_cmd_gatt_server_send_characteristic_notification( uint8 connection, uint16 characteristic, uint8 value_len, const uint8 *value_data ) 【パラメータ】 ble112: インスタンス名 connection: Connection handle
characteristic_notification( connection, characteristic, value_len, (const	GATT clients に notification を送信します 【構文】 ble_cmd_gatt_server_send_characteristic_notification( uint8 connection, uint16 characteristic, uint8 value_len, const uint8 *value_data ) 【パラメータ】 ble112: インスタンス名 connection: Connection handle

ble112.ble_cmd_gatt_write_charac	GATT Server に notification を設定します
teristic_value(connection,	
characteristic, value_len,	ble_cmd_gatt_write_characteristic_value( uint8 connection,
*value_data);	uint16 characteristic, uint8 value_len, const uint8 *value_data )
value_uata),	【パラメータ】
	かしメーラ』   ble112: インスタンス名
	connection: Connection handle
	characteristic:GATT characteristic handle
	value_len:Characteristic value length
	value_data:Characteristic value
	【戻り値】
	0
ble112.ble_cmd_le_gap_set_scan_	スキャンパラメータを設定します
parameters(scan_interval,	【構文】
scan_window, active)	ble_cmd_le_gap_set_scan_parameters( uint16 scan_interval,
	uint16 scan_window, uint8 active )
	【パラメータ】
	ble112: インスタンス名
	scan_interval: Scanner interval
	• Time = Value x 0.625 ms
	• Range: 0x0004 to 0x4000
	• Time Range: 2.5 ms to 10.24 s
	Default value: 10 ms
	scan_window: Scan window. The duration of the scan.
	• Time = Value x 0.625 ms
	• Range: 0x0004 to 0x4000
	• Time Range: 2.5 ms to 10.24 s
	Default value: 10 ms Note that packet reception is aborted if it
	has been started before scan window ends.
	active : Scan type indicated by a flag
	• 0: Passive scanning
	• 1: Active scanning
	Default value: 0
	【戻り値】
	0
ble112.ble_cmd_le_gap_end_proce	current GAP procedure の使用を停止します
dure()	【構文】
	ble_cmd_le_gap_end_procedure( void )
	【パラメータ】
	ble112: インスタンス名
	【戻り値】
	0

11.440.11	
ble112.ble_cmd_le_gap_connect(a	デバイスと接続します
ddress, address_type,	【構文】
initiating_phy)	ble_cmd_le_gap_connect( bd_addr address, uint8 address_type,
	uint8 initiating_phy )
	【パラメータ】
	ble112: インスタンス名
	address: Address of the device to connect to
	address_type: Address type of the device to connect to
	enum_le_gap_address_types 参照
	initiating_phy:The initiating PHY.
	• 1: LE 1M PHY
	• 4: LE Coded PHY
	【戻り値】
	0
ble112.ble_cmd_le_connection_clos	デバイスを切断します
e(connection)	【構文】
	ble_cmd_le_connection_close(uint8 connection)
	【パラメータ】
	ble112: インスタンス名
	connection: Handle of the connection
	【戻り値】
	0
ble112.ble_cmd_system_reset(boot	られた   システムリセットを実行します
	【構文】
_in_dfu)	
	ble_cmd_system_reset(uint8 boot_in_dfu)
	【パラメータ】
	ble112: インスタンス名
	boot_in_dfu: Boot mode
	0: Normal reset
	• 1: Boot to UART DFU mode
	• 2: Boot to OTA DFU mode
	【戻り値】
	0
ble112.ble_cmd_system_halt(halt)	SLEEP モードへ移行します
	【構文】
	ble_cmd_system_halt(uint8 halt)
	「パラメータ]
	ble112: インスタンス名
	halt: halt mode
	• 1: halt
	• 0: resume
	<b>I</b> = 0/±1
	【戻り値】
	0

ble112.getLastEvent()	最後に受信したイベントを返します
	【構文】
	getLastEvent()
	【パラメータ】
	ble112: インスタンス名
	【戻り値】
	lastEvent[0] : Message class: System
	lastEvent[1] :Message ID

### enum\_le\_gap\_connectable\_mode

Value	Name	Description
0	le_gap_non_connectable	Non-connectable non-scannable.
1	le_gap_directed_connectable	Directed connectable (RESERVED, DO NOT USE)
2	le_gap_undirected_connectable	Undirected connectable scannable.
		Deprecated, replaced by enum le_gap_connectable_
		scannable.
		This mode can only be used in legacy advertising
		PDUs.
2	le_gap_connectable_scannable	Undirected connectable scannable. This mode can
		only be used in legacy advertising PDUs.
3	le_gap_scannable_non_connectable	Undirected scannable (Non-connectable but responds
		to scan requests)
4	le_gap_connectable_non_scannable	Undirected connectable non-scannable. This mode
		can only be used in extended advertising PDUs.

### enum\_le\_gap\_discoverable\_mode

Value	Name	Description
0	le_gap_non_discoverable	Not discoverable
1	le_gap_limited_discoverable	Discoverable using both limited and general
		discovery procedures
2	le_gap_general_discoverable	Discoverable using general discovery procedure
3	le_gap_broadcast	Device is not discoverable in either limited or generic
		discovery procedure, but may be discovered by using
		the Observation procedure
4	le_gap_user_data	Send advertising and/or scan response data defined
		by the user using le_gap_bt5_set_adv_data. The
		limited/general discoverable flags are defined by the
		user.

# enum\_le\_gap\_discover\_mode

Value	Name	Description
0	le_gap_discover_limited	Discover only limited discoverable devices
1	le_gap_discover_generic	Discover limited and generic discoverable devices
2	le_gap_discover_observation	Discover all devices

#### enum\_le\_gap\_address\_type

Value	Name	Description
0	le_gap_address_type_public	Public address
1	le_gap_address_type_random	Random address
2	le_gap_address_type_public_identit	Public identity address resolved by stack
	У	
3	le_gap_address_type_random_iden	Random identity address resolved by stack
	tity	

#### 3-5. イベントコールバック関数

イベントコールバック関数	概要
ble_evt_gatt_server_	ローカル GATT データベース内のアトリビュート値が、リモート GATT クライアントによって変更されたと
attribute_value	きに呼ばれるコールバック関数ポインタ
	【構文】
	name.ble_evt_gatt_server_attribute_value =
	my_evt_gatt_server_attribute_value;
ble_evt_le_connectio	セントラルと接続したときに呼ばれるコールバック関数ポインタ
n_opend	【構文】
	nameble_evt_le_connection_opend = my_evt_le_connection_opend;
ble_evt_le_connectio	セントラルと接続が終了したときに呼ばれるコールバック関数ポインタ
n_closed	【構文】
	name.ble_evt_le_connection_closed = my_evt_le_connection_closed;
ble_evt_system_boot	システムが起動したときに呼ばれるコールバック関数ポインタ
	【構文】
	name.ble_evt_system_boot = my_evt_system_boot;
ble_evt_system_awa	システムがスリープモードから復帰したときに呼ばれるコールバック関数ポインタ
ke	【構文】
	name.ble_evt_system_awake = my_evt_system_awake;
ble_evt_le_gap_scan	スキャン応答を受信した時に呼ばれるコールバック関数ポインタ
_response	【構文】
	name.ble_evt_le_gap_scan_response = my_evt_le_gap_scan_response;

#### 3-6. 省電力

BLE の省電力は下記関数により Sleep モードに移行する。

関数:ble112.ble\_cmd\_system\_halt(1)

D7の WAKEUP 信号を High にすることにより Wakeup する。

## 4. 変更履歴

Rev A1.0: 2019年8月初版