AC02 BLE Sugar 仕様書

1 概要

Silicon Labsの技的認証済みBLEモジュールBGM11S22F256GA-V2を搭載したリーフである。MCUリーフとはUARTで接続される。

2 リーフ仕様

2.1 ブロック図

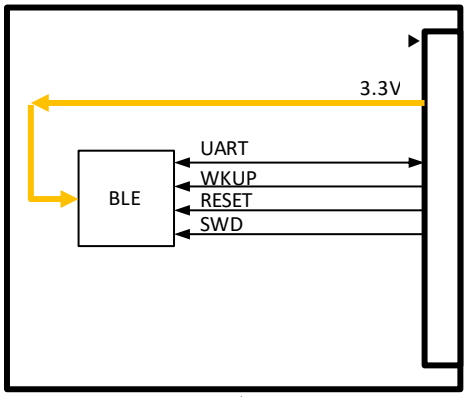

図 2.1 ブロック図

2.2 電源仕様

Symbol	Parameter	Condition	Min.	Typ.	Max.
Vdd	Power Supply Voltage	–	2.4V	3.3V	3.8V
Idd	Operating current	Active	-	3.8mA	-
		Sleep	-	2.8uA	-

2.3 主要部品

部品番号	部品名	型番	ベンダー名	備考
IC200	BLE モジュール	BGM11S22F256GA-V2	Silicon Labs	–

2.4 外観

表面	裏面
	

2.5 ピンアサイン

Name	Function
A2	TXD:UART 送信 チップ抵抗の付け替えで D9 に変更可。
A1	RXD:UART 受信 チップ抵抗の付け替えで D8 に変更可。
D7	WAKEUP:ウエイクアップ H:ウエイクアップ
RESET	RST:リセット
SWCLK	デバッグ I/F クロック
SWDIO	デバッグ I/F データ入出力
3V3	3.3V 入力
GND	GND

3 BLE モジュール(BGM11S22F256GA-V2)仕様

3.1 概要

項目	内容
SoC	EFR32BG1 (ARM Cortex-M4)
Bluetooth version	4.2
Frequency range	2400M ~ 2483.5MHz
Internet Security	• General Purpose CRC • Random Number Generator • Hardware Cryptographic Acceleration for AES 128/256,SHA-1, SHA-2 (SHA-224 and SHA-256) and ECC
RX sensitivity	-90 dBm @ 1 Mbit/s GFSK
TX power	+8dBm
RF certification	CE, full FCC, ISED Canada, Japan and South-Korea
Flash	256KB
RAM	32KB
Interfaces	UART

3.2 電気的特性

3.2.1 最大定格

Parameter	Value
Operating Temperature	-40℃ to +85℃
Maximum Operation Voltage	3.8V

3.2.2 定格

Symbol	Parameter	Condition	Min.	Typ.	Max.
Vdd	Power Supply Voltage	—	2.4V	3.3V	3.8V
Idd	EM0 Active mode	38 MHz HFRCO all peripherals disabled	-	3.8mA	3.99mA
	EM1 Sleep mode	38 MHz HFRCO all peripherals disabled	-	1.33mA	1.44mA
	EM2 Deep Sleep mode	Full RAM retention and RTCC running from LFXO	-	33uA	-
	EM3 Stop mode	Full RAM retention and CRYOTIMER running from ULFRCO	-	2.8uA	6uA
	EM4H Hibernate mode	128 byte RAM retention, RTCC running from LFXO	-	1.1uA	-
	EM4S Shutoff mode	no RAM retention, no RTCC	-	0.04uA	0.20uA
	Receive mode, active packet reception (MCU in	1 Mbit/s, 2GFSK, F = 2.4 GHz,Radio clock prescaled by 4	-	9.0mA	-

	EM1 @38.4 MHz, peripheral clocks disabled)				
	Transmit mode (MCU in EM1@ 38.4 MHz, peripheral clocks disabled)	0 dBm output power, Radio clock prescaled by 3	-	8.2mA	-
		2 dBm output power	-	16.5mA	-
		8 dBm output power	-	24.6mA	-

3.3 データシートリンク先

https://jp.silabs.com/products/wireless/bluetooth/bluetooth-low-energy-modules/bgm11s-bluetooth-sip-module

3.4 主な関数とライブラリ

3.4.1 BLEの制御

include file：BGLib.h(Leaf Libraies)

関数	概要
BGLib ble112(HardwareSerial *module, HardwareSerial *output, uint8_t pMode)	BGLib のインスタンスを作成します。 【構文】 BGLib ble112(HardwareSerial *module, HardwareSerial *output, pMode) 【パラメータ】 ble112: インスタンス名 module: BLE リーフと通信するシリアルポートののインスタンス output: BLE リーフが出力するシリアルポートののインスタンス Null 固定 pMode: パケットモード 0固定 【戻り値】 なし
ble112.ble_cmd_le_gap_set_adv_parameters(interval_min, interval_max, channnel_map)	アドバタイズのパラメータ設定を行います。 【構文】 ble_cmd_le_gap_set_adv_parameters(uint16 interval_min, uint16 interval_max, uint8 channnel_map) 【パラメータ】 ble112: インスタンス名 interval_min: Minimum advertising interval. Value in units of 0.625 ms • Range: 0x20 to 0xFFFF • Time range: 20 ms to 40.96 s Default value: 100 ms interval_max:Maxmum advertising interval. Value in units of 0.625 ms • Range: 0x20 to 0xFFFF • Time range: 20 ms to 40.96 s Default value: 200 ms channel_map: Advertising channel map which determines which of the three channels will be used for advertising. This value is given as a bitmask. • 1: Advertise on CH37 • 2: Advertise on CH38 • 3: Advertise on CH37 and CH38 • 4: Advertise on CH39 • 5: Advertise on CH37 and CH39 • 6: Advertise on CH38 and CH39 • 7: Advertise on all channels Default value: 7 【戻り値】 0

ble112.ble_cmd_le_gap_discover(mode)	Bluetooth discovery mode 設定 【構文】 ble_cmd_le_gap_discover(uint8 mode) 【パラメータ】 ble112: インスタンス名 mode: discovery mode enum_le_gap_discover_mode 参照 【戻り値】 0
ble112.ble_cmd_le_gap_set_adv_data(scan_rsp, adv_data_len, adv_data);	アドバタイズデータの設定を行います。 【構文】 ble_cmd_le_gap_set_adv_data(uint8 scan_rsp, uint8 adv_data_len, const uint8 *adv_data_data) 【パラメータ】 ble112: インスタンス名 scan_rsp: This value selects if the data is intended for advertising packets,scan response packets or advertising packet in OTA. Values: • 0: Advertising packets • 1: Scan response packets • 2: OTA advertising packets • 4: OTA scan response packets adv_data_len:設定するアドバタイズデータ長 最大 31 バイト adv_data_data:アドバタイズデータ 【戻り値】 0
ble112.ble_cmd_le_gap_start_advertising(handle, discover, connect)	アドバタイズを開始します。 【構文】 ble_cmd_le_gap_start_advertising(uint8 handle, uint8 discover, uint8 connect) 【パラメータ】 ble112: インスタンス名 handle: BLE leaf handle discover:Discoverable mode enum_le_gap_discoverable_mode 参照 connect: Connectable mode enum_le_gap_connectable_mode 参照 【戻り値】 0
ble112.ble_cmd_le_gap_stop_advertising(handle)	アドバタイズを終了します。 【構文】 ble_cmd_le_gap_stop_advertising(uint8 handle) 【パラメータ】 ble112: インスタンス名 【戻り値】 0
ble112.checkActivity(timeout)	応答があるまで待ちます。 【構文】 checkActivity(uint16_t timeout) 【パラメータ】 ble112: インスタンス名 timeout: タイムアウト値 ms 【戻り値】 0 :nobusy 1 :busy

ble112.ble_cmd_gatt_set_characteristic_notification(connection, characteristic, flags)	GATT Server に notification を設定します。 【構文】 ble_cmd_gatt_set_characteristic_notification(uint8 connection, uint16 characteristic, uint8 flags) 【パラメータ】 ble112: インスタンス名 connection: Connection handle characteristic:GATT characteristic handle flags: Characteristic client configuration flags • 0: Disable notifications and indications • 1: Notification • 2: Indication 【戻り値】 0
ble112.ble_cmd_gatt_server_send_characteristic_notification(connection, characteristic, value_len, (const uint8 *)value_data)	GATT clients に notification を送信します。 【構文】 ble_cmd_gatt_server_send_characteristic_notification(uint8 connection, uint16 characteristic, uint8 value_len, const uint8 *value_data) 【パラメータ】 ble112: インスタンス名 connection: Connection handle • 0xff: Sends notification or indication to all connected devices. • Other: Connection handle characteristic:Characteristic handle enum_le_gap_discoverable_mode 参照 value_len: value length value: Value to be notified or indicated 【戻り値】 0
ble112.ble_cmd_gatt_write_characteristic_value(connection, characteristic, value_len, *value_data);	GATT Server に notification を設定します。 【構文】 ble_cmd_gatt_write_characteristic_value(uint8 connection, uint16 characteristic, uint8 value_len, const uint8 *value_data) 【パラメータ】 ble112: インスタンス名 connection: Connection handle characteristic:GATT characteristic handle value_len:Characteristic value length value_data:Characteristic value 【戻り値】 0

ble112.ble_cmd_le_gap_set_scan_parameters(scan_interval, scan_window, active)	スキャンパラメータを設定します。 【構文】 ble_cmd_le_gap_set_scan_parameters(uint16 scan_interval, uint16 scan_window, uint8 active) 【パラメータ】 ble112: インスタンス名 scan_interval: Scanner interval • Time = Value x 0.625 ms • Range: 0x0004 to 0x4000 • Time Range: 2.5 ms to 10.24 s Default value: 10 ms scan_window: Scan window. The duration of the scan. • Time = Value x 0.625 ms • Range: 0x0004 to 0x4000 • Time Range: 2.5 ms to 10.24 s Default value: 10 ms Note that packet reception is aborted if it has been started before scan window ends. active : Scan type indicated by a flag • 0: Passive scanning • 1: Active scanning Default value: 0 【戻り値】 0
ble112.ble_cmd_le_gap_end_procedure()	current GAP procedure の使用を停止します。 【構文】 ble_cmd_le_gap_end_procedure(void) 【パラメータ】 ble112: インスタンス名 【戻り値】 0
ble112.ble_cmd_le_gap_connect(address, address_type, initiating_phy)	デバイスと接続します。 【構文】 ble_cmd_le_gap_connect(bd_addr address, uint8 address_type, uint8 initiating_phy) 【パラメータ】 ble112: インスタンス名 address: Address of the device to connect to address_type: Address type of the device to connect to enum_le_gap_address_types 参照 initiating_phy:The initiating PHY. • 1: LE 1M PHY • 4: LE Coded PHY 【戻り値】 0
ble112.ble_cmd_le_connection_close(connection)	デバイスを切断します。 【構文】 ble_cmd_le_connection_close(uint8 connection) 【パラメータ】 ble112: インスタンス名 connection: Handle of the connection 【戻り値】 0

ble112.ble_cmd_system_reset(boot_in_dfu)	システムリセットを実行します。 【構文】 ble_cmd_system_reset(uint8 boot_in_dfu) 【パラメータ】 ble112: インスタンス名 boot_in_dfu: Boot mode • 0: Normal reset • 1: Boot to UART DFU mode • 2: Boot to OTA DFU mode 【戻り値】 0
ble112.ble_cmd_system_halt(halt)	SLEEP モードへ移行します。 【構文】 ble_cmd_system_halt(uint8 halt) 【パラメータ】 ble112: インスタンス名 halt: halt mode • 1: halt • 0: resume 【戻り値】 0
ble112.getLastEvent()	最後に受信したイベントを返します。 【構文】 getLastEvent() 【パラメータ】 ble112: インスタンス名 【戻り値】 lastEvent[0] : Message class: System lastEvent[1] :Message ID

enum_le_gap_connectable_mode

Value	Name	Description
0	le_gap_non_connectable	Non-connectable non-scannable.
1	le_gap_directed_connectable	Directed connectable (RESERVED, DO NOT USE)
2	le_gap_undirected_connectable	Undirected connectable scannable. Deprecated, replaced by enum le_gap_connectable_ scannable. This mode can only be used in legacy advertising PDUs.
2	le_gap_connectable_scannable	Undirected connectable scannable. This mode can only be used in legacy advertising PDUs.
3	le_gap_scannable_non_connectable	Undirected scannable (Non-connectable but responds to scan requests)
4	le_gap_connectable_non_scannable	Undirected connectable non-scannable. This mode can only be used in extended advertising PDUs.

enum_le_gap_discoverable_mode

Value	Name	Description
0	le_gap_non_discoverable	Not discoverable
1	le_gap_limited_discoverable	Discoverable using both limited and general discovery procedures
2	le_gap_general_discoverable	Discoverable using general discovery procedure

3	le_gap_broadcast	Device is not discoverable in either limited or generic discovery procedure, but may be discovered by using the Observation procedure
4	le_gap_user_data	Send advertising and/or scan response data defined by the user using le_gap_bt5_set_adv_data. The limited/general discoverable flags are defined by the user.

enum_le_gap_discover_mode

Value	Name	Description
0	le_gap_discover_limited	Discover only limited discoverable devices
1	le_gap_discover_generic	Discover limited and generic discoverable devices
2	le_gap_discover_observation	Discover all devices

enum_le_gap_address_type

Value	Name	Description
0	le_gap_address_type_public	Public address
1	le_gap_address_type_random	Random address
2	le_gap_address_type_public_identity	Public identity address resolved by stack
3	le_gap_address_type_random_identity	Random identity address resolved by stack

3.5 イベントコールバック関数

イベントコールバック関数	概要
ble_evt_gatt_server_attribute_value	ローカル GATT データベース内のアトリビュート値が、リモート GATT クライアントによって変更されたときに呼ばれるコールバック関数ポインタ 【構文】 name.ble_evt_gatt_server_attribute_value = my_evt_gatt_server_attribute_value;
ble_evt_le_connection_opend	セントラルと接続したときに呼ばれるコールバック関数ポインタ 【構文】 name..ble_evt_le_connection_opend = my_evt_le_connection_opend;
ble_evt_le_connection_closed	セントラルと接続が終了したときに呼ばれるコールバック関数ポインタ 【構文】 name.ble_evt_le_connection_closed = my_evt_le_connection_closed;
ble_evt_system_boot	システムが起動したときに呼ばれるコールバック関数ポインタ 【構文】 name.ble_evt_system_boot = my_evt_system_boot;
ble_evt_system_awake	システムがスリープモードから復帰したときに呼ばれるコールバック関数ポインタ 【構文】 name.ble_evt_system_awake = my_evt_system_awake;
ble_evt_le_gap_scan_response	スキャン応答を受信した時に呼ばれるコールバック関数ポインタ 【構文】 name.ble_evt_le_gap_scan_response = my_evt_le_gap_scan_response;

3.6 省電力

BLEの省電力は下記関数によりSleepモードに移行する。

関数：ble112.ble_cmd_system_halt(1)

D7のWAKEUP信号をHighにすることによりWakeupする。

4 変更履歴

Rev A1.0: 2019年8月初版