Pflichtenheft

Virtual Reality for Sensor Data Analysis

Projekt: Virtual Reality for Sensor Data Analysis 0.1

Autor: Gero Birkhölzer, Johannes Blank, Alexej Gluschkow, Fabian Klopfer, Lisa-Maria Mayer

letzte "Anderung: May 3, 2017

Contents

1	Pur	rpose	3			
	1.1	Mandatory Criteria	3			
	1.2	Desired Criteria	3			
2	Product Environment					
	2.1	Software	4			
	2.2	Hardware	4			
3	Pro	duct Functions	5			
	3.1	General Features	5			
	3.2	VR-World	5			
	3.3	Settings	6			
4	Pro	posed Architecture	7			
	4.1	Overview	7			
		4.1.1 Services	7			
		4.1.2 Activities	7			
		4.1.3 Additional Classes	8			
5	Product Data 9					
	5.1	VR-World	9			
6	Use	er interface	11			
	6.1	Structure	11			
		6.1.1 Start screen	11			
		6.1.2 VR-Mode	11			
		6.1.3 Live Data	11			
		6.1.4 Settings	12			
	6.2	Layout	12			
7	Quality Requirements 1					
8	Test	t Cases	14			
9	Dev	velopment Environment	15			
-	9.1	Software	15			
	9.2	Hardware	15			
10	Pro	ject Time Line	16			

1 Purpose

The software project module in 2017 at the University of Constance focuses on the development of an app for mobile devices.

Especially, this Pflichtenheft intends to describe the structure of an implementation of a virtual reality representation of BLE sensor feedback.

1.1 Mandatory Criteria

- M1 The app shall use the Bluetooth adapter of the smartphone to connect to a TI SimpleLink SensorTag device.
- **M2** The app shall track the position of a TI SimpleLink SensorTag device with up to 30m tolerance.
- M3 The app shall visualize the sensors' data and its position using 3D/stereoscopy, more concrete the WebVR framework.
- M4 The visualization mentioned in M3 shall be explorable by tilting the joystick of a bluetooth controller.
- M5 The VR-World shall represent at least two different rooms and a connecting hallway.
- M7 The data from the sensor shall have two different representations in the VR-World.
- M8 The app shall provide a live data view of the sensor feedback in human readable form.

1.2 Desired Criteria

- **A1** The app shall visualize the sensors' data and its position using augmented reality.
- **A2** The VR-World shall represent a whole corridor with more than two rooms.
- A3 The app shall store the sensors' data and give a time lapse of the data inside the VR-World.

2 Product Environment

2.1 Software

 $\circ\,$ Android 5.0 Lollipop or higher

2.2 Hardware

- $\circ\,$ Bluetooth-enabled Smartphone
- $\circ\,$ TI SimpleLink SensorTag device
- $\circ\,$ Victor star VRBox 2.0
- $\circ\,$ VR-Park Bluetooth Controller

3 Product Functions

3.1 General Features

- **F1.1** The app shall use the Bluetooth adapter of the smartphone and the Android bluetooth library to connect to a TI SimpleLink SensorTag device.
- **F1.2** The app shall provide a live data view of the sensor feedback in human readable form.
- F1.3 The app shall track connected TI SimpleLink SensorTag devices.

3.2 VR-World

The VR-Mode is a 3D view of the world. When entering VR-Mode the user will see a fullscreen 3D world and by pressing the button in the lower right corner he can enter the stereoscopic view of the World. The VR-World is a 3D representation of a real series of rooms.

- **F2.1** The VR-World shall be able to be viewed inside a web browser and from within the app.
- **F2.2** While viewing the VR-World the user shall be able to look around using the gyro sensor of his phone to pan the camera around.
- **F2.3** While the app is not in stereoscopic 3D mode the user shall be able to click and drag to pan the camera around.
- **F2.4** The app shall be able to move the camera inside the VR-World by using a bluetooth controller.
- **F2.5** The data fechted from the sensors shall be displayed inside the VR-World.
- **F2.6** When in VR-Mode, the app shall be in fullscreen mode.
- **F2.7** The app shall exit the VR-Mode if the user is pressing the "x" in the top right corner of the screen or if the user is looking directly at the "x" under his feet for 5 seconds.
- **F2.8** The app shall be able to switch between stereoscopic 3D and normal 3D mode.
- **F2.9** The app shall be able to switch from fullscreen VR-Mode to stereoscopic by pressing the button in the lower right corner or by pressing the A-Button on his controller.
- **F2.10** The app shall be able to exit the stereoscopic 3D mode by the user looking at the "x" under his feet for 5 seconds or by pressing the back button on his device or by touching the back button in the top left corner.

- **F2.11** The app shall be able to switch to the settings screen, while it's in normal 3D mode.
- **F2.12** The app shall be able to switch rooms if the user pushes the B-Button on his controller or by looking up at the door sign for at least 5 seconds when the app is in a visualization state.
- **F2.13** The app shall visualize the position of connected TI SimpleLink SensorTag devices.
- **F2.14** The app shall visualize the temperature given by the Ti SimpleLink SensorTag, by displaying a graph at the sensors location.
- **F2.15** The app shall visualize the temperature by showing a glowing sphere at the location of the sensor, which will become more red the hotter the room gets, while in this representation there will be scale in the top left corner of the hud.
- **F2.16** The User shall be able to switch between the two representation by pressing the b button on his controller.

3.3 Settings

The user can set the following options:

- **F3.1** The app shall be configurable so that the user may choose wich data shall be displayed in the VR-World (temperature, etc.).
- **F3.2** The app shall list the connected devices and a short info about the current setting and state of the TI SimpleLink SensorTag device.
- **F3.4** The app shall list the results of a Bluetooth scan and present an user interface for controlling the connection of TI SimpleLink SensorTag devices.

4 Proposed Architecture

4.1 Overview

4.1.1 Services

From AndroidDoc:

"A Service is an application component that can perform long-running operations in the background, and it does not provide a user interface".

- SensorTagBluetoothReceiverService: Uses the android.bluetooth and especially the android.bluetooth.le libraries to fetch the sensor data from the TI CC2650.
- SensorTagTrackingService: Handles the tracking of the TI SensorTag devices.
- **nodejsService:** uses Paddy Byer's anode framework to start a node.js server on the localhost

4.1.2 Activities

From AndroidDoc:

"They (Activities) serve as the entry point for a user's interaction with an app, and are also central to how a user navigates within an app (as with the Back button) or between apps (as with the Recents button)".

- MainActivity Provides the main startup screen as the main entry point.
- **VRViewActivity** shall provide the WebVR view using the android.webkit library (especially .webview).
- LiveDataActivity shall provide a view of the sensor data in human readable form.
- TISettingsActivity: Settings screen containing scanning and connecting, connected devices and device settings fragments.
 - ♦ ScanningConnectingFragment shall show the scanning results, delivered by the SensorTagBluetoothReceiverService and controll to which device to connect to or disconnect.
 - ♦ ConnectedDevicesFragment shall show a list of all connected devices and a short info about the current setting and state of the TI SimpleLink SensorTag device.
 - ♦ ConnectedDevicesSettingsFragment shall implement the configuration of the app features of the sensor.

4.1.3 Additional Classes

- o GATT Profiles (for each sensor one)
- $\circ \ \mathbf{GATT} \ \mathbf{Sensor} \ \mathbf{Service} \ \mathbf{UUIDs}$
- \circ $\bf Parser$ $\bf Functions$ because the BLE protocol implemented in the TI CC2650 delivers raw sensor output

5 Product Data

5.1 VR-World

D1.1 Models: The modeles used to render the VR-World will be saved as .obj files using Blender in /webvr/models/.

D1.2 Textures: As .png files in /webvr/img/.

UUIDs Device Info Service 0000180a-0000-1000-8000-00805f9b34fb

Firmware Revision 00002A26-0000-1000-8000-00805f9b34fb

IR Temprature Service f000aa00-0451-4000-b000-0000000000000

IR Temprature Configuration f000aa02-0451-4000-b000-000000000000

Optical Service f000aa70-0451-4000-b000-000000000000

Optical Data f000aa71-0451-4000-b000-0000000000000

Barometer Service f000aa40-0451-4000-b000-0000000000000

 ${\bf Gyrometer\ Data\ } \ f000aa51\text{-}0451\text{-}4000\text{-}b000\text{-}0000000000000 \\$

Test Service f000aa64-0451-4000-b000-0000000000000

Test Data f000aa65-0451-4000-b000-00000000000 shall equal the test result

Period in tens of milliseconds Configuration: 0: disable, 1: enable; in case of gyrometer or movement sensor: 0: disable, bit 0: enable x, bit 1: enable y, bit 2: enable z


6 User interface

6.1 Structure

A small overview of the menu Structure.


6.1.1 Start screen

The Start screen will be shown when the app is launched, can switch to everything. He can enter the VR-Mode, Live-Data from the sensor or change the settings.

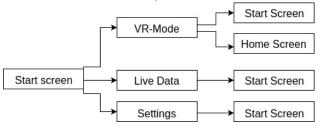


6.1.2 VR-Mode

The VR-Mode launches normally in normal 3D mode from where the user can switch to stereoscopic 3D view by touching the button in the lower left corner or by pressing the A-Button on his controller.

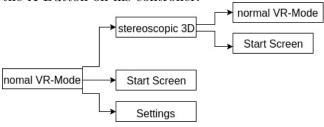


6.1.3 Live Data

Live Data just shows the current live data from the connected sensor.



6.1.4 Settings

Here the user can select which sensor in range he wants to connect to and some basic settings like switching blue-tooth on and scan for more devices. From the Setting menu the user can switch to VR-Mode without going back to the start screen.

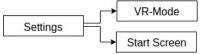


6.2 Layout

A mockup of the Start up screen.



And a mockup of the stereoscopic Vr-Mode.

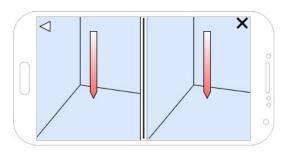

7 Quality Requirements

	very important	important	less important	lesser important
Robustness				X
Reliability	X			
Correctness	X			
Usability	X			
Efficiency		X		
Portability		X		
$\overline{Compatibility}$			X	

8 Test Cases

/T0300/ Look around: While in normal 3D mode the tester shall click the screen and drag first up to move the camera up. Then move down to move the camera down, then at last left and then right, all the time the camera must follow the movement of the finger. After this the tester shall tilt the phone up to move the camera up, then tilt it down, left and right. The camera shall follow the tilt direction of the phone all the time with no delay.

This test shall be repeated in stereoscopic 3D view. While the clicking and dragging shall not work, the tilting of the phone shall be the only way to pan the camera.

/T0310 Move inside VR-World: While in normal 3D mode the tester shall tilt the joystick on the controller forward and the camera shall move forward. By tilting the joystick backward the camera shall move back, by tilting left the camera shall move left and by tilting right it shall move right. The camera shall allways follow the view point, so forward is allways in the center of the camera.

This test shall be again repeated in stereoscopic 3D view and all functions shall work the same.

9 Development Environment

9.1 Software

OS Windows 10, macOS Sierra, Linux Mint 18.1

IDEs Android Studio, Sensor Controller Studio 1.4.1, Atom, Chrome DevTools

VCS Git,GitHub

UML-Editor Enterprise Architekt, MS Visio, draw.io

Zeichensatz LATEX

9.2 Hardware

Smartphone Motorola XT1572

Sensor TI CC2650STK

VR-Headset Victorstar VRBox 2.0

Bluetooth-Controller VR-Park (?)

10 Project Time Line

Week / Final Date	Event / Tasks			
25.5 1.5.	first research, write Pflichtenheft			
2.5.	release Pflichtenheft, project plan, subjects of milestones			
2.5 8.5.	distribute tasks, decide on design			
9.5 15.5.	start building			
16.5 22.5.				
22.5.	Milestone 1: Basic functions are implemented (gathering data, display			
	data in app, build a basic 3D world)			
23.5 29.5.				
30.5 5.6.				
6.6 12.6.				
12.6.	Milestone 2: Gathered data can be displayed in 3D, intermediate as-			
	sessment			
13.6 19.6.				
20.6 26.6.				
27.6 3.7.				
4.7 10.7.				
11.7 17.7.				
17.7.	Milestone 3: The app works as wanted :D			
18.7 24.7.	prepare presentation and usage examples			
25.7.	final presentation			

Possible starting points: Simple, bad layout

TI official, complex