Potentiometer Documentation


by Eric LIU

Objective: using potentiometer and develop application based on linear equations from analog output. e.g. Dimmable LED light / Binary counter using potentiometer as value alterner.

Components:

- Part 1:
 - \circ Potentiometer $50k\Omega \times 1$
 - Resistor 220Ω x1
 - LED x1
 - o jump wires
 - o Arduino setup
- Part 2:
 - Potentiometer $50k\Omega x1$
 - Resistor $220\Omega \times 9$
 - Resistor 1kΩ x4
 - o LED x4
 - Jump wires
 - 7 segments LED
 - Arduino setup


Part 1: Schematics:

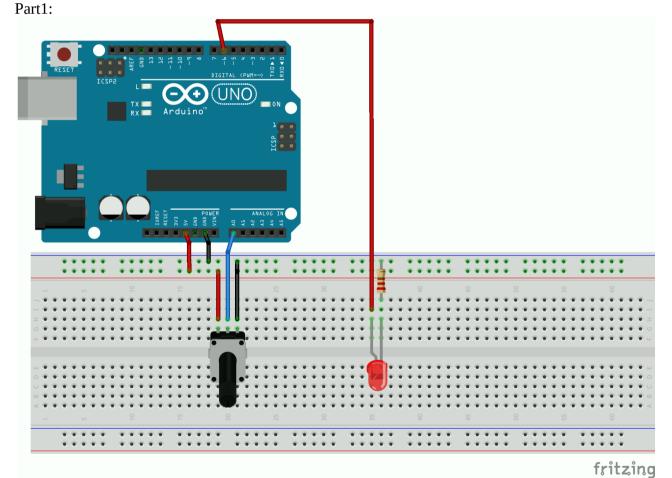

Code:

```
1 int potPin=A0; //set potentiometer to analog pin
 2 int ledPin = 6; // important: use the pin with a ~beside the number!!
 3 int dt = 0; //usually put 250 to debug;
 4 int valueAna;
 5 float valueLed;
 6 float valueVolt;
 8
 9 void setup() {
10
     Serial.begin(9600); //9600 baude rate on serial monitor
11
     pinMode(potPin, INPUT);
12
     pinMode(ledPin, OUTPUT);
13
14
15 }
16
17 void loop() {
     valueAna = analogRead(potPin);
     //Serial.print("Analog value is ");
19
20
     //Serial.println(valueAna);
     delay(dt);
21
22
23
     //equation for voltage = (5/1023) * Read Value
24
     valueVolt = (5./1023.)*valueAna; //valueVolt in float!!
25
     //Serial.print("Real world voltage is ");
26
     //Serial.println(valueVolt);
27
28
     //equation for analog write = (225/1023) * Read Value
29
     valueLed = (255./1023.)*valueAna;
     analogWrite(ledPin, valueLed);
30
31
     Serial.println(valueLed);
32
33 }
```


Linear equation between potentiometer and Arduino

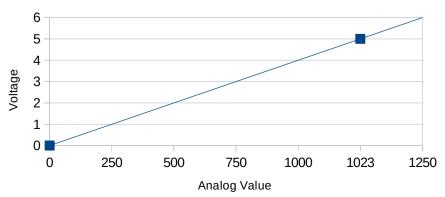


Since at peak voltage (5V), analog value is 1023, which is a 10bits value. We can obtain the equation as followed:

$$Voltage = \frac{5}{1023} * Analog Value$$

We can enable the codes from line 19, 20, 25, 26 to verify if the value is correct on serial monitor.



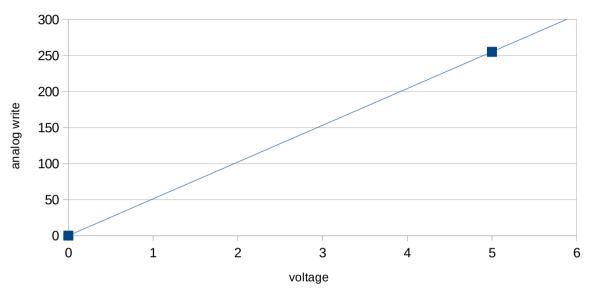

Thus, the expression of analog write in respect to voltage will be:

$$Analog Write = \frac{250}{5} * Voltage$$


By replacing Voltage with the expression obtained previously, we obtained:

$$Analog \textit{Write} = \frac{250}{5} * (\frac{5}{1023} * \textit{Analog Value}) = \frac{250}{1023} * \textit{Analog Value}$$

Part 2:

Objective: Based on the concept and methodology developed previously, create a 4-bits binary counter while showing value with a hex 7 segments LED. Value alters from the value of potentiometer.

Schematics:

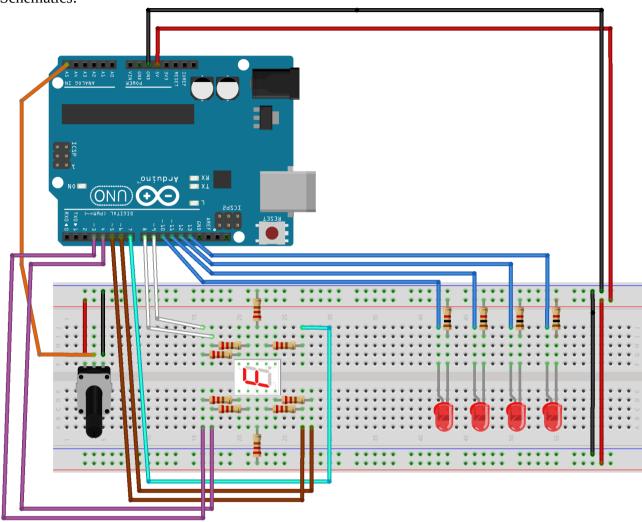

fritzing

Code:

```
#define LIMITARR 10
int potPin=A5; //set potentiometer to analog pin
int ledPin[]={13, 12, 11, 10};//LED corresponding to 2^0 is pin 13, in a
decreasing order
int dt = 0; //usually put 250 to debug;
int valueAna;
float valueVolt;
int dimBit = 4;
int digVal;
int maxDigVal=pow(2,4)-1;
int binaryArr[LIMITARR];
//position for 0-F (16) based on a-f (7)
int segLED[16][7]={
    {1,1,1,1,1,0},
    {0,1,1,0,0,0,0},
```

```
{1,1,0,1,1,0,1},
  \{1,1,1,1,0,0,1\},
  \{0,1,1,0,0,1,1\},
  {1,0,1,1,0,1,1},
  {1,0,1,1,1,1,1},
  \{1, 1, 1, 0, 0, 0, 0, 0\},\
  {1,1,1,1,1,1,1,1},
  {1,1,1,1,0,1,1},
  {1,1,1,0,1,1,1},
  \{0,0,1,1,1,1,1,1\},
  \{1,0,0,1,1,1,0\},
  \{0, 1, 1, 1, 1, 0, 1\},\
  {1,0,0,1,1,1,1},
  {1,0,0,0,1,1,1,1}
  };
int segPin[]={9,8,7,6,5,4,3};
void setup() {
  Serial.begin(9600); //9600 baude rate on serial monitor
  pinMode(potPin, INPUT);
  for(int i=0; i<dimBit;i++){</pre>
     pinMode(ledPin[i],OUTPUT);
    };
  for(int j=0; j<7; j++){
    pinMode(segPin[j],OUTPUT);
    };
}
void loop() {
  valueAna = analogRead(potPin);
  //Serial.print("Analog value is ");
  //Serial.println(valueAna);
  delay(dt);
  //equation for voltage = (5/1023) * Read Value
  valueVolt = (5./1023.)*valueAna; //valueVolt in float!!
  //Serial.print("Real world voltage is ");
  //Serial.println(valueVolt);
  //expression for data conversion
  //max number
  //Serial.println(maxDigVal);
  digVal = maxDigVal/5 * valueVolt;
  //Serial.println(digVal);
  binaryCoder(dimBit, digVal);
  ledFlasher(dimBit);
  segLEDFlasher(digVal);
}
void binaryCoder(int inputBit, int inputNum){
```

```
int quotient, remainder, devidend, devisor, i, j;
    // initial variables
    devidend = inputNum;
    devisor = 2; //in binary, so 2
    for(i=0; i<inputBit; i++){</pre>
      quotient = devidend / devisor;
      remainder = devidend % devisor;
      devidend = quotient;
      binaryArr[i] = remainder;
      };
    Serial.print("Input number is: ");
    for(j=inputBit-1; j>=0; j--){
      Serial.print(binaryArr[j]);
    Serial.println("");
void ledFlasher(int inputBit){
 int i;
 for(i=0; i<inputBit; i++){</pre>
      if(binaryArr[i]==1){
        digitalWrite(ledPin[i], HIGH);
      else if(binaryArr[i]==0){
        digitalWrite(ledPin[i],LOW);
        };
    };
 }
void segLEDFlasher(int inputNum){
 for(int i=0; i<7; i++){
    if(segLED[inputNum][i]==1){
      digitalWrite(segPin[i], HIGH);
      }
    else{
      digitalWrite(segPin[i], LOW);
      };
    Serial.print(segLED[inputNum][i]);
 }
 Serial.println("");
}
```