


Front idlers / Tensioners

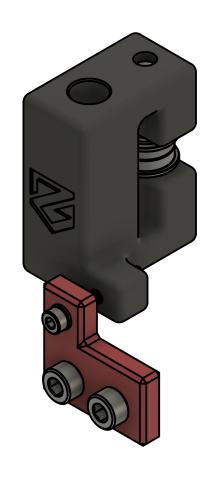


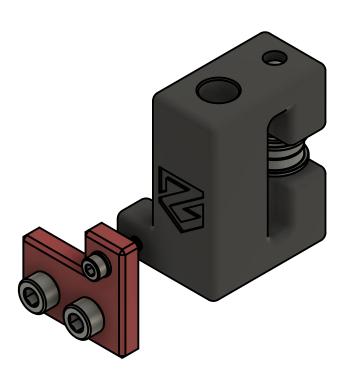

Dept.	Technical reference	Created by		Approved by			
		DutchDude 21/03	3/2021				
	•	Document type		Docum	nent status		
		Title		DWG I	No.		
		Experimental Front Towers		l -			
					_		
				Rev.	Date of issue	Sheet	
						1/5	


Front idler parts

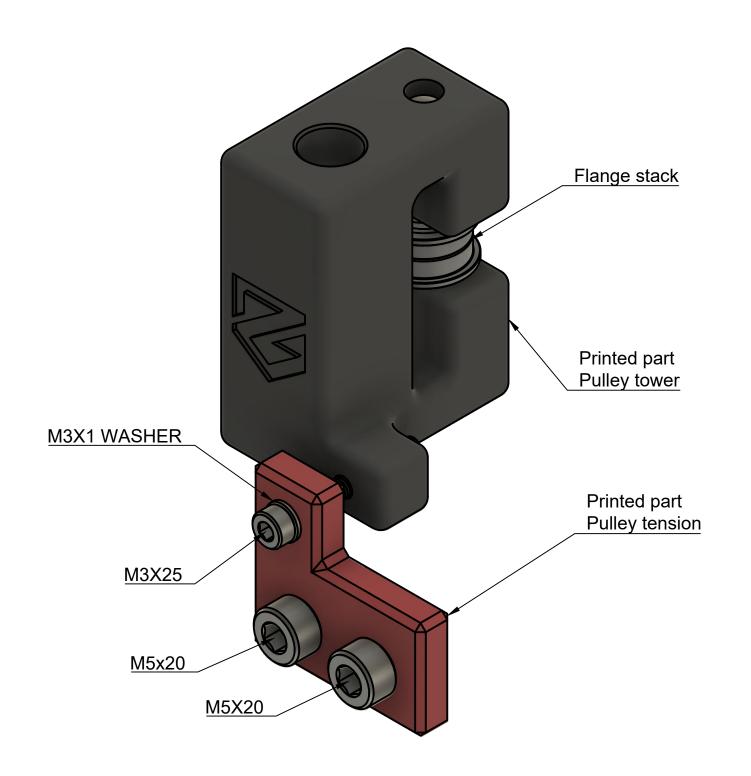

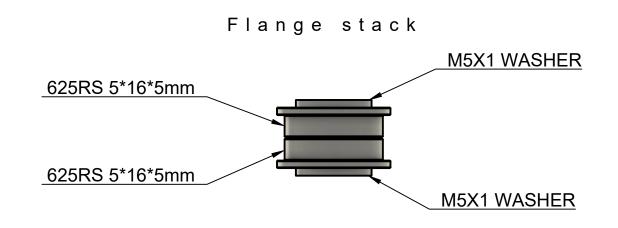


Dept.	Technical reference	Created by	Approved by			
		DutchDude	21/03/2021			
	·	Document type		Docume	ent status	
Title		Title		DWG No.		
Experimental Front Towers						
				Rev.	Date of issue	Sheet
				11.64.	Date of issue	2/5

Front idler parts Top view

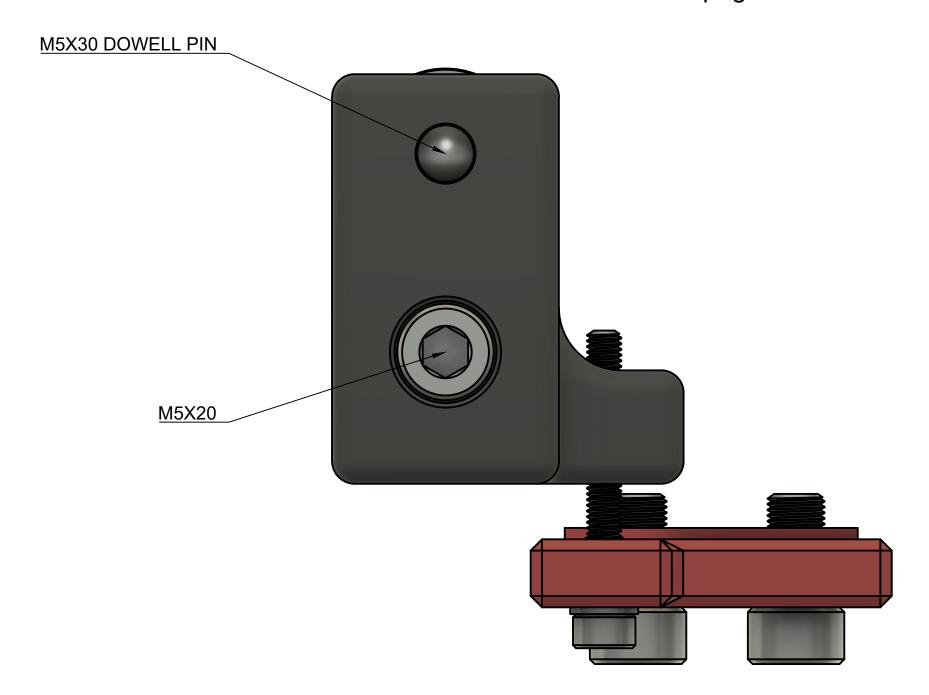

Dept.	Technical reference	Created by		Approved by			
		DutchDude	21/03/2021				
	Document type		Document status				
	Title		DWG No.				
		Experimental Front Towers					
				Rev.	Date of issue	·	Sheet
							3/5

Front idler parts Back view

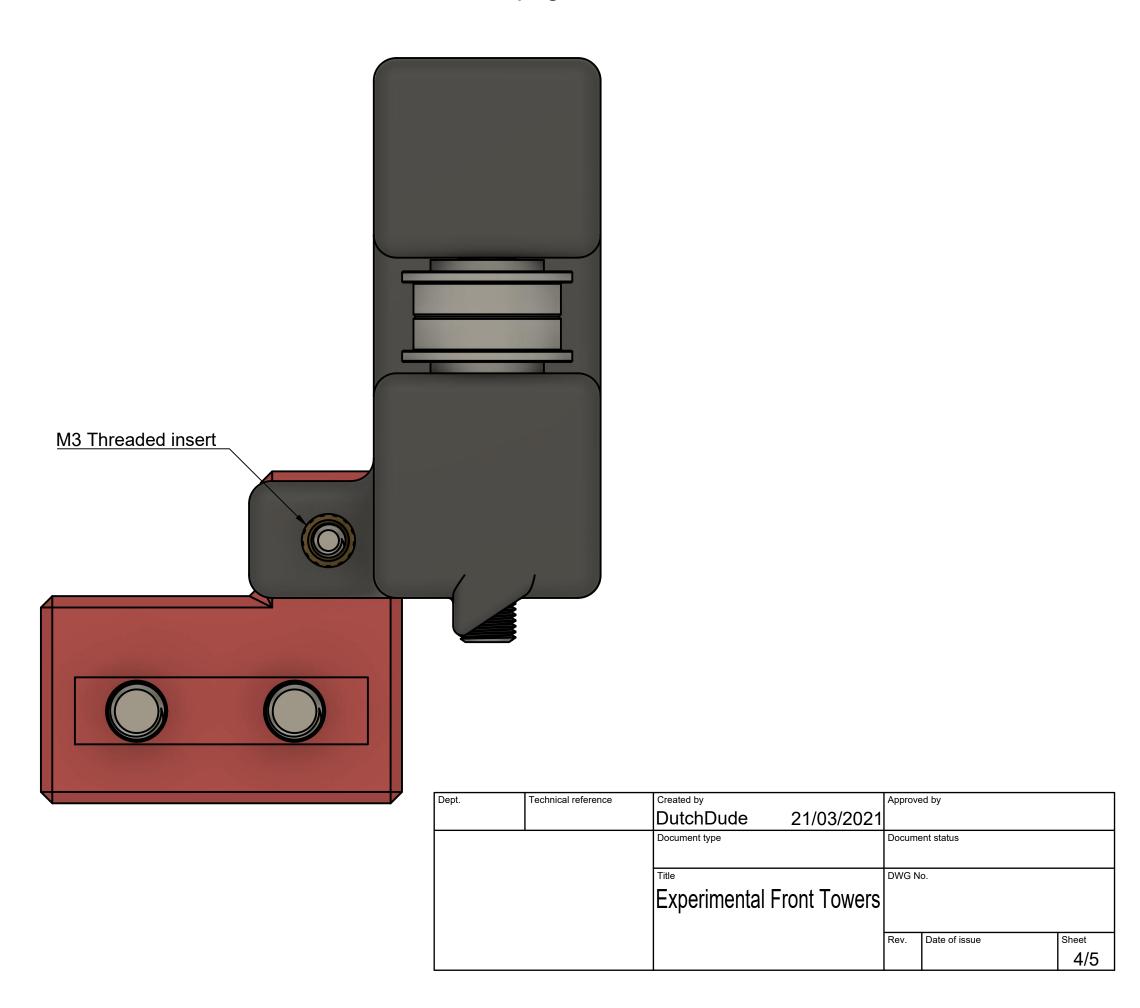

HARDWARE FOR BOTH FRONT IDLERS

- 2 M5X30 DOWELL PIN (FOR FLANGE BEARINGS)
- 2 M5X20 BOLTS (INTO T-NUTS)
- 2 M3X25 BOLTS (USED TO TENSION)
- 2 T-NUTS (FOR EXTRUSION)
- 4 M5 1MM SPACER (CHECK PAGE 2 FLANGE STACK)
- **4** 625RS 5*16*5mm (FLANGE BEARING)


EXTRA INFO

Sometimes dowell pins don't fit perfectly. To fix this issue you'll need a drill that fits the dowell pin and then using sandpaper, sand them down a little at a time testing fiting until they are a snug fit.

TENSIONING

With an afterburner we suggest to tension the belts to about 110hz using spectroid (app on your phone) to meassure.

When tensioning the belts, losen the two M5X20 bolts. Tighten or losen the M3X25 bolts to tension, once you're happy, tighten the M5X20

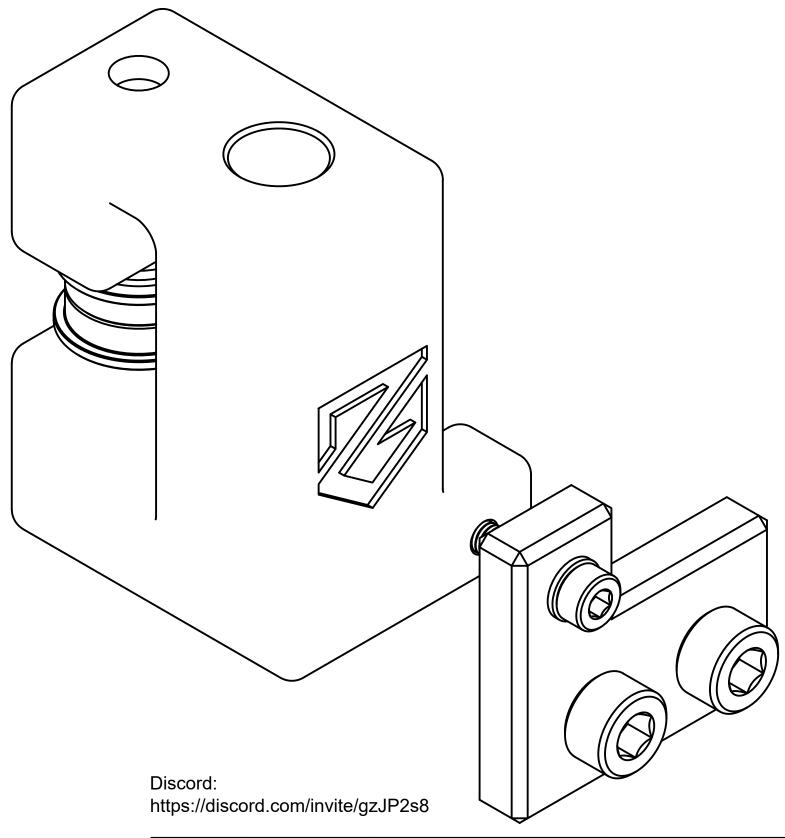

Dept.	Technical reference	Created by		Approved by			
l		DutchDude 2	1/03/2021				
	•	Document type		Docume	ent status		
		Title		DWG N	0.		
		Experimental Fro	nt Towers				
				Rev.	Date of issue		Sheet
							5/5