


### **Front idlers / Tensioners**

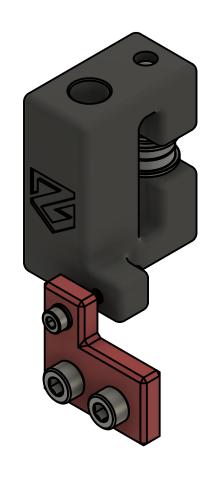


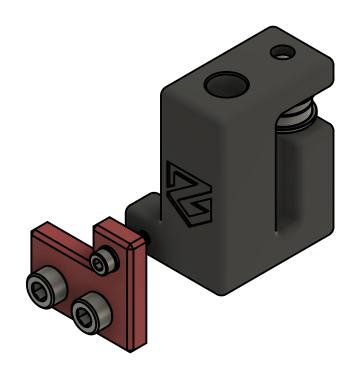


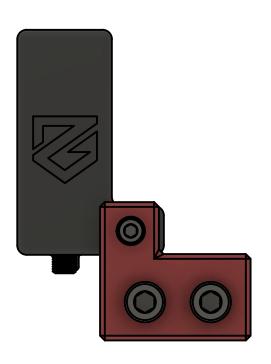

Dept.	Technical reference	Created by			Approved by		
		DutchDude	21/03/2021				
		Document type		Docum	ent status		
Tit		Title		DWG N	lo.		
Experimental Front Towers							
				Rev.	Date of issue	Sheet	
						1/5	


### **Front idler parts**

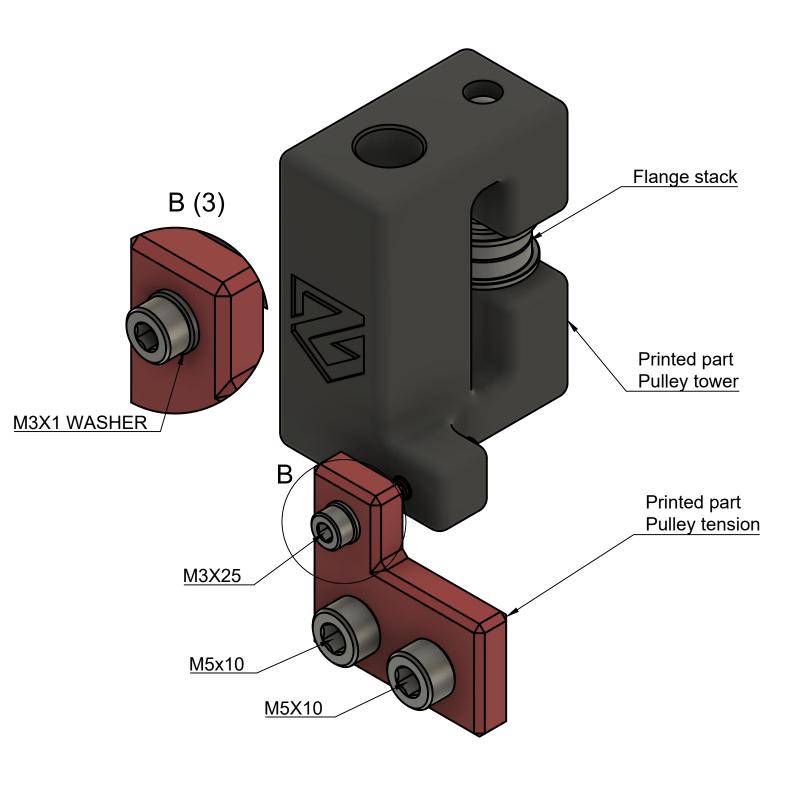

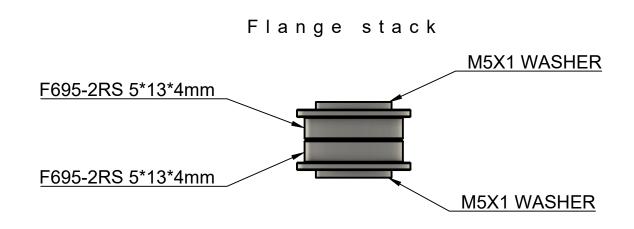


Dept.	Technical reference	Created by			Approved by			
		DutchDude	21/03/2021					
		Document type	Document type		Document status			
		Title		DWG No.				
Experimental Front Tow			ront Towers					
				Rev.	Date of issue	Sheet		
						2/5		

# **Front idler parts Top view**

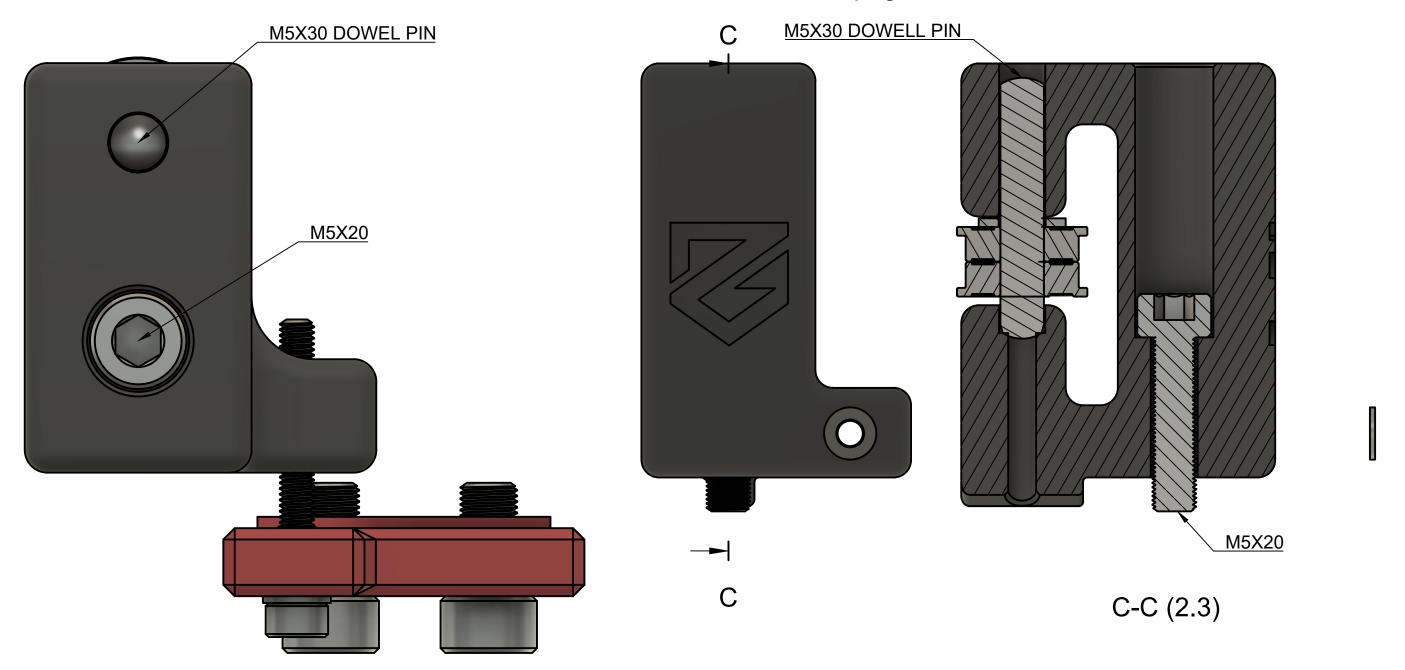

Dept.	Technical reference	Created by		Approve	ed by			
		DutchDude	21/03/2021					
		Document type		Docume	ent status			
		Title	Title		DWG No.			
	Experimental Front Towers							
				Rev.	Date of issue	Sheet		
						3/5		

## Front idler parts Back view

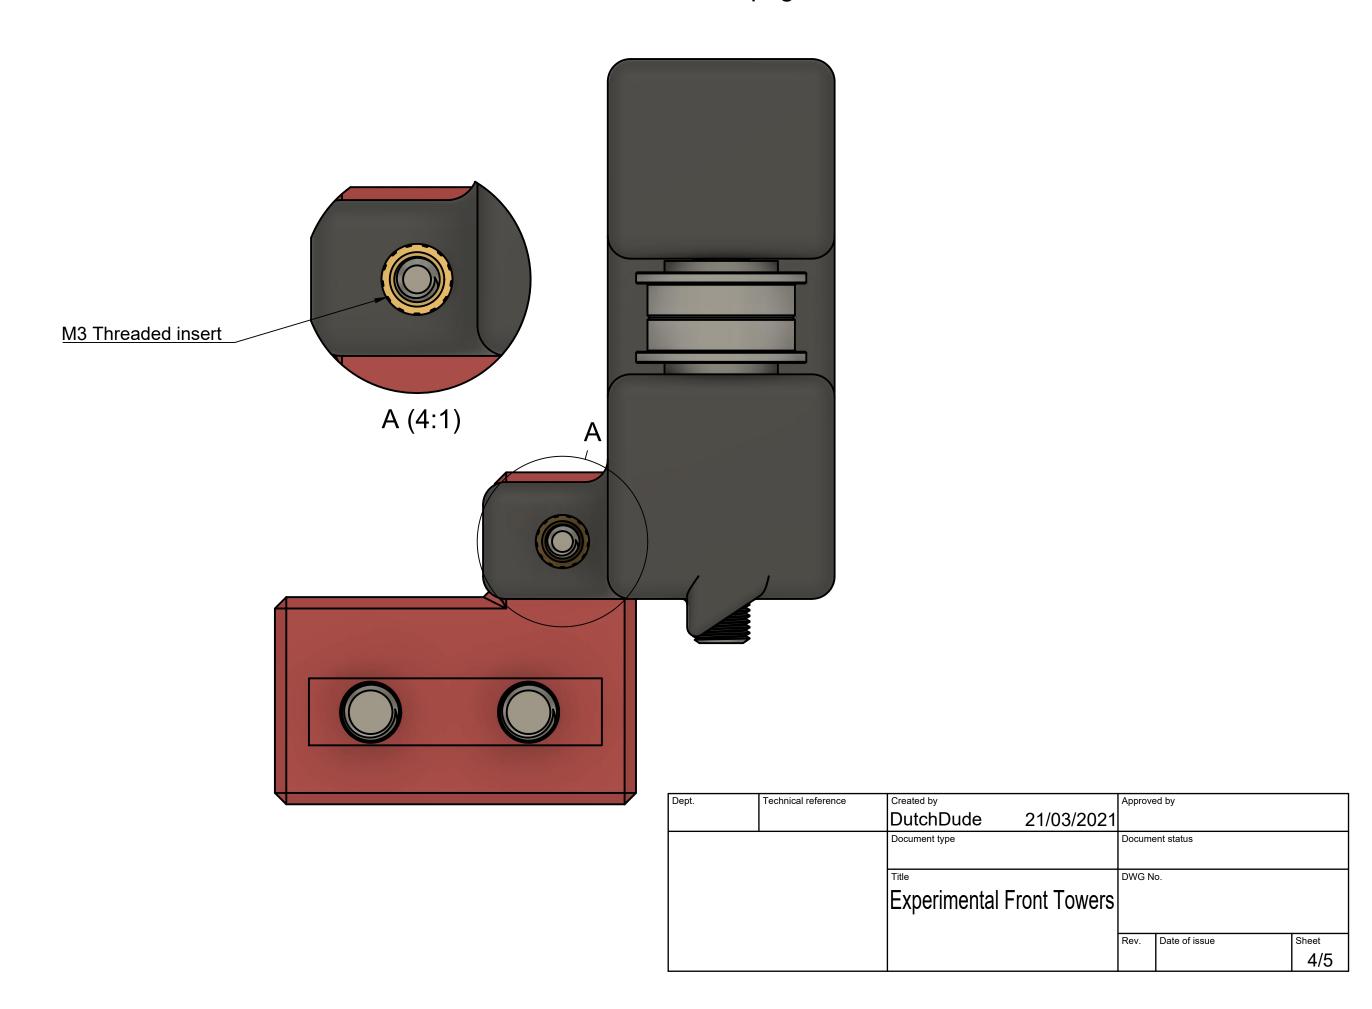

#### HARDWARE FOR BOTH FRONT IDLERS

- 2 M5X30 DOWELL PIN (FOR FLANGE BEARINGS)
- 2 M5X20 BOLTS (INTO T-NUTS)
- 2 M3X25 BOLTS (USED TO TENSION)
- 2 T-NUTS (FOR EXTRUSION)
- 4 M5 1MM SPACER (CHECK PAGE 2 FLANGE STACK)
- **4** F695-2RS 5\*13\*4mm (FLANGE BEARING)


#### **EXTRA INFO**

Sometimes dowell pins don't fit perfectly. To fix this issue you'll need a drill that fits the dowell pin and then using sandpaper, sand them down a little at a time testing fiting until they are a snug fit.

#### TENSIONING

With an afterburner we suggest to tension the belts to about 110hz using spectroid (app on your phone) to meassure.

When tensioning the belts, losen the two M5X20 bolts. Tighten or losen the M3X25 bolts to tension, once you're happy, tighten the M5X20

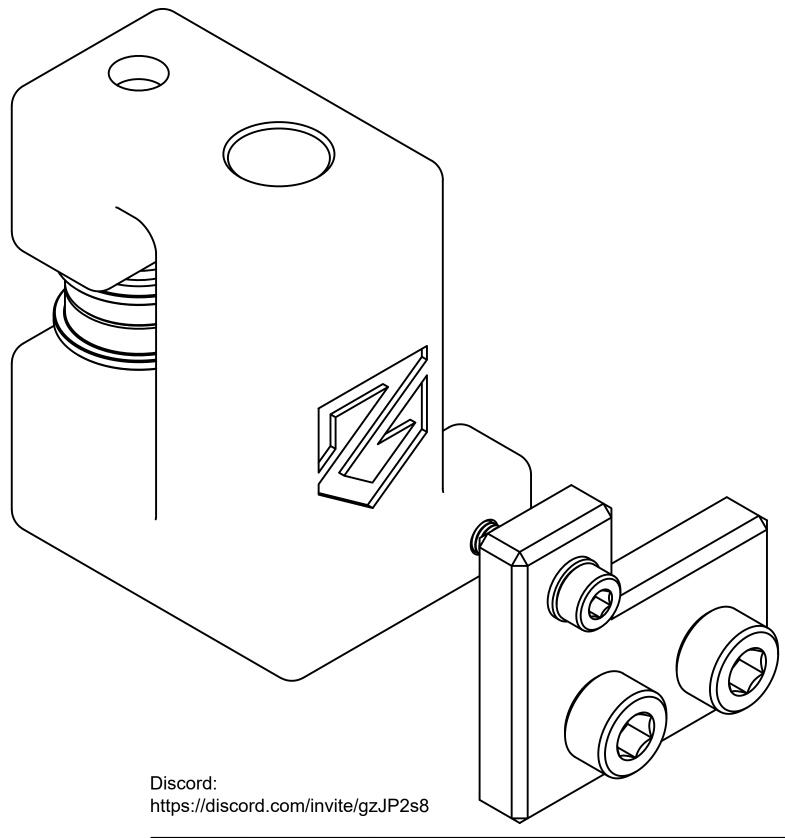

Dept. Technical reference Created by			Approved by				
l		DutchDude 2	1/03/2021				
	•	Document type		Docume	ent status		
		Title		DWG N	0.		
		Experimental Fro	nt Towers	rs			
				Rev.	Date of issue		Sheet
							5/5