


2023.05.09/v0.1 Sanam Shakya

# KD240 to AWS IoT Greengrass Architecture



This diagram shows the software and hardware architecture used in this tutorial. Kria KD240 board consists of PL Fabric(FPGA) hardware overlay for interfacing LED, switch and I2C sensor. Further it runs AWS Greengrass Core Device Application which publish and subscribe message topics for actuating LED and monitoring sensors and switches. From AWS IoT MQTT Test Client KD240 LED will be controlled through subscribed topic and also publish Switch pressed event to AWS IoT cloud.

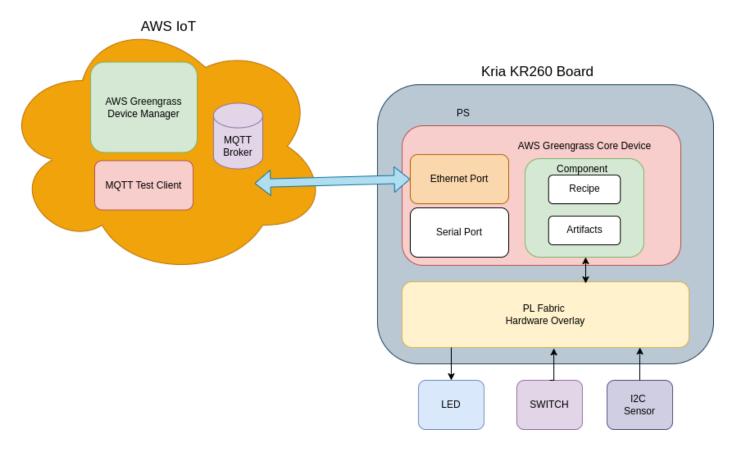

# Creating Petalinux Project

#### Create Petalinux from BSP

In host machine, create the petalinux project using provided BSP: BSP feature:

- Petalinux version 2023.1
- Added meta-aws layer for installing required dependencies required for running greengrass core device in KD240
- Rootfs packages : packagegroup-buildessential, git, libgpiod, libgpiod-dev, libgpiod-tools
- **Enabled FPGA-manager**

Run following commands to create petalinux project:

```
petalinux-create -t project -s xilinx-kd240-starterkit-aws-iot.bsp -n kr260-aws-iot
cd kd240-aws-iot
```

Here "kd240-aws-iot" is the directory created by petalinux-create command, you can change the name according to your need. This directory is the petalinux-project base directory, which we will be using in further steps.

Next build the project after sourcing the Petalinux 2023.1 environment:

```
source <Path to Petalinux 2023.1>/settings.sh
petalinux-config --silentconfig
petalinux-build
```

Here is the console log after running the petalinux-build.

Next create the SD card image with the following commands:

```
petalinux-package --wic --images-dir images/linux/ --bootfiles
"ramdisk.cpio.gz.u-boot,boot.scr,Image,system.dtb,system-zynqmp-sck-kd-g-revA.dtb"
--disk-name "sda"
```

This will create the petalinux-sdimage.wic image at <petalinux project directory>/image/linux folder. Copy the created wic image to SD card using tools like Balena Etcher.

#### Installing hardware overlay

After booting the previously used SD card into KD240. Login to KD240 serial terminal using login name: petalinux For the first login one has to update the new password.

```
xilinx-kr260-starterkit-20222 login: petalinux
You are required to change your password immediately (administrator enforced).
New password:
Retype new password:
xilinx-kr260-starterkit-20222:~$
```

Next copy the KD240 firmwares to KD240 using network tools like scp or manually copying the firmware files at /home/petalinux directory of SD card.

Get the KD240 firmware folder. It contains:

- kd240\_gpio\_i2c.bit.bin
- kd240 gpio i2c.dtbo
- shell.json

Copy these file to the KD240 board. For firmware to be loaded using xmutil (FPGA manager), one has to copy these file at "/lib/firmware/xilinx".

For this, create the folder at "kd240-gpio-i2c" at "/lib/firmware/xilinx" and copy the files in "kr260-i2c" folder.

```
cd /lib/firmware/xilinx
sudo mkdir kd240-gpio-i2c
sudo cp <kd240-firmware directory>/kd240 gpio i2c* ./
sudo cp <kd240-firmware directory>/shell.json ./
```

Next, check the available fpga firmware using `xmutil listapps` command. `kd240-gpio-i2c` will be available in the list.

```
#slots(PL+AIE)
kd240-gpio-i2c
ilinx-kd240-starterkit-20231:~$
                                                  XRT_FLAT
                                                                                 kd240-gpio-i2c
```

Next load the `kr260-i2c` firmware, which contains necessary hardwares(gpio) and interfaces. In our Greengrass Demo, we will be using these gpio to trigger the publishing data to AWS Greengrass IoT cloud server and also actuate GPIO on the message received from AWS cloud.

```
sudo xmutil unloadapp
sudo xmutil loadapp kd240-gpio-i2c
```



```
03:53:18 xilinx-kd240-starterkit-20231 kernel: OF: overlay: WARNING: memory
03:53:18 xilinx-kd240-starterkit-20231 kernel: OF: overlay: WARNING: memory
03:53:18 xilinx-kd240-starterkit-20231 kernel: OF: overlay: WARNING: memory
ec 25 03:53:10 xilinx-kd240-starterkit-20231 kernel: OF: overlay: WA
ec 25 03:53:10 xilinx-kd240-starterkit-20231 kernel: gpio gpiochip3:
dd240-gpio-i2c: loaded to slot 0
:ilinx-kd240-starterkit-20231:~$
```

Now to access GPIO in user application, we will be using 'gpiod' library.

# Installing gpiod python modules

GPIOD packages are required to access the GPIO channels. It also provides python binding for accessing GPIO in python programming. Install the gpiod python modules:

```
sudo pip3 install gpiod
```


Now we can check the available gpio using gpiod applications:

Using 'gpiodetect' to get availabe gpio:

```
xilinx-kd240-starterkit-20231:~$ sudo gpiodetect
gpiochip0 [firmware:zynqmp-firmware:gpio] (4 lines)
gpiochip1 [zyngmp gpio] (174 lines)
gpiochip2 [slg7xl45106] (8 lines)
gpiochip3 [80000000.gpio] (4 lines)
xilinx-kd240-starterkit-20231:~$
```

Here 'gpiochip3' is the device corresponding to gpio in FPGA and it consists of 4 lines. Further these gpio lines are connected to PMOD 1 such that:

```
PMOD1-> 5 - gpiochip3 line 0
PMOD1-> 7 - gpiochip3 line 1
```

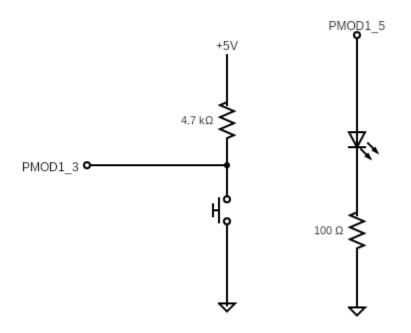

Schematic for LED and Switch Connection

it logiction							
	11	9	7	5	3	1	PMOD UPPER
	12	10	8	6	4	2	PMOD LOWER
	Vcc	GND	I/O	I/O	I/O	I/O	


PMOD port numbering

We will be using these gpios while creating component of Greengrass AWS core device in KR260.

#### AWS IoT user creation


For an non human access to AWS services one has to create a user with required permissions. Follow following steps to create the user for IoT end devices.

- Login to AWS console
- Next go to `Security credentials` link available at root user drop down at top right corner of the AWS console

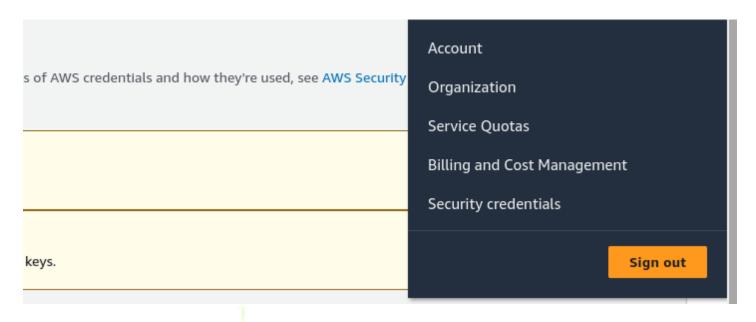

- Next Go to User management page by clicking at the User link at IAM sidebar. This will list the available users.



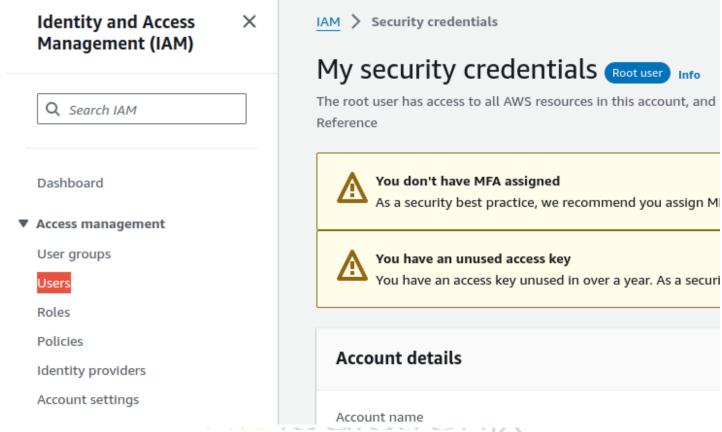

- Now create a new user for KR260 device by clicking the "Create User" button.




This will lead to step wise User creation forms. So fill the User details,

This will lead to step wise User creation forms.


So fill the User details, leave the console access unchecked as user does not have to access the AWS console through web.



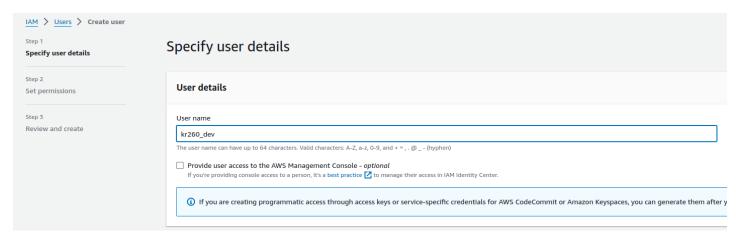


Next, update the Permissions options by attaching following policies:

- AWSGreengrassFullAccess
- IAMFullAccess
- AWSIoTFullAccess
- AmazonS3FullAccess

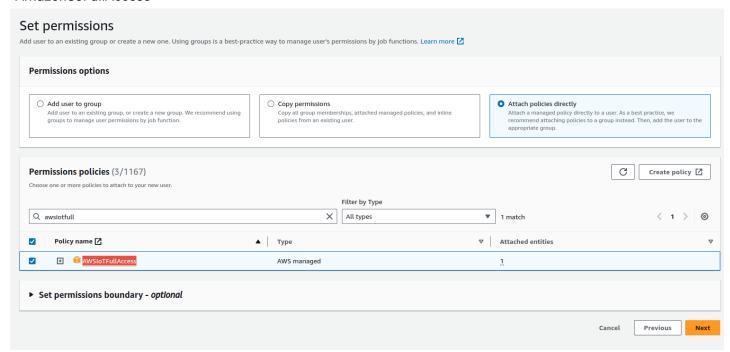


After finishing the above steps click "Create User" to finish the user creation.



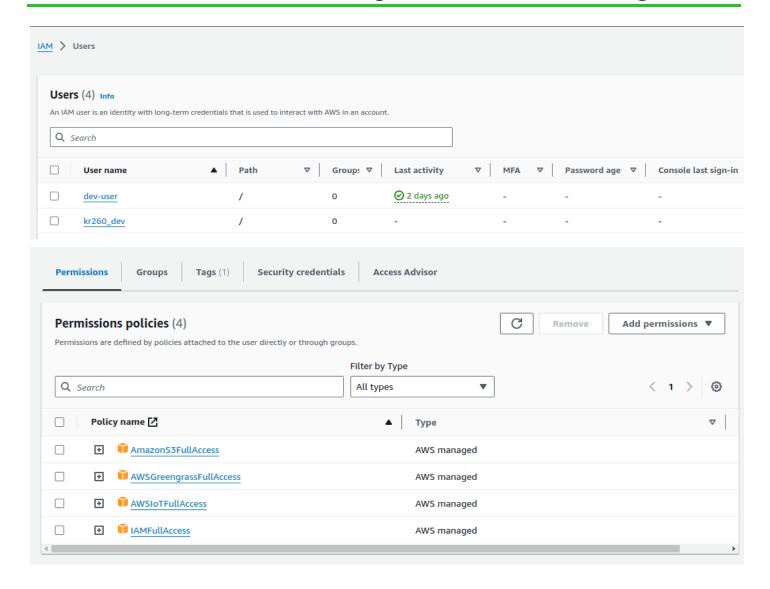


Next get the access token and access key for the user. For this open the user details by clicking on the user link in the above table.

And go to "Security credentials" for creating the Access Key for the user.

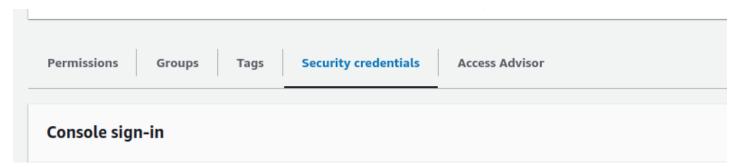


Select access key for command line based access control for user.

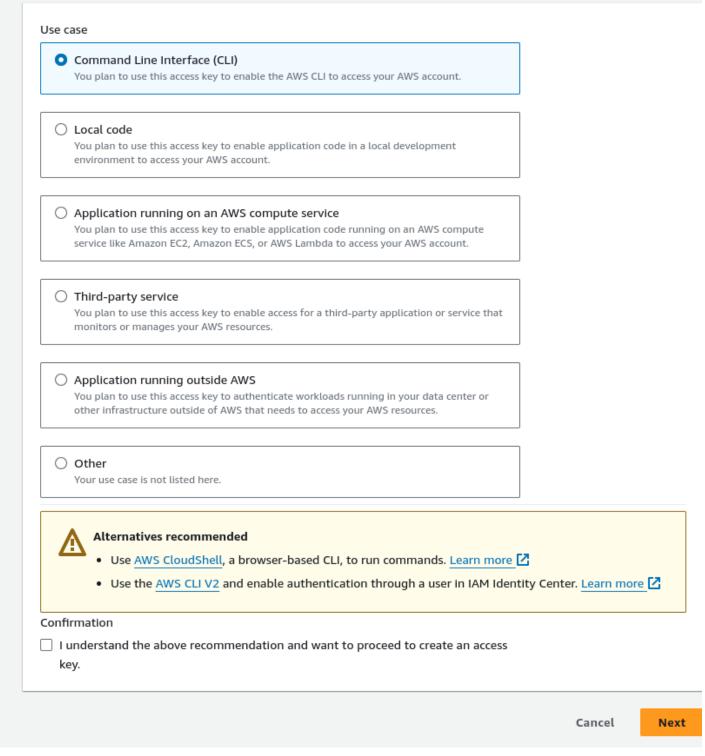


Next save the "Access Key" and "Secreat Access Key". We will need this later while using greengrass CLI in KR260 console or downloading the csv file.

# Installing Greengrass CLI in KR260 board

Steps and scripts for installing greengrass device is provided by AWS Greengrass dashboard in AWS web console. So first access the AWS Greengrass IoT page, go to AWS Services -> Internet of Things -> IoT Greengrass link

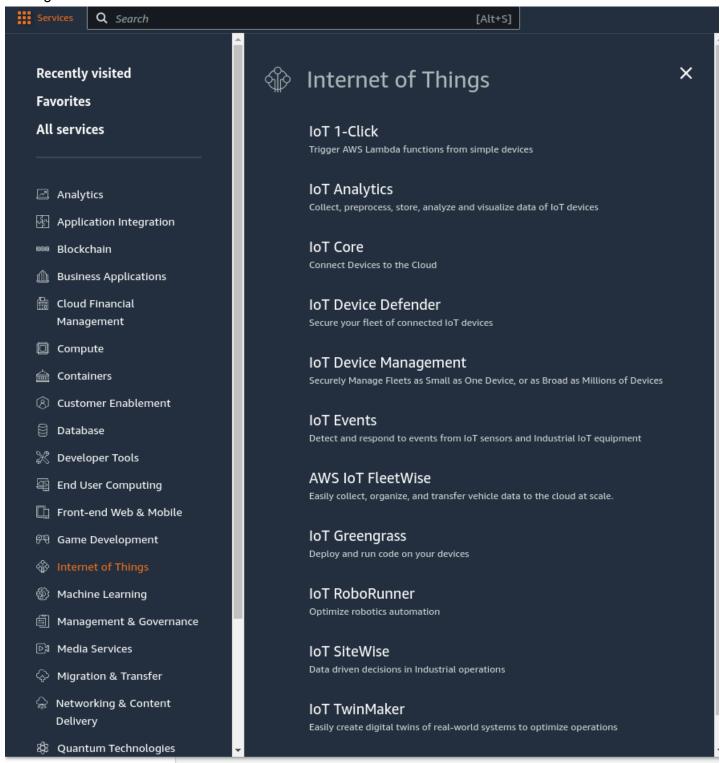



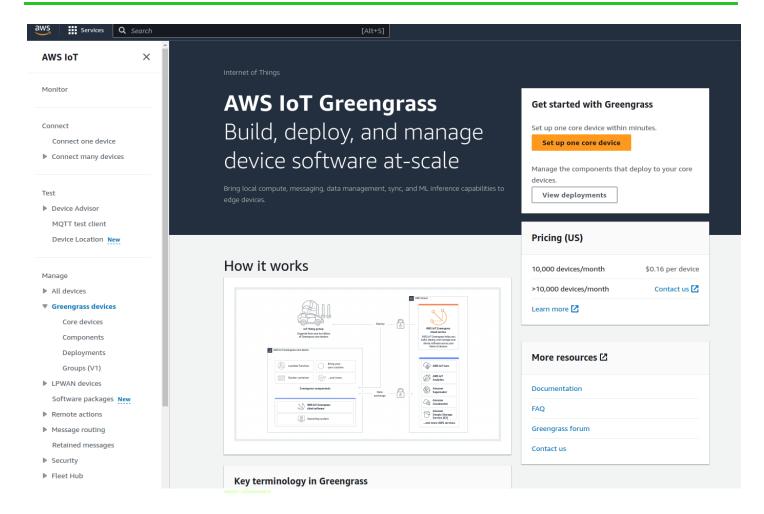

Now click on "Set up one core device" button This will open the Greengrass core device setup page: Here you can change the Core device name like `kd240-dev2"

AWS IoT > Greengrass > Core devices > Set up one Greengrass core device Set up one Greengrass core device Step 1: Register a Greengrass core device Greengrass core devices are AWS IoT things. Enter a thing name to be used to create a Greengrass core device. Core device name The name of the AWS IoT thing to create. We generated the following name for you. kd240-dev2 The name can be up to 128 characters. Valid characters: a-z, A-Z, 0-9, underscore (\_), and hyphen (-). An AWS IoT thing with this name already exists. You can create a core device from the existing thing, or enter a different name to create a new thing. Step 2: Add to a thing group to apply a continuous deployment Add your Greengrass core device to an AWS IoT thing group. If the thing group has an active Greengrass deployment, your new core device receives and applies the deployment when you finish the setup process. To deploy to only the core device, select No group. Thing group Enter a new group name Select an existing group O No group Thing group name The name of the AWS IoT thing group to create. kd240DevGroup The name can be up to 128 characters. Valid characters: a-z, A-Z, 0-9, underscore (\_), and hyphen (-).

Now in KR260 terminal console run following commands and scripts:

export AWS\_ACCESS\_KEY\_ID=<AWS\_ACCESS\_KEY\_ID> export AWS\_SECRET\_ACCESS\_KEY=<AWS\_SECRET\_ACCESS\_KEY>

Download and install Greengrass core software by running the script available in AWS greengrass core device setup page:



#### Download the installer

Run the following command on the device to download the AWS IoT Greengrass Core software.

```
curl -s https://d2s8p88vqu9w66.cloudfront.net/releases/greengrass-nucleus-latest.zip > greengrass
                                                                                                           Copy
    -nucleus-latest.zip && unzip greengrass-nucleus-latest.zip -d GreengrassInstaller
```


Next install the Greengrass core device by running the script available in AWS greengrass core device setup page:



Here is the console log after running above command:

```
Fround IoT policy "GreengrassV2IoTThingPolicy", reusing it Creating keys and certificate...
Attaching policy to certificate...
Creating IoT Thing "kd240-dev1"...
Attaching certificate to IoT thing..
 Successfully provisioned AWS IoT resources for the device with IoT Thing Name: [kd240-dev1]!
Adding IoT Thing [kd240-devl] into Thing Group: [KD240DevGroup]...
Successfully added Thing into Thing Group: [KD240DevGroup]
Setting up resources for aws.greengrass.TokenExchangeService ...
Attaching TES role policy to IoT thing...
No managed IAM policy found, looking for user defined policy...
IAM policy named "GreengrassV2TokenExchangeRoleAccess" already exists. Please attach it to the IAM role if not already
Configuring Nucleus with provisioned resource details...
Downloading Root CA from "https://www.amazontrust.com/repository/AmazonRootCA1.pem"
 reated device configuration
 Successfully configured Nucleus with provisioned resource details!
 Creating a deployment for Greengrass first party components to the thing group
Configured Nucleus to deploy aws.greengrass.Cli component
Unable to set up Nucleus as a sys<u>t</u>em service
  ilinx-kd240-starterkit-20231:
```

Now in Greengrass set up page, one can view the Greengrass core devices and find above 'kd240-dev2' in the list.

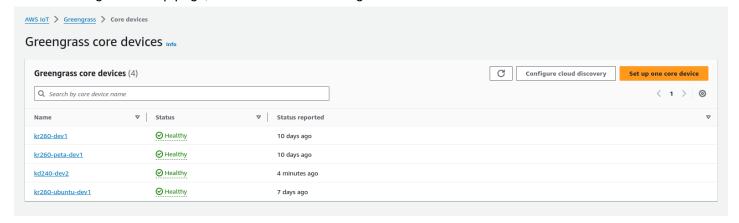

In KD240 terminal one can get the device components by using 'greengrass-cli':



#### sudo /greengrass/v2/bin/greengrass-cli component list

```
n: null
FleetStatusService
mulno
tion: null
starterkit-20231:/greengrass/v2/bin$
```

We will be adding component to publish and subscribe the topic to the AWS cloud Broker.



# Installing the component

Get the 'components' folder and copy in the KR260 home directory.

It contains:

artifacts

- com.example.mqtt
  - 1.0.0
    - mqtt.py (This python code published the data on button press and actuates gpio on receiving the data in subscribed topic)

#### recipe

com.example.mgtt-1.0.0.json

To install the above component run the following in the KR260 terminal:

```
sudo /greengrass/v2/bin/greengrass-cli deployment create \
--recipeDir ~/components/recipe \
--artifactDir ~/components/artifacts \
--merge "com.example.mqtt=1.0.0"
```

```
xilinx-kd240-starterkit-20231:~$ sudo /greengrass/v2/bin/greengrass-cli deployment create \
  --recipeDir ~/components/recipe \
 --artifactDir ~/components/artifacts \
 --merge "com.example.mqtt=1.0.0"
Password:
Local deployment submitted! Deployment Id: 01fd9c40-bc9b-4650-9e07-55d89b305eb0
xilinx-kd240-starterkit-20231:~$
```


Now check the installed component is in "running state"



```
xilinx-kd240-starterkit-20231:~$ sudo /greengrass/v2/bin/greengrass-cli component list
Components currently running in Greengrass:
Component Name: aws.greengrass.Nucleus
   Version: 2.12.1
   State: FINISHED
   Configuration: {"awsRegion":"us-east-1","componentStoreMaxSizeBytes":"10000000000","deploymentPol
ort":"8443","httpClient":{},"iotCredEndpoint":"c1uwyavs4wpvxg.credentials.iot.us-east-1.amazonaws.com
:{}},"networkProxy":{"proxy":{}},"platformOverride":{},"runWithDefault":{"posixShell":"sh","posixUse
Component Name: UpdateSystemPolicyService
   Version: 0.0.0
   State: RUNNING
   Configuration: null
Component Name: FleetStatusService
   Version: null
   State: RUNNING
   Configuration: null
Component Name: aws.greengrass.Cli
   Version: 2.12.1
   State: RUNNING
   Configuration: {"AuthorizedPosixGroups":null, "AuthorizedWindowsGroups":null}
Component Name: com.example.mqtt
   Version: 1.0.0
   State: RUNNING
   Configuration: {"accessControl":{"aws.greengrass.ipc.mqttproxy":{"com.example.mqtt:mqttproxy:1":{
tton"]}}},"message":"hello"}
Component Name: TelemetryAgent
   Version: 0.0.0
   State: RUNNING
   Configuration: null
Component Name: DeploymentService
   Version: 0.0.0
   State: RUNNING
   Configuration: null
xilinx-kd240-starterkit-20231:~$
```


Now in AWS IoT console, open "MQTT test client" and subscribe to "#"



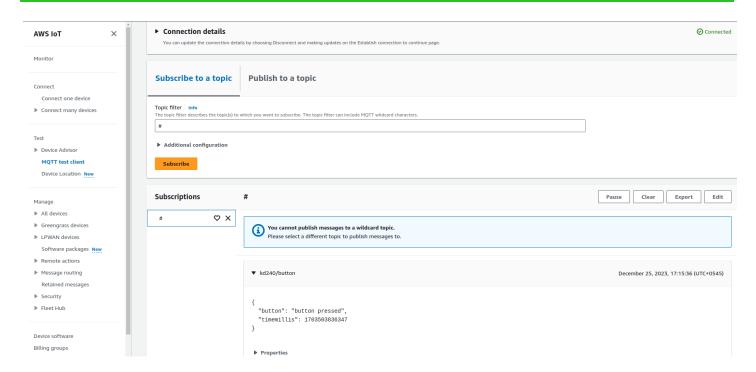

You can see the "button pressed" message once the button is pressed.

Now to control the LED, publish the message to "kd240/mqtt" topic. Here is the screenshot of the message which switch on the LED.

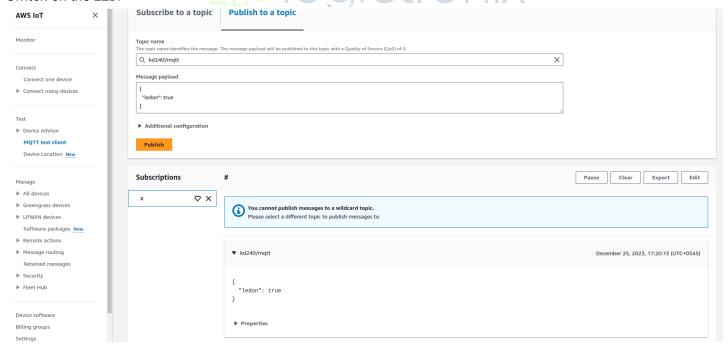

Now to switch off the LED send "false" message in the "kr260/mqtt" topic.



