


Connecting I2C sensor BMP180 in KR260 to AWS Greengrass IoT

Sanam Shakya 2024.01.12/v0.1

KR260 to AWS IoT Greengrass Architecture



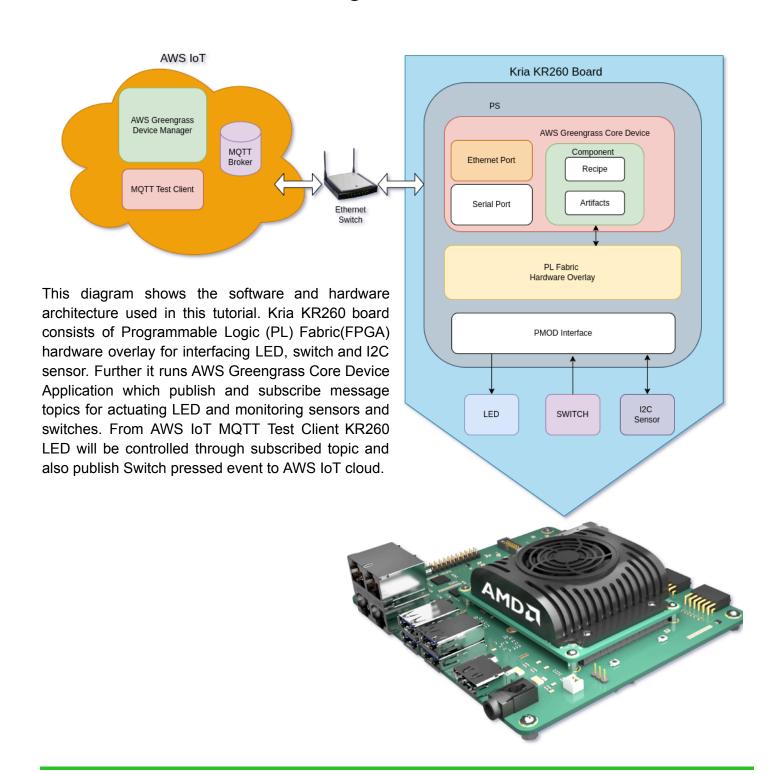

Required Hardware Components

- 1. Kria KR260 board
- 2. BMP180 Module (Available at Amazon)
- 3. Connecting wires

Software requirements

- 1. Ubuntu 22.04 for Kria KR260 board
- 2. AWS account

Further details and download links are available at /documents/KR260 to AWS Greengrass <u>IoT - GPIO-(Ubuntu/Petalinux).pdf</u>.

Preparing Ubuntu 22.04 OS for KRIA KR260 board

Download the Ubuntu 22.04 image from the download link

Ubuntu Desktop 22.04 **LTS**

The version of Ubuntu with up to 10 years of long term support, until April 2032.

Works on:

- Please check the AMD Kria™ Wiki for the platform's latest boot firmware, technical documentation, and the Ubuntu for AMD-Xilinx Devices Wiki for known issues and limitations.

Download 22.04 LTS

Kria™ KR260 Getting Started Guide for Ubuntu 22.04

Kria™ KV260 Getting Started Guide for Ubuntu 22.04

Next, prepare the SD card with the above downloaded Ubuntu image using burning tools like Balena Etcher.

Now boot the KR260 with the SD card with Ethernet and USB to Serial cable connected to board. We will be using Serial console for initial access and debugging and Ethernet network for accessing through SSH and KR260 connected to the internet.

For initial login here are the Login Details:

Username: ubuntu Password: ubuntu

This will ask to change the password. So update the password and login the system.

After successful login, one can access the KR260 device console.

Installing hardware overlay

Get the KR260 firmware folder. It contains:

- kr260 i2c.bit.bin
- kr260 i2c.dtbo
- shell.json

Copy these file to the KR260 board. For firmware to be loaded using xmutil (FPGA manager), one has to copy these file at "/lib/firmware/xilinx".

For this create the folder at "kr260-i2c" at "/lib/firmware/xilinx" and copy the files in "kr260-i2c" folder.



```
cd /lib/firmware/xilinx
sudo mkdir kr260-i2c
sudo cp <kr260-firmware directory>/krc260_i2c* ./
sudo cp <kr260-firmware directory>/shell.json ./
```

Next, check the available fpga firmware using `xmutil listapps` command. `kr260-i2c` will be available in the list.

```
sudo] password for ubuntu
                                            Accel type
                                                                                    Base
                                                                                                    Base type
                                                                                                                                             Active slot
                                                                                                     XRT_FLAT
XRT_FLAT
                       kr260-i2c
                                                                               kr260-i2c
                k26-starter-kits
                                                                        k26-starter-kits
buntu@kria:~$
```

Next load the `kr260-i2c` firmware, which contains necessary hardwares(gpio) and interfaces. In our Greengrass Demo we will be using these gpio to trigger the publishing data to AWS Greengrass IoT cloud server and also actuate GPIO on the message received from AWS cloud.

```
sudo xmutil unloadapp
sudo xmutil loadapp kr260-i2c
```

```
ubuntu@kria:~$ sudo xmutil unloadapp
remove from slot 0 returns: 0 (0k)
ubuntu@kria:~$ sudo xmutil loadapp kr260-i2c
  1035.828900] OF: overlay: WARNING: memory leak will occur if overlay removed, property: /fpga-full/firmware-name
  1035.839040] OF: overlay: WARNING: memory 1035.848277] OF: overlay: WARNING: memory
                                                       leak will occur
                                                                           if overlay removed, property: /fpga-full/pid
                                                       leak will occur if overlay removed, property: /fpga-full/resets
  1035.857771] OF: overlay: WARNING: memory leak will occur if overlay removed, property: /fpga-full/uid 1035.867399] OF: overlay: WARNING: memory leak will occur if overlay removed, property: /_symbols__/o
                                                                                                                     symbols__/overlay0
  1035.877241] OF: overlay: WARNING: memory
                                                       leak will occur if overlay removed, property:
                                                                                                                     symbols
                                                                                                                                /overlay1
  1035.887085] OF: overlay:
                                  WARNING: memory
                                                       leak will occur
                                                                           if overlay removed, property: /
                                                                                                                     symbols
                                                                                                                                 /afi0
  1035.896579] OF: overlay: WARNING: memory
                                                       leak will occur if overlay removed, property: /
                                                                                                                     symbols
                                                                                                                                 /clocking0
  1035.906509] OF: overlay: WARNING: memory leak will occur if overlay removed, property: 1035.916438] OF: overlay: WARNING: memory leak will occur if overlay removed, property:
                                                                                                                     symbols__/clocking1
                                                                                                                      symbols
                                                                                                                                 /overlay2
  1035.926280] OF: overlay: WARNING: memory
                                                       leak will occur if overlay removed, property:
                                                                                                                     symbols__/axi_gpio_0
                                                       leak will occur if overlay removed, property:
                                                                                                                     _symbols__/misc_clk_0
_symbols__/axi_iic_0
  1035.936329] OF: overlay: WARNING: memory
  1035.946346] OF: overlay: WARNING: memory
                                                       leak will occur if overlay removed, property:
  1035.956281] OF: overlay: WARNING: memory leak will occur if overlay removed, property: 1035.966299] OF: overlay: WARNING: memory leak will occur if overlay removed, property:
                                                                                                                     symbols__/misc_clk_1
                                                                                                                     symbols__/axi_iic_
  1035.976227] OF: overlay: WARNING: memory leak will occur if overlay removed, property:
                                                                                                                     symbols__/axi_intc_0
 1035.986243] OF: overlay: WARNING: memory leak will occur if overlay removed, property: / 1036.067970] xiic-i2c 80020000.i2c: IRQ index 0 not found
                                                                                                                     symbols /axi intc 1
 r260-i2c: loaded to slot 0
ubuntu@kria:~$ [ 1036.203709] zocl-drm axi:zyxclmm_drm: IRQ index 32 not found
```

Now, check the available i2c channels available in the system using `i2cdetect` i2c utility tool.

```
sudo i2cdetect -1
ubuntu@kria:~$ sudo i2cdetect
                        Cadence I2C at ff030000
i2c-1
       i2c
                                                                  I2C adapter
i2c-2
        i2c
                        ZyngMP DP AUX
                                                                  I2C adapter
12c-3
        i2c
                        i2c-1-mux (chan_id 0)
                                                                  I2C adapter
                        i2c-1-mux (chan_id 1)
2c-4
        i2c
                                                                 I2C adapter
12c-5
                        i2c-1-mux (chan_id 2)
        i2c
                                                                  I2C adapter
                        i2c-1-mux (chan id 3)
                                                                     adapter
                        xiic-i2c 80020000.i2c
                                                                     adapter
                                                                 I2C adapter
       i2c
                        xiic-i2c 80030000.i2c
ubuntu@kria:~$
```

'i2c-8' channel will be used to connect to BMP180 sensor.

Connecting BMP180 to AXI I2C Bus

Connect BMP180 sensors, Vcc, GND, I2C SDA and I2C SCLK pins to PMOD as explained below:

PMOD1-> 6 - I2C SCLK

PMOD1-> 8 - I2C SDA

PMOD1-> GND - BMP180 GND

PMOD1->Vcc - BMP180 Vcc

]	11	9	7	5	3	1	PMOD UPPER
	12	10	8	6	4	2	PMOD LOWER
	Vcc	GND	I/O	I/O	I/O	I/O	

PMOD port numbering

After connecting BMP180 sensor to KR260 PMOD port, use i2c utility tools to scan for the available devices in i2c-8 channel.

```
sudo i2cdetect -y 8
```

```
ubuntu@kria:~$ sudo i2cdetect -y 8
00:
ubuntu@kria:~$
```

In i2c scan, we find a device is available at address '77', which corresponds to BMP180 i2c sensor. Next we will add the component for publishing BMP180 sensor data to the AWS IoT cloud.

Follow these steps after installing AWS greengrass core device in the KR260 board as mentioned in Kria connect to AWS IoT - GPIO document.

Installing the component

First install the BMP180 python library by running the following commands in KR260 terminal:

```
git clone https://github.com/m-rtijn/bmp180
cd bmp180
```

Update the ~/bmp180/bmp180/bmp180.py to use i2c-8 channel by changing following lines:

```
Copyright 2015-2017
<u>Released under the MIT license.</u>
<u>import</u> smbus
<u>import</u> math
<u>from</u> time <u>import</u> sleep
class bmp180:
    # Global variables
    address = None
    bus = smbus.SMBus(8)
    mode = \frac{1}{2} # TODO: Add a way to change the mode
    # BMP180 registers
    CONTROL REG = 0xF4
    DATA REG = 0 \times F6
    # Calibration data registers
ubuntu@kria:~/bmp180/bmp180$ ls
  init .py
             pycache
                              bmp180.py
```

Install the bmp180 module by running:

```
sudo python3 setup.py install
```

Get the 'components' folder and copy in the KR260 home directory.

It contains:

artifacts

- com.example.bmp180
 - 1.0.0
 - mgtt.py (This python code published temperature data)

recipe

Com.example.bmp180-1.0.0.json

For installing the greengrass-cli core device, first bring the AWS_ACCESS_KEY_ID and AWS_SECRET_ACCESS_KEY

for the device user to the terminal environment.

```
export AWS ACCESS KEY ID=<AWS ACCESS KEY ID>
export AWS_SECRET_ACCESS_KEY=<AWS SECRET ACCESS KEY>
```

To install the above component run the following in the KR260 terminal:

```
sudo /greengrass/v2/bin/greengrass-cli deployment create \
--recipeDir ~/components/recipe \
--artifactDir ~/components/artifacts \
--merge "com.example.bmp180=1.0.0"
```

```
ubuntu@kria:~$ sudo /greengrass/v2/bin/greengrass-cli deployment create \
--recipeDir ~/components/recipe \
--artifactDir ~/components/artifacts \
--merge "com.example.bmp180=1.0.0"
Local deployment submitted! Deployment Id: d69603fe-b0cb-4caf-a1d3-928694a06502
ubuntu@kria:~$
```

Now check the installed component is in "running state"

```
sudo /greengrass/v2/bin/greengrass-cli component list
```

Now in aws IoT console, open "MQTT test client" and subscribe to "#" You will find the published message in the 'kr260/bmp180' topic.



