

IoT Smart Home Kit for ESP32

Contents

1.	Thonny Installation	3
	1.1 Open the Thonny Package	3
	1.2 Thonny Interface	3
	1.3 Select ESP32 Development Environment	4
	1.4 Installing Firmware	6
2.	Projects	11
	Project 1: Control LED	11
	Project 1.1 LED Flashing	12
	Project 1.2 Breathing LED	14
	Project 2: Table Lamp	17
	Project 2.1 Read the Button	17
	Project 2.2. Table Lamp	19
	Project 3: PIR Motion Sensor	20
	Project 3.1 Read the PIR Motion Sensor	21
	Project 3.2 PIR Motion Sensor	22
	Project 4: Play Music	23
	Project 4.1 Play Happy Birthday	24
	Project 5: Automatic Doors and Windows	25
	Project 5.1 Control the Door	28




Project 5.2 Close the Window	29
Project 6: Atmosphere Lamp	30
Project 6.1 Control RGB	32
Project 6.2 Button	33
Project 7: Fan	35
Project 7.1 Control the Fan	36
Project 7.2 Switch On or Off the Fan	37
Project 8: LCD1602 Display	38
Project 8.1 Display Characters	39
Project 8.2 Dangerous Gas Alarm	41
Project 9: Temperature and Humidity Sensor	43
Project 9.1 Temperature and Humidity Tester	43
Project 10: RFID RC522 Module	44
Project 10.1 Open the Door	45
Project 11: Morse Code	48
Project 11.1 Morse Code Open the Door	48
Project 12: WiFi	50
Project 12.1 Smart Home	51



1. Thonny Installation


1.1 Open the Thonny Package

Please refer to the folder shown below:




1.2 Thonny Interface

Open the Thonny

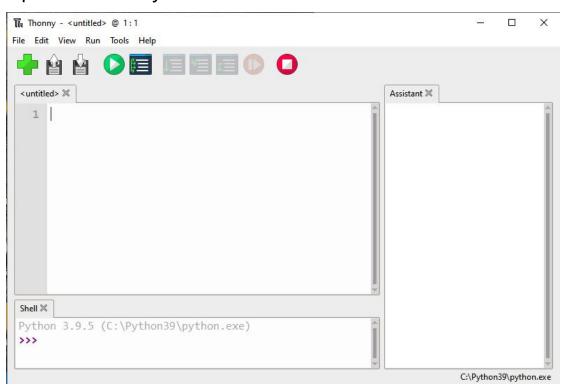

Main interface functions:




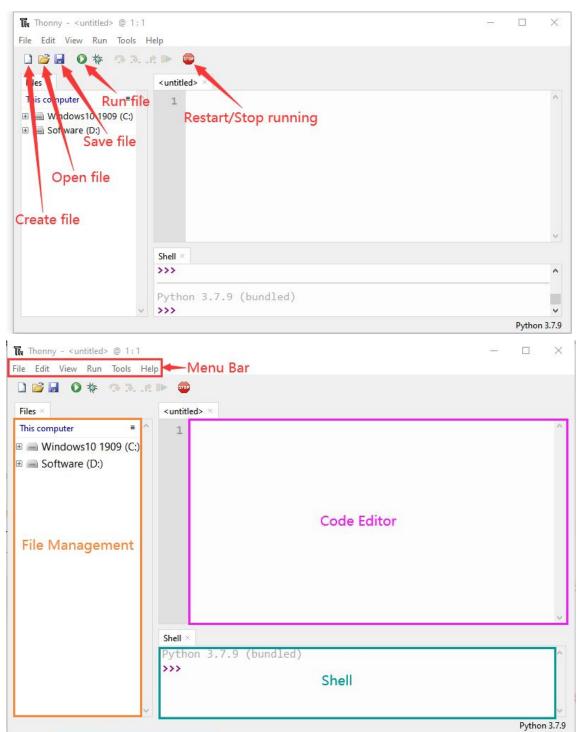


1.3 Select ESP32 Development Environment

Click Python.exe, then select Configure interpreter



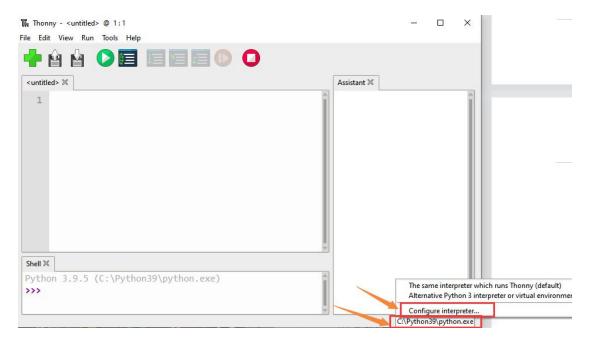

Select MicroPython(ESP32) from the Interpreter interface

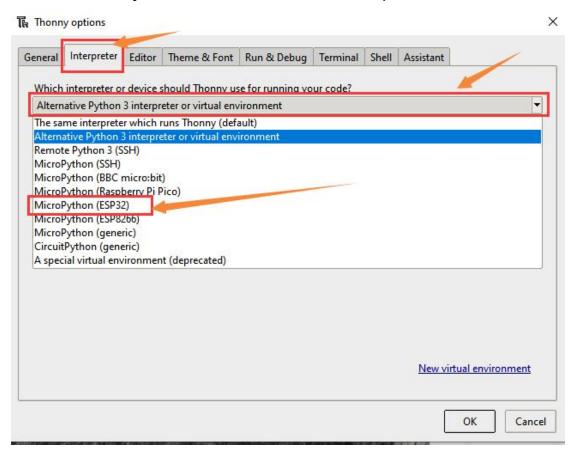



1.4 Installing Firmware

Download link: https://micropython.org/download/esp32/

Choose to download version V1.17

Firmware

```
Releases
```

```
v1.18 (2022-01-17) .bin [.elf] [.map] [Release notes] (latest)
v1.17 (2021-09-02) .bin [.elf] [.map] [Release notes]
v1.16 (2021-06-23) .bin [.elf] [.map] [Release notes]
v1.15 (2021-04-18) .bin [.elf] [.map] [Release notes]
v1.14 (2021-02-02) .bin [.elf] [.map] [Release notes]
v1.13 (2020-09-02) .bin [.elf] [.map] [Release notes]
v1.12 (2019-12-20) .bin [.elf] [.map] [Release notes]
```

Of course, we also provide the downloaded firmware, as shown below.


■ ESP32_GENERIC-20210902-v1.17.bin 2024/4/7 17:28 BIN 文件 1,492 KB

Burn microPython firmware


Connect the smart home to your computer with a USB.

Click Install or update firmware



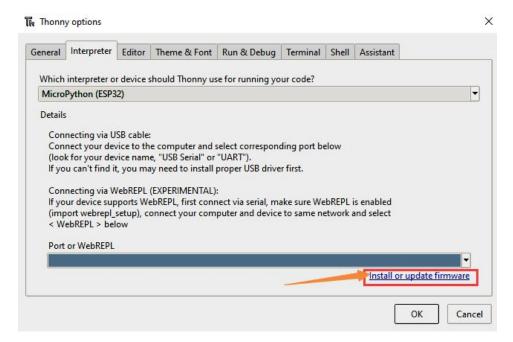



Select Port

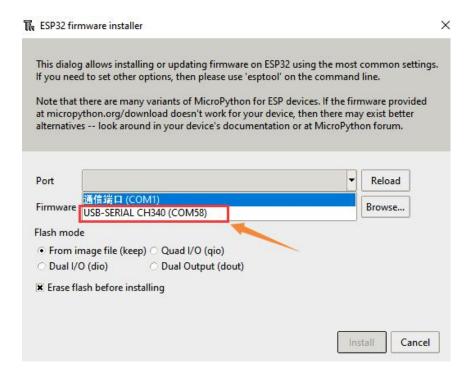

Click Browser to find the the downloaded version V1.17 firmware




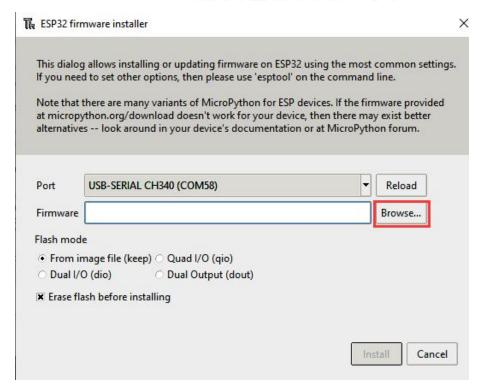

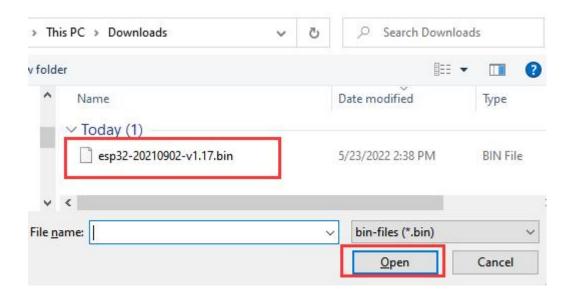


Click install



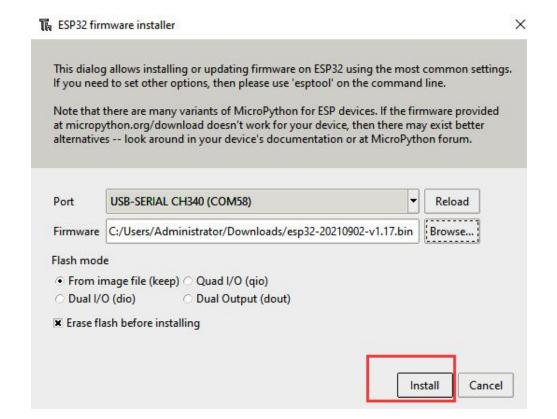

Choose Port or WebREPL as the driver of ESP32 mainboard CH340(COM)




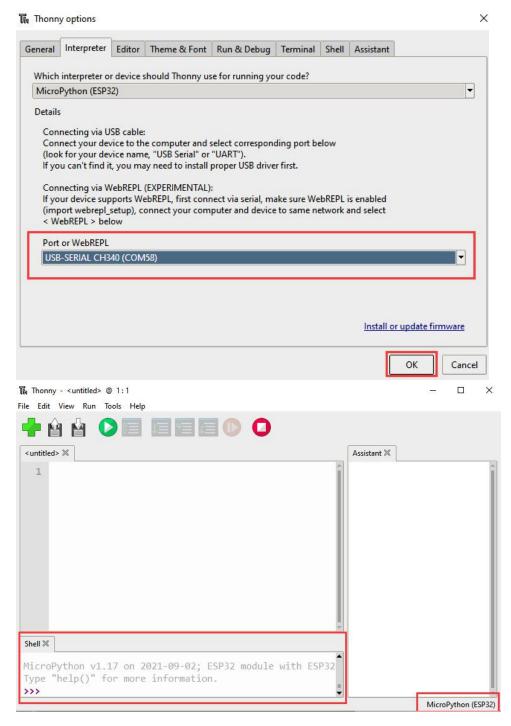

The ESP32 environment has been installed.


Thonny interface



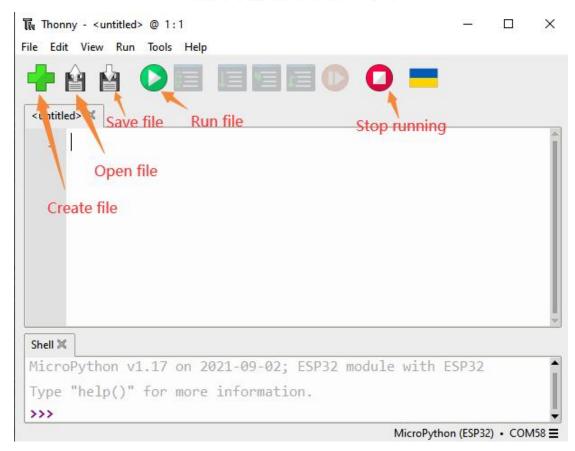

2. Projects

Please refer to the file below:



Project 1: Control LED

we will first learn how to control LED.





1. Working Principle

LED is also the light-emitting diode, which can be made i nto an electronic module. It will shine if we control pins t o output high level, otherwise it will be off.

2. Parameters

Working voltage	DC 3~5V
Working current	<20mA
Power	0.1W

3. Control Pin

Yellow LED	2
------------	---

Project 1.1 LED Flashing

1. Description

We can make the LED pin output high level and low level to make the LED flash.

2. Test Code

from machine import Pin import time

led = Pin(2, Pin.OUT)# Build an LED object, connect the external LED light to pin 2, and set pin 2 to output mode while True:

led.value(1)# turn on led time.sleep(1)# delay 1s led.value(0)# turn off led time.sleep(1)# delay 1s



(1) Open the sample code

pj8_1_lcd1602	2024/4/8 17:39	文件夹	
pj10_rc522_RFID	2024/4/8 17:39	文件夹	
Th pj1_1_led.py	2024/4/9 10:55	Python file	1 KB
Th pj1_2_breath_led.py	2024/4/7 17:43	Python file	1 KB
Th pj2_1_button.py	2024/4/7 17:43	Python file	1 KB
Th pj2_2_button_led.py	2024/4/7 17:43	Python file	1 KB
Th pj3_1_PIR.py	2024/4/7 17:44	Python file	1 KB
Th pj3_2_PIR_led.py	2024/4/7 17:44	Python file	1 KB
Th pj4_1_music.py	2024/4/7 17:45	Python file	1 KB
Th pj5_1_servo.py	2024/4/2 8:59	Python file	1 KB
Th pj5_2_auto_window.py	2024/4/7 17:46	Python file	1 KB
Th pj6_1_three_led.py	2024/4/8 10:43	Python file	1 KB
Th pj6_2_btn_three_led.py	2024/4/8 10:51	Python file	2 KB
Th pj7_1_fan.py	2024/4/7 17:49	Python file	1 KB
Th pj7_2_button_fan.py	2024/4/7 17:50	Python file	1 KB
Th pj8_2_gas_lcd.py	2024/4/7 17:53	Python file	1 KB
Th pj9_1_XHT11.py	2024/4/8 8:54	Python file	1 KB
Th pj11_1_MorseCode.py	2024/4/8 8:55	Python file	3 KB
Th pj12_1_wifi_sta.py	2024/4/7 17:56	Python file	1 KB

```
瞩 Thonny - D:\Awork\LONTEN Kit Ok\前14套\LTARK-7\Python Tutorials\microPython Code\pj1_1_led.py @ 8∶1
文件 编辑 视图 运行 工具 帮助
pj1_1_led.py ×
    1 from machine import Pin
    2 import time
    4 led = Pin(2, Pin.OUT)# Build an LED object, connect the external LED light to
    5 while True:
             led.value(1)# turn on led
              time.sleep(1)# delay 1s
led.value(0)# turn off led
             time.sleep(1)# delay 1s
   ets Jul 29 2019 12:21:46
   rst:0x1 (POWERON_RESET),boot:0x17 (SPI_FAST_FLASH_BOOT)
  rst:(0x1 (POWERON_RESET),boot:(0x17 (SPI_FAST_FLASH_BOOT)

configsip: 0, SPIWP:0xee

clk_drv:(0x00,q_drv:(0x00,d_drv:(0x00,cs0_drv:(0x00,hd_drv:(0x00,wp_drv:(0x00),mode:DIO, clock div:1

load:(0x3fff0018,len:4

load:(0x3fff001e,len:1044

load:(0x40078000,len:10124

load:(0x40078000,len:5856

artry(0x400080400)
   entry 0x400806a8
   Connected to longvn-US
IP address: 192.168.50.157
TCP server started
                                                                                                                MicroPython (ESP32)
```



(2) Operation and test result

Click the button

```
Thonny - D:\Awork\LONTEN Kit Ok\前14套\LTARK-7\Python Tutorials\microPython Code\pj1_1_led.py @ 8:1 — X
文件 编辑 视图 运行 工具 帮助

pj1_1_led.py ×

1     from machine import Pin import time

2     led = Pin(2, Pin.OUT)# Build an LED object, connect the external LED light to while True:
        led.value(1)# turn on led time.sleep(1)# delay 1s
        led.value(0)# turn off led time.sleep(1)# delay 1s
```

We can see that the yellow LED is flashing.


Project 1.2 Breathing LED

1. Description

A "breathing LED" is a phenomenon where an LED's brightness smoothly changes from dark to bright and back to dark, continuing to do so and giving the illusion of an LED "breathing. However, how to control LED's brightness? It makes sense to take advantage of PWM. Output the number of high level and low level in unit time, the more time the high level occupies, the larger the PWM value, the brighter the LED.



Pulse Width Modulation

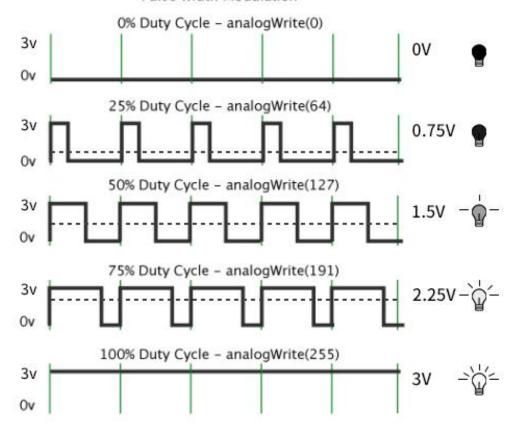

2. Test Code

import time

from machine import Pin,PWM

#The way that the ESP32 PWM pins output is different from traditionally controllers. #It can change frequency and duty cycle by configuring PWM's parameters at the initialization stage.

#Define GPIO 2's output frequency as 10000Hz and its duty cycle as 0, and assign them to PWM.

pwm = PWM(Pin(2,Pin.OUT),10000,0)

try:

while True:

#The range of duty cycle is 0-1023, so we use the first for loop to control PWM to change the duty

#cycle value,making PWM output 0% -100%; Use the second for loop to make PWM output 100%-0%.

for i in range(0,1023): pwm.duty(i) time.sleep_ms(1)



```
for i in range(0,1023):
    pwm.duty(1023-i)
    time.sleep_ms(1)

except:
#Each time PWM is used, the hardware Timer will be turned ON to cooperate it.
Therefore, after each use of PWM,
#deinit() needs to be called to turned OFF the timer. Otherwise, the PWM may fail to work next time.
    pwm.deinit()
```

3. Test Result

Click the button

```
隔 Thonny - D:\Awork\LONTEN Kit Ok\前14套\LTARK-7\Python Tutorials\microPython Code\pj1_2_breath_led.py @ 6 :... −
                                                                                       X
文件编辑 视图 运行 工具 帮助
7 3. E I
 pj1_2_breath_led.py
   1 import time
   2 from machine import Pin,PWM
   4 #The way that the ESP32 PWM pins output is different from traditionally contro
   5 #It can change frequency and duty cycle by configuring PWM's parameters at the
     #Define GPIO 2's output frequency as 10000Hz and its duty cycle as 0, and assi
     pwm =PWM(Pin(2,Pin.OUT),10000,0)
  8
  9 try:
  10
          while True:
  11 #The range of duty cycle is 0-1023, so we use the first for loop to control PW
  12 #cycle value, making PWM output 0% -100%; Use the second for loop to make PWM or
              for i in range(0,1023):
  14
                  pwm.duty(i)
                  time.sleep ms(1)
              for i in range(0,1023):
                  pwm.duty(1023-i)
  18
  19
                  time.sleep ms(1)
  20 except:
  21 #Each time PWM is used, the hardware Timer will be turned ON to cooperate it.
  22 #deinit() needs to be called to turned OFF the timer. Otherwise, the PWM may for
          pwm.deinit()
 Shell
  ets Jul 29 2019 12:21:46
  rst:0x1 (POWERON_RESET),boot:0x17 (SPI_FAST_FLASH_BOOT)
  configsip: 0, SPIWP:0xee
   -11 d---0-00 a d---0-00 d d---0-00 as0 d---0-00 hd d---0-00 .... d---0-00
                                                                           MicroPython (ESP32)
```

The LED gradually gets dimmer then brighter, cyclically, like



human breathe.

Project 2: Table Lamp

1. Description

The common table lamp uses LED lights and buttons, which can control the light on and off pressing the button.

2. Button Principle

The button module is a digital sensor, which can only read 0 or

1. When the module is not pressed, it is in a high level state, that is, 1, when pressed, it is a low level 0.



3. Pins of the Button

Button 1	16
Button 2	4

Project 2.1 Read the Button

1. Description

We will work to read the status value of the button and display it on the serial monitor, so as to see it intuitively.

2. Test Code

button1 = Pin(16, Pin.IN, Pin.PULL UP)



```
button2 = Pin(4, Pin.IN, Pin.PULL_UP)

while True:
    btnVal1 = button1.value()  # Reads the value of button 1
    btnVal2 = button2.value()
    print("button1 = ",btnVal1)  #Print it out in the shell
    print("button2 = ",btnVal2)
    time.sleep(0.1) #delay 0.1s
```

3. Test Result

Click the run button, then you can see the status values of button1 and button 2 printed in shell. Click the button of the smart home, and you can see the change of the status values.

```
Ik Thonny - D:\Awork\LONTEN Kit Ok\前14套\LTARK-7\Python Tutorials\microPython Code\pj2_1_button.py @ 1:12
文件编辑 视图 运行工具 帮助
Ø 3. .e ₽
pj2_1_button.py
  1 from machine import Pin
   2 import time
  4 button1 = Pin(16, Pin.IN, Pin.PULL_UP)
  5 button2 = Pin(4, Pin.IN, Pin.PULL_UP)
          btnVal1 = button1.value() # Reads the value of button 1
          btnVal2 = button2.value()
         print("button1 =",btnVal1) #Print it out in the shell
print("button2 =",btnVal2)
  10
          time.sleep(0.1) #delay 0.1s
  button2 = 1
  button1 = 1
  button2 = 1
  button2 = 1
  button2 = 1
                                                                               MicroPython (ESP32)
```



Project 2.2. Table Lamp

2, you can get 0 or 1 two state values.

1. Description

For common simple table lamp, click the button it will be opened, click it again, the lamp will be closed.

2. Test Code

Calculate the clicked button times and take the remainder of

```
from machine import Pin
import time
button1 = Pin(16, Pin.IN, Pin.PULL_UP)
led = Pin(2, Pin.OUT)
count = 0
while True:
    btnVal1 = button1.value() # Reads the value of button 1
    #print("button1 =",btnVal1) #Print it out in the shell
    if(btnVal1 == 0):
         time.sleep(0.01)
         while(btnVal1 == 0):
               btnVal1 = button1.value()
              if(btnVal1 == 1):
                   count = count + 1
                   print(count)
    val = count % 2
    if(val == 1):
         led.value(1)
    else:
         led.value(0)
    time.sleep(0.1) #delay 0.1s
```

3. Test Result

The shell will print out the clicked button times, then click the



button once, the LED will be on, click it again, it will be off.

```
稿 Thonny - D:\Awork\LONTEN Kit Ok\前14套\LTARK-7\Python Tutorials\microPython Code\pj2_2_button_led.py @ 19... −
文件 编辑 视图 运行 工具 帮助
pj2_2_button_led.py ×
   1 from machine import Pin
  2 import time
  4 button1 = Pin(16, Pin.IN, Pin.PULL_UP)
  5 led = Pin(2, Pin.OUT)
  6 count = 0
  8 while True:
         btnVal1 = button1.value() # Reads the value of button 1
 10
         #print("button1 =",btnVal1) #Print it out in the shell
         if(btnVal1 == 0):
             time.sleep(0.01)
             while(btnVal1 == 0):
                btnVal1 = button1.value()
 14
                 if(btnVal1 == 1):
                     count = count + 1
 17
                     print(count)
 18
         val = count % 2
>>> %Run -c $EDITOR_CONTENT
  3
  5
  6
                                                                          MicroPython (ESP32)
```

Project 3: PIR Motion Sensor

1. Description

The PIR motion sensor has many application scenarios in daily life, such as automatic induction lamp of stairs, automatic induction faucet of washbasin, etc.

It is also a digital sensor like buttons, which has two state



values 0 or 1. And it will be sensed when people are moving.



2. Control Pin

PIR motion sensor	35
-------------------	----

Project 3.1 Read the PIR Motion Sensor

We will print out the value of the PIR motion sensor through the serial monitor.

1. Test Code

```
from machine import Pin
import time

PIR = Pin(35, Pin.IN)
while True:
    value = PIR.value()
    print(value, end = " ")
    if value == 1:
        print("Some body is in this area!")
    else:
        print("No one!")
    time.sleep(0.1)
```

2. Test Result

When you stand still in front of the sensor, the reading value is 0, move a little, it will change to 1.



```
稿 Thonny - D:\Awork\LONTEN Kit Ok\前14套\LTARK-7\Python Tutorials\microPython Code\pj3_1_PIR.py @ 12:20
文件 编辑 视图 运行 工具 帮助
pj3_1_PIR.py ×
   1 from machine import Pin
   2 import time
  4 PIR = Pin(35, Pin.IN)
  5 while True:
         value = PIR.value()
print(value, end = " ")
        if value == 1:
             print("Some body is in this area!")
  Q
  10
             print("No one!")
       time.sleep(0.1)
  1 Some body is in this area!
  0 No one!
                                                                            MicroPython (ESP32)
```

Project 3.2 PIR Motion Sensor

If someone moves in front of the sensor, the LED will light up.

1. Test Code

```
from machine import Pin
import time

PIR = Pin(35, Pin.IN)
led = Pin(2, Pin.OUT)

while True:
   value = PIR.value()
   print(value)
   if value == 1:
```



led.value(1)# turn on led

else:

led.value(0)

time.sleep(0.1)

2. Test Result

Move your hand in front of the sensor, the LED will turn on.

After a few seconds of immobility, the LED will turn off.

Project 4: Play Music

1. Description

There is a audio power amplifier element in the car expansion board, which is as an external amplification equipment to play music.

In this project, we will work to play a piece of music by using it.

2. Component Knowledge

Passive Buzzer: The audio power amplifier (like the passive buzzer) does not have internal oscillation. When controlling, we need to input square waves of different frequencies to the positive pole of the component and ground the negative pole to control the power amplifier to chime sounds of different frequencies.





3. Control Pin

Passive Buzzer	32
----------------	----

Project 4.1 Play Happy Birthday

1. Test Code

from machine import Pin, PWM from time import sleep buzzer = PWM(Pin(32)) buzzer.duty(1000) # Happy birthday buzzer.freq(294) sleep(0.25) buzzer.freq(440) sleep(0.25) buzzer.freq(392) sleep(0.25) buzzer.freq(532) sleep(0.25) buzzer.freq(494) sleep(0.25) buzzer.freq(392) sleep(0.25) buzzer.freq(440) sleep(0.25) buzzer.freq(392) sleep(0.25) buzzer.freq(587) sleep(0.25) buzzer.freq(532) sleep(0.25) buzzer.freq(392) sleep(0.25)



buzzer.freq(784) sleep(0.25) buzzer.freq(659) sleep(0.25) buzzer.freq(532) sleep(0.25) buzzer.freq(494) sleep(0.25) buzzer.freq(440) sleep(0.25) buzzer.freq(698) sleep(0.25) buzzer.freq(659) sleep(0.25) buzzer.freq(532) sleep(0.25) buzzer.freq(587) sleep(0.25) buzzer.freq(532) sleep(0.5)buzzer.duty(0)

2. Test Result

The passive buzzer will play happy Birthday.

Project 5: Automatic Doors and Windows

1. Description

Automatic doors and windows need power device, which will become more automatic with a 180 degree servo and some sensors. Adding a raindrop sensor, you can achieve the effect of closing windows automatically when raining. If adding a RFID, we can realize the effect of swiping to open the door and so on.



2. Component Knowledge

Servo: Servo is a position servo driver device consists of a housing, a circuit board, a coreless motor, a gear and a position detector.

Its working principle is that the servo receives the signal sent by MCU or receiver and produces a reference signal with a period of 20ms and width of 1.5ms, then compares the acquired DC bias voltage to the voltage of the potentiometer and obtain the voltage difference output.


The IC on the circuit board judges the direction of rotation, and then drives the coreless motor to start rotation. The power is transmitted to the swing arm through the reduction gear, and the signal is sent back by the position detector to judge whether the positioning has been reached, which is suitable for those control systems that require constant angle change and can be maintained.

When the motor speed is constant, the potentiometer is driven to rotate through the cascade reduction gear, which leads that the voltage difference is 0, and the motor stops rotating. Generally, the angle range of servo rotation is 0° --180°.


The pulse period of the control servo is 20ms, the pulse width



is 0.5ms \sim 2.5ms, and the corresponding position is -90° \sim +90°. Here is an example of a 180° servo:

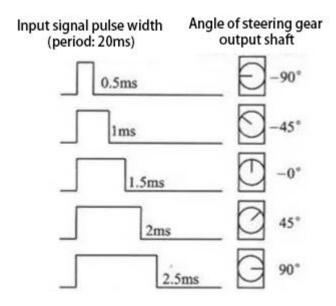

In general, servo has three lines in brown, red and orange. The brown wire is grounded, the red one is a positive pole line and the orange one is a signal line.

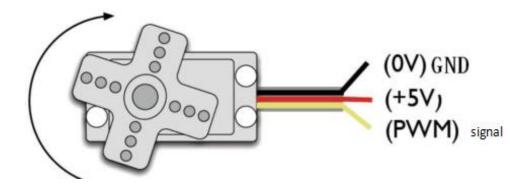





3. Pin

The servo of the window	12
The servo of the door	13

Project 5.1 Control the Door

1. Test Code

```
from machine import Pin, PWM
import time
pwm = PWM(Pin(13))
pwm.freq(50)

""

Duty cycle corresponding to the Angle
0°---2.5%---25
45°---5%---51.2
90°---7.5%---77
135°---10%---102.4
180°----12.5%----128
""

angle_0 = 25
angle_90 = 77
angle_180 = 128
```



```
while True:

pwm.duty(angle_0)

time.sleep(1)

pwm.duty(angle_90)

time.sleep(1)

pwm.duty(angle_180)

time.sleep(1)
```

2. Test Result

The servo of the door rotates with the door.

Project 5.2 Close the Window

1. Description

We will work to use a servo and a raindrop sensor to make an device closing windows automatically when raining.

2. Component Knowledge

Raindrop Sensor: This is an analog input module, the greater the area covered by water on the detection surface, the greater the value returned (range 0~4096).

3. Test Code

```
# Import Pin, ADC and DAC modules.
from machine import ADC,Pin,DAC,PWM
import time
pwm = PWM(Pin(12))
pwm.freq(50)

# Turn on and configure the ADC with the range of 0-3.3V
adc=ADC(Pin(34))
adc.atten(ADC.ATTN_11DB)
adc.width(ADC.WIDTH_12BIT)
```



```
# Read ADC value once every 0.1seconds, convert ADC value to DAC value and output it,
# and print these data to "Shell".

try:
    while True:
        adcVal=adc.read()
        dacVal=adcVal//16
        voltage = adcVal / 4095.0 * 3.3
        print("ADC Val:",adcVal,"DACVal:",dacVal,"Voltage:",voltage,"V")
        if(voltage > 0.6):
            pwm.duty(46)
        else:
            pwm.duty(100)
        time.sleep(0.1)

except:
    pass
```

4. Test Result

At first, the window opens automatically, and when you touch the raindrop sensor with your hand (which has water on the skin), the window will close.

Project 6: Atmosphere Lamp

1. Description

The atmosphere lamp of smart home is a SMD RGB LED. RGB LED belongs to a simple luminous module, which can adjust the color to bring out the lamp effect of different colors. Furthermore, it can be widely used in buildings, bridges, roads, gardens, courtyards, floors and other fields of decorative lighting and venue layout, Christmas, Halloween, Valentine's Day, Easter, National Day as well as other festivals during the




atmosphere and other scenes.

In this experiment, we will make various lighting effects..

2. Component Knowledge

SMD RGB LED module is made from a patch of full-color LED. By adjusting the voltage input of R, G, B pins, we can adjust the strength of the three primary colors (red/blue/green) so to implementation result of full color effect.

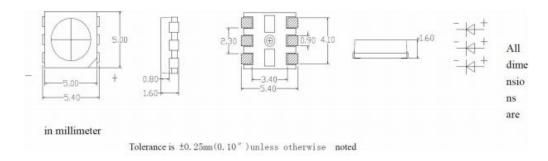

Parameter	Symbol	Value	Unit
Forward Current	If	20	mA
Reverse Voltage	Vr	5	v
Operating Temperature	Торг	-25~+85	,C
Storage Temperature	Tstg	-35∼+85	°C
Soldering temperature	Tsol	260±5°C (for4sec)	,C
Power Dissipation	Pd	R=40	mW
Pulse Current	I_{FP}	100	mA





3. Pin

R	14
G	27
В	15

Project 6.1 Control RGB

We will control RGB to display various lighting effects.

1. Test Code

```
from machine import PWM,Pin
import time
#Define the number of pin and LEDs
red_pin = PWM(Pin(14))
green_pin = PWM(Pin(27))
blue_pin = PWM(Pin(15))
#Nest two for loops to make the module repeatedly display five states of red, green, blue, white
and OFF.
while True:
    #red
    red_pin.duty(100)
    green_pin.duty(0)
    blue_pin.duty(0)
    time.sleep_ms(500)
    #green
    red_pin.duty(0)
    green_pin.duty(100)
    blue_pin.duty(0)
    time.sleep_ms(500)
    #blue
    red_pin.duty(0)
    green_pin.duty(0)
    blue_pin.duty(100)
    time.sleep_ms(500)
    #white
    red_pin.duty(100)
```



```
green_pin.duty(100)
blue_pin.duty(100)
time.sleep_ms(500)
#close
red_pin.duty(0)
green_pin.duty(0)
blue_pin.duty(0)
time.sleep_ms(500)
```

2. Test Result

The atmosphere lamps of the smart home will display red, greenish blue as well as white.

Project 6.2 Button

1. Description

There are two switch buttons to change the color of the atmosphere lamp.

2. Test Code

```
from machine import PWM,Pin
import time

button1 = Pin(16, Pin.IN, Pin.PULL_UP)
button2 = Pin(4, Pin.IN, Pin.PULL_UP)
count = 0

#Define the number of pin and LEDs
red_pin = PWM(Pin(14))
green_pin = PWM(Pin(27))
blue_pin = PWM(Pin(15))

#Nest two for loops to make the module repeatedly display five states of red, green, blue, white and OFF.
while True:
    btnVal1 = button1.value() # Reads the value of button 1
    #print("button1 =",btnVal1) #Print it out in the shell
```



```
if(btnVal1 == 0):
    time.sleep(0.01)
    while(btnVal1 == 0):
         btnVal1 = button1.value()
         if(btnVal1 == 1):
              if(count <= 0):
                   count = 0
              else:
                   count = count - 1
              print(count)
btnVal2 = button2.value()
if(btnVal2 == 0):
    time.sleep(0.01)
    while(btnVal2 == 0):
         btnVal2 = button2.value()
         if(btnVal2 == 1):
              count = count + 1
              if(count >= 4):
                   count = 4
              print(count)
if(count == 0):
    red_pin.duty(0)
    green_pin.duty(0)
    blue_pin.duty(0)
elif(count == 1):
    red_pin.duty(100)
    green_pin.duty(0)
    blue_pin.duty(0)
elif(count == 2):
    red_pin.duty(0)
    green_pin.duty(100)
    blue_pin.duty(0)
elif(count == 3):
    red_pin.duty(0)
    green_pin.duty(0)
    blue_pin.duty(100)
elif(count == 4):
    red_pin.duty(100)
    green_pin.duty(100)
    blue_pin.duty(100)
```



3. Test Result

We can switch the color of the atmosphere lamp by clicking buttons 1 and 2.

Project 7: Fan

1. Description

In this project, we will learn how to make a small fan.

2. Component Knowledge

The small fan uses a 130 DC motor and safe fan blades. You can use PWM output to control the fan speed.



3. Control Method

Two pins are required to control the motor of the fan, one for INA and two for INB. The PWM value range is 0~255. When the PWM output of the two pins is different, the fan can rotate.

INA - INB <= -45	Rotate clockwise
INA - INB >= 45	Rotate anticlockwise
INA ==0, INB == 0	Stop



4. Control Pins

INA	25
INB	33

Project 7.1 Control the Fan

We can control the anticlockwise and clockwise rotation s peed of the fan.

1. Test Code

```
from machine import Pin,PWM
import time
#Two pins of the motor
INA =PWM(Pin(25,Pin.OUT),10000,0)#INA corresponds to IN+
INB =PWM(Pin(33,Pin.OUT),10000,2)#INB corresponds to IN-
try:
    while True:
         #Counterclockwise 2s
         INA.duty(0) #The range of duty cycle is 0-1023
         INB.duty(700)
         time.sleep(2)
         #stop 1s
         INA.duty(0)
         INB.duty(0)
         time.sleep(1)
         #Turn clockwise for 2s
         INA.duty(600)
         INB.duty(0)
         time.sleep(2)
         #stop 1s
         INA.duty(0)
         INB.duty(0)
         time.sleep(1)
except:
    INA.duty(0)
    INB.duty(0)
    INA.deinit()
```



INB.deinit()

2. Test Result

The fan will rotate clockwise and anticlockwise at different speeds.

Project 7.2 Switch On or Off the Fan

One button switches the fan on and the other button con trols the speed of the fan.

```
from machine import Pin,PWM
import time
#Two pins of the motor
INA =PWM(Pin(25,Pin.OUT),10000,0)#INA corresponds to IN+
INB =PWM(Pin(33,Pin.OUT),10000,2)#INB corresponds to IN-
button1 = Pin(16, Pin.IN, Pin.PULL_UP)
count = 0
try:
     while True:
          btnVal1 = button1.value() # Reads the value of button 1
         if(btnVal1 == 0):
              time.sleep(0.01)
              while(btnVal1 == 0):
                   btnVal1 = button1.value()
                   if(btnVal1 == 1):
                        count = count + 1
                        print(count)
         val = count % 2
         if(val == 1):
              INA.duty(0) #The range of duty cycle is 0-1023
              INB.duty(700)
         else:
              INA.duty(0)
              INB.duty(0)
except:
```



INA.duty(0)
INB.duty(0)
INA.deinit()
INB.deinit()

2. Test Result

Click button 1, the fan starts to rotate, click button 2, the speed can be adjusted(there are three different speeds), p ress the button 1 again, the fan stops.

Project 8: LCD1602 Display

1. Description

As we all know, screen is one of the best ways for people to interact with electronic devices.

2. Component Knowledge

1602 is a line that can display 16 characters. There are two lines, which use IIC communication protocol.



3. Control Pins

SDA	21
SCL	22




Project 8.1 Display Characters

1. Description


We will use library file i2c_lcd.py and lcd_api.py, which should be saved in the ESP32 memory.

2. Operations

Open the i2c_lcd.py and lcd_api.py




Select File > save as > MicroPython device

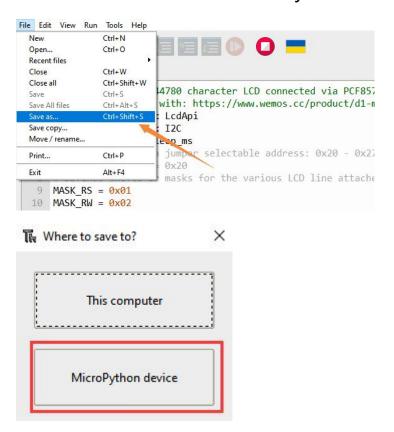

The saved name id i2c_lcd.py and lcd_api.py



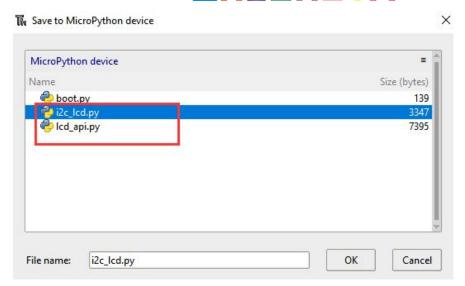

```
from time import sleep_ms, ticks_ms
from machine import I2C, Pin
from i2c_lcd import I2cLcd
DEFAULT_I2C_ADDR = 0x27
i2c = I2C(scl=Pin(22), sda=Pin(21), freq=400000)
lcd = I2cLcd(i2c, DEFAULT_I2C_ADDR, 2, 16)
lcd.move_to(1, 0)
lcd.putstr('Hello')
lcd.move_to(1, 1)
lcd.putstr('Lrobruya')
# The following line of code should be tested
# using the REPL:
# 1. To print a string to the LCD:
      lcd.putstr('Hello world')
# 2. To clear the display:
#lcd.clear()
# 3. To control the cursor position:
# lcd.move_to(2, 1)
# 4. To show the cursor:
# lcd.show_cursor()
# 5. To hide the cursor:
#lcd.hide_cursor()
# 6. To set the cursor to blink:
```



```
#lcd.blink_cursor_on()
#7. To stop the cursor on blinking:
#lcd.blink_cursor_off()
# 8. To hide the currently displayed character:
#lcd.display_off()
# 9. To show the currently hidden character:
#lcd.display on()
# 10. To turn off the backlight:
#lcd.backlight off()
# 11. To turn ON the backlight:
#lcd.backlight_on()
# 12. To print a single character:
#lcd.putchar('x')
# 13. To print a custom character:
#happy_face = bytearray([0x00, 0x0A, 0x00, 0x04, 0x00, 0x11, 0x0E, 0x00])
#lcd.custom_char(0, happy_face)
#lcd.putchar(chr(0))
```

The first line of the LCD1602 shows hello and the second line shows Lrobruya.

Project 8.2 Dangerous Gas Alarm

1. Description

When a gas sensor detects a high concentration of dangerous gas, the buzzer will sound an alarm and the display will show dangerous and the fan will turn on..

2. Component Knowledge

MQ2 Smoke Sensor: It is a gas leak monitoring device for homes and factories, which is suitable for liquefied gas, benzene, alkyl, alcohol, hydrogen as well as smoke



detection. Our sensor leads to digital pin D and analog output pin A, which is connected to D as a digital sensor in this project.



3. Control Pin

Gas Sensor	39
------------	----

```
from time import sleep_ms, ticks_ms
from machine import I2C, Pin
from i2c_lcd import I2cLcd
DEFAULT_I2C_ADDR = 0x27
i2c = I2C(scl=Pin(22), sda=Pin(21), freq=400000)
lcd = I2cLcd(i2c, DEFAULT_I2C_ADDR, 2, 16)
from machine import Pin
import time
gas = Pin(39, Pin.IN, Pin.PULL_UP)
while True:
    gasVal = gas.value() # Reads the value of button 1
    print("gas =",gasVal) #Print it out in the shell
    lcd.move_to(1, 1)
    lcd.putstr('val: {}'.format(gasVal))
    if(gasVal == 1):
         #lcd.clear()
         lcd.move_to(1, 0)
         lcd.putstr('Safety
                                   ')
    else:
         lcd.move_to(1, 0)
         lcd.putstr('dangerous')
    time.sleep(0.1) #delay 0.1s
```



The screen displays "safety" in normal state. However, when the gas sensor detects some dangerous gases, such as carbon monoxide, at a certain concentration, the buzzer will sound an alarm and the screen displays "dangerous" and the fan will turn on.

Project 9: Temperature and Humidity Sensor

1. Component Knowledge

Its communication mode is serial data and single bus. The temperature measurement range is $-20 \sim +60^{\circ}$ C, accuracy is $\pm 2^{\circ}$ C. However, the humidity range is 5 ~ 95%RH, the accuracy is $\pm 5\%$ RH.



2. Control Pin

Temperature and Humidity Sensor	26
---------------------------------	----

Project 9.1 Temperature and Humidity Tester

1. Test Code

Import machine, time and dht modules. import machine import time



```
import dht
from time import sleep_ms, ticks_ms
from machine import I2C, Pin
from i2c_lcd import I2cLcd
#Associate DHT11 with Pin(26).
DHT = dht.DHT11(machine.Pin(26))
DEFAULT_12C_ADDR = 0x27
i2c = I2C(scl=Pin(22), sda=Pin(21), freq=400000)
lcd = I2cLcd(i2c, DEFAULT_I2C_ADDR, 2, 16)
while True:
    DHT.measure()
    print('temperature:',DHT.temperature(),'^{\circ}C','humidity:',DHT.humidity(),'%')
    lcd.move_to(1, 0)
    lcd.putstr('T= {}'.format(DHT.temperature()))
    lcd.move_to(1, 1)
    lcd.putstr('H= {}'.format(DHT.humidity()))
    time.sleep_ms(1000)
```

The LCD1602 displays the temperature (T = **) and humidity (H = **). When you breathe into the T/H sensor, you can see that the humidity rises.

Project 10: RFID RC522 Module

1. Component Knowledge

Radio frequency identification, the card reader is composed of a radio frequency module and a high-level magnetic field. The Tag transponder is a sensing device, which doesn't contain a battery. It only contains tiny integrated circuit chips and media



for storing data and antennas for receiving and transmitting signals.

To read the data in the tag, first put it into the reading range of the card reader. The reader will generate a magnetic field, which can produce electricity according to Lenz's law, then the RFID tag will supply power, thereby activating the device.




2. Control Pins

RST	17
SDA	5
SCK	18
MISO	19
MOSI	23

Project 10.1 Open the Door



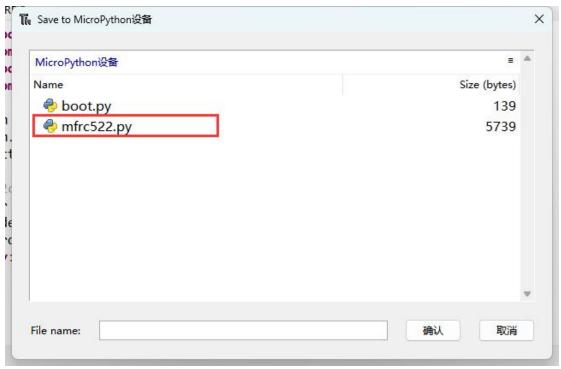

```
import mfrc522
from os import uname
import time
from machine import Pin,PWM,I2C
pwm = PWM(Pin(13))
pwm.freq(50)
button1 = Pin(16, Pin.IN, Pin.PULL_UP)
#i2c config
rdr = mfrc522.MFRC522(18, 23, 19, 17, 5)
index = True
card_id=0
try:
     while True:
         btnVal1=button1.value()
         if(btnVal1 == 0):
              pwm.duty(25)
              print("close")
         (stat, tag_type) = rdr.request(rdr.REQIDL)
         if stat == rdr.OK:
              (stat, raw_uid) = rdr.anticoll()
              if stat == rdr.OK:
                   print("Card UID: ")
                   card_id="0x%02x%02x%02x%02x" % (raw_uid[0], raw_uid[1], raw_uid[2],
raw_uid[3])
```



```
print(card_id)
  if(card_id == "0xf3c66f1a"):
        pwm.duty(128)
        print("open")
    else:
        print("error")
        card_id=0
        index = False

except KeyboardInterrupt:
    print("Bye")
```

Close the provided card to the RFID induction area, the door will turn and open, and the shell shows "open". Click button 1 and the door turns and closes. However, when swiping another blue induction block, the shell shows "error".


```
文件 编辑 视图 运行 工具 帮助
□ 🗃 🗑 🐡 🦈 🕏 元 .e 🕪 📵
pj10_rc522_RFID.py
  1 import mfrc522
    from os import uname
    import time
  4 from machine import Pin, PWM, I2C
 6 pwm = PWM(Pin(13))
     pwm.freq(50)
 8 button1 = Pin(16, Pin.IN, Pin.PULL_UP)
 10 #i2c config
 11 rdr = mfrc522.MFRC522(18, 23, 19, 17, 5)
    index = True
 13 card_id=0
        while True:
           btnVal1=button1.value()
           if(btnVal1 == 0):
              pwm.duty(25)
 18
>>> %Run -c $EDITOR_CONTENT
  Warning: SPI(-1, ...) is deprecated, use SoftSPI(...) instead
 Card UID:
0xf3c66f1a
  open
Card UID:
  0x13f6c90e
  error
                                                               MicroPython (ESP32)
```



Project 11: Morse Code

Morse code, also known as Morse password, is an on-again, off-again signal code that expresses different letters, numbers, and punctuation marks in different sequences. Now we use it as our password gate.

The Morse code corresponds to the following characters:

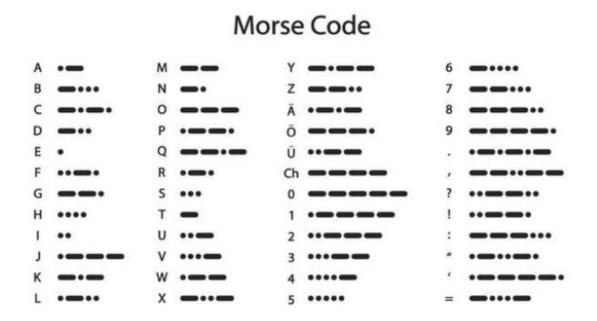

Project 11.1 Morse Code Open the Door

1. Description

We use as the correct password. What's more, there is a button library file OneButton, which is very simple to click, double click, long press and other functions. For Morse password, click is ".", long press and release is "-".



```
# Import machine, time and dht modules.
from machine import Pin, PWM
from time import sleep_ms, ticks_ms
from machine import I2C, Pin
from i2c lcd import I2cLcd
DEFAULT_I2C_ADDR = 0x27
i2c = I2C(scl=Pin(22), sda=Pin(21), freq=400000)
lcd = I2cLcd(i2c, DEFAULT_I2C_ADDR, 2, 16)
button1 = Pin(16, Pin.IN, Pin.PULL UP)
button2 = Pin(4, Pin.IN, Pin.PULL_UP)
count = 0
time_count = 0
password = "" #Enter password
correct password = "-.-" #Correct password
lcd.putstr("Enter password")
pwm = PWM(Pin(13))
pwm.freq(50)
while True:
    btnVal1 = button1.value() # Read the value of button 1
    if(btnVal1 == 0):
         sleep_ms(10)
         while(btnVal1 == 0):
              time_count = time_count + 1 #Start counting the pressed time of the button
                                               #The time is 200ms cumulative
              sleep_ms(200)
              btnVal1 = button1.value()
              if(btnVal1 == 1):
                  count = count + 1
                  print(count)
                  print(time count)
                  if(time_count > 3):
                                           #If the pressed time of the button is more than
200*3ms, add"-" to password
                       lcd.clear()
                       #lcd.move_to(1, 1)
                       password = password + "-"
                  else:
                       lcd.clear()
                       password = password + "." #Otherwise add "."
                  lcd.putstr('{}'.format(password))
```



```
time_count = 0
btnVal2 = button2.value()
if(btnVal2 == 0):
    if(password == correct_password): #If the password is correct
         lcd.clear()
         lcd.putstr("open")
         pwm.duty(128) #Open the door
         password = "" #Remove the password
         sleep_ms(1000)
    else:
                         #If the password is wrong
         lcd.clear()
         lcd.putstr("error")
         pwm.duty(25) #Close the door
         sleep_ms(2000)
         lcd.clear()
         lcd.putstr("enter again")
         password = "" #Remove the password
```

At first, the LCD1602 displays "Enter password", then click or long press button 1 to tap the password. If we input the correct password "-.-", then click button 2, the door will open, and the LCD1602 will display "open".

If other incorrect passwords are entered, the door will not move, the LCD1602 will display "error" and then "input again" 2s later. Furthermore, long press button 2 can close the door.

Project 12: WiFi

The easiest way to access the Internet is to use a WiFi to connect. The ESP32 main control board comes with a WiFi



module, making our smart home accessible to the Internet easily.



Project 12.1 Smart Home

1. Description

We connect the smart home to a LAN, which is the WiFi in your home or the hot spot of your phone. After the connection is successful, an address will be assigned. We will print the assigned address in the shell.

Suggest using mobile hotspot, command feedback will be faster.

2. Test Code

Note: ssid and password in the code should be filled with your own WiFi name and password.



```
import time
import network #Import network module
#Enter correct router name and password
                = 'longvn-US' #Enter the router name
ssidRouter
passwordRouter = 'IIII8888' #Enter the router password
def STA_Setup(ssidRouter,passwordRouter):
    print("Setup start")
    sta_if = network.WLAN(network.STA_IF) #Set ESP32 in Station mode
    if not sta_if.isconnected():
          print('connecting to',ssidRouter)
#Activate ESP32's Station mode, initiate a connection request to the router
#and enter the password to connect.
         sta_if.active(True)
         sta_if.connect(ssidRouter,passwordRouter)
#Wait for ESP32 to connect to router until they connect to each other successfully.
         while not sta_if.isconnected():
              pass
#Print the IP address assigned to ESP32 in "Shell".
     print('Connected, IP address:', sta_if.ifconfig())
    print("Setup End")
try:
    STA_Setup(ssidRouter,passwordRouter)
except:
    sta_if.disconnect()
```

If the WiFi is connected successfully, the serial monitor will print out the connected WiFi name and assigned IP address.

```
>>> %Run -c $EDITOR_CONTENT

Setup start
connecting to longvn-US
Connected, IP address: ('192.168.50.157', '255.255.255.0', '192.168.50.1', '192
.168.50.1')
Setup End
>>>

MicroPython (ESP32)
```