

**LROBRUYA**

Basic Starter Kit for  
microbit

# LROBRUYA

---

## Content

Preface .....	3
Micro:bit .....	5
GPIO .....	7
Micro:bit GPIO Extension Board .....	8
Code & Programming .....	9
Python .....	18
Lesson 1 LED matrix .....	26
Lesson 2 Built-in Button .....	42
Lesson 3 LED .....	49
Lesson 4 Button and LED .....	60
Lesson 5 LED Bar Graph .....	72
Lesson 6 PWM .....	78
Lesson 7 RGBLED .....	85
Lesson 8 Buzzer .....	100
Lesson 9 Serial Communication .....	114
Lesson 10 Magnetometer .....	118
Lesson 11 Accelerometer .....	132
Lesson 12 Potentiometer .....	142
Lesson 13 Potentiometer and LED .....	150
Lesson 14 Light Sensor .....	162
Lesson 15 Temperature Sensor .....	173
Lesson 16 Clapping hands and heartbeat .....	176



## Preface

### Company Profile

Founded in 2014, Shenzhen Lonten Technology Co., Ltd. focuses on the design, research production of Electronics Module for robotics related products. Consisting of professional researchers and skilled engineers, our R&D team constantly strives for creative function and excellent user experience. The company's R&D investments on arduino kits raspberry pi kits, as well as 3D printer and robots that back up STEAM education.

### Customer Service

Our self-owned factory is certificated with BSCI and SO, covering an area of 5,000 square meters, and achieving an annual production capacity of over 10,000 units. Our products are all certified to CE, FCC, and ROHS standards, have exported to more than 100 countries including, but not limited to France, the United States of America, Australia, Russia, the United Kingdom, Germany, Singapore, Egypt, and India, bringing technological innovation to all walks of life.

By the way, We also look forward to hearing from you and any of your critical comment or suggestions. Pls email us by [lonten3@qq.com](mailto:lonten3@qq.com) or [info@lontentech.com](mailto:info@lontentech.com), if you have any questions or suggestions.

As a continuous and fast growing company. We keep striving our best to



offer you excellent products and quality service.

## **Our Store**

store: <https://www.lontentech.com/>

Brand: LONTEN

## **Product Catalog**

<https://www.lontentech.com/collections/sensor-module>

## **Tutorial**

This tutorial include codes, libraries and detailed user documentation. It is designed for beginners. This kit includes the core board and extension board of microbit v2 version. Through the study of this kit, you can have a preliminary understanding of the two programming methods of microbit, namely graphical programming and microphothon programming.

## Micro:bit


This chapter is the Start Point in the journey to build and explore


Micro:bit electronic projects.



The BBC micro:bit is a pocket-size, programmable micro-computer that can be used for all sorts of cool creations, from robots to musical instruments the possibilities are infinite.

For more contents, please refer to: <https://microbit.org/guide/>

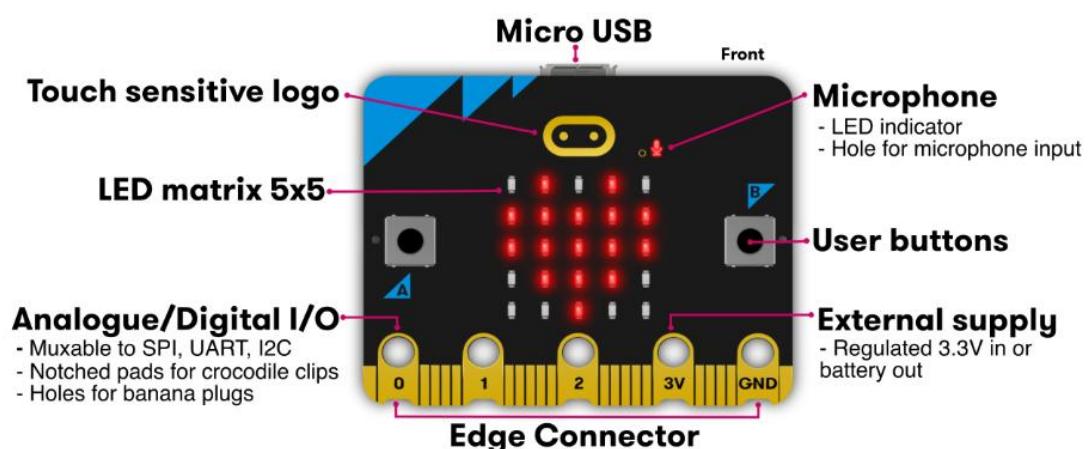

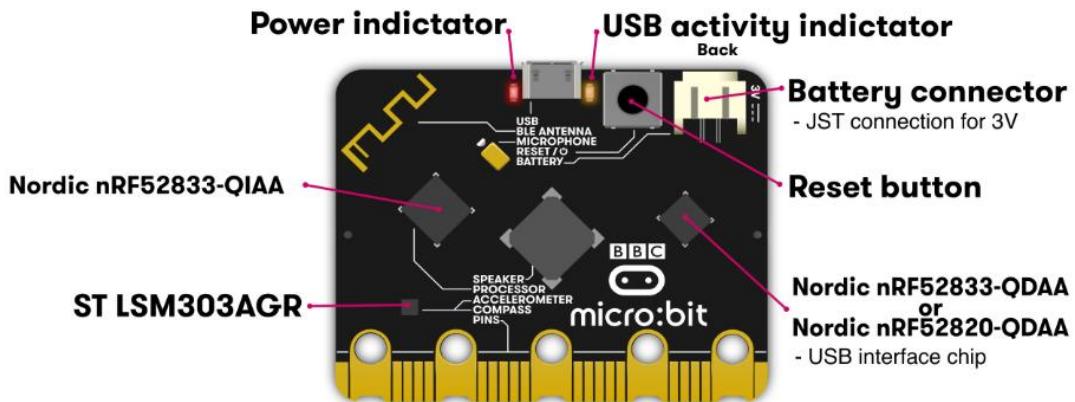

Your micro:bit has the following physical features:

- 25 individual programmable LEDs
- 2 programmable buttons
- Physical connection pins
- Light and temperature sensors
- Motion sensors (accelerometer and compass)
- Wireless Communication, via Radio and Bluetooth
- USB interface

For more details, please refer to: <https://microbit.org/guide/features/>


It is not required for beginners to master this section, but a brief understanding is necessary. However, if you want to be a developer, hardware information will be very helpful. Detailed hardware information about micro:bit can be found here: <https://tech.microbit.org/hardware/>

First, get to know the micro:bit GPIO.

# LROBRUYA

## GPIO


GPIO, namely General Purpose Input/output Pins, is an important part of micro:bit for connecting external devices. All sensors and devices on Rover communicate with each other through micro:bit GPIO. The following is the GPIO serial number and function diagram of micro:bit:

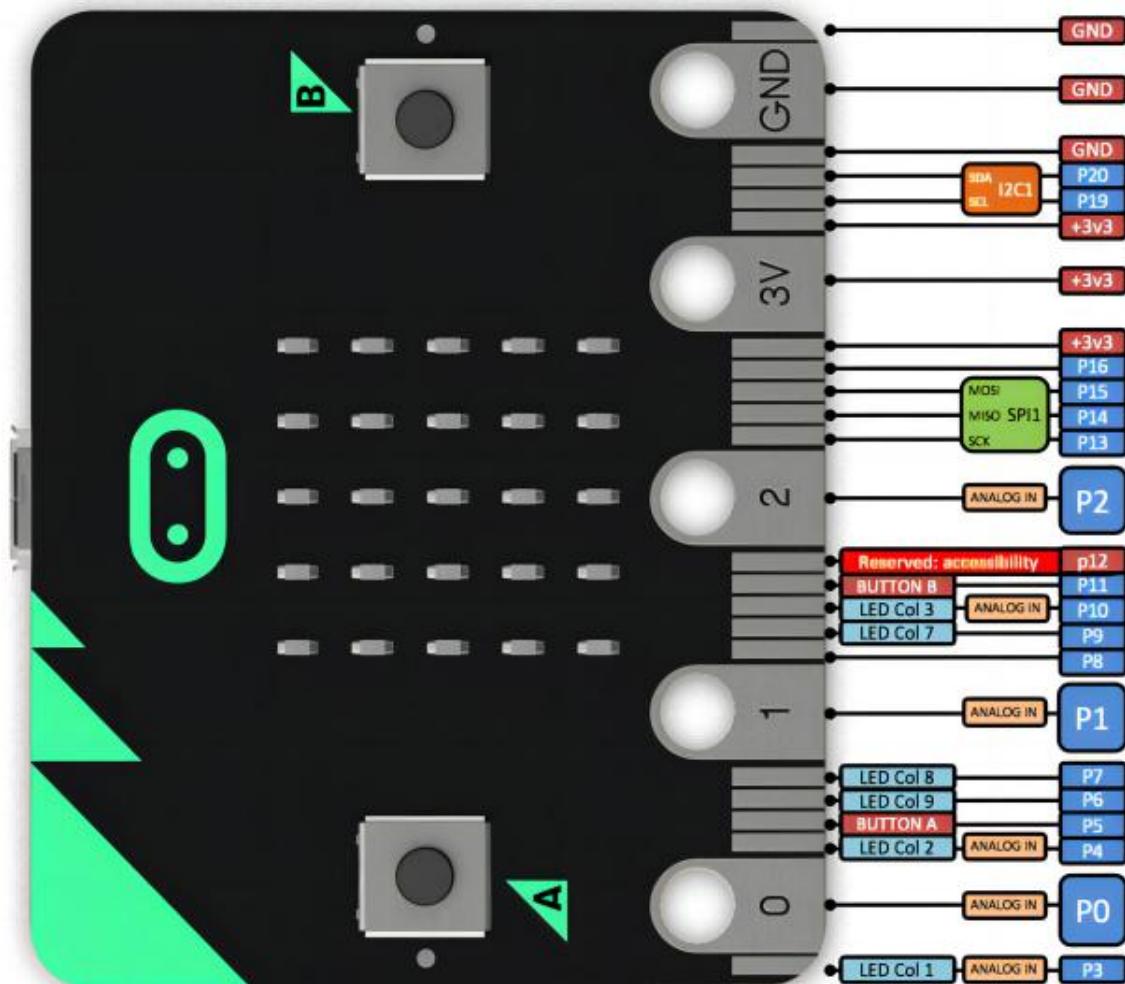

## Micro:bit GPIO Extension Board

### Hardware and Feature


Micro:bit GPIO Extension Board is shown as below:

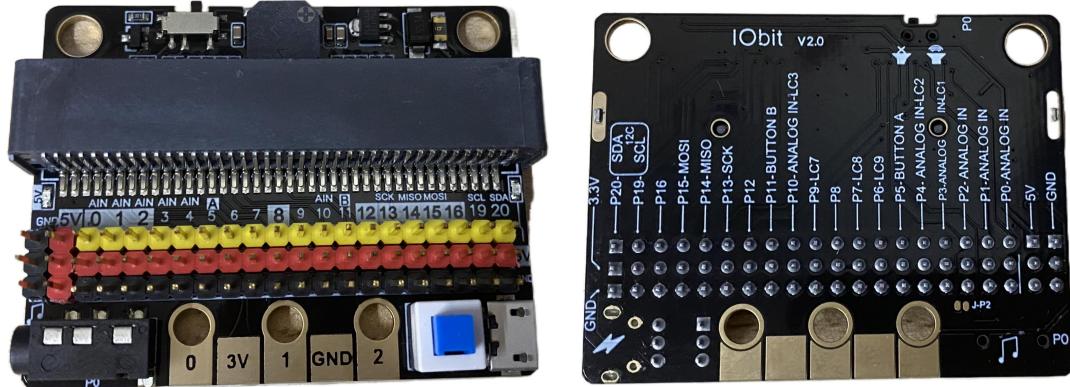

Micro:bit GPIO Extension Board is connected to micro:bit board via a slot with its GPIO connected to micro:bit's GPIO. In addition, there are also 5V/3V and IO port on the extension board to meet requirement of more devices.

This extended version can be powered by USB and has onboard functions such as a buzzer (P0 interface) and a toggle switch (used to switch between the buzzer's music output and the audio port's sound output). 5 gold fingers seamlessly dock with the 0, 1, 2, 3V, GND pins of the microbit core board to protect the microbit gold fingers.

### How to connect?

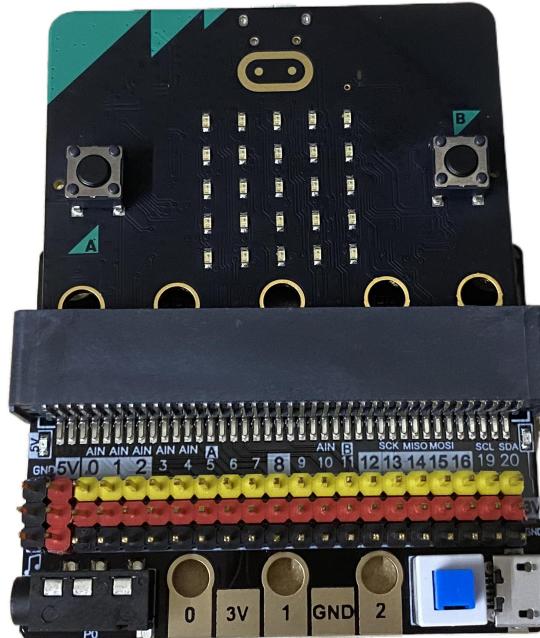

## Code & Programming

### Quick Start

This section describes how to write programs for micro:bit and how to download them to micro:bit. There are very detailed tutorials on the official website. You can refer to: <https://microbit.org/guide/quick/>

### Step 1: Connecting Micro:bit

Connect the micro:bit to your computer via a micro USB cable. Macs, PCs, Chromebooks and Linux systems (including Raspberry Pi) are all supported.


# LROBRUYA

---




## Step 2: Write Program

Visit <https://makecode.microbit.org/> Then click "New Project" and start programming.

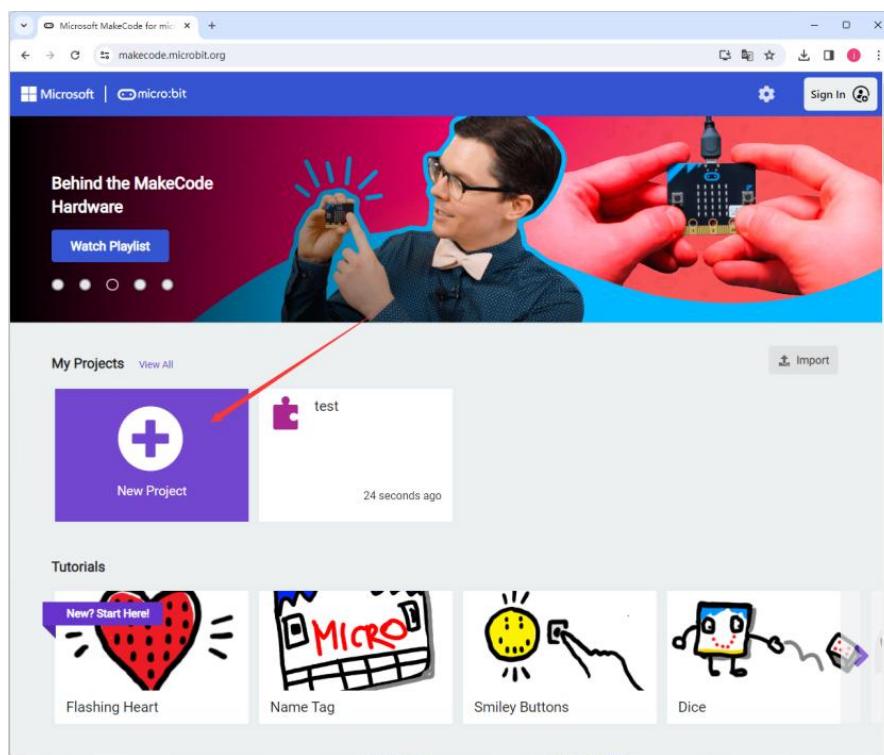


# LROBRUYA

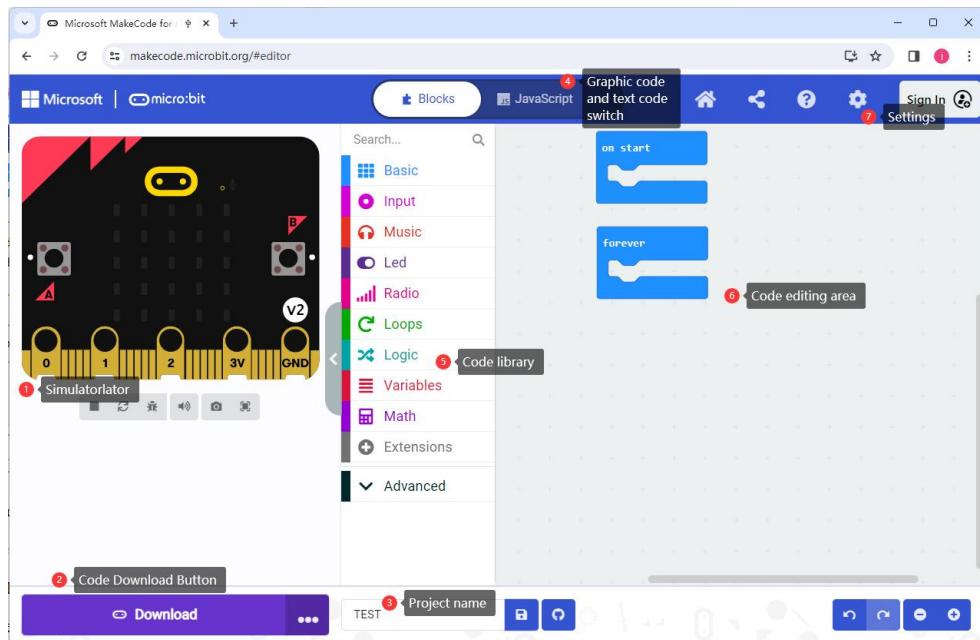


Write your first micro:bit code. For example, drag and drop some blocks and try your program on the Simulator in the MakeCode Editor, like in the image below that shows how to program a Flashing Heart.

MakeCode will be further introduced in next section.

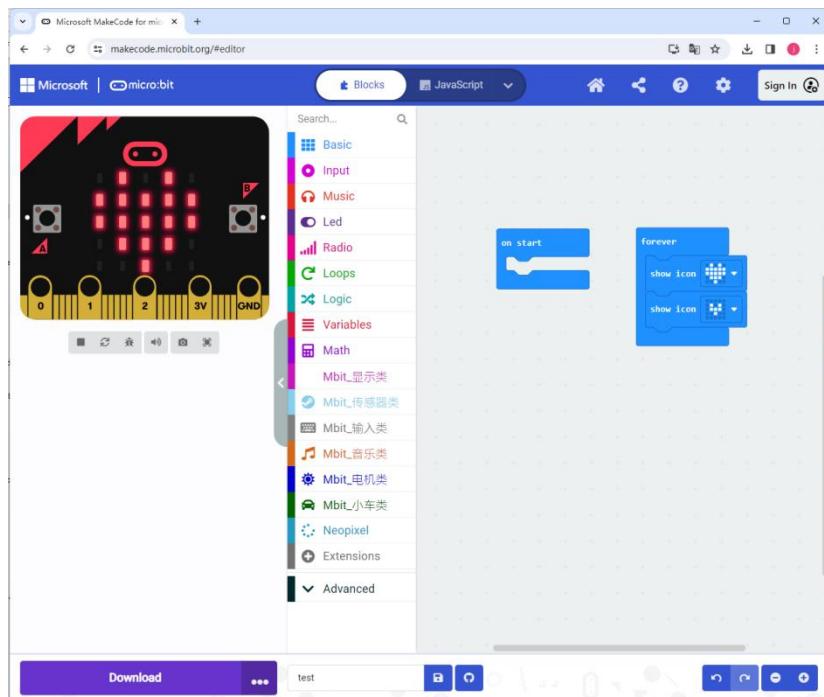


Then continue to click “Connect Device” button.

# LROBRUYA

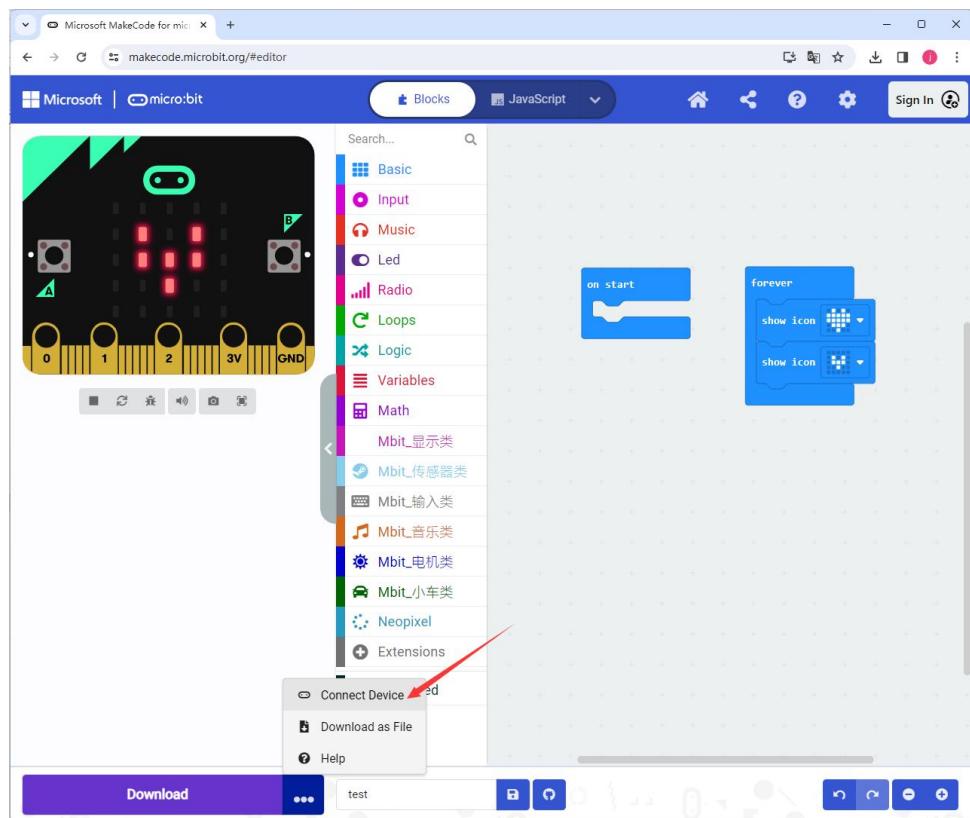

## 1. Connect your micro:bit to your computer

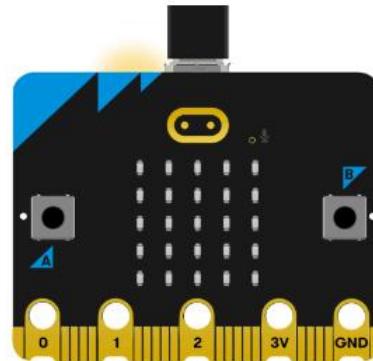

Next


# LROBRUYA

2. Pair your micro:bit to your browser

Press the Pair button below.

A window will appear in the top of your browser.

Select the micro:bit device and click Connect.

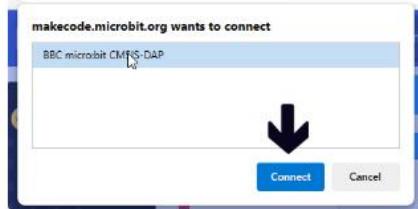

 **Pair**




## Step 3: Flashing Code to your Micro:bit

The process of transferring the .HEX file to the BBC micro:bit is called flashing.

If you write program using Windows 10 App, you just need to click the “Download” button, then the program will be downloaded directly to micro:bit without any other actions.


# LROBRUYA

If you write program using browser, please follow steps below:

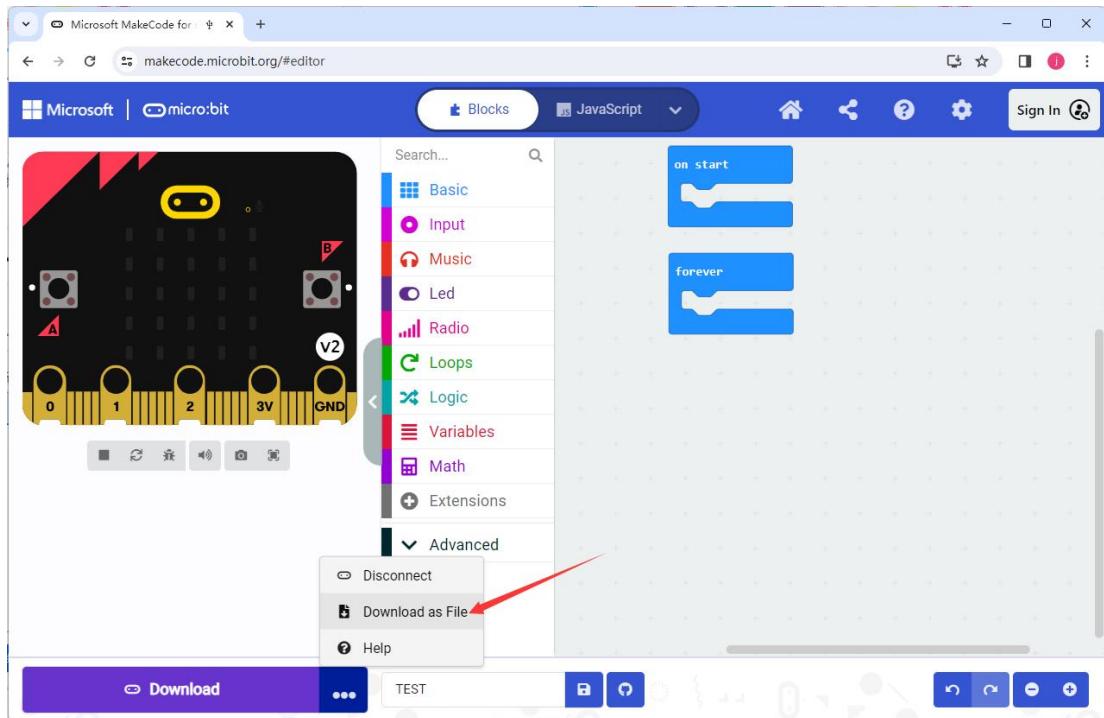

Click the Download as File button in the editor. This will download a '.hex' file, which is a compact format of your program that your micro:bit can read. Once the hex file has been downloaded, copy it to your micro:bit just like copying a file to a USB drive. On Windows you can right click and choose "Send to→MICROBIT."

# LROBRUYA

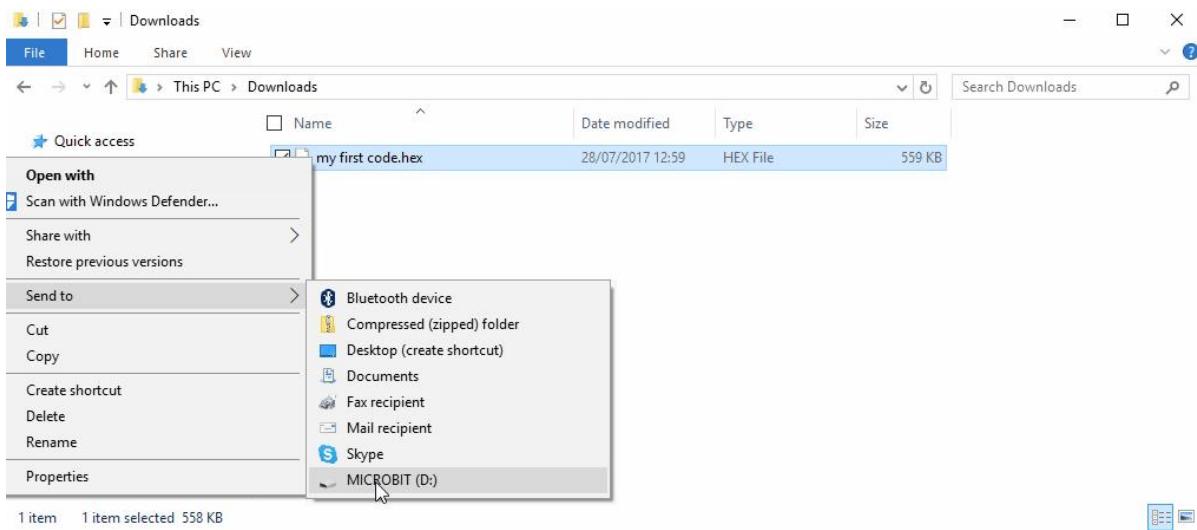

## Step 4: Run the Program

The micro:bit will pause and the yellow LED on the back of the micro:bit will blink while your code is flashed. Once that's finished the code will run automatically! The micro:bit can only run one program at a time - every time you drag-and-drop a hex file onto the device over USB it will erase the current program and replace it with the new one.

### Warning

The MICROBIT drive will automatically eject and reconnect each time you program it, but your hex file will be gone. The micro:bit can only receive hex files and won't store anything else!

### Import Code

We provide hex file (project files) for each project, which contains all the contents of the project and can be imported directly. You can also complete the code of project manually. If you choose to complete the code by dragging code block, you may need to add necessary extensions.


# LROBRUYA

As for simple projects, it is recommended to complete the project by dragging code block.

As for complicated projects, it is recommended to complete the project by importing Hex code file.

Next, we will take “Heartbeat” project as an example to introduce how to load code. Open web version of makecode.


Click “Import” button on the right of HOME page.

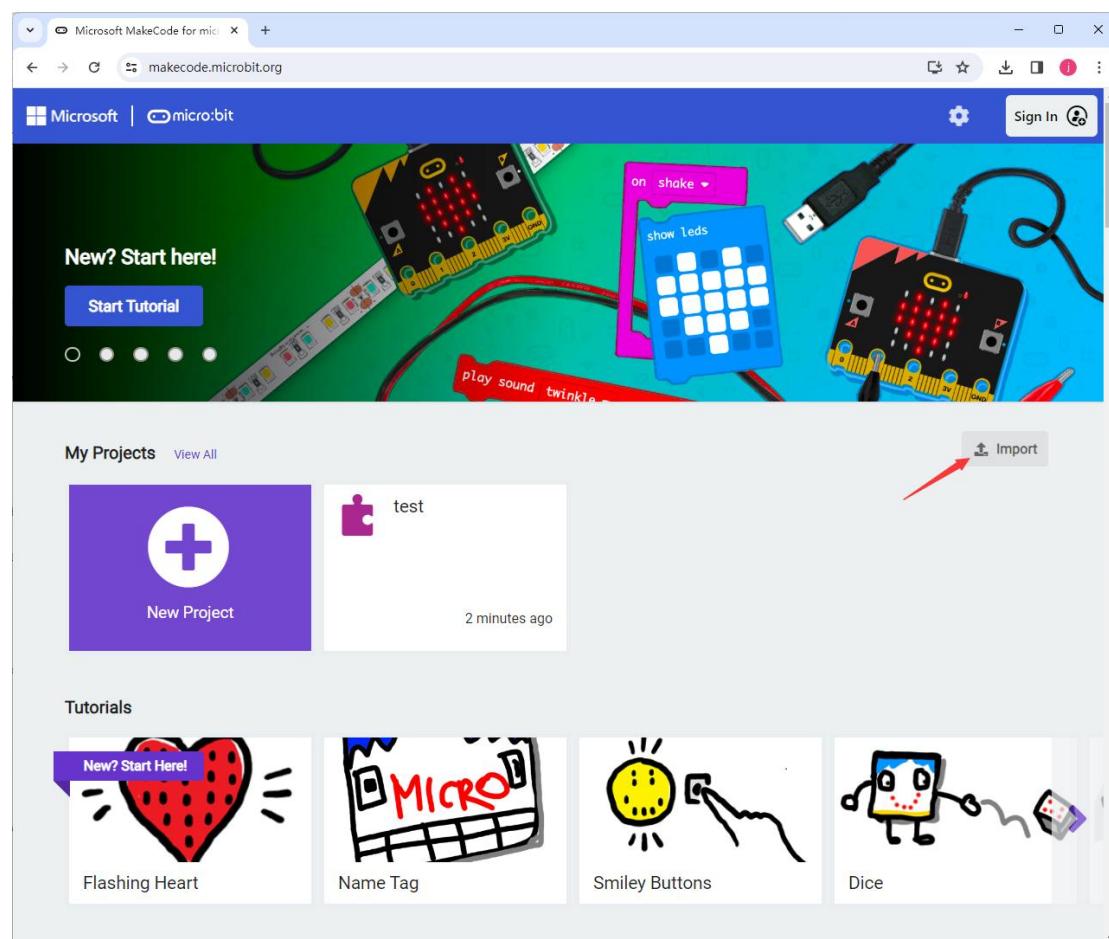

In the pop-up dialog box, click "Import File".

# LROBRUYA


## Import

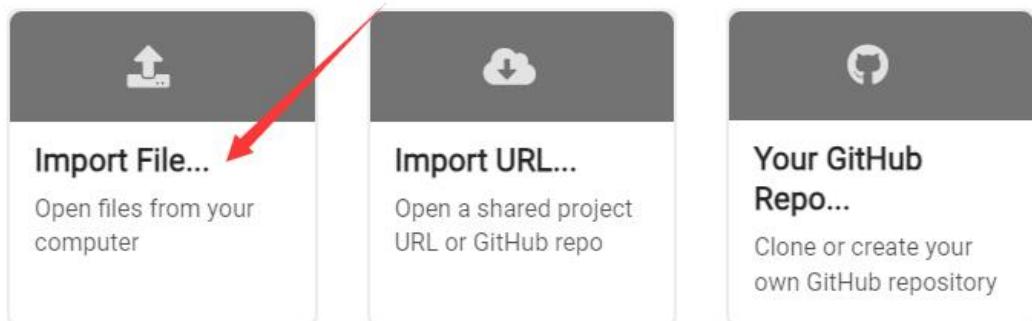

## Open .mkcd or .hex file



Select a .mkcd or .hex file to open.

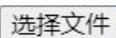
 未选择任何文件

You can import files by dragging and dropping them anywhere in the editor!

Go ahead! 

A few seconds later, the project is loaded successfully.

# LROBRUYA

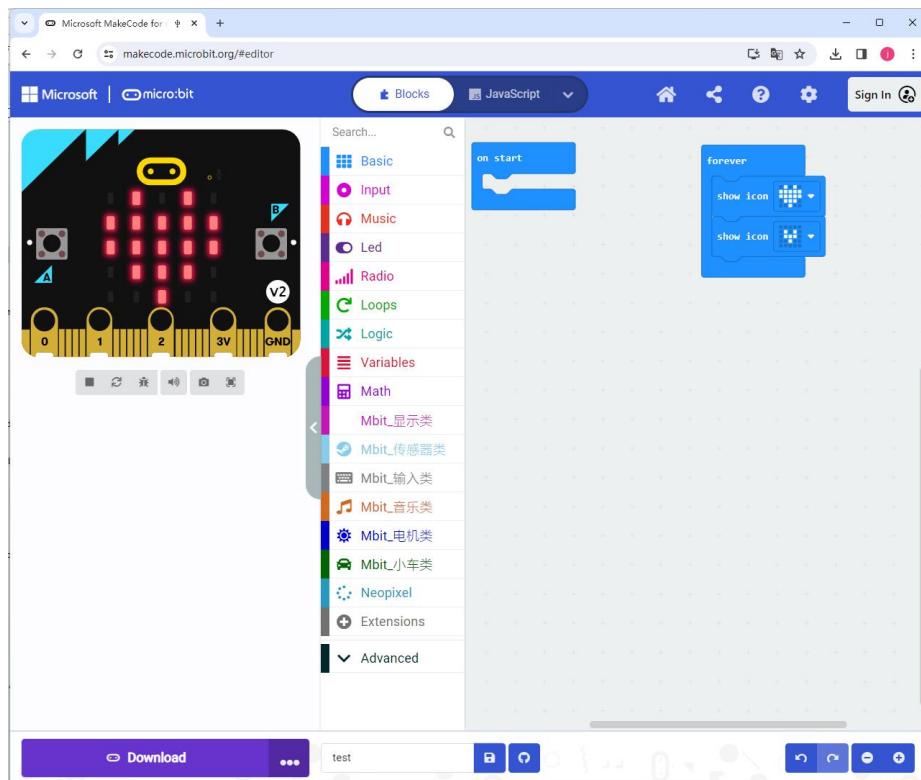

## Python

If you are not interested in python, you can skip this section.

Micro:bit can be programmed in Python. Since micro:bit is a microcontroller, the hardware difference makes it not support pure Python. Here we use MicroPython, which is specially designed for micro:bit.

MicroPython is a lean and efficient implementation of the Python 3 programming language that includes a small subset of the Python standard library and is optimized to run on microcontrollers and in constrained environments.

# LROBRYA

We designed block code and Python code with similar function for each project. There are two kinds of python editors for micro:bit, web version and software.

It is highly recommended to use software Mu as a Python educator.

Next, we will introduce Mu.

Mu


Mu is a Python code editor for beginner programmers based on extensive feedback given by teachers and learners.

Official website: <https://codewith.mu/>

You can download it here: <https://codewith.mu/en/download>

Download and install it.

And you will see the following interface when opening it.

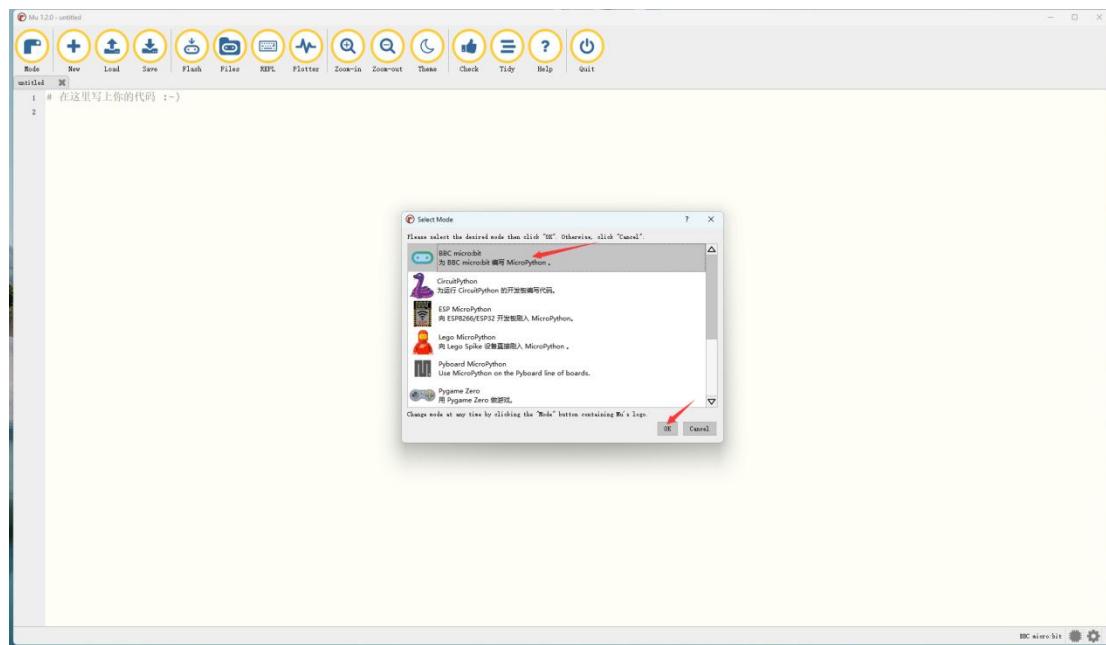

# LROBRUYA


Click the Mode button in the menu bar and select "BBC micro:bit" in the pop-up dialog box. Click "OK".

Import the .hex file. The path is as below:

File type	Path	File name
Python file	..../Projects/PythonCode/ 01.1_Heartbeat	Heartbeat.py

Successful loading is shown below.

You can also type the code by yourself.

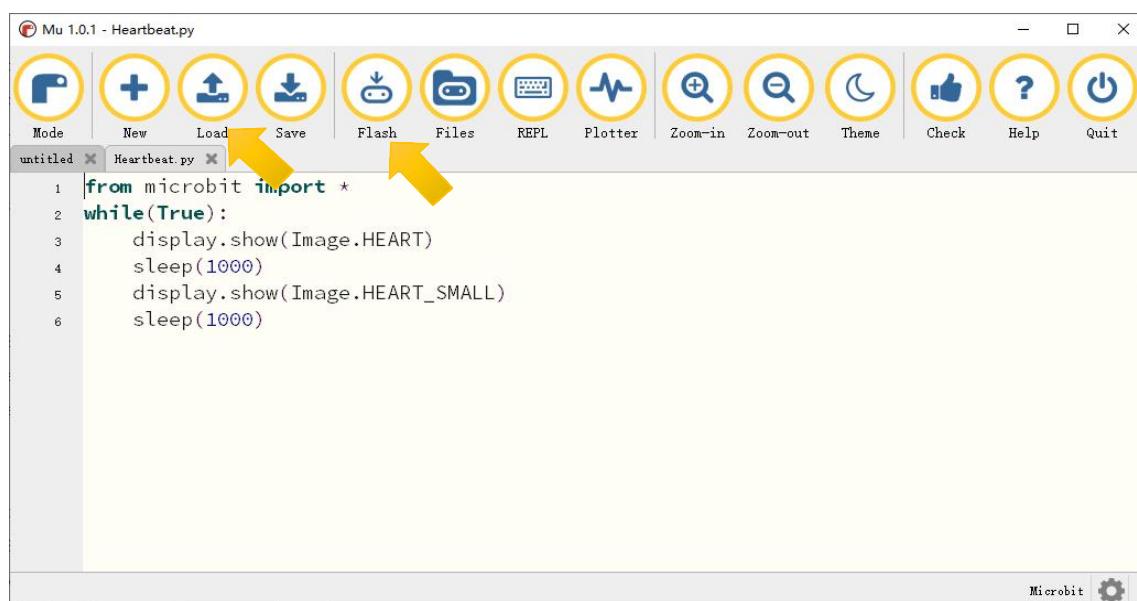

Use the micro USB cable to connect micro:bit and PC, and click the


**Flash** button to download the program into micro:bit.

If there are errors in your code, you may be able to successfully download it to micro:bit, but it will not work properly.


For example, the function sleep() was written as sleeps() in the following illustration. Click the button and the code can be uploaded to Micro:bit

# LROBRUYA

successfully. However, after the downloading completes, LED matrix prompts some error information and the number of the wrong line.

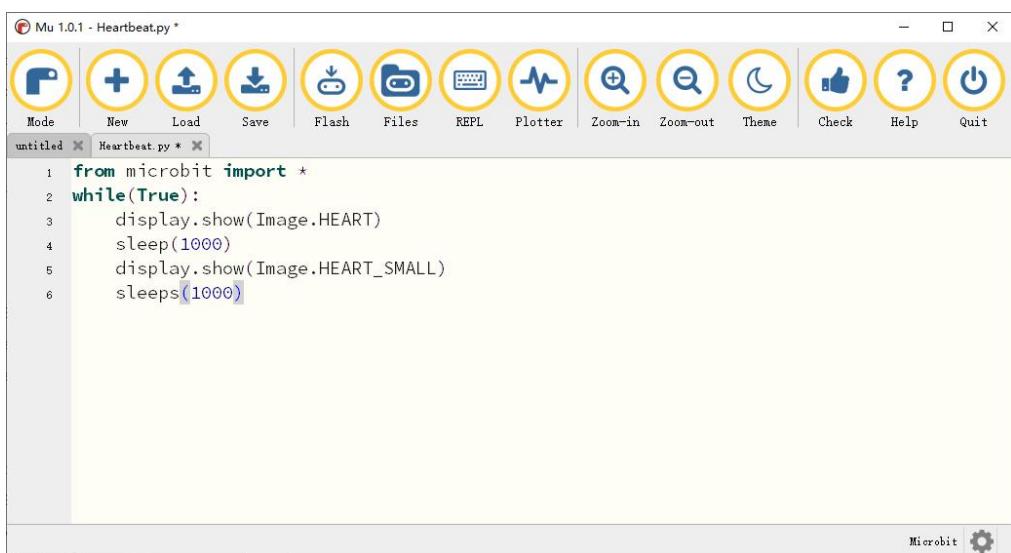


Click the **REPL** button and press the reset button (the button on the back, not A, B) on micro:bit. The error message will be displayed in the REPL box, as shown below:

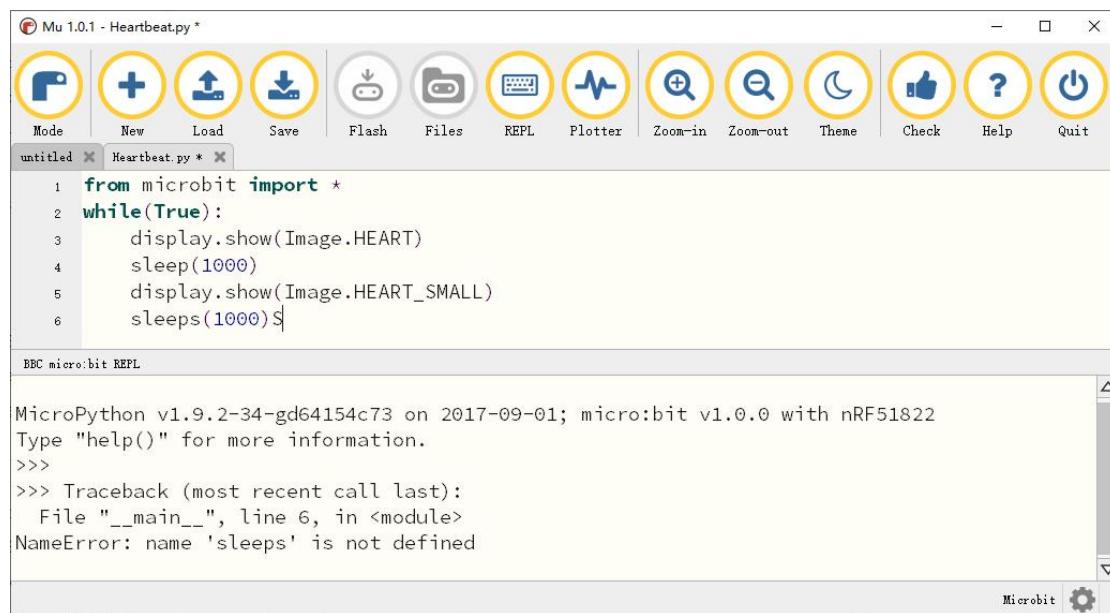

# LROBRUYA


Click **REPL** again, you will close REPL mode. And then you can flash new code.

To ensure the code is correct, after completing the code, click the **Check** button to check the code for errors. As shown below, click the **Check** button. Then Mu will indicate the error of the code.

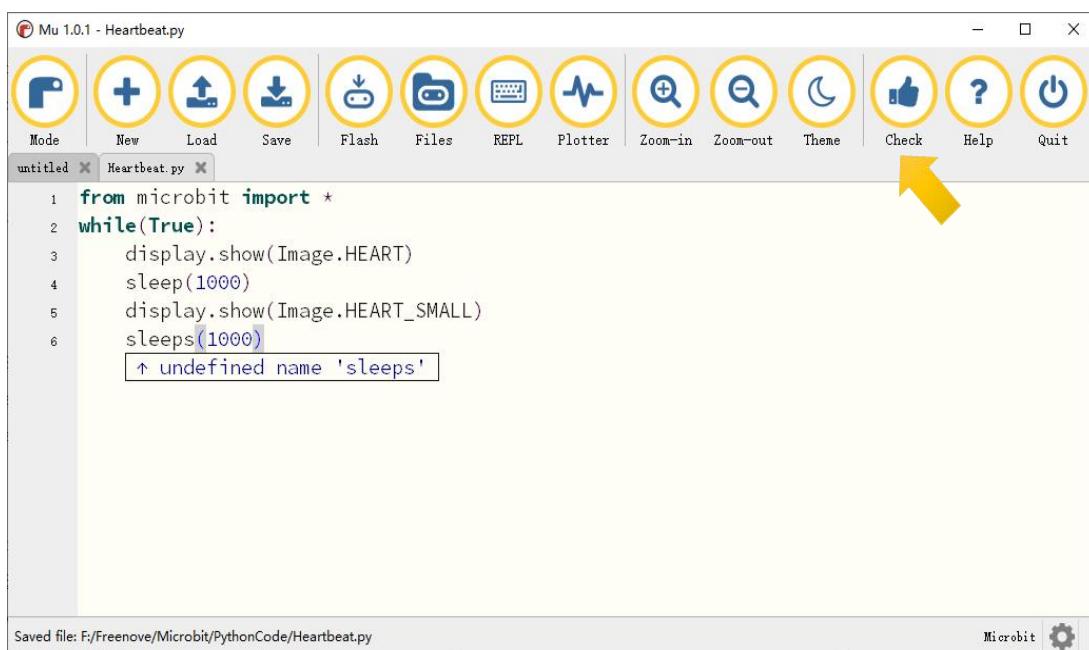

Correct the code according to the error prompt. Then click the **Check** button again, Mu displays no error on the bar below.

# LROBRUYA

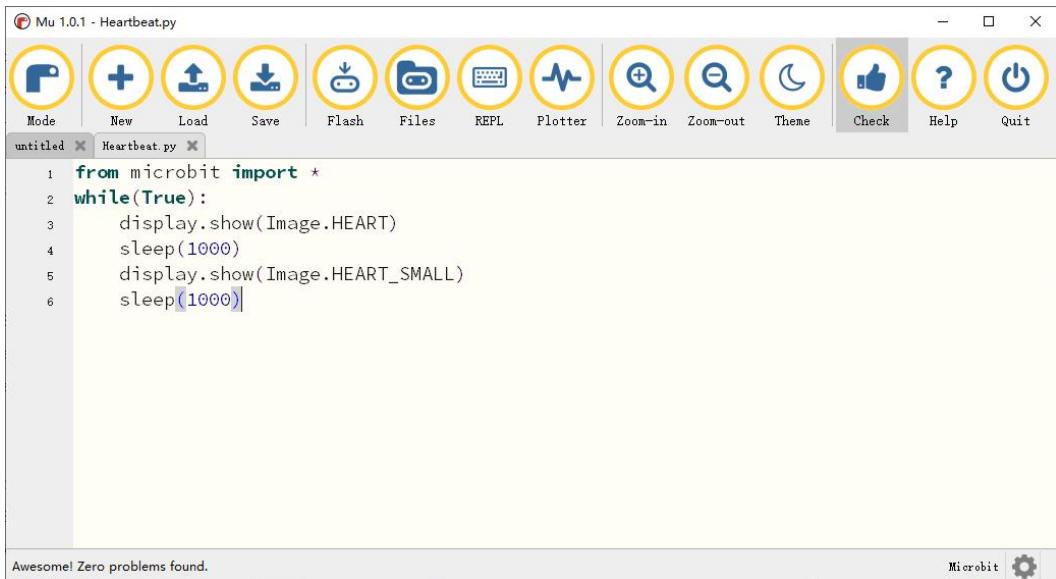


## Import necessary Python file into micro:bit


In the code of this tutorial, the LCD1602 module and DHT11 module are used, so it is necessary to import "I2C\_LCD1602\_Class.py" and "DHT11\_RW.py" into the micro:bit. You can skip this section if you don't use them. When you need, you can come back to import them.

The import method is as follows:

Search on the C drive and find the "mu\_code" folder.

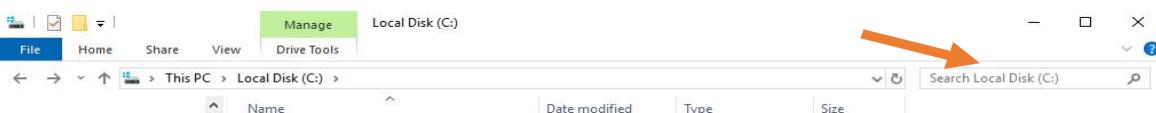

Double click on "mu\_code" to enter the folder.

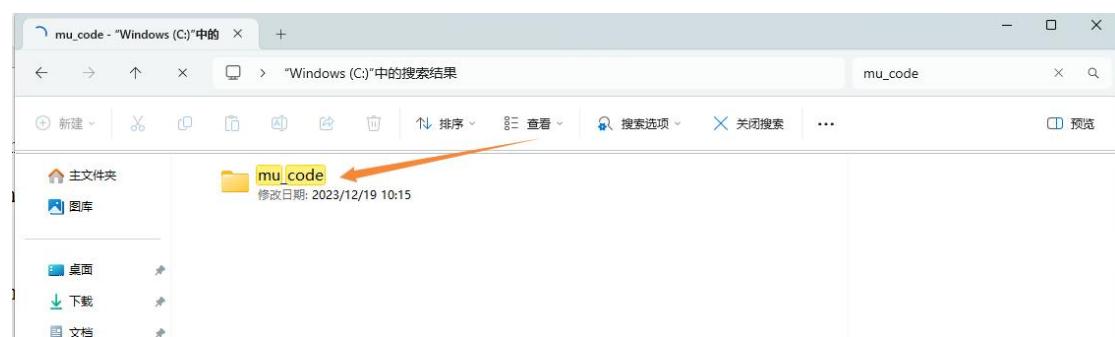


# LROBRUYA

Copy “I2C\_LCD1602\_Class.py” and “DHT11\_RW.py” from following path into “mu\_code” directory.


File type	Path	File name
Python file	.. /Projects/PythonLibrary	I2C_LCD1602_Class.py DHT11_RW.py

After pasting successfully, you can see them as below:

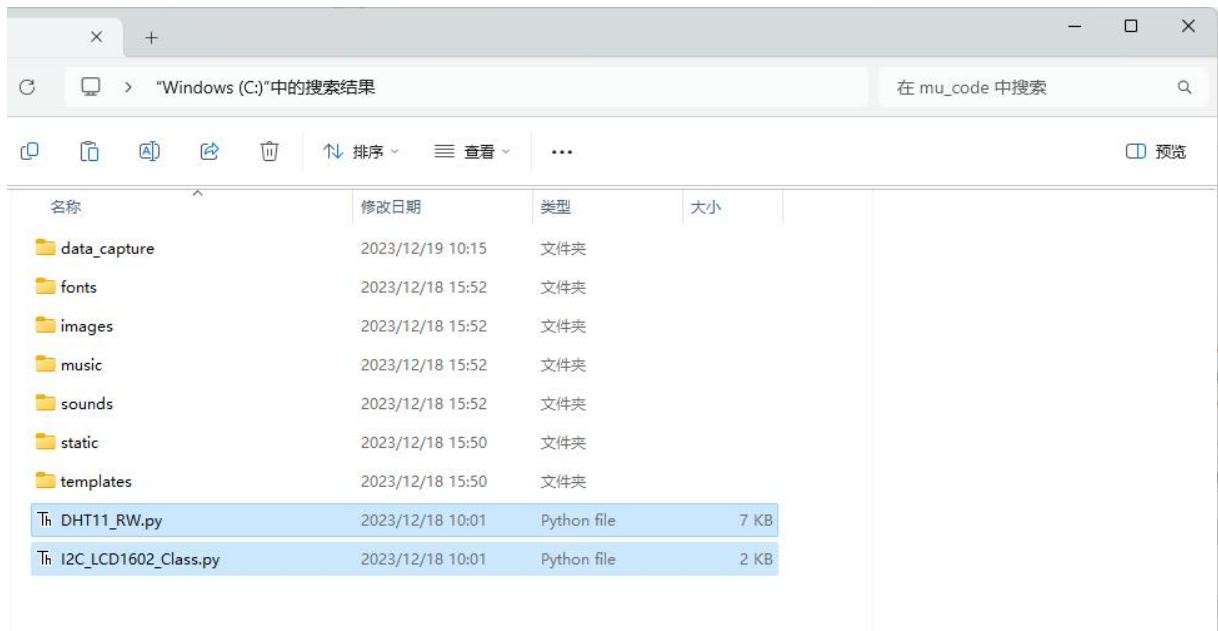


Open the Mu software, click **Files**. Here we take "I2C\_LCD1602\_Class.py" as an example, drag "I2C\_LCD1602\_Class.py" into micro:bit.

# LROBRUYA

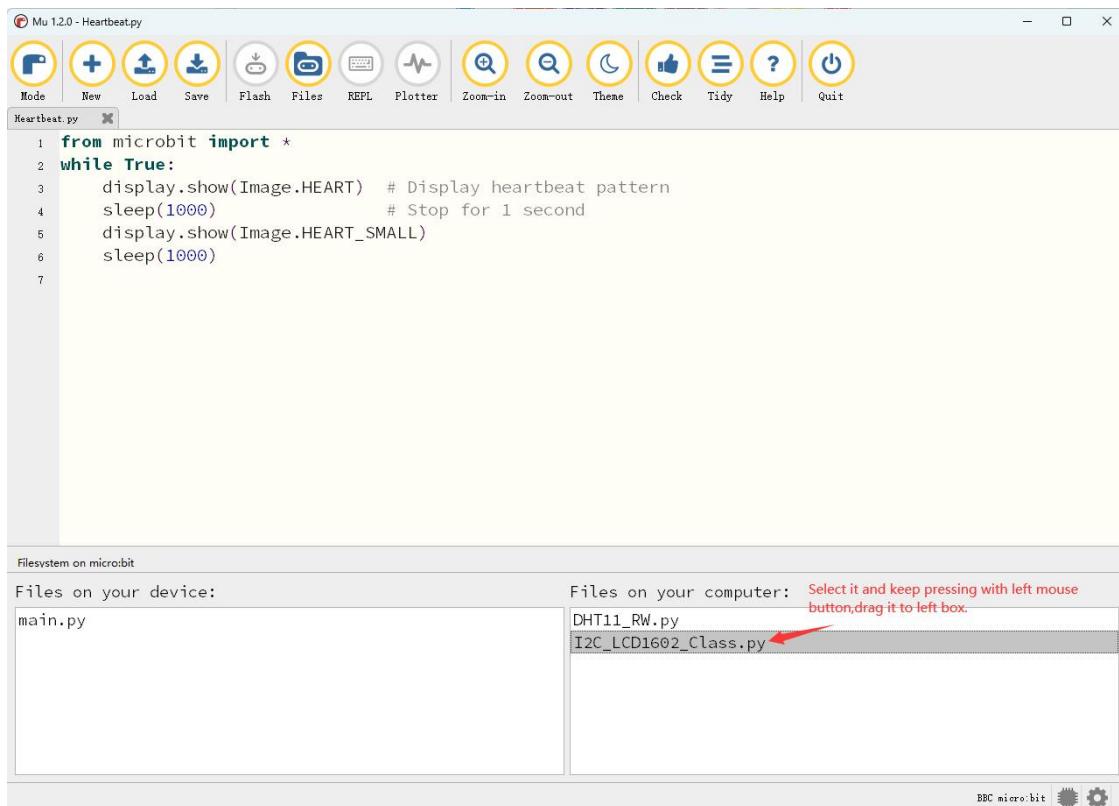


After importing successfully, you will see it on the left.

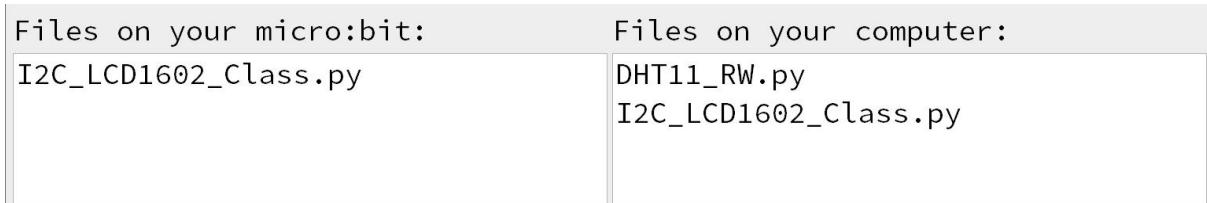

The import method of "DHT11\_RW.py" is the same as described above.

You just need to import the one you need to use.

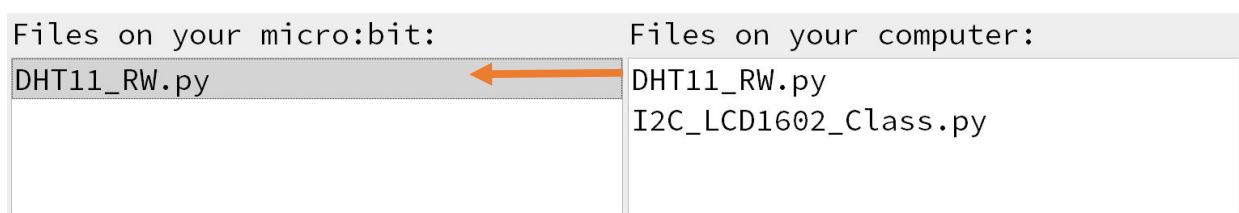

Note, after you upload other file into micro:bit, the original content will

be covered. You need to import it next time you use it.


## Lesson 1 LED matrix

The micro:bit integrates a 5x5 LED matrix, which is used as a display to display numbers, text, or simple images, which is useful and interesting.

### Project 1.1 Heartbeat

This project uses a pattern built in MakeCode to make a heartbeat animation.

### Component List

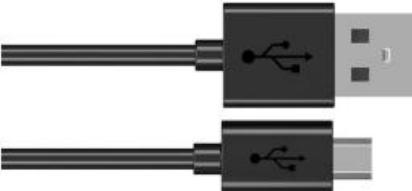Micro:bit x1	Micro USB cable x1
	

### Circuit

Connect micro:bit and PC via a micro USB cable.




# LROBRUYA

## Block code


Open the MakeCode for the web version.

Click on "New Project".

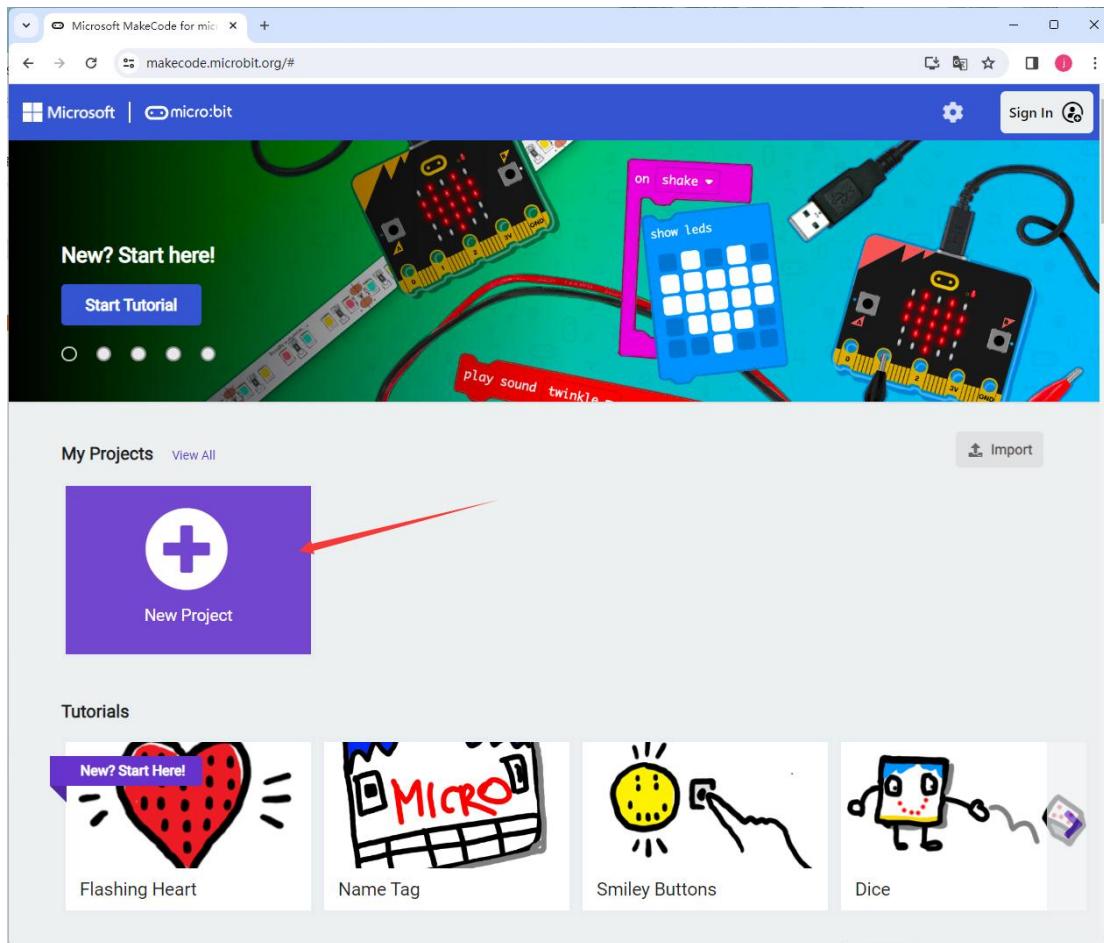


Click basic in the list on the left, select the desired code block, and drag it into the right code editing area.

# LROBRUYA

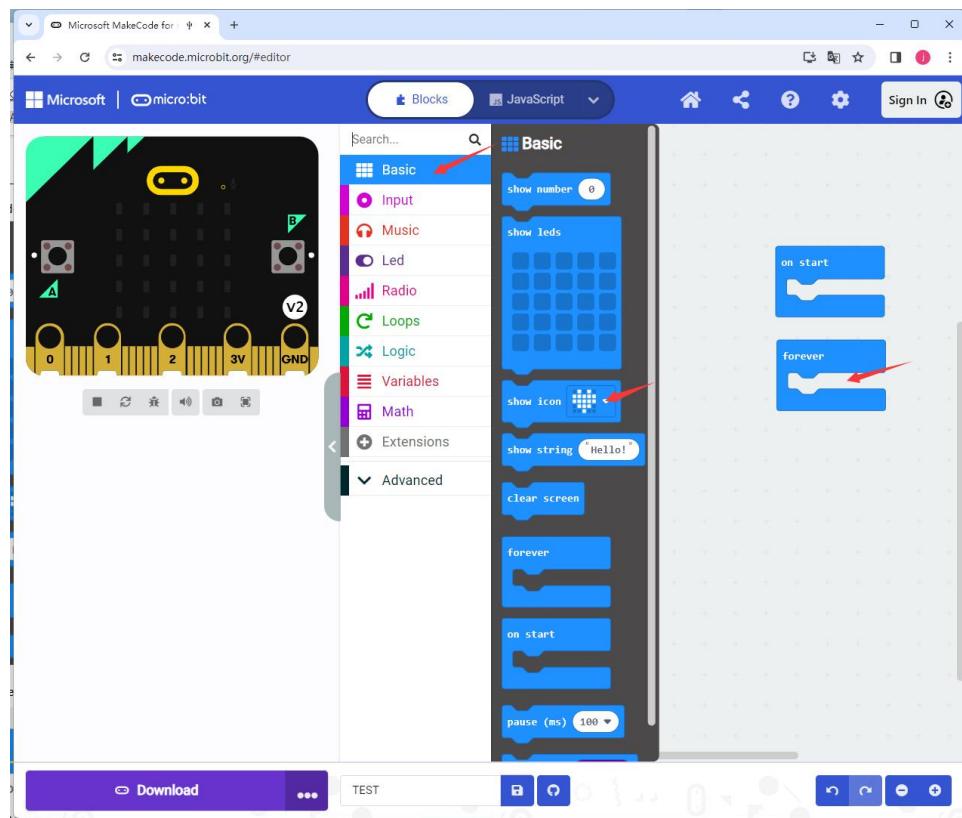


Right click the mouse and select Duplicate to duplicate the code block.

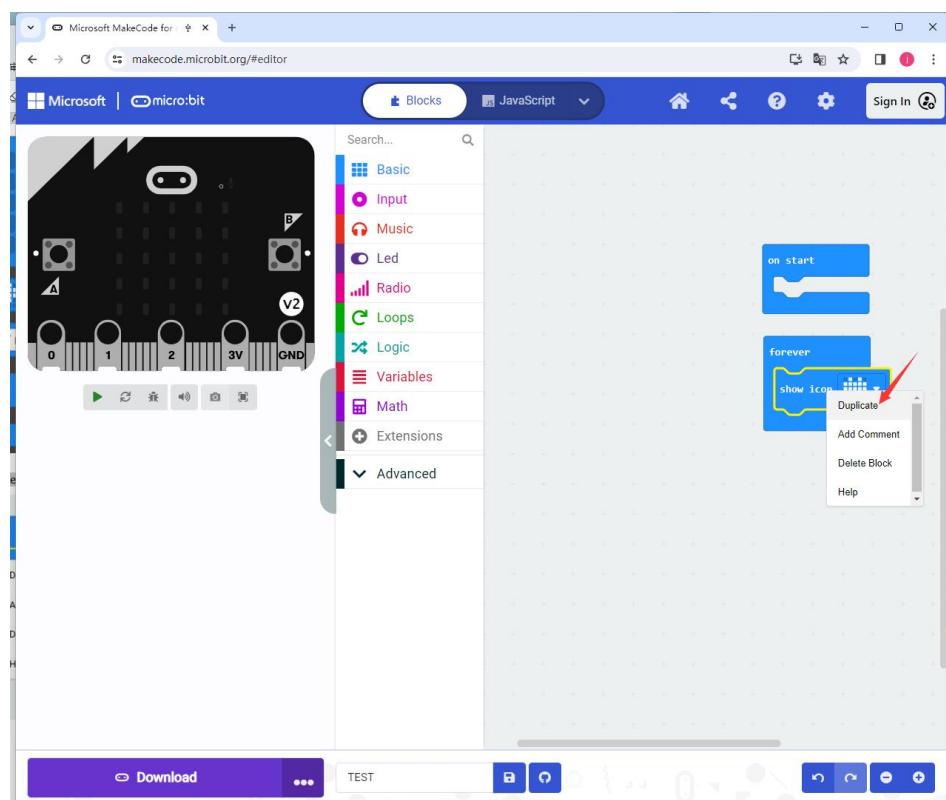


# LROBRUYA

If you want to delete the block, you can right click on the block and select “Delete Block” . You can also drag it to left to delete it.

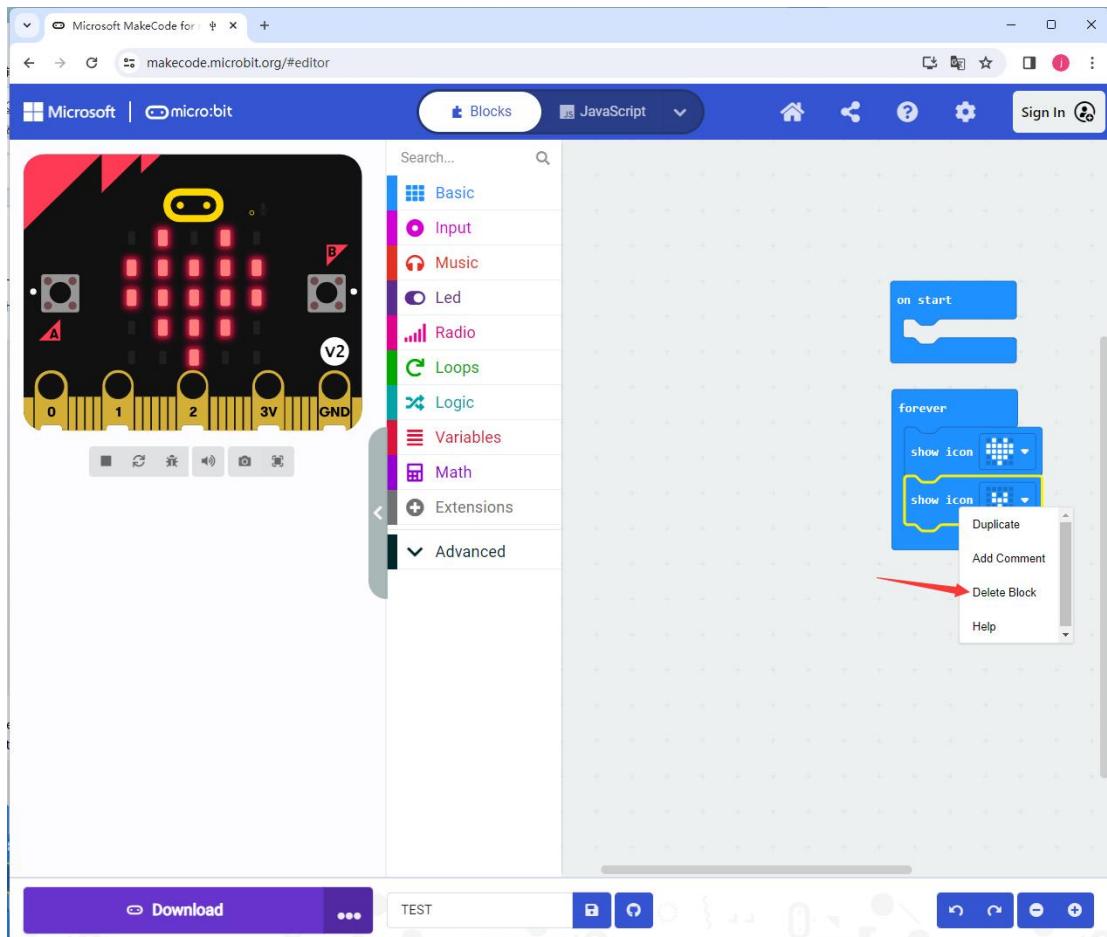

On the second block, click on the drop-down triangle next to the heart-shaped pattern on the block to display all the optional built-in patterns, select the second pattern, a small heart shape.

# LROBRUYA

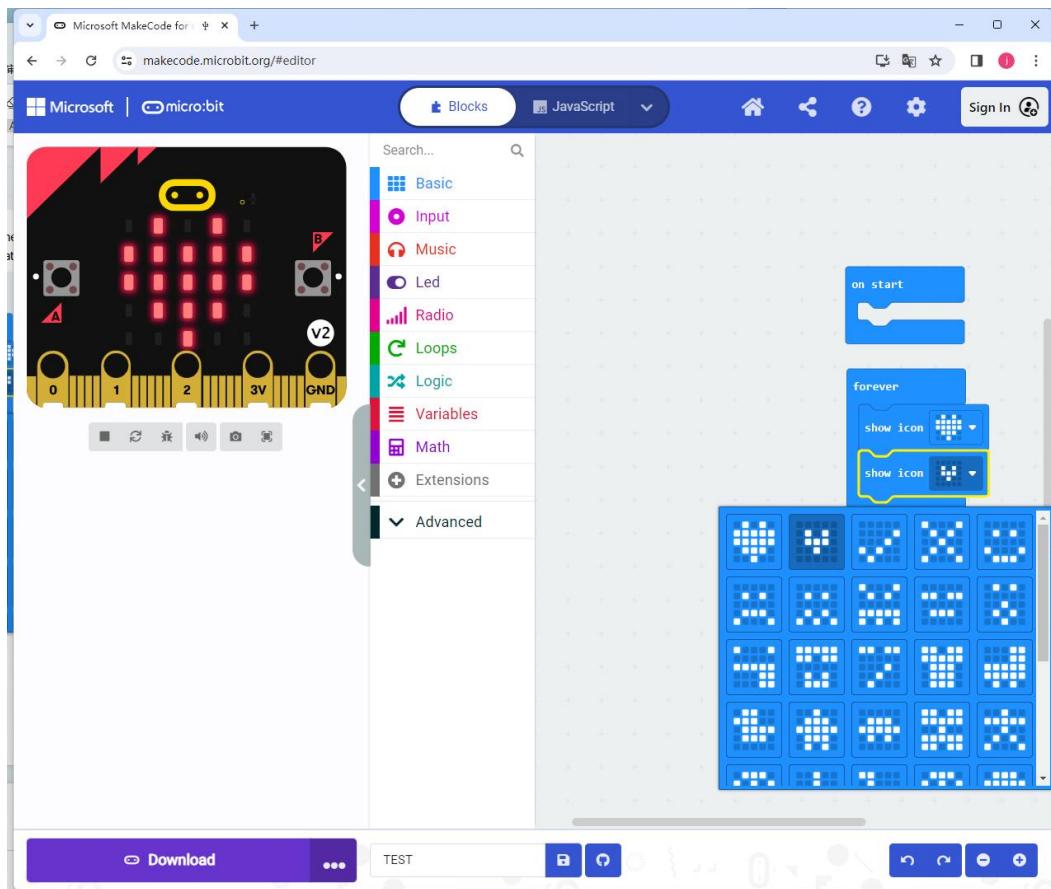

This completes the block code this project.

Download the program to the microbit, the LED matrix on the micro:bit will continue to display a large heart- shaped pattern and a small heart-shaped pattern, just like heartbeating.

## Reference

Block	Function
	Shows the selected icon on the LED screen


## Python Code

Open the .py file with Mu. Code, the path is as below:

# LROBRUYA

File type	Path	File name
Python file	.. /Projects/PythonCode/01.1_Heartbeat	Heartbeat.py

After loading successfully, the code is shown below:

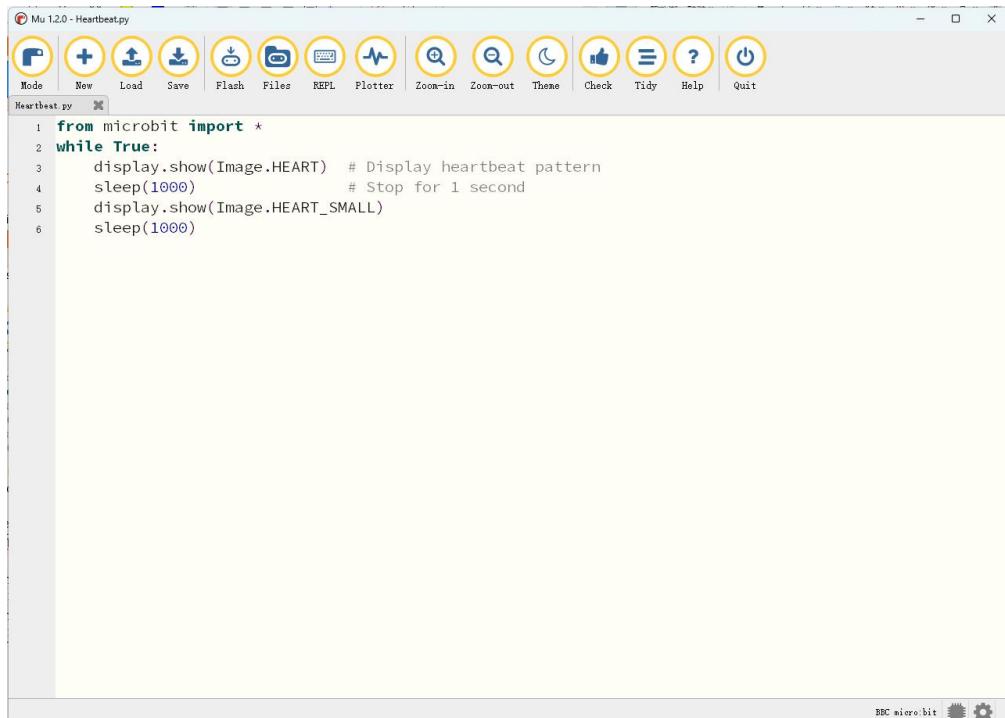

The screenshot shows the Mu 1.2.0 Python editor interface. The title bar says "Mu 1.2.0 - Heartbeat.py". The menu bar has "File", "Edit", "Run", "Terminal", "Help", and "About". The toolbar has icons for Mode, New, Load, Save, Flash, Files, REPL, Plotter, Zoom-in, Zoom-out, Theme, Check, Tidy, Help, and Quit. The code editor window contains the following Python code:

```
1 from microbit import *
2 while True:
3     display.show(Image.HEART) # Display heartbeat pattern
4     sleep(1000) # Stop for 1 second
5     display.show(Image.HEART_SMALL)
6     sleep(1000)
```

Download the program to the microbit, the LED matrix on the micro:bit will continue to display a large heart shaped pattern and a small heart-shaped pattern, just like heartbeating.

The following is the program code:

```
1 from microbit import *
2 while True:
3     display.show(Image.HEART)
4     sleep(1000)
5     display.show(Image.HEART_SMALL)
6     sleep(1000)
```

Python language is an interpreted language that is executed sequentially.

In the code of this project, the micro:bit module is first imported, and

# LROBRUYA

then in a infinite loop statement, a large heart pattern and a small heart pattern are alternately displayed.

Next, we will explain the code line by line.

```
from microbit import *
```

Import everything in the microbit module, including functions, classes, variables, etc. You can also use import **microbit** directly. If you do this, you need to add "microbit." when you call the contents of this module in the program.

```
while True:
```

An infinite loop that will be executed circularly by microbit constantly.

```
    display.show(Image.HEART)
```

Display heart pattern on LED matrix.

```
    sleep(1000)
```

Delay for one second.

```
    display.show(Image.HEART)
    sleep(1000)
    display.show(Image.HEART_SMALL)
    sleep(1000)
```

Display the heart pattern on the LED matrix for one second, and then display the small heart pattern for another second.

## Reference

```
from microbit import *
```

Import everything in the microbit module, including functions, classes, variables, etc. You can use all the available contents in the micro:bit module in the next program.

```
while True:
```

While is a loop statement, if the condition is true, the code in while is executed.

This code with True means that the code in the while is always executed circularly.

# LROBRUYA

display.show(image)

Display the image.

For more details about display,

please refer to: <https://microbit-micropython.readthedocs.io/en/latest/display.html> For

more details about image,

Please refer to: <https://microbit-micropython.readthedocs.io/en/latest/image.html>

sleep(t)

Delay for given number of milliseconds, should be positive or 0.

For more details about sleep function, please refer to:

<https://microbit-micropython.readthedocs.io/en/latest/utime.html>

## Project 1.2 Displaying Number

In this project, we will use the LED matrix of the micro:bit to display numbers.

### Circuit

Connect micro:bit and PC via a micro USB cable.




### Block code


Open MakeCode first.

In this project, we will import the block code.

# LROBRUYA

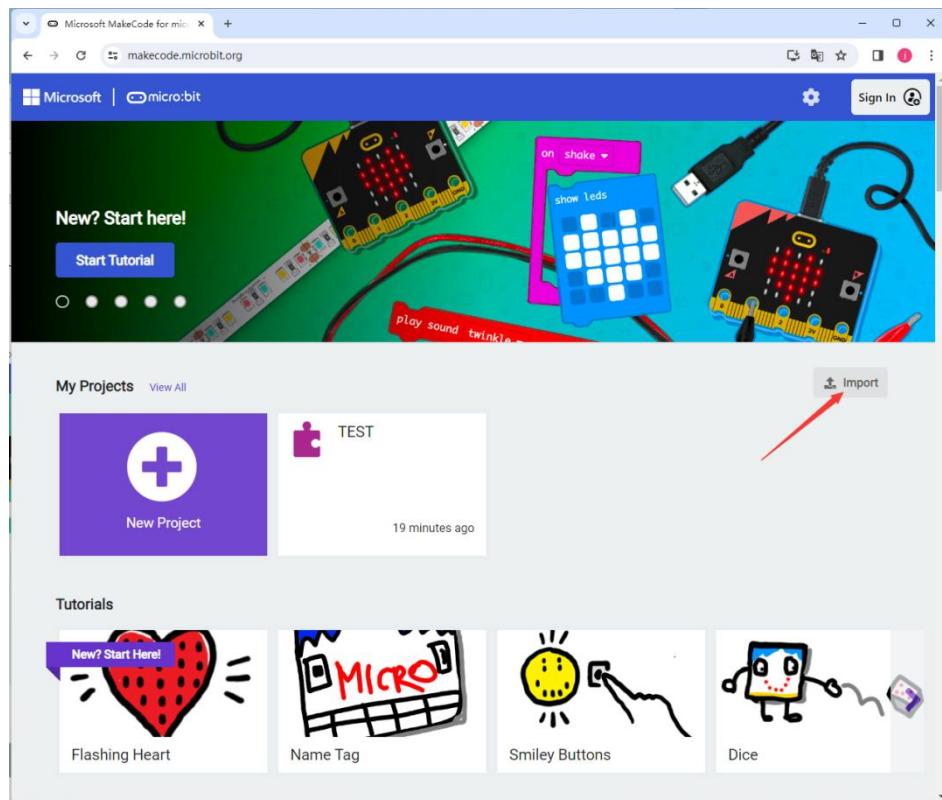

Click **Import**. Then click **Import File**.

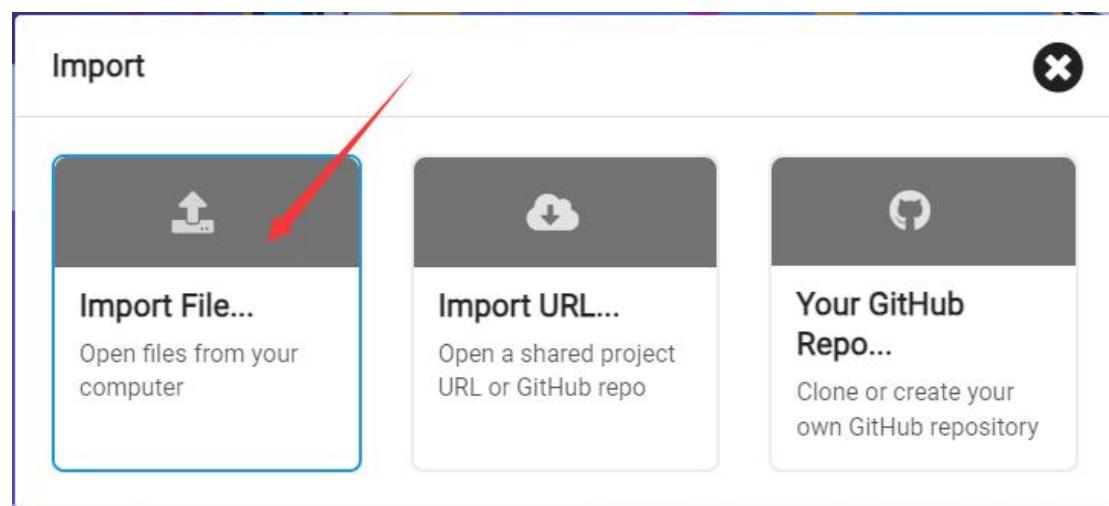


Import the .hex file. The path is as below:

File type	Path	File name
HEX file	../ Projects/BlockCode/01.2_ShowNumber	ShowNumber.hex

After load successfully, the code is shown as below:

# LROBRUYA

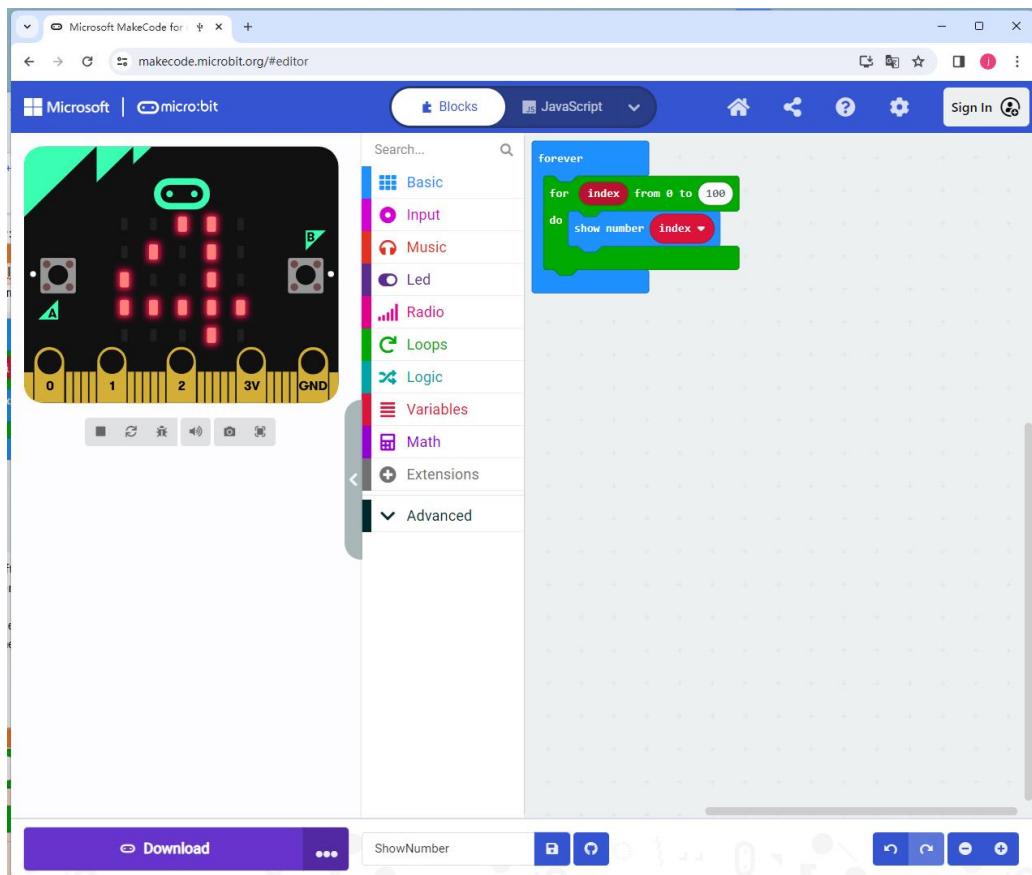

Download the code into the micro:bit. After the downloading completes, the micro:bit LED matrix will start to display the numbers 0, 1, 2, 3, 4 99. Then start again from 0 to 99, so that it will cycle permanently.

In this code, a for loop is used. Each time the loop is executed, the value of the variable index is increased by 1. When the value is greater than 99, the for loop is exited. In the body of the loop, the value of the numeric index is displayed.

## Reference

# LROBRUYA

Block	Function
	This is a for loop, the number (4) of loops can be changed, each time the index is incremented by 1. The loop won't end until the index is greater than the set value.
	Show a number on the LED screen. It will slide left if the number is more than one digit..

## Python Code

Open the .py file with Mu. Code, the path is as below:

File type	Path	File name
Python file	..//Projects/PythonCode/01.2_ShowNumber	ShowNumber.py

After loading successfully, the code is shown below:

The screenshot shows the Mu 1.2.0 IDE interface with the following details:

- Toolbar:** Includes icons for Mode (Microbit), New, Load, Save, Flash, Files, REPL, Plotter, Zoom-in, Zoom-out, Theme, Check, Tidy, Help, and Quit.
- Code Editor:** Displays the Python code for `ShowNumber.py`. The code is as follows:

```
1 from microbit import *
2 while True:
3     for index in range(0, 100):
4         display.scroll(str(index))
```

# LROBRUYA

---

Download the code into the microbit. After the downloading completes, the micro:bit LED matrix will start to display the numbers 1, 2, 3, 4 100. Then start again from 1 to 100, so that it will repeat endlessly.

The following is the program code:

```
1 from microbit import *
2 while True:
3     for index in range(0, 100):
4         display.scroll(str(index))
```

The code of this project, in a 0-100 for loop, scrolls through the cyclic number index, which is incremented by 1.

## Reference

display.scroll(value)

Scrolls value horizontally on the display. If value is an integer or float it is first converted to a string using str(). For more information, please refer to: <https://microbit-micropython.readthedocs.io/en/latest/utime.html>

## Project 1.3 Displaying Text

This project uses the LED matrix of micro:bit to display text (ASCII).

## Circuit

Connect micro:bit and PC via a micro USB cable.




# LROBRUYA

## Block code

Open MakeCode first. Import the .hex file. The path is as below:

File type	Path	File name
HEX file	..../Projects/BlockCode/01.3_ShowText	ShowText.hex

After load successfully, the code is shown as below:

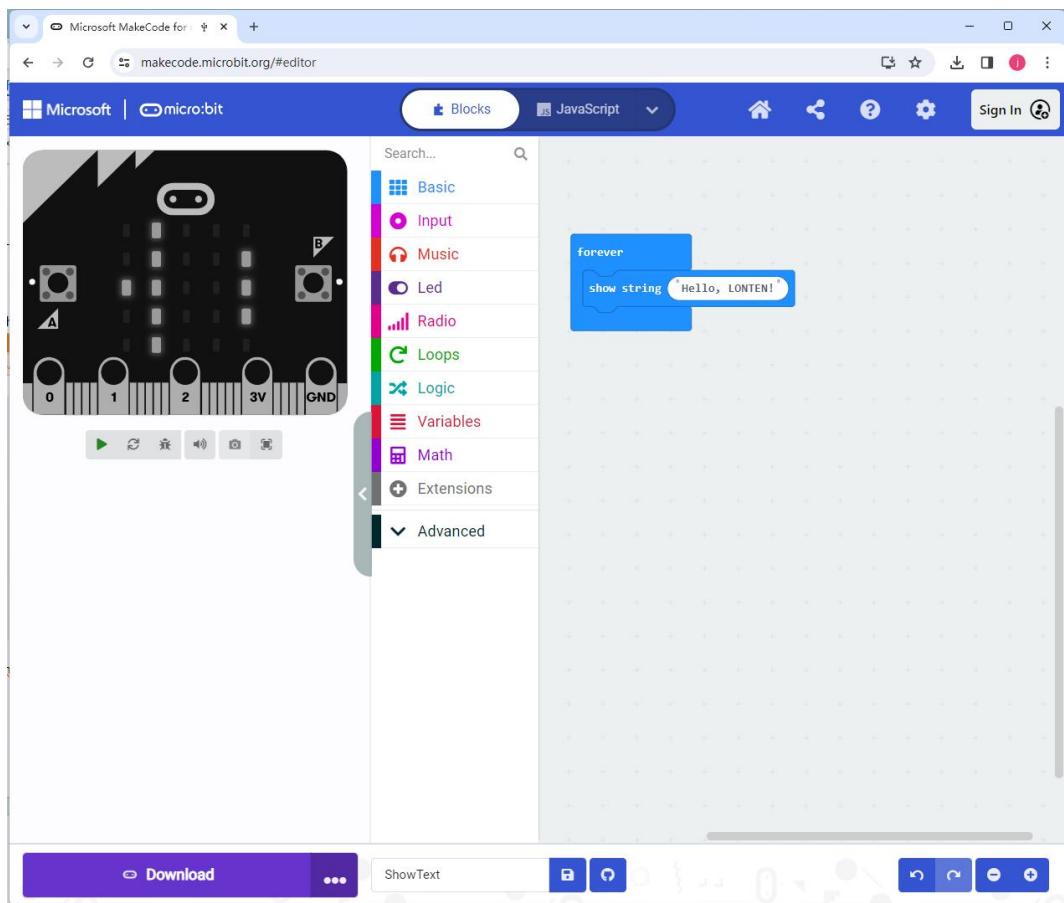

Download the code into the microbit, the micro:bit LED matrix will scroll from left to right to display "Hello, LONTEN!".

## Reference

Block	Function
A blue 'show string' block with a white rounded rectangle containing the text 'Hello'.	Displays a string on the LED screen. It will scroll to left if it's beyond the screen.


# LROBRUYA

## Python Code

Open the .py file with Mu. Code, the path is as below:

File type	Path	File name
Python file	..../Projects/PythonCode/01.3_ShowText	ShowText.py

After loading successfully, the code is shown below:

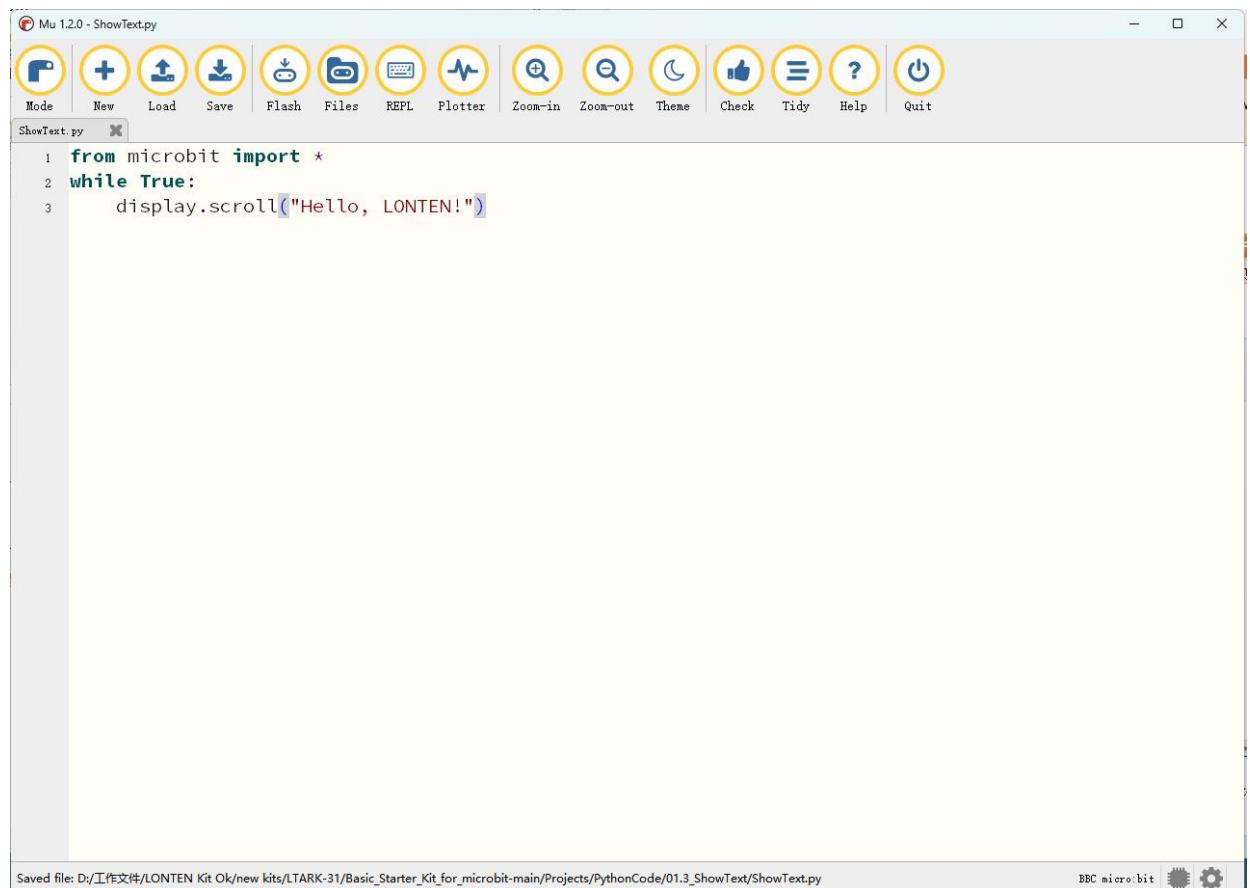

Download the code into the microbit, the micro:bit LED matrix will scroll from left to right to display "Hello, LONTEN!".

The following is the program code:

```
1 from microbit import *
2 while True:
3     display.scroll("Hello, LONTEN!")
```

This code scrolls through the text "Hello, LONTEN!" in a while loop.

# LROBRUYA

## Project 1.4 Displaying Custom

This project uses a micro:bit LED matrix to display a custom pattern.

### Circuit

Connect micro:bit and PC via a micro USB cable.




### Block code

Open MakeCode first. Import the .hex file. The path is as below:

File type	Path	File name
HEX file	../Projects/BlockCode/01.4_ShowCustom	ShowCustom.hex

After load successfully, the code is shown as below:

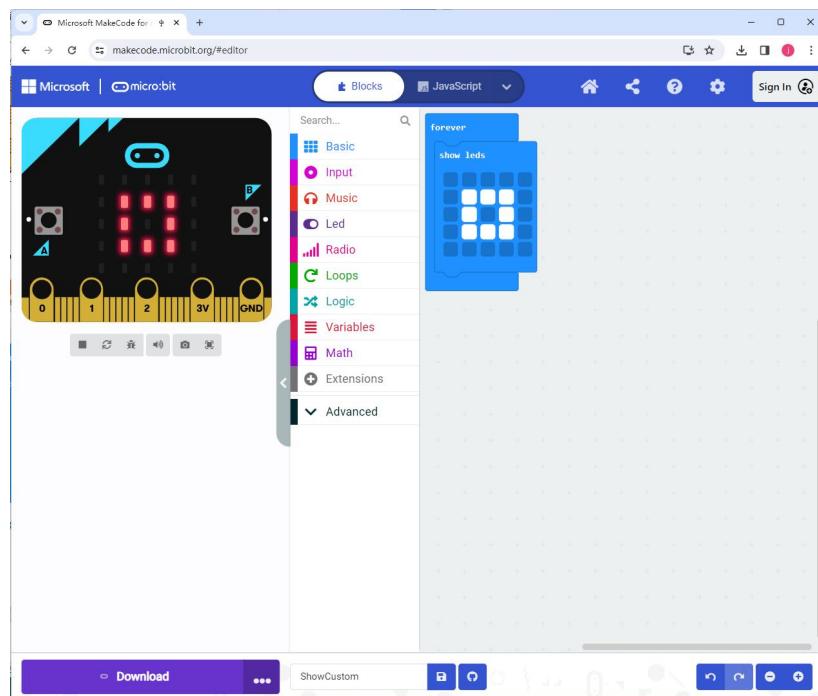

# LROBRUYA

Check the connection of the circuit and verify it correct.. Then download the code into the microbit, and the square pattern shown above will appear on the LED matrix of the micro:bit.

## Reference

Block	Function
	Shows a picture on the LED screen.

## Python Code

Open the .py file with Mu. Code, the path is as below:

File type	Path	File name
Python file	../Projects/PythonCode/01.4_ShowCustom	ShowCustom.py

Download the code into the microbit, and a square pattern will appear on the micro:bit LED matrix.

The following is the program code:

```
1  from microbit import *
2  img = Image("00000:"
3              "09990:"
4              "09090:"
5              "09990:"
6              "00000")
7  while True:
8      display.show(img)
```



Create an image in the code and define it as img, then display the defined image in a while loop. As shown in the code below, the parameters in Image consist of 5 strings. Each line of characters corresponds to a row of LEDs. Each digit represents the brightness of an LED. The value ranges from 0 to 9, the larger the number, the brighter the LED.

```
img = Image("00000:"  
           "09990:"  
           "09090:"  
           "09990:"  
           "00000")
```

## Reference

```
img = Image("00000:"  
           "09990:"  
           "09090:"  
           "09990:"  
           "00000")
```

Create an image of LED, and set brightness of LED. For more information, please refer to:  
<https://microbit-micropython.readthedocs.io/en/latest/image.html>

## Lesson 2 Built-in Button

Keyboards or buttons are important tools for human-computer interaction. We often use keyboards to enter text, type commands, control devices, etc. Two programmable buttons A and B and touch sensitive logo are integrated on the micro:bit to easily control the micro:bit to make actions.

## Project 2.1 Button A and B

This project uses micro:bit integrated buttons A and B. When different buttons are pressed, micro:bit displays different patterns.

### Circuit

Connect micro:bit and PC via a micro USB cable.



### Block code


Open MakeCode first.

Import the .hex file. The path is as below:

File type	Path	File name
HEX file	../Projects/BlockCode/02.1_BuiltInButton	BuiltInButton.hex

After loading successfully, the code is shown as below:

# LROBRUYA

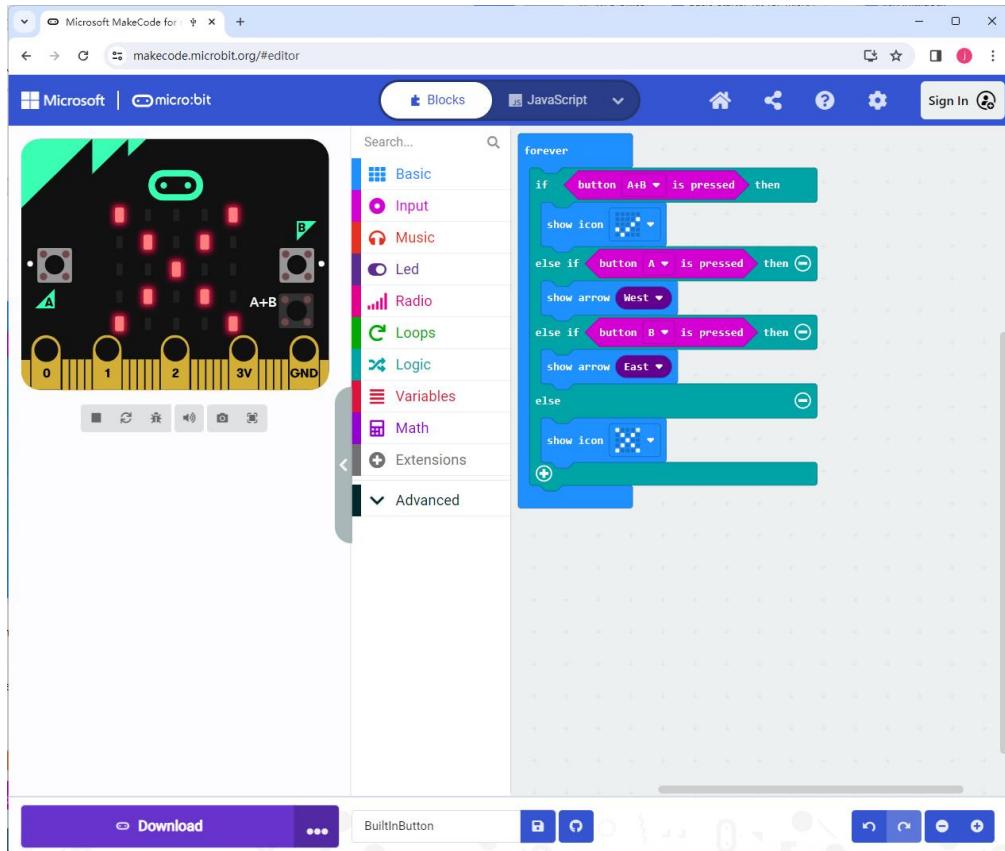

Download the code into micro:bit. When button A is pressed, the micro:bit LED matrix will display an arrow pointing to button A. When button B is pressed, the micro:bit LED matrix will display an arrow pointing to button B. When the buttons A and B are pressed at the same time, the micro:bit LED matrix will display a check mark. When no button is pressed, the micro:bit LED matrix displays a cross.

## Reference

Block	Function
 A pink arrow-shaped block with the text 'button A is pressed'.	Check whether a button is pressed at the moment. The micro:bit has two buttons: button A and button B.

# LROBRUYA




This handler works when button A or B is pressed, or A and B together.

## Python Code

Open the .py file with Mu. Code, the path is as below:

File type	Path	File name
Python file	../Projects/PythonCode/02.1_BuiltInButton	BuiltInButton.py

After loading successfully, the code is shown below:

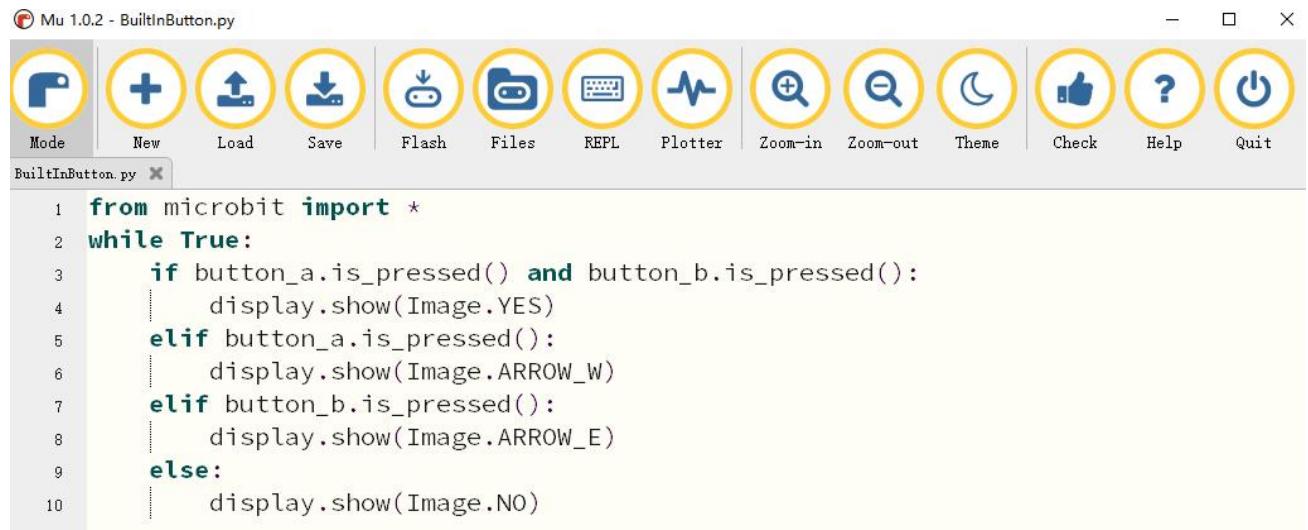A screenshot of the Mu code editor. The title bar says "Mu 1.0.2 - BuiltInButton.py". The menu bar has icons for Mode, New, Load, Save, Flash, Files, REPL, Plotter, Zoom-in, Zoom-out, Theme, Check, Help, and Quit. The code editor window shows the following Python code:

```
1 from microbit import *
2 while True:
3     if button_a.is_pressed() and button_b.is_pressed():
4         display.show(Image.YES)
5     elif button_a.is_pressed():
6         display.show(Image.ARROW_W)
7     elif button_b.is_pressed():
8         display.show(Image.ARROW_E)
9     else:
10        display.show(Image.NO)
```

Download the code into micro:bit. When button A is pressed, the micro:bit LED matrix will display an arrow pointing to button A. When button B is pressed, the micro:bit LED matrix will display a an arrow pointing to button B. When the buttons A and B are pressed at the same time, the micro:bit LED matrix will display a check mark. When no button is pressed, the micro:bit LED matrix displays a cross.

The following is the program code:

# LROBRUYA

```
1  from microbit import *
2
3  while True:
4      if button_a.is_pressed() and button_b.is_pressed():
5          display.show(Image.YES)
6      elif button_a.is_pressed():
7          display.show(Image.ARROW_W)
8      elif button_b.is_pressed():
9          display.show(Image.ARROW_E)
10     else:
11         display.show(Image.NO)
```

Use the if-elif-else statement to determine when the button is pressed.

First, when the buttons A and B are pressed at the same time, a check mark is displayed.

```
if button_a.is_pressed() and button_b.is_pressed():
    display.show(Image.YES)
```

Then, determine in turn if the buttons A or B is pressed separately, and the case where no button is pressed.

```
elif button_a.is_pressed():
    display.show(Image.ARROW_W)
elif button_b.is_pressed():
    display.show(Image.ARROW_E)
else:
    display.show(Image.NO)
```

Note that it is necessary to first determine if buttons A and B are pressed at the same time. If-elif-else statement will make the micro:bit execute only one situation. If the state with two button pressed is placed in last, the result of pressing A or B will appear first, then the statement will end,

# LROBRUYA

and then sentence met the state with two button pressed will never be executed.

## Reference

### is\_pressed()

Returns True if the specified button is currently being pressed, and False otherwise.

For more information, please refer to <https://microbit-micropython.readthedocs.io/en/latest/button.html>

## Project 2.2 Touch Sensitive Logo

In this project, we will learn how to use micro:bit's onboard touch icons and buzzers to switch to the next song when the icon is touched by hand.

## Circuit

Connect micro:bit and PC via a micro USB cable.




## Block code

Open MakeCode first. Import the .hex file. The path is as below:

File type	Path	File name
HEX file	../Projects/BlockCode/02.2_Touchtoswitchsongs	Touchtoswitchsongs.hex


After load successfully, the code is shown as below:

# LROBRUYA

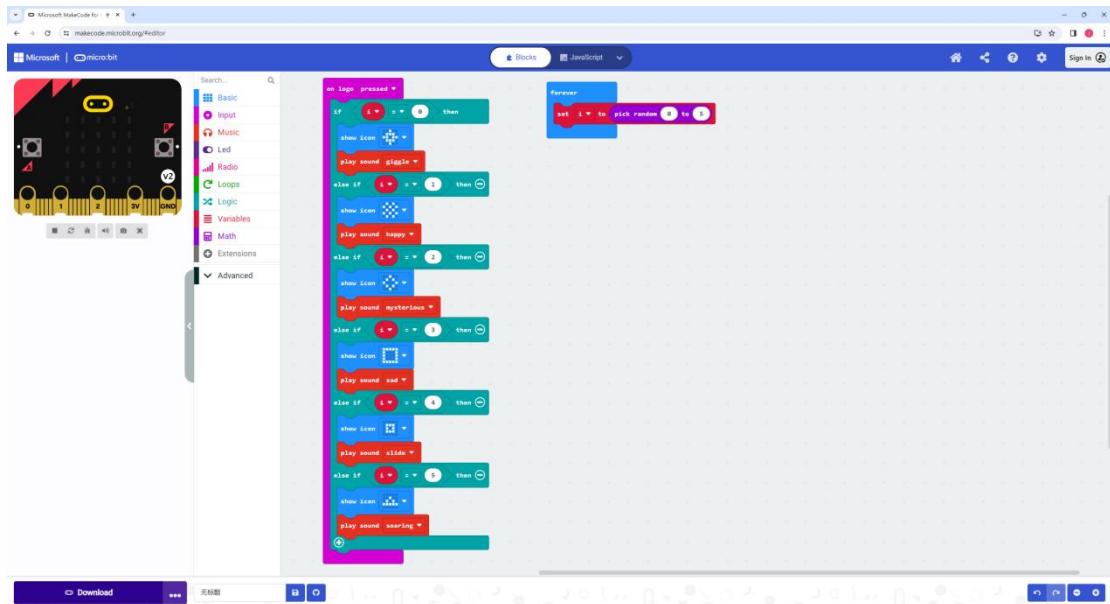

Download the code into the microbit, we touch the icon by hand to start playing the song. After playing, we can continue to touch to switch to the next song.

## Reference

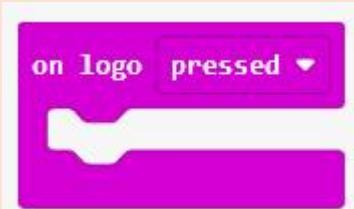Block	Function
 A purple 'on logo pressed' block with a white key icon below it.	Run some code in your program when the micro:bit logo is pressed, touched, or released.


## Python Code

Open the .py file with Mu. Code, the path is as below:

File type	Path	File name
Python file	..../Projects/PythonCode/02.2_Touchtoswitchsongs	Touchtoswitchsongs.py

After loading successfully, the code is shown below:

# LROBRUYA

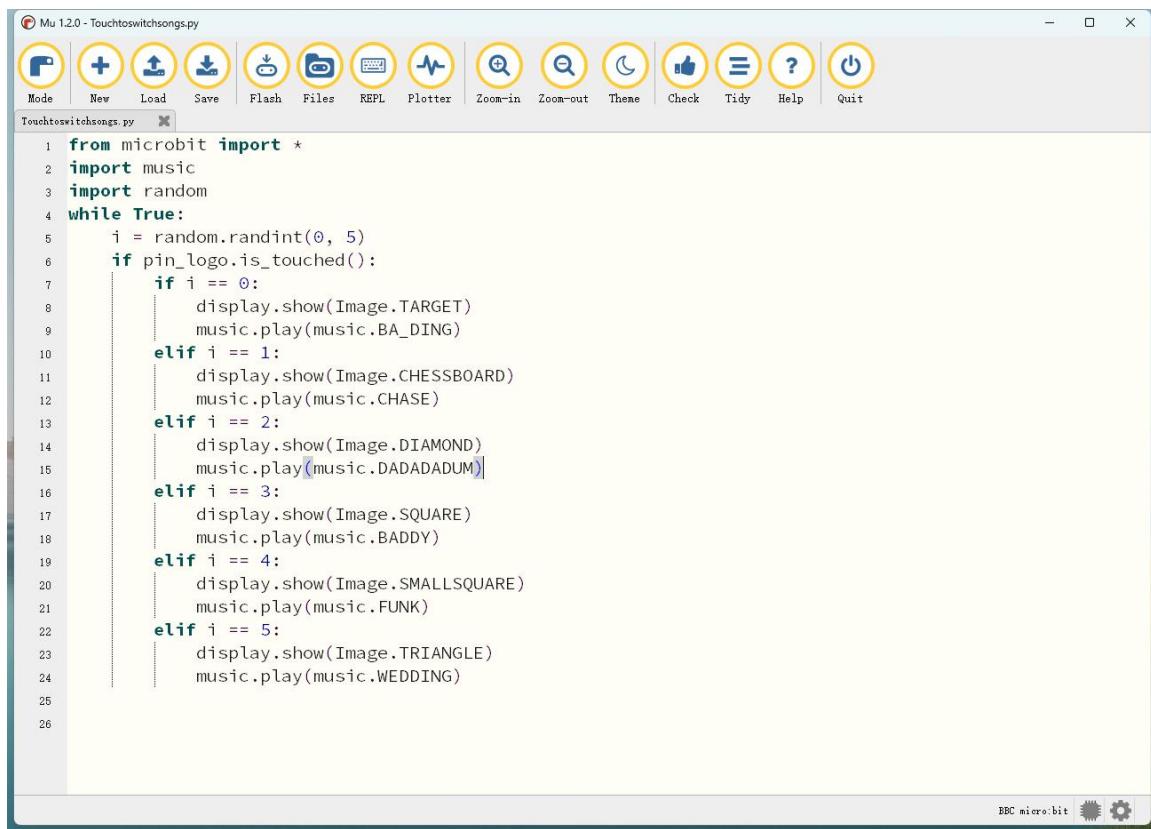

```
1 from microbit import *
2 import music
3 import random
4 while True:
5     i = random.randint(0, 5)
6     if pin_logo.is_touched():
7         if i == 0:
8             display.show(Image.TARGET)
9             music.play(music.BA_DING)
10        elif i == 1:
11            display.show(Image.CHESSBOARD)
12            music.play(music.CHASE)
13        elif i == 2:
14            display.show(Image.DIAMOND)
15            music.play(music.DADADADUM)
16        elif i == 3:
17            display.show(Image.SQUARE)
18            music.play(music.BADDY)
19        elif i == 4:
20            display.show(Image.SMALLSQUARE)
21            music.play(music.FUNK)
22        elif i == 5:
23            display.show(Image.TRIANGLE)
24            music.play(music.WEDDING)
25
26
```

Download the code into the microbit, we touch the icon by hand to start playing the song. After playing, we can continue to touch to switch to the next song.



## Lesson 3 LED

This section we will learn how to control external LEDs.

### Project 3.1 Blink

This project uses micro:bit to control LED blinking.

## Component List
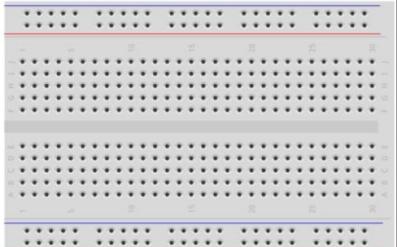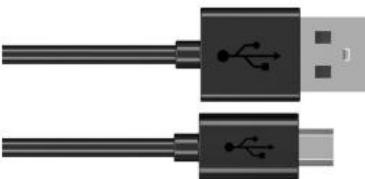
<b>Micro:bit x1</b> 	<b>Expansion board x1</b> 	
<b>Breakboard x1</b> 	<b>USB cable x1</b> 	
<b>Jumper F/M x2</b> 	<b>Resistor 220 Ω x1</b> 	<b>LED x1</b> 


## Circuit Knowledge

### Current

The unit of current (I) is ampere (A).  $1A=1000mA$ ,  $1mA=1000 \mu A$ .

Closed loop consisting of electronic components is necessary for current.


In the figure below: the left is a loop circuit, so current flows through the circuit. The right is not a loop circuit, so there is no current.

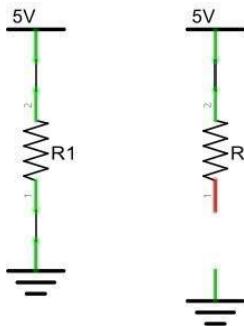

## Resistor

Resistors use Ohms (  $\Omega$  ) as the unit of measurement of their resistance (R).  $1M\ \Omega = 1000k\ \Omega$  ,  $1k\ \Omega = 1000\ \Omega$  . A resistor is a passive electrical component that limits or regulates the flow of current in an electronic circuit.

On the left, we see a physical representation of a resistor, and the right is the symbol used to represent the presence of a resistor in a circuit diagram or schematic.

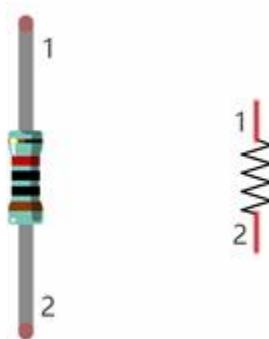


The bands of color on a resistor is a shorthand code used to identify its resistance value. For more details of resistor color codes, please refer to the card in the kit package.

With a fixed voltage, there will be less current output with greater resistance added to the circuit. The relationship between Current, Voltage

and Resistance can be expressed by this formula:  $I=V/R$  known as Ohm's Law where  $I$  = Current,  $V$  = Voltage and  $R$  = Resistance. Knowing the values of any two of these allows you to solve the value of the third.

In the following diagram, the current through  $R1$  is:  $I=U/R=5V/10k\Omega=0.0005A=0.5mA$ .

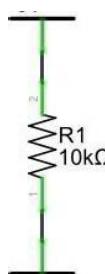


**WARNING:** Never connect the two poles of a power supply with anything of low resistance value (i.e. a metal object or bare wire) this is a Short and results in high current that may damage the power supply and electronic components.

**Note:** Unlike LEDs and Diodes, Resistors have no poles and are non-polar (it does not matter which direction you insert them into a circuit, it will work the same).

## Analog signal and Digital signal

An Analog Signal is a continuous signal in both time and value. On the contrary, a Digital Signal or discrete-time signal is a time series consisting of a sequence of quantities. Most signals in life are analog signals. A familiar example of an Analog Signal would be how the temperature throughout the day is continuously changing and could not

suddenly change instantaneously from 0 °C to 10 °C. However, Digital Signals can instantaneously change in value. This change is expressed in numbers as 1 and 0 (the basis of binary code). Their differences can more easily be seen when compared when graphed as below.

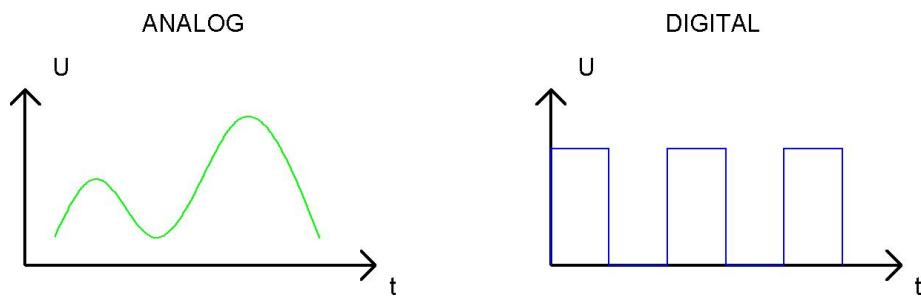

Note that the Analog signals are curved waves and the Digital signals are “Square Waves” .

In practical applications, we often use binary as the digital signal, that is a series of 0's and 1's. Since a binary signal only has two values (0 or 1) it has great stability and reliability. Lastly, both analog and digital signals can be converted into the other.


### **Low level and high level**

In circuit, the form of binary (0 and 1) is presented as low level and high level.

Low level is generally equal to ground voltage (0V). High level is generally equal to the operating voltage of components.

The low level of Micro:bit is 0V and high level is 3.3V, as shown below.

When IO port on Micro:bit outputs high level, low-power components can be directly driven, like LED.

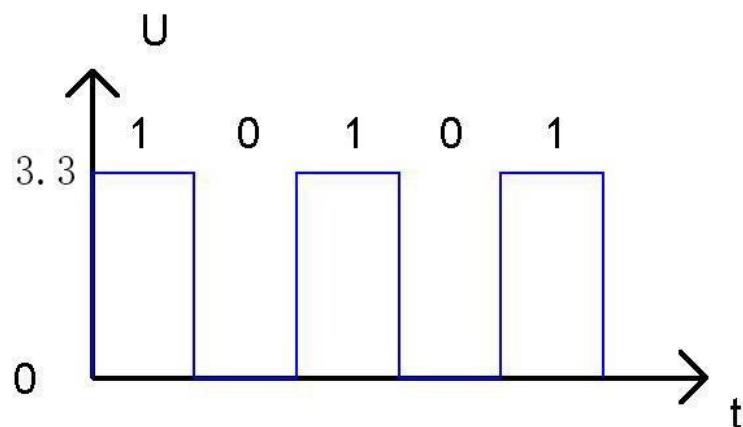

## Component knowledge

Let us learn about the basic features of components to use them better.

### Jumper

Jumper is a kind of wire, which is designed to connect the components together by inserting its two terminals.

Jumpers have male end (pin) and female end (slot), so jumpers can be divided into the following 3 types.

Jumper M/M



Jumper F/F




Jumper F/M



### Breadboard

There are many small holes on breadboard to connect Jumper.

Some small holes are connected inside breadboard. Here we have a small breadboard as an example of how the rows of holes (sockets) are electrically attached. The left picture shows the ways the pins have shared electrical connection and the right picture shows the actual internal metal, which connect these rows electrically.

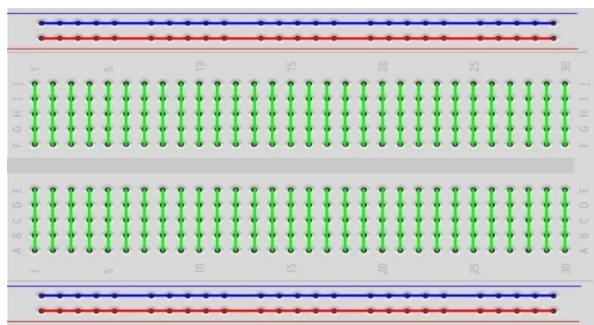


## LED

An LED is a type of diode. All diodes only work if current is flowing in the correct direction and have two Poles. An LED will only work (light up) if the longer pin (+) of LED is connected to the positive output from a power source and the shorter pin is connected to the negative (-) negative output also referred to as Ground (GND). This type of component is known as “Polar” (think One-Way Street).

All common 2 lead diodes are the same in this respect. Diodes work only if the voltage of its positive electrode is higher than its negative electrode and there is a narrow range of operating voltage for most all common diodes of 1.9 and 3.4V. If you use much more than 3.3V the LED will be damaged and burn out.

Note: LEDs cannot be directly connected to a power supply, which usually ends in a damaged component. A resistor with a specified resistance value must be connected in series to the LED you plan to use.

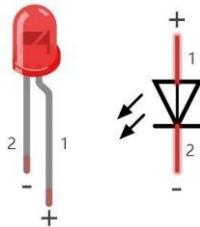


## Circuit

When wiring, it is recommended to disconnect all the power supplies in the circuit, and then build the circuit according to the circuit (**micro:bit board cannot be inserted reverse**),

**LED's positive pole (long pin) should be connected to resistor while its negative pole (short pin) should be connected to GND. After the circuit is built and verified correct, use the USB cable to connect the PC to the micro:bit to power the circuit.**

**CAUTION: Avoid any possible short circuits (especially connecting 5V or GND, 3.3V and GND)! WARNING: A short circuit can cause high current in your circuit, create excessive component heat and cause permanent damage to your micro:bit!**

# LROBRUYA

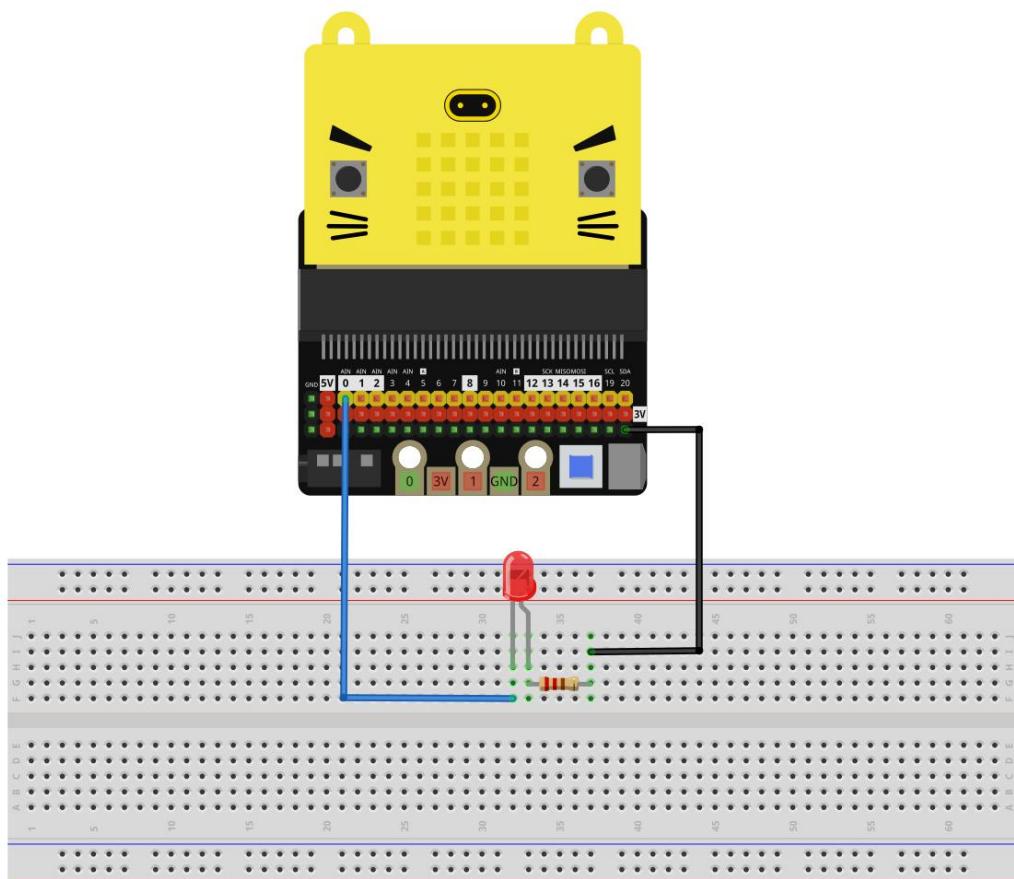

## Block code

Open MakeCode first. Import the .hex file. The path is as below:

File type	Path	File name
HEX file	../Projects/BlockCode/03.1_Blink	Blink.hex


After import successfully, the code is shown as below:



# LROBRUYA

Download the code into the micro:bit and the LED on the breadboard will begin to blink.

In the code, write 1 to the P0 port to turn ON the LED. After waiting for 500ms, write 0 to the P0 port to turn OFF the LED. After waiting for 500ms, the LED will be turned ON again. Repeat the loop, then LED will start blinking.

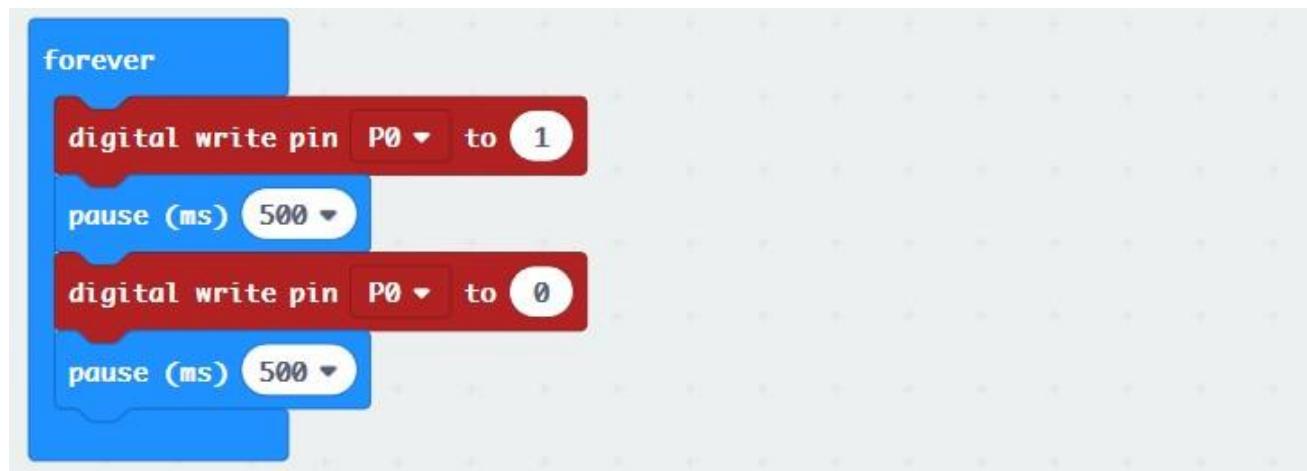

## Reference

Block	Function
<code>pause (ms) 100</code>	Pause the program for the number of milliseconds you set. You can use this function to slow your program down.
<code>digital write pin P0 to 1</code>	Write a digital (0 or 1) signal to a pin on the micro:bit board.

## Python Code

Open the .py file with Mu. Code, the path is as below:

File type	Path	File name
Python file	..//Projects/PythonCode/03.1_Blink	Blink.py

# LROBRUYA

After loading successfully, the code is shown below:



The screenshot shows the Mu 1.0.1 Python editor interface. The title bar says "Mu 1.0.1 - Blink.py". The toolbar at the top has icons for Mode, New, Load, Save, Flash, Files, REPL, Plotter, Zoom-in, Zoom-out, Theme, Check, Help, and Quit. Below the toolbar is a code editor window titled "Blink.py" containing the following Python code:

```
1 from microbit import *
2
3 while True:
4     pin0.write_digital(1)
5     sleep(500)
6     pin0.write_digital(0)
7     sleep(500)
```

At the bottom right of the editor window, there is a "Microbit" icon with a gear symbol.

Download the code into micro:bit and the LED on the breadboard will start to blink.

The following is the program code:

```
1 from microbit import *
2
3 while True:
4     pin0.write_digital(1)
5     sleep(500)
6     pin0.write_digital(0)
7     sleep(500)
```

In the code, write 1 to the P0 port to turn ON the LED. After waiting for 500ms, write 0 to the P0 port to turn OFF the LED. After waiting for 500ms, the LED will be turned ON again. Repeat the loop, then LED will start blinking.

Write a high level to pin P0.

```
pin0.write_digital(1)
```

Delay 500ms.

sleep(500)

Then write low level, and then delay 500ms. Repeat actions above.

## Reference


`pin.write_digital(value)`

Set the pin to high if `value` is 1, or to low, if it is 0.

For more information, please refer to: <https://microbit-micropython.readthedocs.io/en/latest/pin.html>

## Lesson 4 Button and LED

Usually, there are three essential parts in a complete automatic control device: INPUT, OUTPUT, and CONTROL. In last section, the LED module was the output part and micro:bit was the control part. In practical applications, we not only make the LEDs flash, but also make a device sense the surrounding environment, receive instructions and then take the appropriate action such as turn on LEDs, make a buzzer beep and so on.



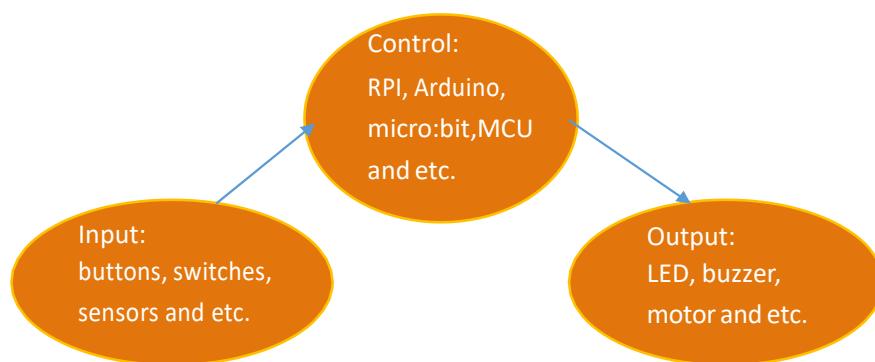


Next, we will build a simple control system to control an LED through a push button switch.

## Project 4.1 Control LED by Button

In the project, we will control the LED state through a Push Button Switch. When the button is pressed, our LED will turn ON, and when it is released, the LED will turn OFF. This describes a Momentary Switch.


### Component List
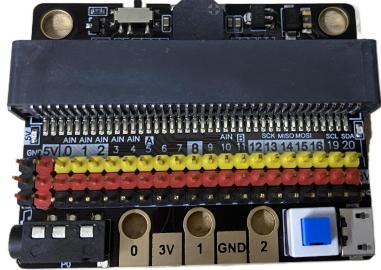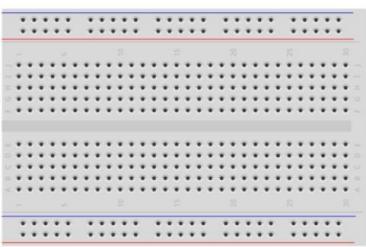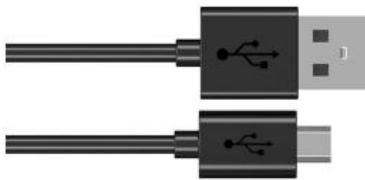
<b>Micro:bit x1</b> 	<b>Expansion board x1</b> 	
<b>Breakboard x1</b> 	<b>USB cable x1</b> 	
<b>FM x4 MM x1</b> 	<b>Resistor 220 <math>\Omega</math> x1</b> 	<b>LED x1</b> 
<b>Push Button Switch x1</b> 	<b>1k <math>\Omega</math> x2</b> 	

### Circuit Knowledge

#### Connection of Push Button Switch


We connect a push button switch directly to the circuit to turn ON or OFF the LED. In digital circuits, we need to use the push button switch as an input signal. The recommended connection is as follows:

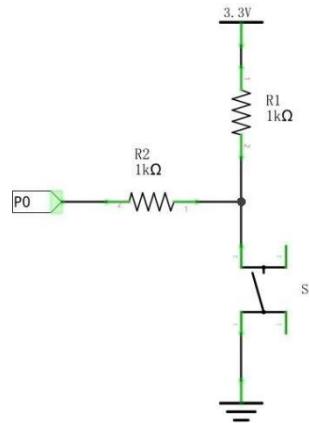

In the above circuit diagram, when the button is not pressed, 3.3V (high level) will be detected by I/O port; and when the button is pressed, it will be 0V (low level). Resistor R2 here is used to prevent the port from being set to output high level by accident. Without R2, the port maybe connected directly to the cathode and cause a short circuit when the button is pressed.


The following diagram shows another connection, in which the level detected by I/O port is opposite to above diagram, when the button is pressed or not.

# LROBRUYA

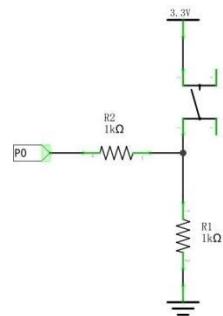

## Circuit

The P0 pin detects the button and the P1 pin controls the LED.

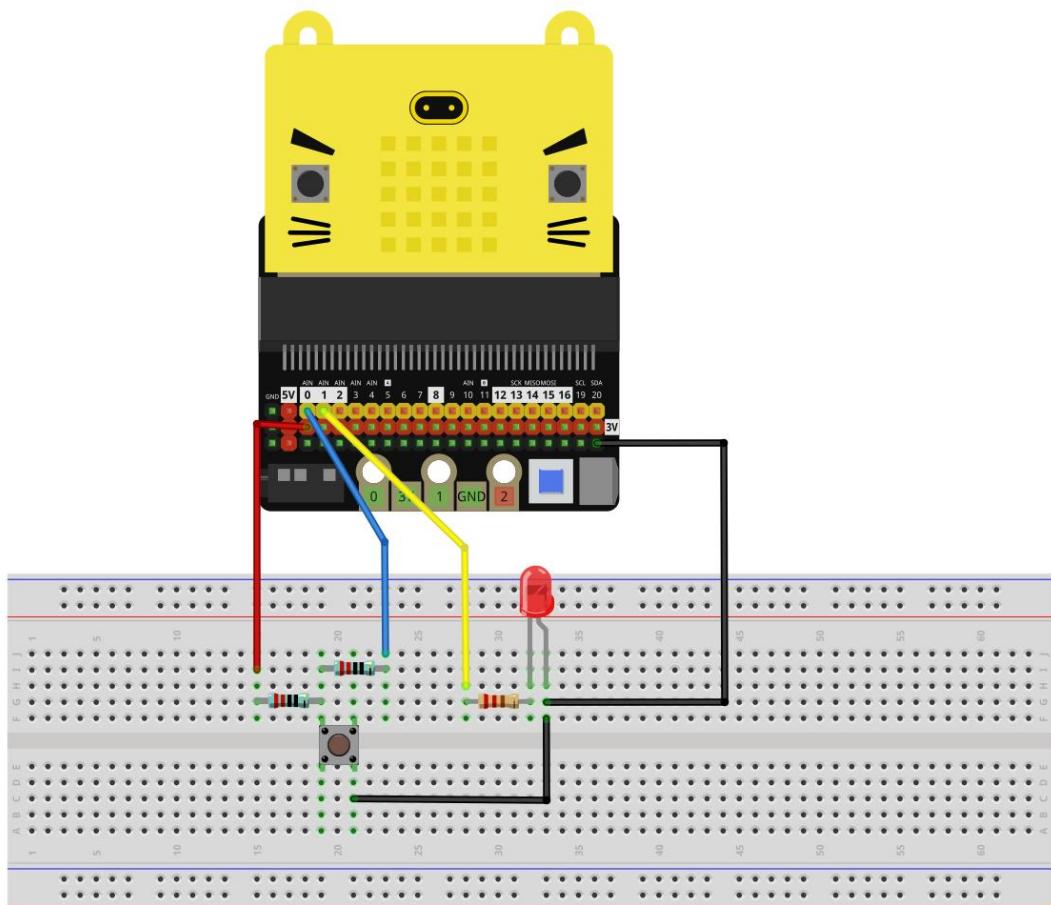


Open MakeCode first. Import the .hex file. The path is as below:

File type	Path	File name
HEX file	..../Projects/BlockCode/04.1 _ButtonAndLED	ButtonAndLED.hex

# LROBRUYA

After import successfully, the code is shown as below:

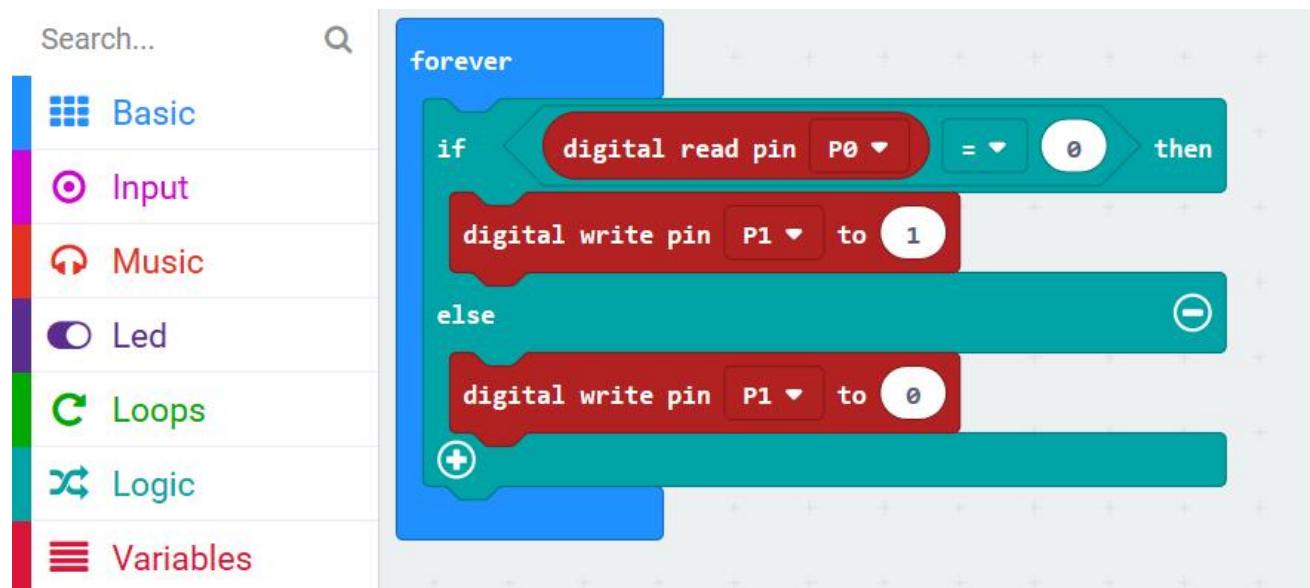

Download the code into micro:bit. When the button is pressed, the LED will be turned on. When the button is released, the LED will be turned off.

In the program, read the level of the P0 pin to determine if the button is pressed.



If P0 pin is low level, it indicates that the button is pressed, and make P1 pin output 1, then LED will be turned ON.



Otherwise, P1 pin outputs 0, and the LED will be turned OFF.



## Reference

# LROBRUYA

Block	Function
<code>digital read pin P8</code>	Read a digital (0 or 1) signal from a pin on the micro:bit board.

## Python Code

Open the .py file with Mu. Code, the path is as below:

File type	Path	File name
Python file	..../Projects/PythonCode/04.1_ButtonAndLE	ButtonAndLED.py

After loading successfully, the code is shown below:



```
from microbit import *
while True:
    buttonState = pin0.read_digital()
    if buttonState == 0:
        pin1.write_digital(1)
    else:
        pin1.write_digital(0)
```

Download the code into micro:bit. When the button is pressed, the led will be turned ON. When the button is released, the led will be turned OFF.

The following is the program code:

```
from microbit import *
while True:
    buttonState = pin0.read_digital()
    if buttonState == 0:
        pin1.write_digital(1)
    else:
        pin1.write_digital(0)
```



In the program, read the level of the P0 pin, save the read level value in the variable `buttonState`, and then determine whether the button is pressed.

```
buttonState = pin0.read_digital()
```

If the read P0 pin is low, it indicates that the button is pressed, and then make P1 pin output 1, so LED will be turned ON. Otherwise, the P1 pin outputs 0, and the LED will be turned OFF.

```
if buttonState == 0:  
    pin1.write_digital(1)  
else:  
    pin1.write_digital(0)
```

## Reference

`pin.read_digital()`

Return 1 if the pin is high level, and 0 if it's low.

For more information, please refer to:<https://microbit-micropython.readthedocs.io/en/latest/pin.html>

## Project 4.2 Table Lamp

In this project, we will make a table lamp. The components and circuits used are exactly the same as the previous one, but this will function differently: Press the button, the LED will turn ON, and pressing the button again, the LED turns OFF. The ON switch action is no longer momentary (like a door bell) but remains ON without needing to continually press on the Button Switch.


### Component list

It is same as the previous project.

## Circuit knowledge

### Debounce for Push Button

When a Momentary Push Button Switch is pressed, it will not change from one state to another state immediately. Due to tiny mechanical vibrations, there will be a short period of continuous buffeting before it stabilizes in a new state too fast for Humans to detect but not for computer microcontrollers. The same is true when the push button switch is released. This unwanted phenomenon is known as “bounce” .

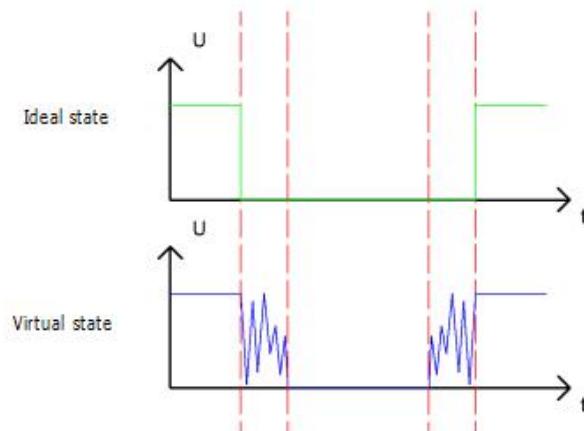

Therefore, if we can directly detect the state of the Push Button Switch, there are multiple pressing and releasing actions in one pressing cycle. This buffeting will mislead the high-speed operation of the microcontroller to cause many false decisions. Therefore, we need to eliminate the impact of buffeting. Our solution: to judge the state of the button multiple times. Only when the button state is stable (consistent)

# LROBRUYA

over a period of time, can it indicate that the button is actually in the ON state (being pressed).

This project needs the same components and circuits as we used in the previous section.

## Circuit


It is same as the previous section.

## Block code

Open MakeCode first. Import the .hex file. The path is as below:

File type	Path	File name
HEX file	..../Projects/BlockCode/04.2_TableLamp	TableLamp.hex

After importing successfully, the code is shown as below:

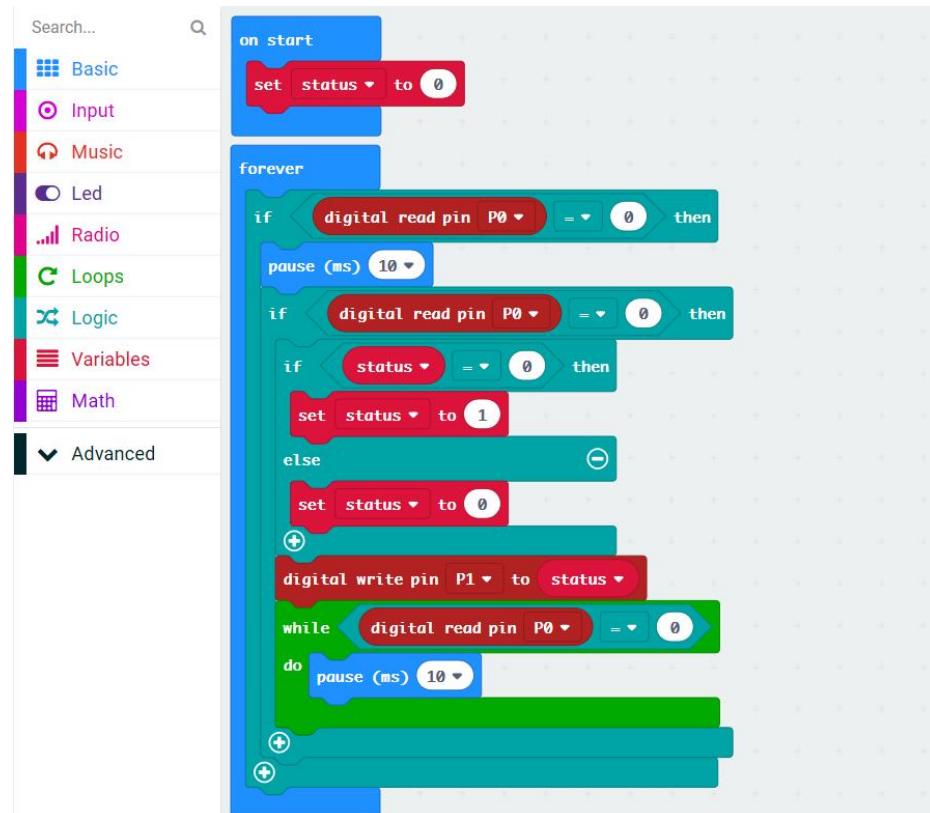

# LROBRUYA


---

Download the code to micro:bit, press the button once, the LED turns ON, press the button again, the LED turns OFF.

In the program, when it is detected for the first time that the button is pressed, wait for 10ms to detect whether the button is pressed again, to skip the bounce when the button is pressed. And if the button is still detected as pressed for the second time, the button is considered to have been pressed and in a steady state. Otherwise, it is considered to be a bounce and the program will stop detecting.




When it is determined that the key is pressed, change the status value. Status is used to save the state of LED. And then write the new value of status to the P1 port to control the LED.

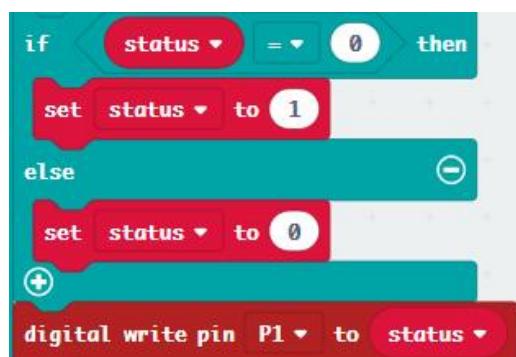

# LROBRUYA

---

After the above operations done, the program will detect whether the button is released. And similarly, it will first eliminate the bounce of the button.

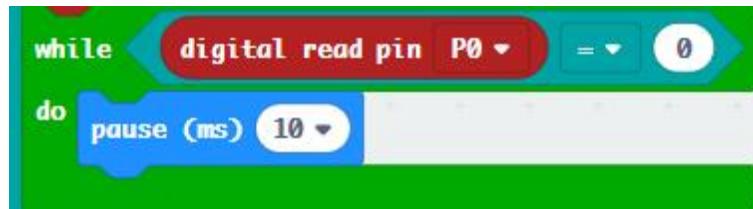

## Reference

Block	Function
A Scratch script block labeled 'set [status v] to [0]'. It is a red control block.	Use an equal sign to make a variable store the number or string you set.


## Python code

Open the .py file with Mu. Code, the path is as below:

File type	Path	File name
Python file	../Projects/PythonCode/04.2_TableLamp	TableLamp.py

After loading successfully, the code is shown as below:

# LROBRUYA

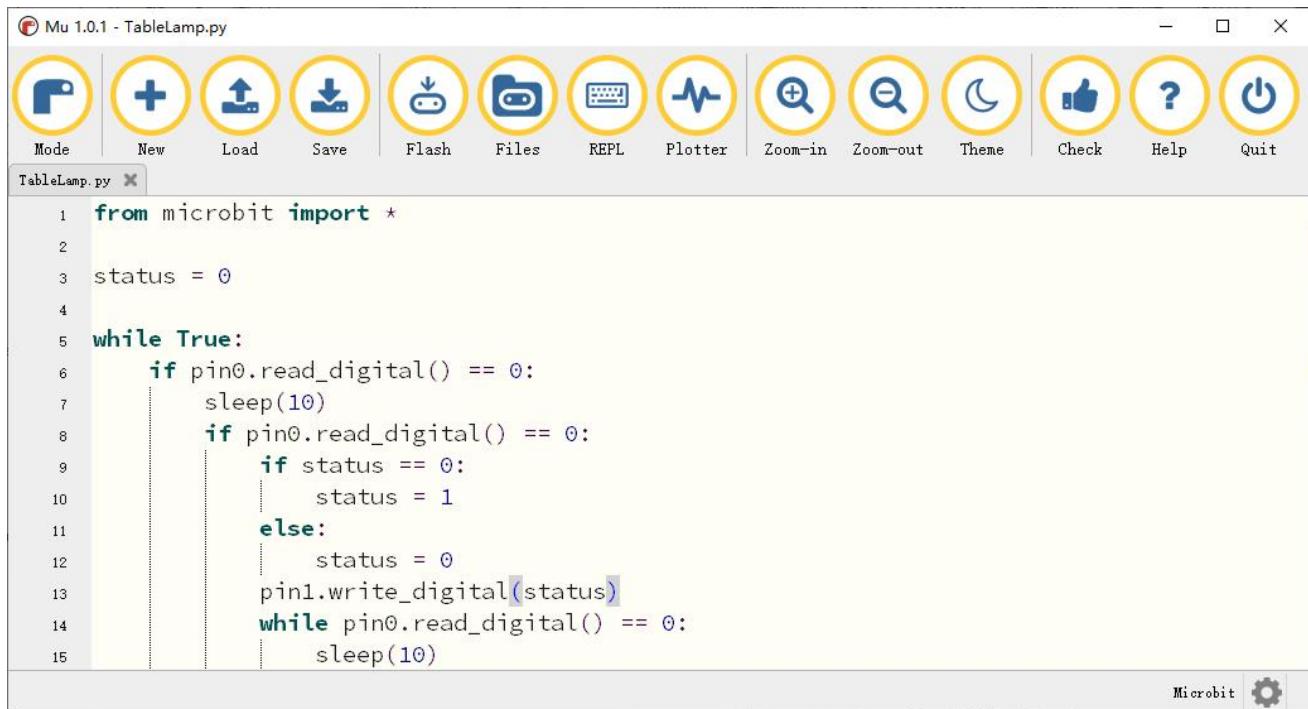

Download the code to micro:bit, press the button once, the LED turns ON; press the button again, the LED turns OFF.

The following is the program code:

```
1  from microbit import *
2  status = 0
3  while True:
4      if pin0.read_digital() == 0:
5          sleep(10)
6          if pin0.read_digital() == 0:
7              if status == 0:
8                  status = 1
9              else:
10                 status = 0
11             pin1.write_digital(status)
12             while pin0.read_digital() == 0:
13                 sleep(10)
```

In the program, when it is detected for the first time that the button is pressed, wait for 10ms to detect whether the button is pressed again, to

# LROBRUYA

---

eliminate the impact of bounce when the button is pressed. And if the button is still pressed for the second time, the button is considered to have been pressed and in a steady state. Otherwise, it is considered to be a bounce and exit this judgment.

```
if pin0.read_digital() == 0:  
    sleep(10)  
    if pin0.read_digital() == 0:
```

When it is determined that the key is pressed, change the status value. Status is used to save the state of LED. And then write the new value of status to the P1 port to control the LED.

```
if status == 0:  
    status = 1  
else:  
    status = 0  
pin1.write_digital(status)
```

After the above operations done, the program will detect whether the button is released. And similarly, it will first eliminate the bounce of the button.

```
while pin0.read_digital() == 0:  
    sleep(10)
```

## Lesson 5 LED Bar Graph




We have learned how to control LED blink. Next step, we will learn a new component LED bar graph.

### Project 5.1 Flowing Light

In this project, we use LED Bar Graph to make a flowing water light.

# LROBRUYA

## Component list
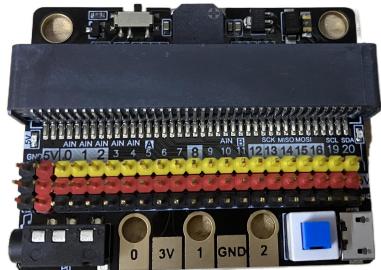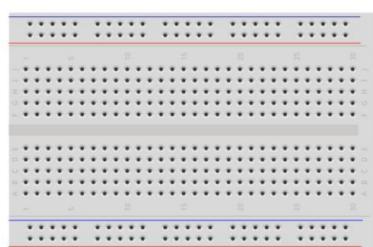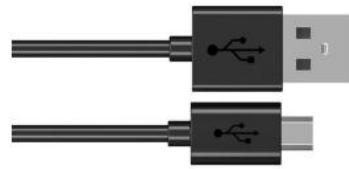
<b>Micro:bit x1</b> 	<b>Expansion board x1</b> 	
<b>Breakboard x1</b> 	<b>USB cable x1</b> 	
<b>Jumper F/M x11</b> 	<b>Resistor 220 <math>\Omega</math> x10</b> 	<b>LED bar graph x1</b> 


## Component knowledge

Let us learn about the basic features of components to use and understand them better.


### LED Bar Graph

A Bar Graph LED has 10 LEDs integrated into one compact component. The two rows of pins at its bottom are paired to identify each LED like the single LED used earlier.

# LROBRUYA

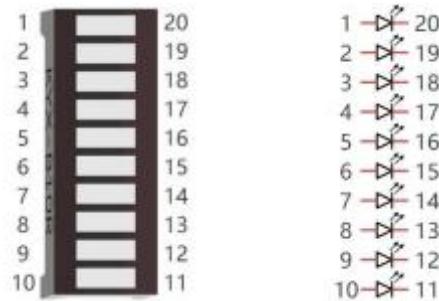

## Circuit

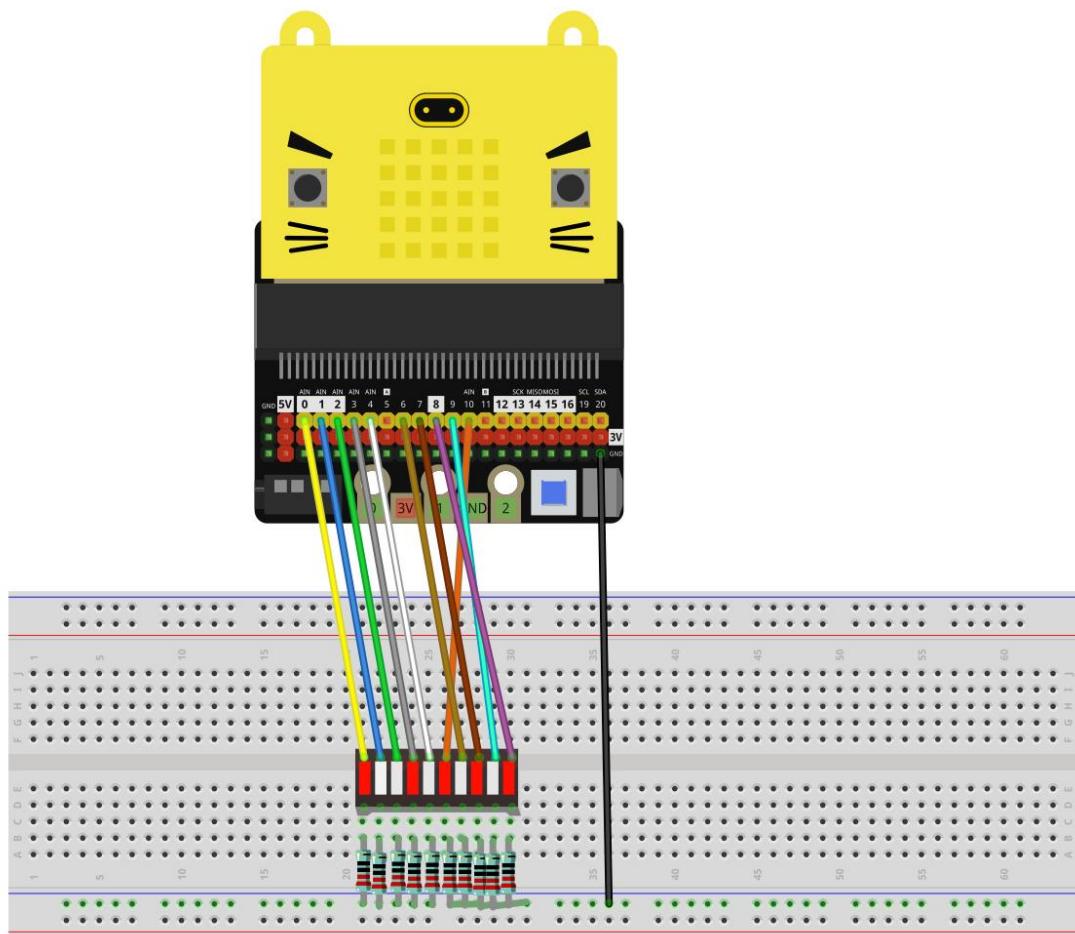

If your project doesn't work, please rotate LED bar 180° .


## Block code

Open MakeCode first. Import the .hex file. The path is as below:

# LROBRUYA


File type	Path	File name
HEX file	../Projects/BlockCode/05.1_FlowingLight01	FlowingLight01.hex

After importing successfully, the code is shown as below:

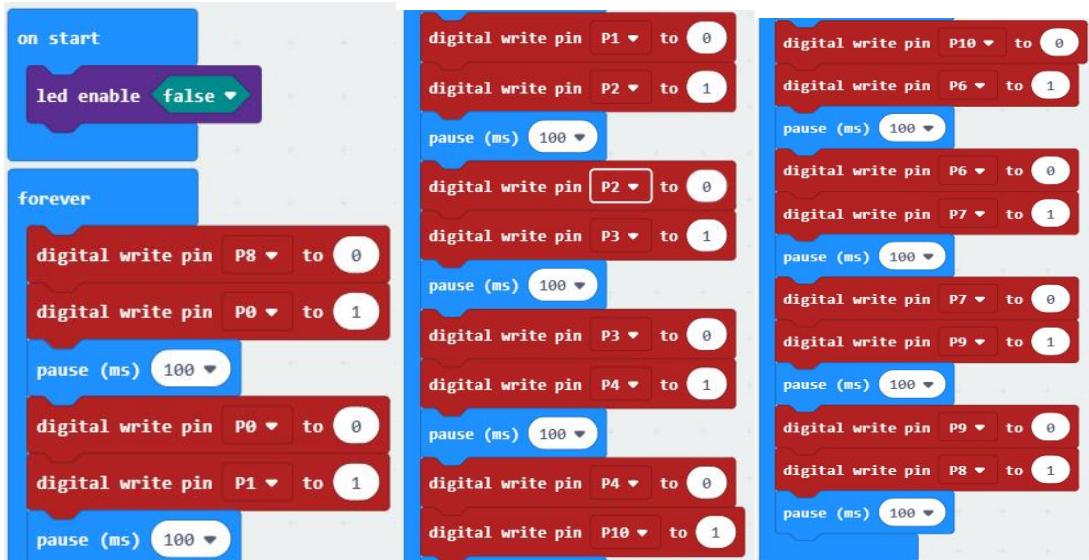


Check the connection of the circuit, verify that the circuit is connected correctly, download the code into micro:bit, after the program is executed, you will see the LED turns ON from left to right, which repeats. This process is repeated to achieve the “movements” of flowing water.

In the code, we need turn OFF the LED screen (which allows the GPIO pin associated with the LED screen to be reused for other purposes).

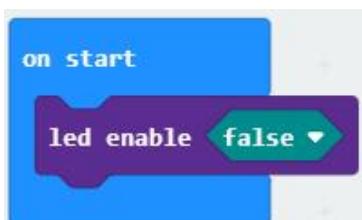

Set one pin to high and the rest of 9 pins to low level at a time; Until all the 10 pins are set to high and low level in turn.

# LROBRUYA

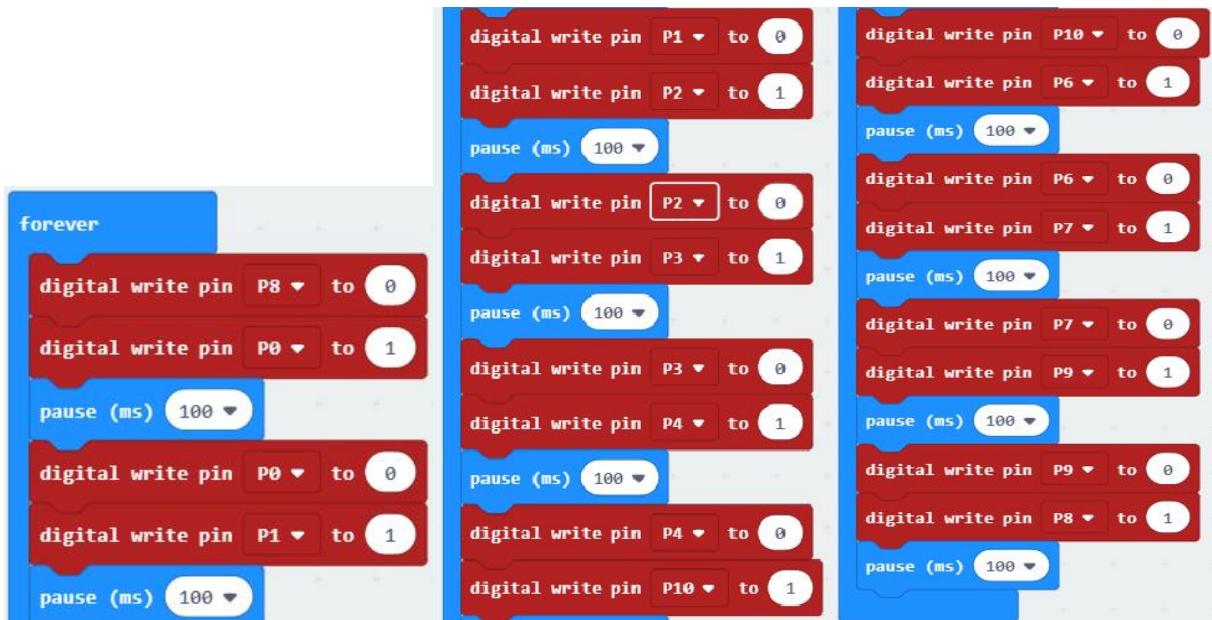

## Reference

Block	Function
	Turns the LED screen on and off (thus allowing you to re-use the GPIO pins associated with the display for other purposes).

## Python code

Open the .py file with Mu. Code, the path is as below:

File type	Path	File name
Python file	..//Projects/PythonCode/05.1_FlowingLight01	FlowingLight01.py

After loading successfully, the code is shown as below:

```

from microbit import *
display.off()
outPin = [pin0, pin1, pin2, pin3, pin4, pin10, pin6, pin7, pin9, pin8]
while True:
    for p in outPin:
        p.write_digital(1)
        sleep(100)
        p.write_digital(0)
        sleep(100)

```

# LROBRUYA

---

Check the connection of the circuit, verify that the circuit is connected correctly, download the code into micro:bit, after the program is executed, you will see the LED turns ON from left to right, which repeats to achieve the “movements” of flowing water.

The following is the program code:

```
1 from microbit import *
2 display.off()
3 outPin = [pin0, pin1, pin2, pin3, pin4, pin10, pin6, pin7, pin9, pin8]
4 while True:
5     for p in outPin:
6         p.write_digital(1)
7         sleep(100)
8         p.write_digital(0)
9         sleep(100)
```

In the code, we need to turn OFF the LED screen (**which allows the GPIO pin associated with the LED screen to be reused for other purposes**).

```
display.off()
```

Define an array to save the pin variable.

```
outPin = [pin0, pin1, pin2, pin3, pin4, pin6, pin7, pin8, pin9, pin10]
```

Change the level of the currently selected pin every 100ms to implement the effect of flowing water light.

```
for p in outPin:
    p.write_digital(1)
    sleep(100)
    p.write_digital(0)
    sleep(100)
```

## Reference

`display.off()`



Use `off()` to turn OFF the display (thus allowing you to re-use the GPIO pins associated with the display for other purposes)

## Lesson 6 PWM

In this chapter, we will learn how to make a breathing LED.

### Project 6.1 Breathing Light

#### Component list
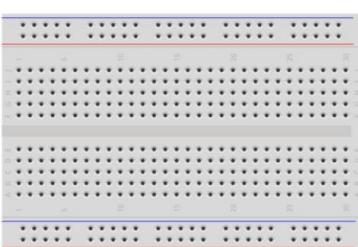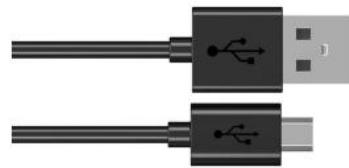
<b>Micro:bit x1</b> 	<b>Expansion board x1</b> 	
<b>Breakboard x1</b> 	<b>USB cable x1</b> 	
<b>Jumper F/M x2</b> 	<b>Resistor 220 Ω x1</b> 	<b>LED x1</b> 

## Circuit knowledge


At first, let us learn the knowledge how to use the circuit to make LED emit different brightness of light.

### PWM

PWM, Pulse-Width Modulation, is a very effective method for using digital signals to control analog circuits. Digital processors cannot directly output analog signals. PWM technology makes it very convenient to achieve this conversion (translation of digital to analog signals).

PWM technology uses digital pins to send certain frequencies of square waves, that is, the output of high levels and low levels, which alternately last for a while. The total time for each set of high levels and low levels is generally fixed, which is called the period (Note: the reciprocal of the period is frequency). The time of high level outputs are generally called “pulse width” , and the duty cycle is the percentage of the ratio of pulse duration, or pulse width (PW) to the total period (T) of the waveform.


The longer the output of high levels last, the longer the duty cycle and the higher the corresponding voltage in the analog signal will be. The following figures show how the analog signal voltages vary between 0V-5V (high level is 5V) corresponding to the pulse width 0%-100%:

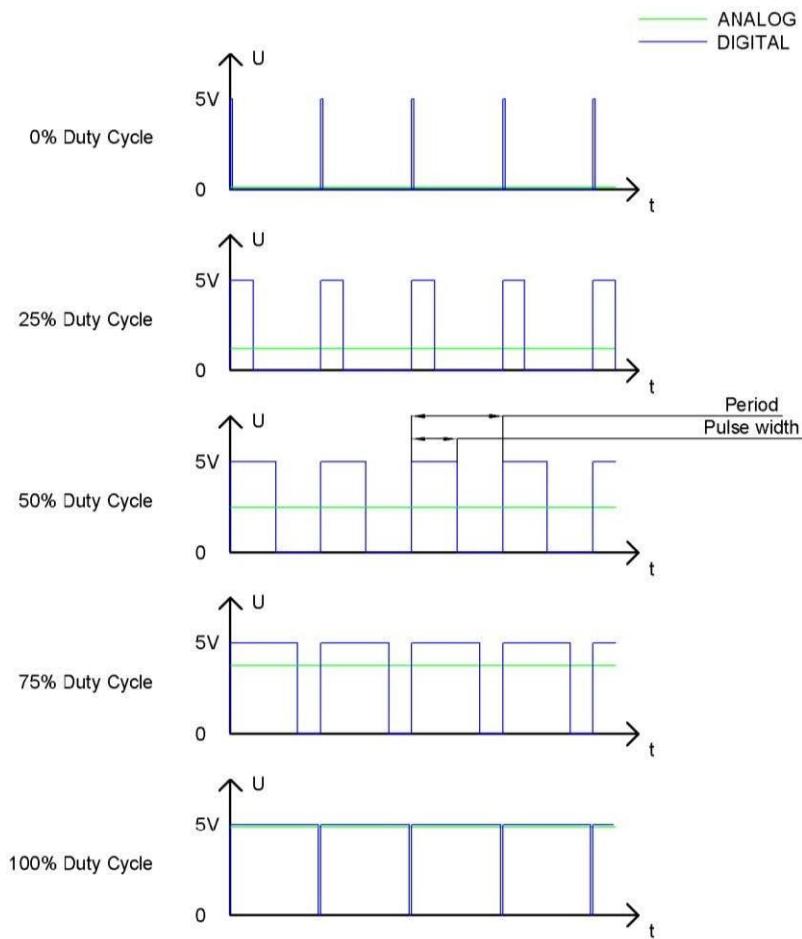

The longer the PWM duty cycle is, the higher the output power will be. Now that we understand this relationship, we can use PWM to control the brightness of an LED or the speed of DC motor and so on.

# LROBRUYA

## Circuit

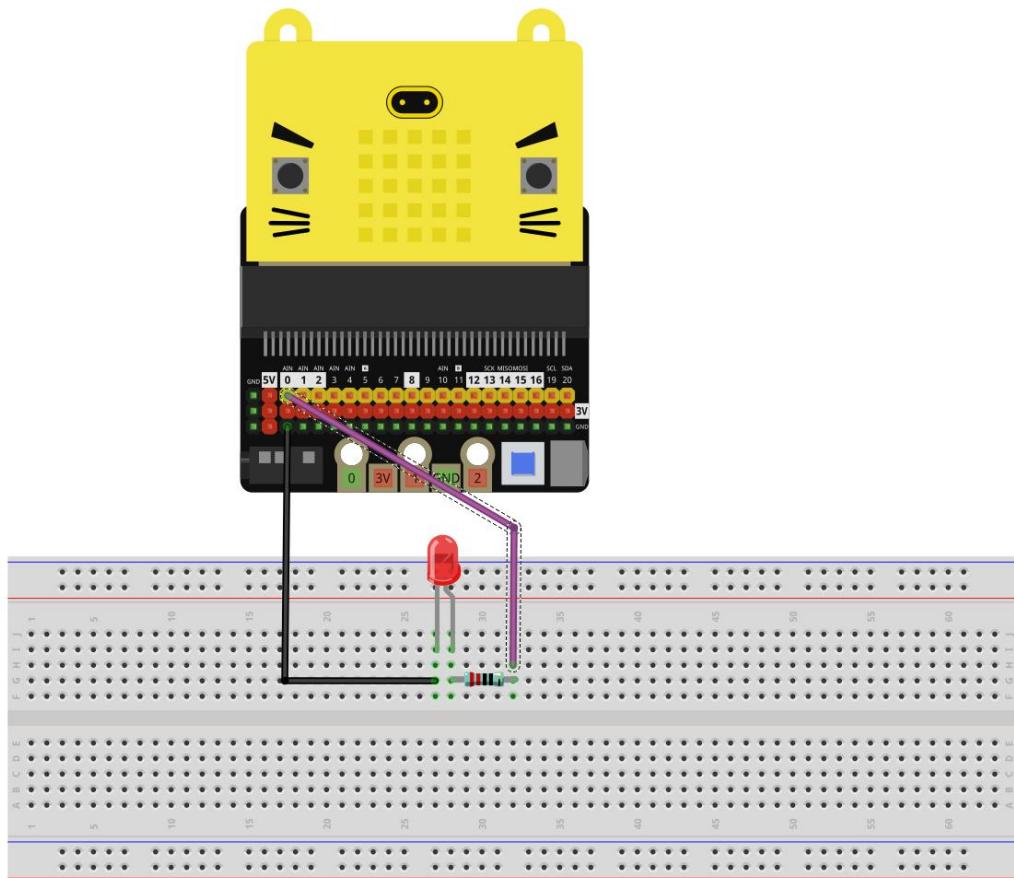

The pin for the circuit is P0. The long pin (positive) of LED is connected to the resistor, and the short pin (negative) to ground.

## Block code

Open MakeCode first. Import the .hex file. The path is as below:

File type	Path	File name
HEX file	../Projects/BlockCode/06.1_BreathingLight	BreathingLight.hex

After import successfully, the code is shown as below:

# LROBRUYA



Check the connection of the circuit, confirm that the circuit is connected correctly, download the code into micro:bit. The LED will becomes brighter gradually, and then dimmer and dimmer. This process will be repeated to achieve the effect of breathing.

P0 outputs PWM signal, from 0 to 500, then from 500 to 0.

# LROBRUYA



## Reference

Block	Function
<code>analog write pin P0 to i</code>	Write an analog signal (0 through 1023) to the pin you set.


## Python code

Open the .py file with Mu. Code, the path is as below:

File type	Path	File name
Python file	..../Projects/PythonCode/06.1_BreathingLight	BreathingLight.py

After loading successfully, the code is shown as below:

# LROBRUYA

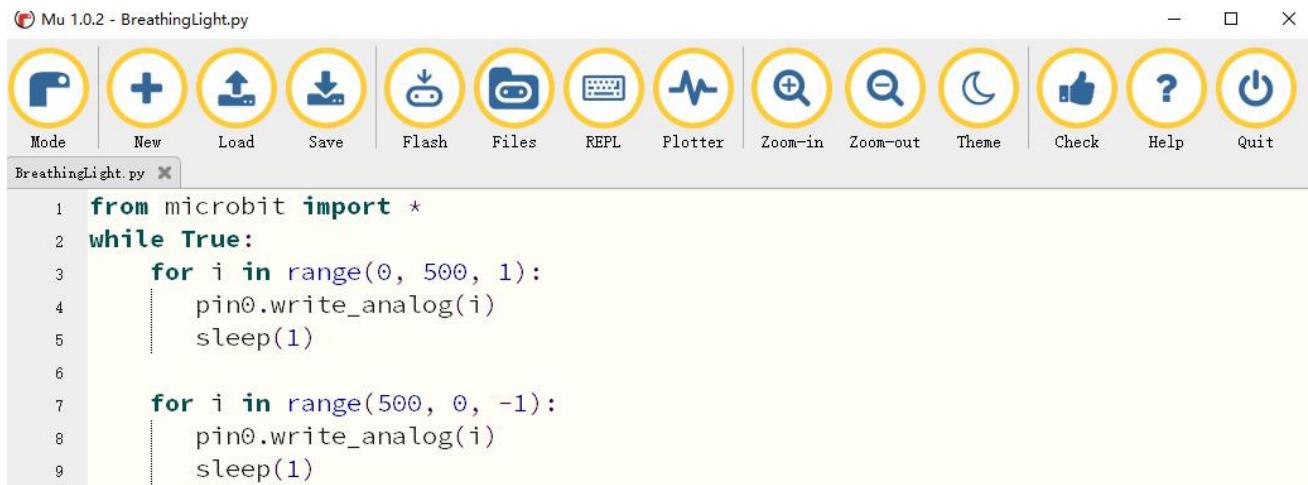

The screenshot shows the Mu 1.0.2 IDE interface. The title bar says "Mu 1.0.2 - BreathingLight.py". The menu bar includes "File", "Edit", "Run", "Terminal", "Help". The toolbar has icons for Mode, New, Load, Save, Flash, Files, REPL, Plotter, Zoom-in, Zoom-out, Theme, Check, Help, and Quit. The code editor contains the following Python code:

```
1 from microbit import *
2 while True:
3     for i in range(0, 500, 1):
4         pin0.write_analog(i)
5         sleep(1)
6
7     for i in range(500, 0, -1):
8         pin0.write_analog(i)
9         sleep(1)
```

Check the connection of the circuit, verify it correct and download the code into micro:bit, the LED will becomes brighter gradually, and then dimmer and dimmer. This process will be repeated to achieve the effect of breathing.

The following is the program code:

```
1 from microbit import *
2
3 while True:
4     for i in range(0, 500, 1):
5         pin0.write_analog(i)
6         sleep(1)
7
8     for i in range(500, 0, -1):
9         pin0.write_analog(i)
10        sleep(1)
```

P0 outputs PWM signal, from 0 to 500,

```
for i in range(0, 500, 1):
    pin0.write_analog(i)
    sleep(1)
```

Then from 500 to 0.

```
for i in range(500, 0, -1):
    pin0.write_analog(i)
    sleep(1)
```

## Reference

```
pin.write_analog(value)
```

Output a PWM signal on the pin, with the duty cycle proportional to the provided value. The value may be either an integer or a floating point number between 0 (0% duty cycle) and 1023 (100% duty)..

For more information, please refer to:

<https://microbit-micropython.readthedocs.io/en/latest/pin.html>



## Lesson 7 RGBLED

In this chapter, we will learn a new component, RGBLED.

### Project 7.1 monochromatic Light

This project will use RGBLED to show one color.


#### Component list
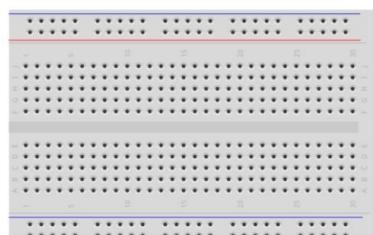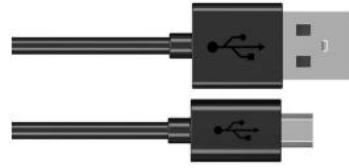
<b>Micro:bit x1</b> 	<b>Expansion board x1</b> 	
<b>Breakboard x1</b> 	<b>USB cable x1</b> 	
<b>RGB_LED x1</b> 	<b>Jumper F/M x4</b> 	<b>Resistor 220 Ω x3</b> 

## Component knowledge


### RGB LED

A RGB LED has 3 LEDs integrated into one LED component. It can respectively emit Red, Green and Blue light. In order to do this, it requires 4 pins (this is also how you identify it). The long pin (1) is the common which is the Anode (+) or positive lead, the other 3 are the Cathodes (-) or negative leads. A rendering of a RGB LED and its electronic symbol are shown below. We can make RGB LED emit various colors of light and brightness by controlling the 3 Anodes (2, 3 & 4) of the RGB LED.

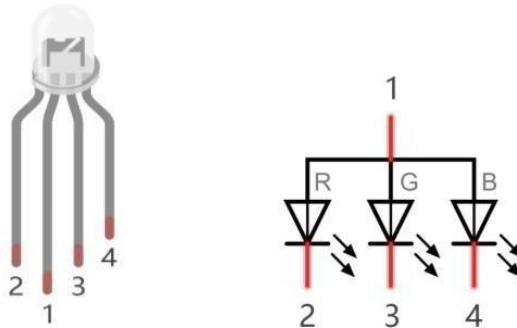

Red, Green, and Blue light are called 3 Primary Colors when discussing light (Note: for pigments such as paints, the 3 Primary Colors are Red, Blue and Yellow). When you combine these three Primary Colors of light with varied brightness, they can produce almost any color of visible light. Computer screens, single pixels of cell phone screens, neon lamps, etc. can all produce millions of colors due to phenomenon.


# LROBRYA

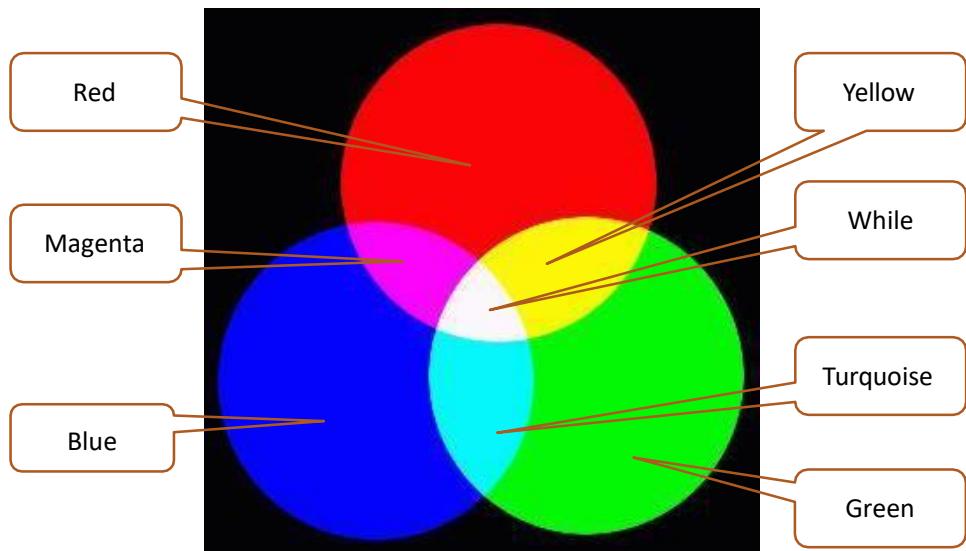

If we use a three 8 bit PWM to control the RGB LED, in theory, we can create  $28*28*28=16777216$  (16 million) colors through different combinations of RGB light brightness.

## Circuit

This circuit uses pins P2, P1, and P0 to connect the negative electrodes of the RGBLED.

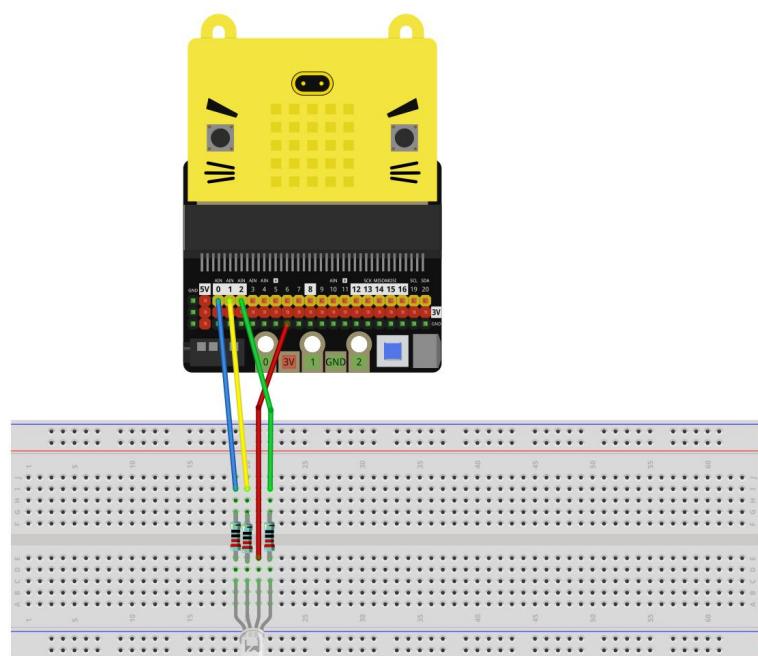

# LROBRUYA


The longest pin of the RGB LED is connected to the power supply 3.3V.

## Block code


Open MakeCode first. Import the .hex file. The path is as below:

File type	Path	File name
HEX file	..../Projects/BlockCode/07.1_RGBLED	RGBLED.hex

After importing successfully, the code is shown as below:

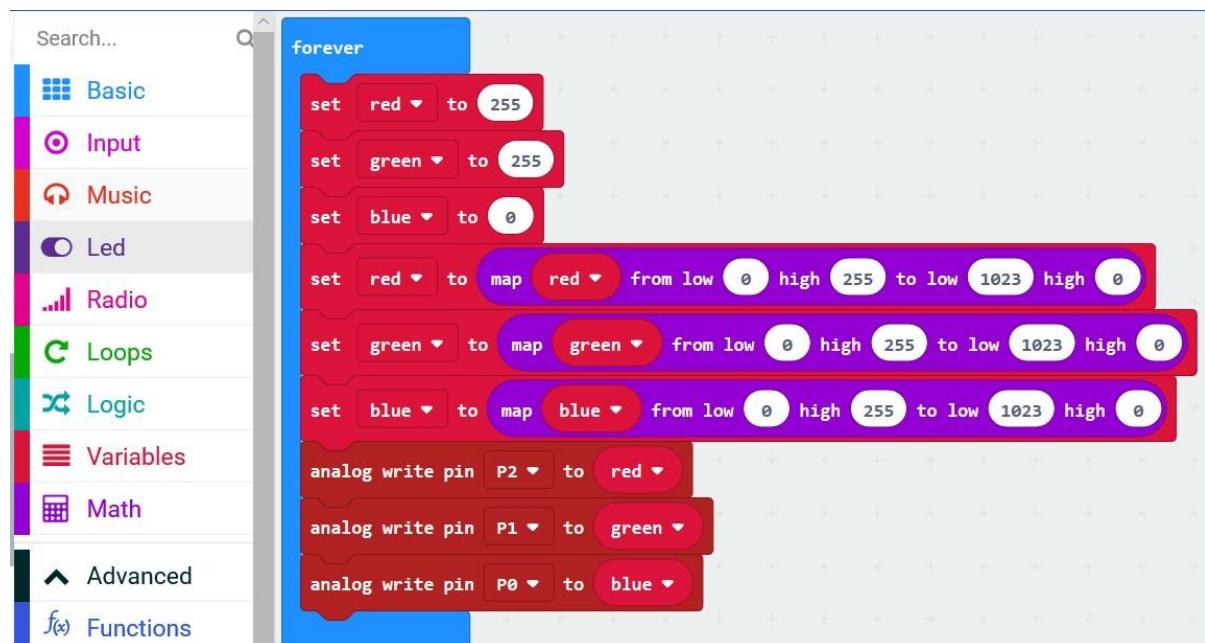


Check the connection of the circuit, confirm that the circuit is connected correctly, download the code into micro:bit, and RGBLED will emit yellow color. RGB value of yellow is (255,255,0).

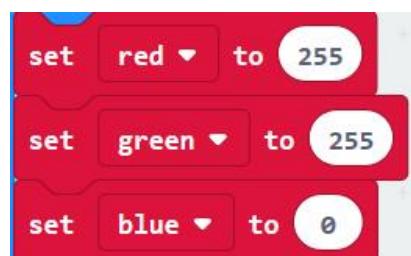

# LROBRUYA

In this kit, three LEDs of RGB LED share a common anode(+) and their negative pins need to be set to LOW level to have the RGB LED work. And the value of variables ‘red’ , ‘green’ , and ‘blue’ need to be converted from the value ranging from 0-255 to analog signal values ranging from 1023-0.

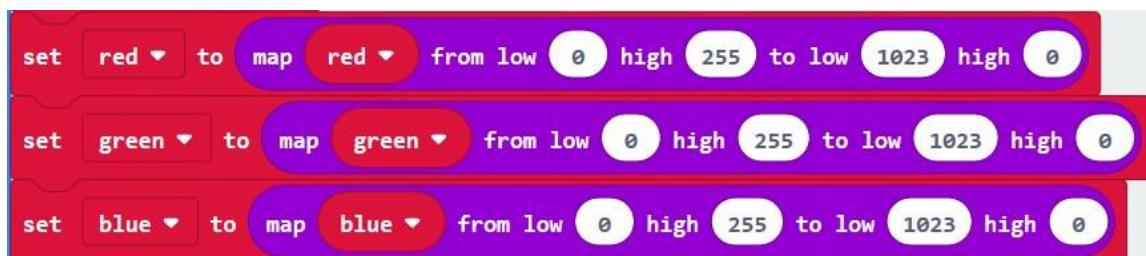

Write the ‘red’ , ‘green’ , ‘blue’ to corresponding pins P2, P1, P0.



## Reference

Block	Function
A Scratch map block with the following parameters: 'map 0 from low 0 high 1023 to low 0 high 4'.	Convert a value in one number range to a value in another number range.


## Python code

Open the .py file with Mu. Code, the path is as below:

File type	Path	File name
Python file	..//Projects/PythonCode/07.1_RGBLED	RGBLED.py

After loading successfully, the code is shown as below:

# LROBRUYA

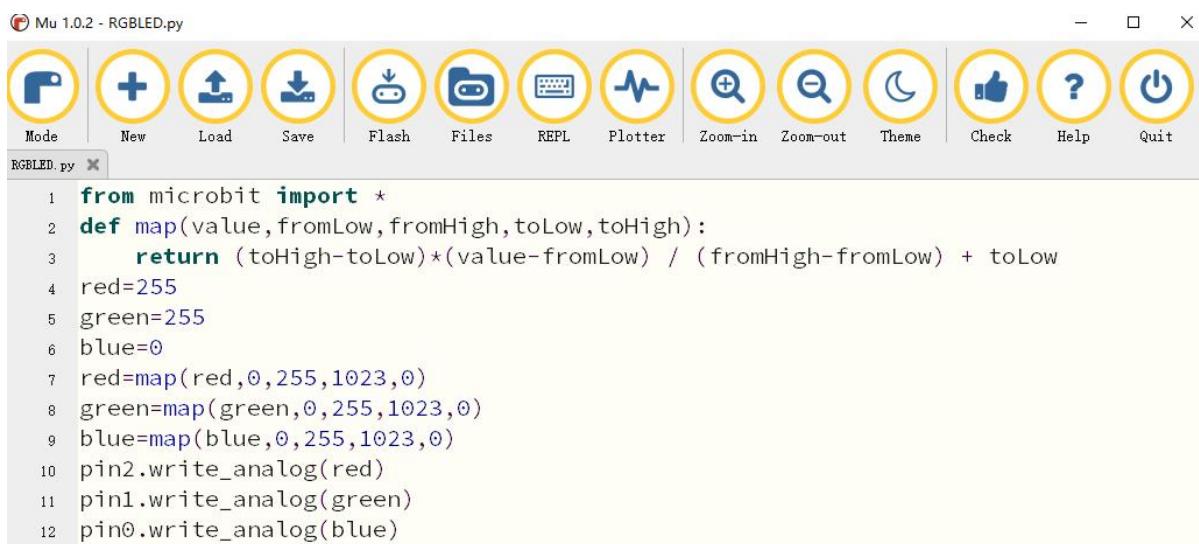

The screenshot shows the Mu 1.0.2 IDE interface with the title bar "Mu 1.0.2 - RGBLED.py". The toolbar contains icons for Mode, New, Load, Save, Flash, Files, REPL, Plotter, Zoom-in, Zoom-out, Theme, Check, Help, and Quit. The code editor displays the following Python code:

```
1 from microbit import *
2 def map(value,fromLow,fromHigh,toLow,toHigh):
3     return (toHigh-toLow)*(value-fromLow) / (fromHigh-fromLow) + toLow
4 red=255
5 green=255
6 blue=0
7 red=map(red,0,255,1023,0)
8 green=map(green,0,255,1023,0)
9 blue=map(blue,0,255,1023,0)
10 pin2.write_analog(red)
11 pin1.write_analog(green)
12 pin0.write_analog(blue)
```

Check the connection of the circuit, confirm that the circuit is connected correctly, download the code into micro:bit, and RGBLED will emit yellow color.

The following is the program code:

```
1 from microbit import *
2 def map(value,fromLow,fromHigh,toLow,toHigh):
3     return (toHigh-toLow)*(value-fromLow) / (fromHigh-fromLow) + toLow
4 red=255
5 green=255
6 blue=0
7 red=map(red,0,255,1023,0)
8 green=map(green,0,255,1023,0)
9 blue=map(blue,0,255,1023,0)
10 pin2.write_analog(red)
11 pin1.write_analog(green)
12 pin0.write_analog(blue)
```

A custom map() function is used to convert a value in one range to another range.

```
def map(value,fromLow,fromHigh,toLow,toHigh):
    return (toHigh-toLow)*(value-fromLow) / (fromHigh-fromLow) + toLow
```

RGB value of yellow is (255,255,0).

# LROBRUYA

```
red=255  
green=255  
blue=0
```

In this kit, three LEDs of RGB LED share a common anode(+) and their negative pins need to be set to LOW level to have the RGB LED work. And the value of variables ‘red’ , ‘green’ , and ‘blue’ need to be converted from the value ranging from 0-255 to analog signal values ranging from 1023-0.

```
red=map(red, 0, 255, 1023, 0)  
green=map(green, 0, 255, 1023, 0)  
blue=map(blue, 0, 255, 1023, 0)
```

Write the ‘red’ , ‘green’ , ‘blue’ to corresponding pins P2, P1, P0.

```
pin2.write_analog(red)  
pin1.write_analog(green)  
pin0.write_analog(blue)
```

## Reference

```
map(value, fromLow, fromHigh, toLow, toHigh)
```

A custom function that converts a value in a range of numbers to a value in another range of numbers. For example, map(8,0,10,0,100) returns a value of 80; map(8,0,10,100,0)=20.  
map(8,0,10,0,100)=80.

## Project 7.2 multicolored Light

In this project, we will use an RGB LED to emit different colors.

### Component list

It is same with the previous project.

### HSL color


# LROBRUYA

---

The HSL color mode is another color standard in the industry. It obtains a variety of colors by changing the three color channels of hue (H), saturation (S), and lightness (L) and superimposing them with each other. This color mode covers almost all colors that human vision can perceive.

It is one of the most widely used color systems to date.

As shown in the hue circle below, the 0 degree of the hue is R (red) color, 120 degrees is G (green) color, and 240 degrees is B (blue) color. Each angle represents a color. The default saturation (S) takes the maximum value 100, the brightness (L) takes 50. If the hue angle is changed, the color will be changed. And the HSL color system can be converted to the RGB color system, to change the color of the LED.

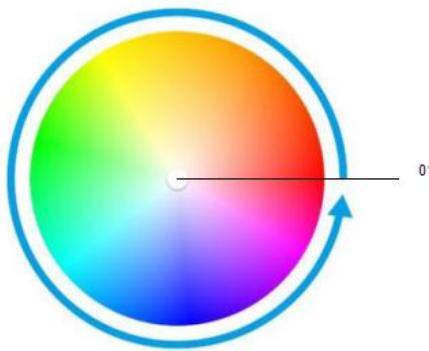

## Circuit

It is same with last project.


## Block code

Open MakeCode first. Import the .hex file. The path is as below:

# LROBRUYA

File type	Path	File name
HEX file	..../Projects/BlockCode/07.2_ColorfulLight	ColorfulLight.hex

After importing successfully, the code is shown as below:

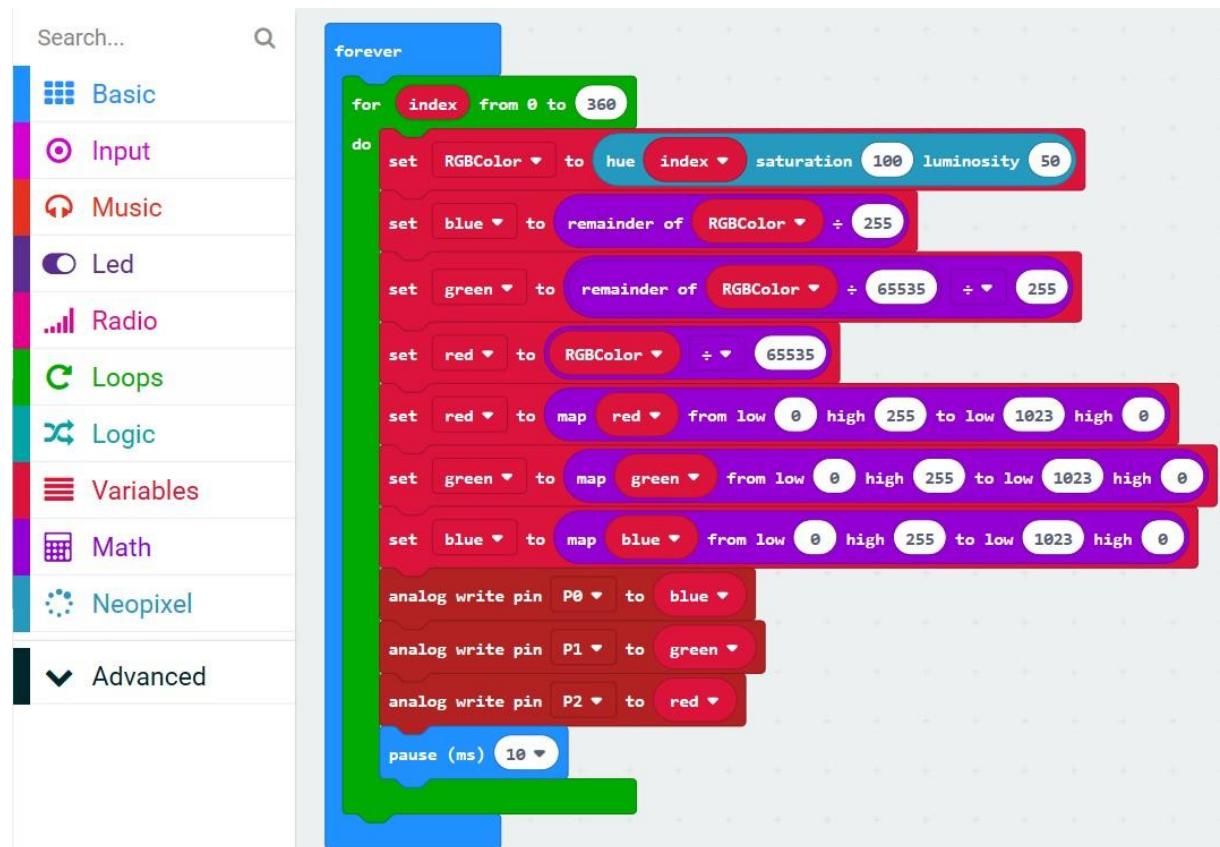

Check the connection of the circuit, confirm that the circuit is connected correctly, download the code into the microbit, and RGBLED will emit different colors.

From the knowledge of HSL color, we can know that different hue angles correspond different colors. The variable index represents hue angle, ranging from 0 to 360.



# LROBRUYA


This block is to convert the HSL color system to the RGB color system, return the RGB value corresponding to the current hue angle, and store the value in the variable RGBColor. For example: hexadecimal RGB value 0xFF0000 means red, FF is the value of the red channel in RGB, and 00 and 00 are the values of the green and blue channels, respectively.



Assign the value of the lower eight-bit to blue channel, the value of the middle eight-bit to green channel, and the value of the upper eight-bit to red channel.




In this kit, three LEDs of RGB LED share a common anode (+) and their negative pins need to be set to LOW level to have the RGB LED work. And the variables ‘red’ , ‘green’ , and ‘blue’ need to be converted from the value ranging from 0-255 to analog signal values ranging from 1023-0.

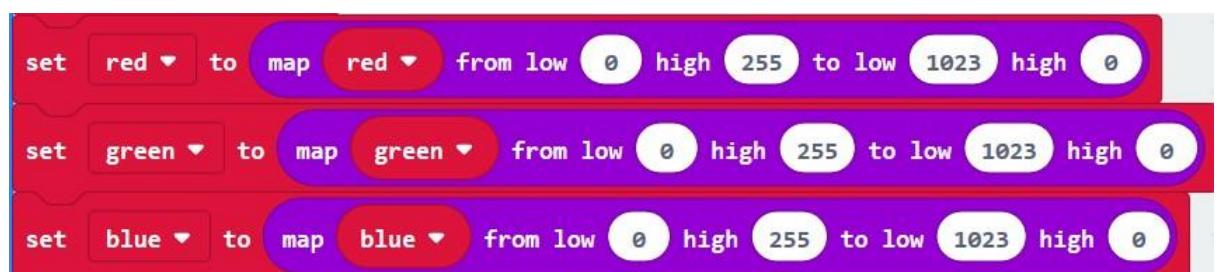

# LROBRUYA

Every 10ms, write the ‘red’ , ‘green’ , ‘blue’ to corresponding pins P2, P1, P0.

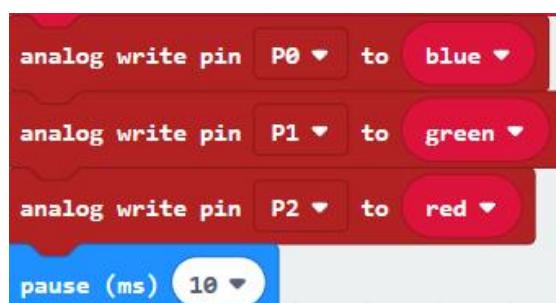

## Reference


Block	Function
	This is an extra operator for division. You can find out how much is left over if one number doesn't divide into the other number evenly.
	Convert HSL color system to RGB color system, and return the RGB value corresponding to the current hue angle. It belongs to Neopixel expansion block.

## Extensions

You can import Neopixel expansion block into new project as below:



# LROBRUYA

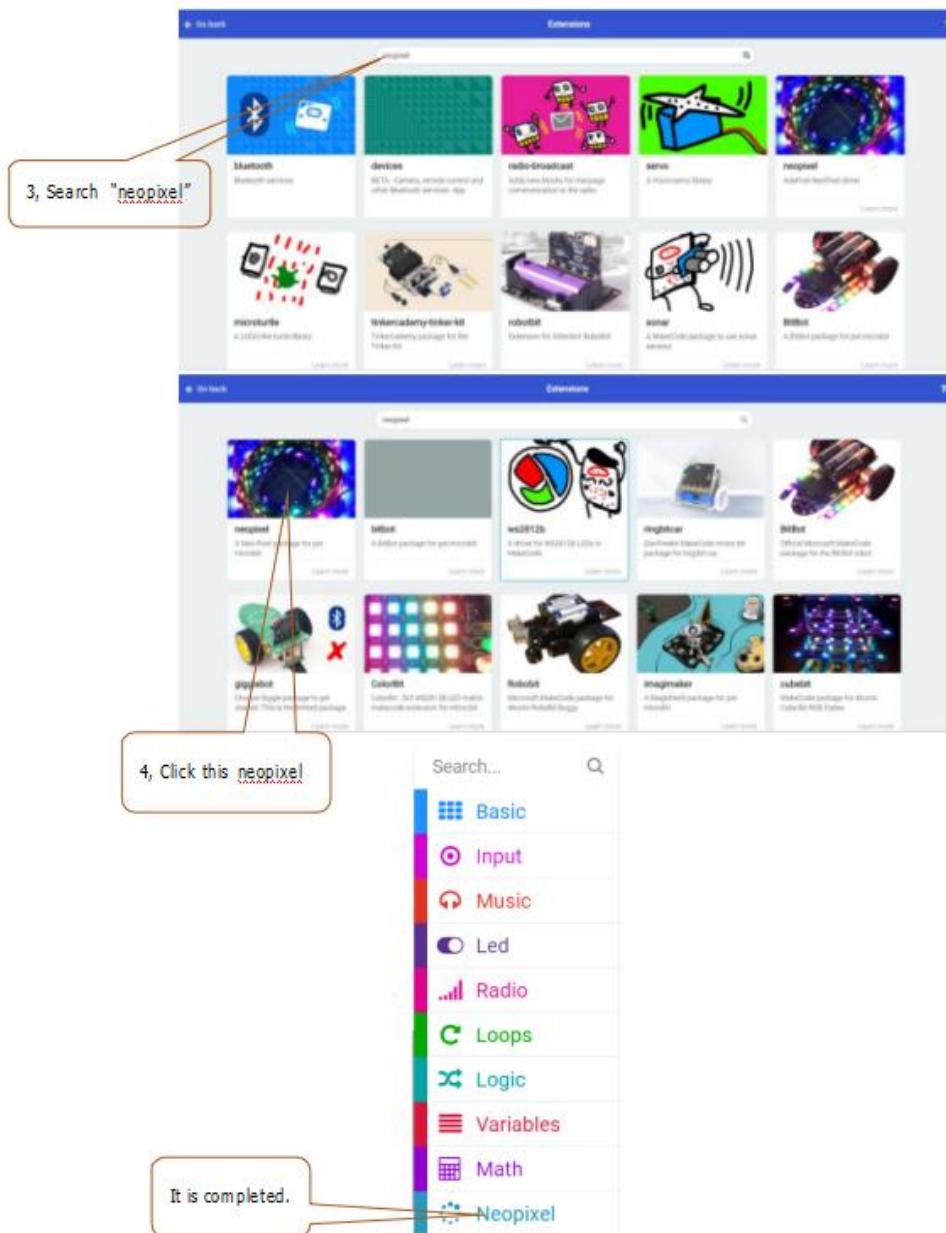

## Python code

Open the .py file with Mu. Code, the path is as below:

File type	Path	File name
Python file	..../Projects/PythonCode/07.2_ColorfulLight	ColorfulLight.py

After loading successfully, the code is shown as below:

# LROBRUYA

Check the connection of the circuit, confirm that the circuit is connected correctly, download the code into the microbit, and RGBLED will emit different colors.

The following is the program code:

# LROBRUYA

```
1  from microbit import *
2  def map(value,fromLow,fromHigh,toLow,toHigh):
3      return (toHigh-toLow)*(value-fromLow) / (fromHigh-fromLow) + toLow
4  def HSL_RGB(degree):
5      degree=degree/360*255
6      if degree < 85:
7          red = 255 - degree * 3
8          green = degree * 3
9          blue = 0
10     elif degree < 170:
11         degree = degree - 85
12         red = 0
13         green = 255 - degree * 3
14         blue = degree * 3
15     else:
16         degree = degree - 170
17         red = degree * 3
18         green = 0
19         blue = 255 - degree * 3
20     return red,green,blue
21 while True:
22     for i in range(360):
23         red,green,blue=HSL_RGB(i)
24         red=map(red,0,255,1023,0)
25         green=map(green,0,255,1023,0)
26         blue=map(blue,0,255,1023,0)
27         pin2.write_analog(red)
28         pin1.write_analog(green)
29         pin0.write_analog(blue)
30         sleep(10)
```

The `map()` function is used to convert a value in one range to another range.

```
def map(value,fromLow,fromHigh,toLow,toHigh):
    return (toHigh-toLow)*(value-fromLow) / (fromHigh-fromLow) + toLow
```

The `HSL_RGB()` function is used to convert the HSL color system to RGB color, and return the RGB value corresponding to the current hue angle.

# LROBRUYA

```
def HSL_RGB (degree):  
    degree=degree/360*255  
    if degree < 85:  
        red = 255 - degree * 3  
        green = degree * 3  
        blue = 0  
    elif degree < 170:  
        degree = degree - 85  
        red = 0  
        green = 255 - degree * 3  
        blue = degree * 3  
    else:  
        degree = degree - 170  
        red = degree * 3  
        green = 0  
        blue = 255 - degree * 3  
    return red,green,blue
```

Repeat 360 times, display the hue angle color corresponding to 0 to 360 degrees, and replace it every 10ms.

```
while True:  
    for i in range(360):  
        red,green,blue=HSL_RGB(i)  
        red=map (red, 0,255,1023,0)  
        green=map (green, 0,255,1023,0)  
        blue=map (blue, 0,255,1023,0)  
        pin2.write_analog(red)  
        pin1.write_analog(green)  
        pin0.write_analog(blue)  
        sleep(10)
```

## Reference

### HSL\_RGB(degree)

Custom function, used to convert HSL color system to RGB color system, return the RGB value corresponding to the current hue angle, for example: HSL\_RGB(0), return red RGB value: red=255, green=0, blue=0.

## Lesson 8 Buzzer

In this chapter, we will learn about buzzers and the sounds they make.

There are two kinds of buzzer: active buzzer and passive buzzer.

### Component knowledge


#### Transistor

A transistor is required in this project due to the buzzer's current being so great that GPIO of RPi's output capability cannot meet the power requirement necessary for operation. A NPN transistor is needed here to amplify the current.


Transistors, full name: semiconductor transistor, is a semiconductor device that controls current (think of a transistor as an electronic "amplifying or switching device"). Transistors can be used to amplify weak signals, or to work as a switch. Transistors have three electrodes (PINs): base (b), collector (c) and emitter (e). When there is current passing between "be" then "ce" will have a several-fold current increase (transistor magnification), in this configuration the transistor acts as an amplifier. When current produced by "be" exceeds a certain value, "ce" will limit the current output. at this point the transistor is working in its saturation region and acts like a switch. Transistors are available as two types as shown below: PNP and NPN.

# LROBRUYA

PNP transistor

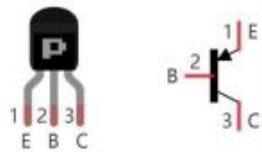

NPN transistor

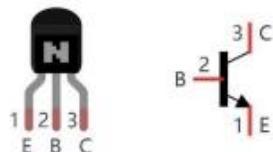

In our kit, the PNP transistor is marked with 8550, and the NPN transistor is marked with 8050.

Thanks to the transistor's characteristics, they are often used as switches in digital circuits. As micro-controllers output current capacity is very weak, we will use a transistor to amplify its current in order to drive components requiring higher current.

## Buzzer

A buzzer is an audio component. They are widely used in electronic devices such as calculators, electronic alarm clocks, automobile fault indicators, etc. There are both active and passive types of buzzers. Active buzzers have oscillator inside, these will sound as long as power is supplied. Passive buzzers require an external oscillator signal (generally using PWM with different frequencies) to make a sound.

Active buzzer



Passive buzzer




(A white label is attached on the active buzzer)


Active buzzers are easier to use. Generally, they only make a specific sound frequency. Passive buzzers require an external circuit to make sounds, but passive buzzers can be controlled to make sounds of various frequencies. The resonant frequency of the passive buzzer in this Kit is 2kHz, which means the passive buzzer is the loudest when its resonant frequency is 2kHz.

Buzzer requires large current when it works. But generally, microcontroller port cannot provide enough current for that. In order to control buzzer through micro:bit, a transistor can be used to drive a buzzer indirectly.

When we use a NPN transistor to drive a buzzer, we often use the following method. If GPIO outputs high level, current will flow through R1 (Resistor 1), the transistor conducts current and the buzzer will make sounds. If GPIO outputs low level, no current will flow through R1, the transistor will not conduct current and buzzer will remain silent (no sounds).

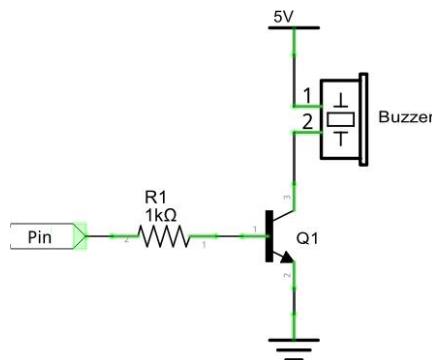

When we use a PNP transistor to drive a buzzer, we often use the following method. If GPIO outputs low level, current will flow through R1. The transistor conducts current and the buzzer will make sounds. If GPIO outputs high level, no current flows through R1, the transistor will not conduct current and buzzer will remain silent (no sounds). Below are the circuit schematics for both a NPN and PNP transistor to power a buzzer.

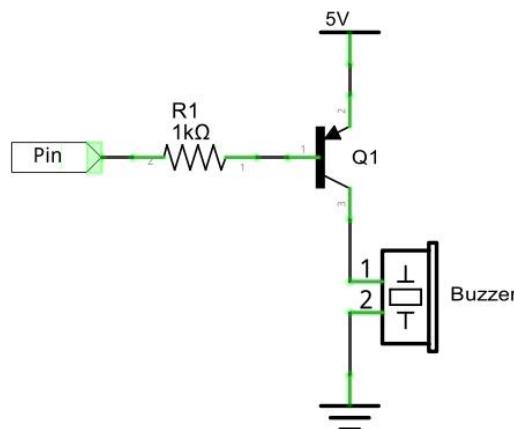

## How to identify active and passive buzzer?

1. As a rule, there is a label on an active buzzer covering the hole where sound is emitted, but there are exceptions to this rule.
2. Active buzzers are more complex than passive buzzers in their manufacture. There are many circuits and crystal oscillator elements inside active buzzers; all of this is usually protected with a waterproof coating (and a housing) exposing only its pins from the underside. On the other hand, passive buzzers do not have protective coatings on their underside. From the pin holes, view of a passive buzzer, you can see the

circuit board, coils, and a permanent magnet (all or any combination of these components depending on the model).



Active buzzer bottom





Passive buzzer bottom

## Project 8.1 Active Buzzer


In this project, we will use an active buzzer to play a fixed melody.

### Component list
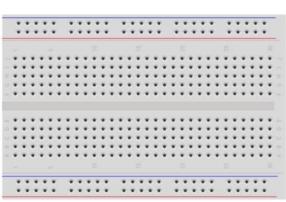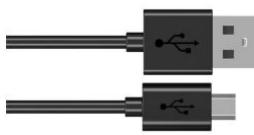
<b>Micro:bit x1</b> 	<b>Expansion board x1</b> 
<b>Breakboard x1</b> 	<b>USB cable x1</b> 
<b>F/M x 3    M/M x1</b>  <b>Resistor 1kΩ x1</b> 	<b>NPN(8050) transistor x1</b>  <b>Active buzzer x1</b> 

# LROBRYA

## Circuit

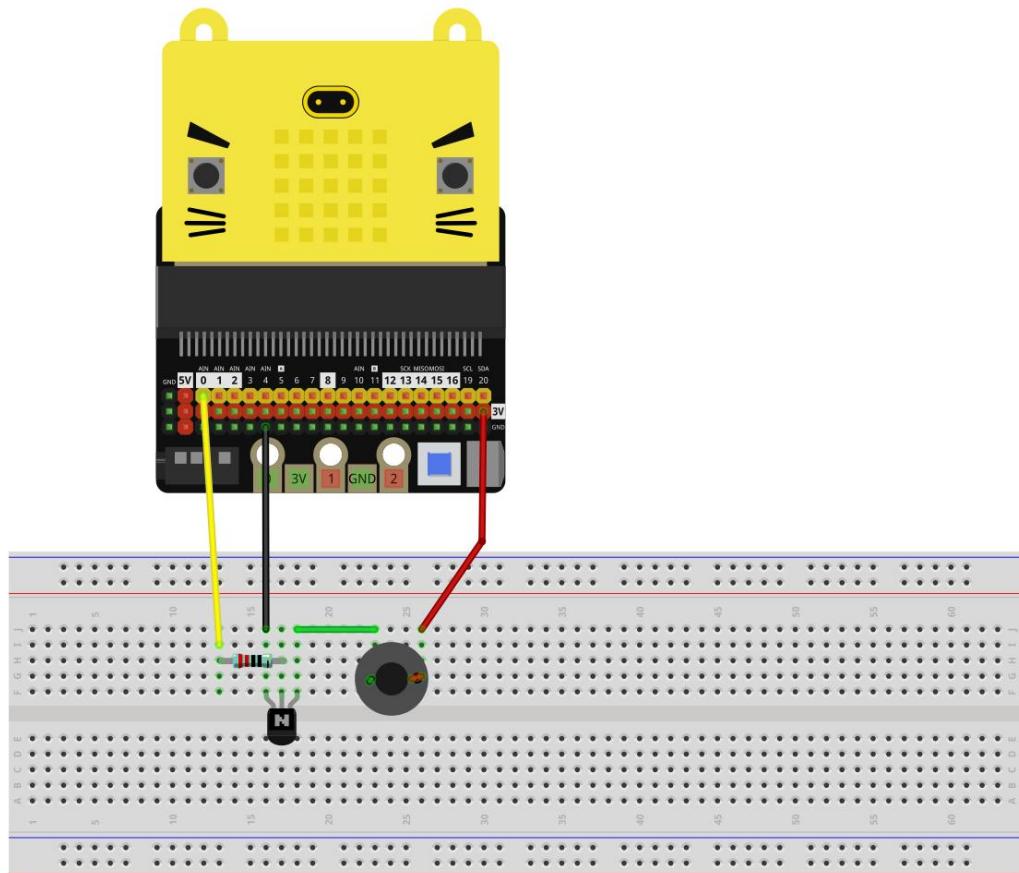


## Block code

Open MakeCode first. Import the .hex file. The path is as below:

File type	Path	File name
HEX file	..../Projects/BlockCode/08.1_ActiveBuzzer	ActiveBuzzer.hex

After importing successfully, the code is shown as below:

# LROBRUYA

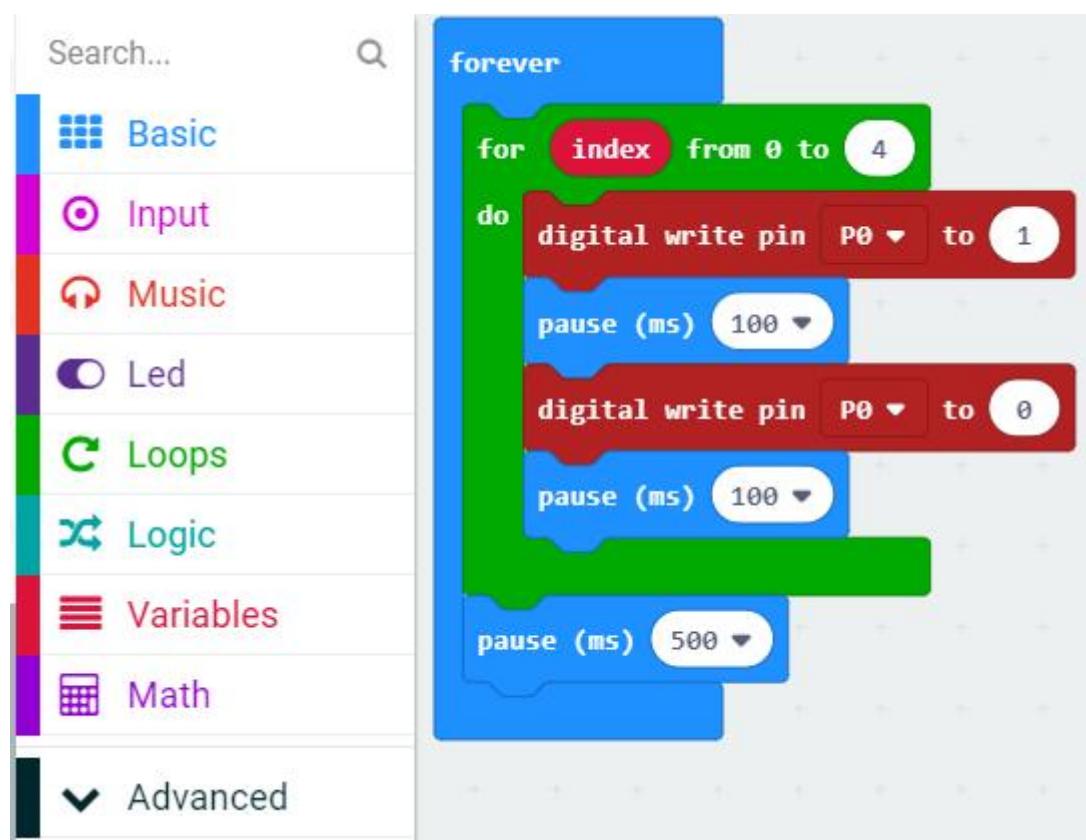

Check the connection of the circuit, download the code into the micro:bit, and the buzzer on the breadboard will make sounds.

In the for loop, P0 outputs a high level to make the buzzer sounds, then delay 100ms. And then P0 outputs a low level to stop the buzzer.

Then delay 100ms. After the loop ends, delay 500ms.



# LROBRUYA

## Python code

Open the .py file with Mu. Code, the path is as below:

File type	Path	File name
Python file	..../Projects/PythonCode/08.1_ActiveBuzzer	ActiveBuzzer.py

After load successfully, the code is shown as below:



The screenshot shows the Mu 1.0.2 interface with the file `Active_Buzzer.py` open. The code is as follows:

```
1 from microbit import *
2 while True:
3     for i in range(4):
4         pin0.write_digital(1)
5         sleep(100)
6         pin0.write_digital(0)
7         sleep(100)
8     sleep(500)
```

Check the connection of the circuit, download the code into the micro:bit, and the buzzer on the breadboard will sound.

The following is the program code:

```
1 from microbit import *
2 while True:
3     for i in range(4):
4         pin0.write_digital(1)
5         sleep(100)
6         pin0.write_digital(0)
7         sleep(100)
8     sleep(500)
```

In the for loop, P0 outputs a high level to make the buzzer sound, then delay 100ms. And then P0 outputs a low level to stop the buzzer. Then delay 100ms. After the loop ends, delay 500ms.

```
while True:
    for i in range(4):
        pin0.write_digital(1)
```


# LROBRUYA

```
sleep(100)  
pin0.write_digital(0)  
sleep(100)  
sleep(500)
```

## Project 8.2 Happy Birthday melody

In this project, we will make the built-in buzzer of the board to play a happy birthday melody.

### Component list

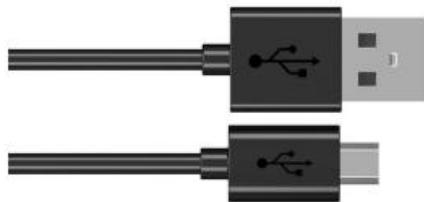Micro:bit x1	Micro USB cable x1
 A photograph of a BBC micro:bit V2.0 development board. It is a small, rectangular printed circuit board with a central micro:bit chip, a 5x5 LED matrix, and various connectors and components. The board is black with gold-colored pins on the bottom edge.	 A photograph of a standard black Micro USB cable. It has a black plastic connector on the left and a grey plastic connector on the right, with a small metal clip on the grey connector.

### Circuit




### Block code

Open MakeCode first. Import the .hex file. The path is as below:

# LROBRUYA

File type	Path	File name
HEX file	../Projects/BlockCode/08.2_Play-a-melody	Play-a-melody.hex

After importing successfully, the code is shown as below:

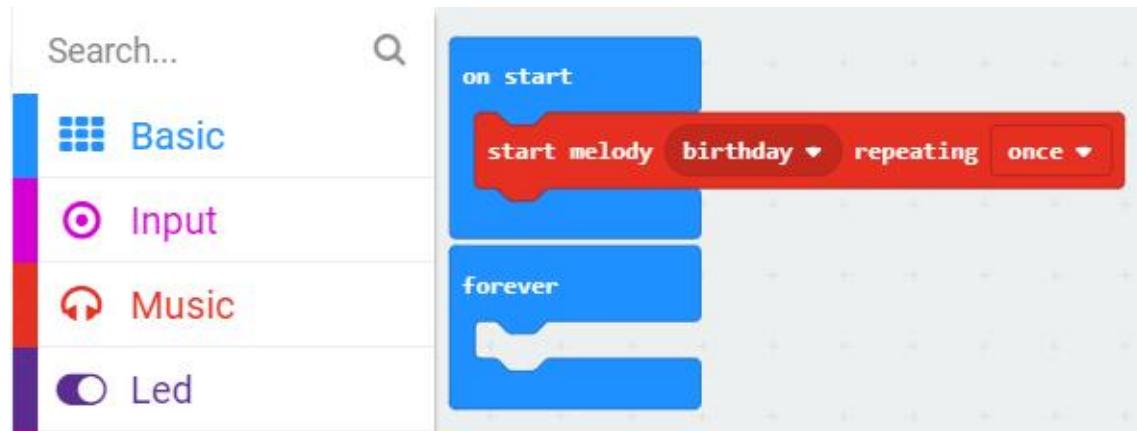

Check the connection of the circuit, confirm that the circuit is connected correctly, download the code into the micro:bit, and the buzzer on the breadboard will play a song “happy birthday” .

You can click on the small triangle next to "birthday" to expand the list, select other melody, and select the number of times to play by clicking on the small triangle next to "once".

## Reference

Block	Function
	Begin playing a musical melody through pin P0 of the micro:bit. There are built-in melodies that you can choose from the start melody block. These are already composed for you and are easy to use by just selecting the one you want.


## Python code

Open the .py file with Mu. Code, the path is as below:

# LROBRUYA

File type	Path	File name
Python file	..../Projects/PythonCode/08.2_Play-a-melody	Play-a-melody.py

After loading successfully, the code is shown as below:

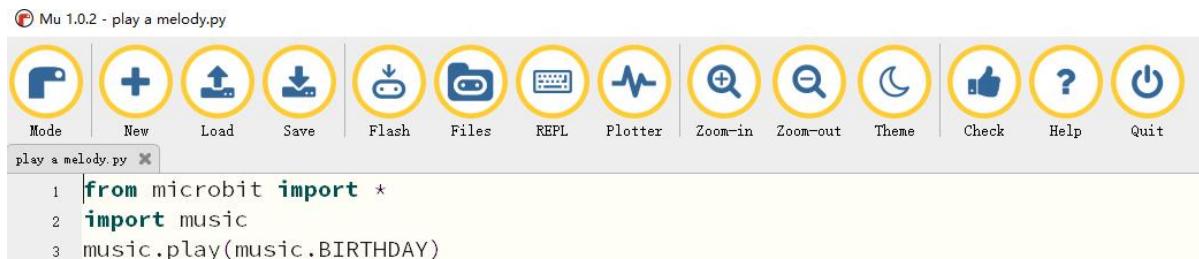

The screenshot shows the Mu 1.0.2 IDE interface. The title bar says "Mu 1.0.2 - play a melody.py". The toolbar icons include: Mode, New, Load, Save, Flash, Files, REPL, Plotter, Zoom-in, Zoom-out, Theme, Check, Help, and Quit. The code editor contains the following Python code:

```
1 from microbit import *
2 import music
3 music.play(music.BIRTHDAY)
```

Check the connection of the circuit, confirm that the circuit is connected correctly, and download the code into the micro:bit, and the buzzer on the breadboard will play a song “happy birthday” . (How to download?)

The following is the program code:

```
1 from microbit import *
2 import music
3 music.play(music.BIRTHDAY)
```

## Reference

### music.play()

It is used to play music. MicroPython has quite a lot of built-in melodies. For more information, please refer to:

<https://microbit-micropython.readthedocs.io/en/latest/tutorials/music.html>

## Project 8.3 Custom melody

In this project, we will make the built-in buzzer of the extension board to play a custom melody.

## Component list

# LROBRUYA

---

**Micro:bit x1**




**Expansion board x1**



**USB cable x1**



**Circuit**

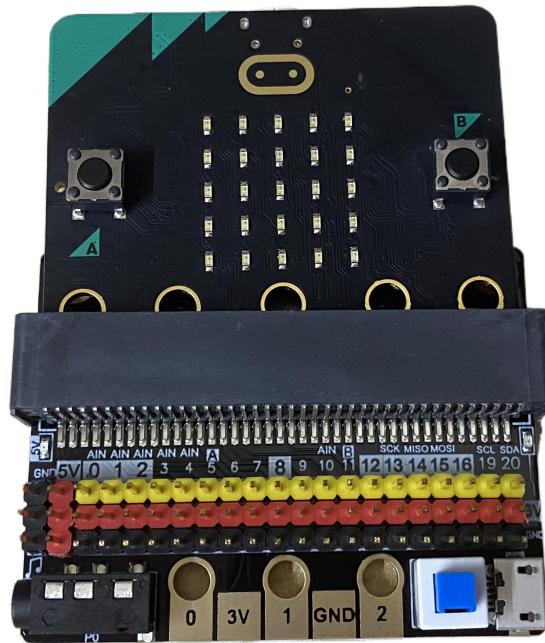


# LROBRUYA

## Block code

Open MakeCode first. Import the .hex file. The path is as below:

File type	Path	File name
HEX file	../Projects/BlockCode/08.3_Play-a-custom-melody	Play-a-custom-melody.hex

After importing successfully, the code is shown as below:

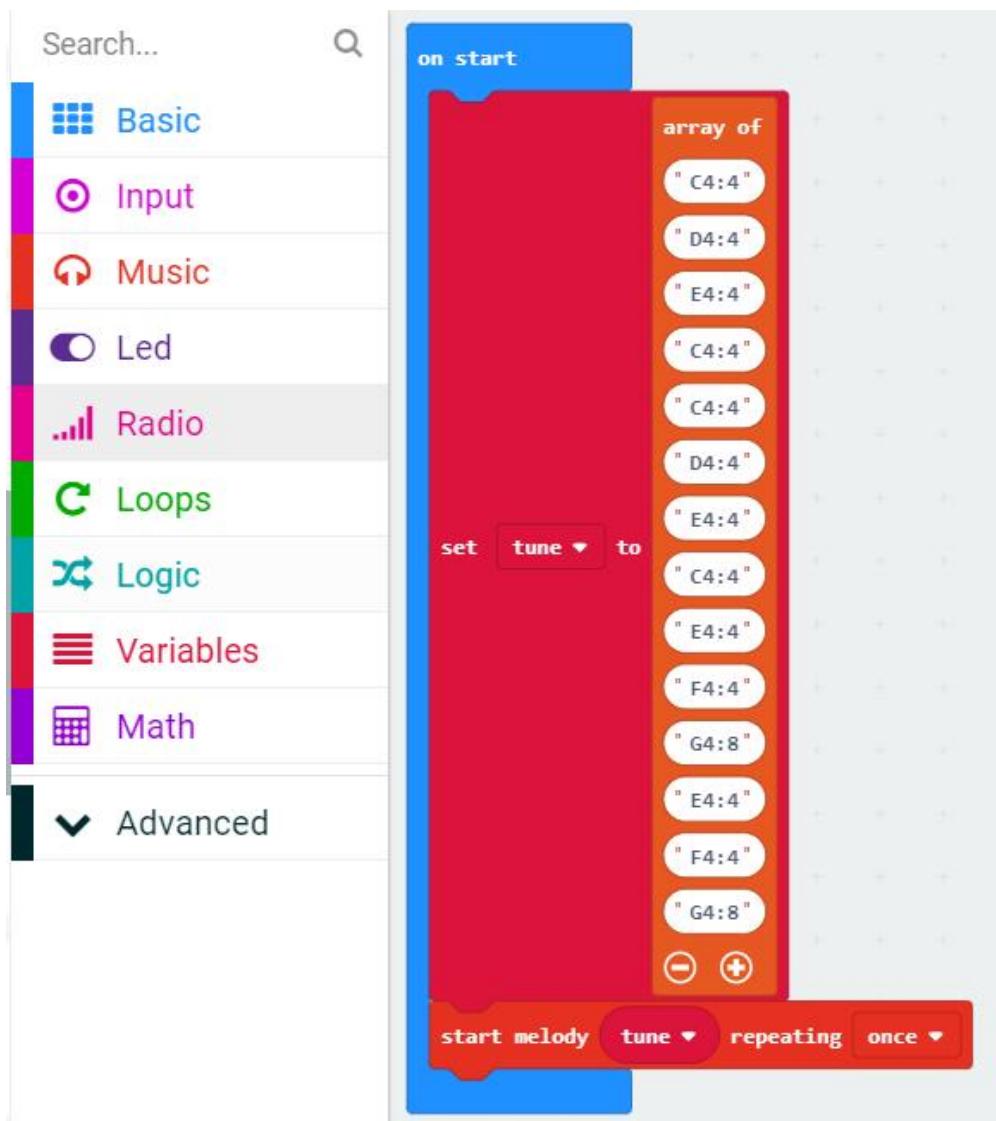

Check the connection of the circuit, confirm that the circuit is connected correctly, download the code into the micro:bit, and the buzzer on the breadboard will play a custom melody.

# LROBRUYA

The tune array holds a custom melody, and each element in the array contains notes and beats. For example, "A1:4" refers to the note named A in octave number 1 to be played for a duration of 4.

## Python code

Open the .py file with Mu. Code, the path is as below:

File type	Path	File name
Python file	../Projects/PythonCode/08.3_Play-a-custom-melody	Play-a-custom-melody.py

After loading successfully, the code is shown as below:



The screenshot shows the Mu 1.0.2 IDE interface. The title bar says "Mu 1.0.2 - play\_a\_custom\_melody.py". The toolbar icons include Mode, New, Load, Save, Flash, Files, REPL, Plotter, Zoom-in, Zoom-out, Theme, Check, Help, and Quit. The code editor window displays the following Python code:

```
1 from microbit import *
2 import music
3 tune = ["C4:4", "D4:4", "E4:4", "C4:4", "C4:4", "D4:4", "E4:4", "C4:4",
4         "E4:4", "F4:4", "G4:8", "E4:4", "F4:4", "G4:8"]
5 music.play(tune)
```

Check the connection of the circuit, confirm that the circuit is connected correctly, download the code into the micro:bit, and the buzzer on the breadboard will play a custom song.

The tune array holds a custom melody, and each element in the array contains notes and beats. For example, "A1:4" refers to the note named A in octave number 1 to be played for a duration of 4.

The following is the program code:

1	from microbit import *
2	import music
3	tune = ["C4:4", "D4:4", "E4:4", "C4:4", "C4:4", "D4:4", "E4:4", "C4:4",
4	"E4:4", "F4:4", "G4:8", "E4:4", "F4:4", "G4:8"]
5	music.play(tune)


## Lesson 9 Serial Communication

In this chapter, we will learn how to use serial port.

### Project 9.1 Display the Data

This project uses serial ports to transmit data and display data.

#### Component list

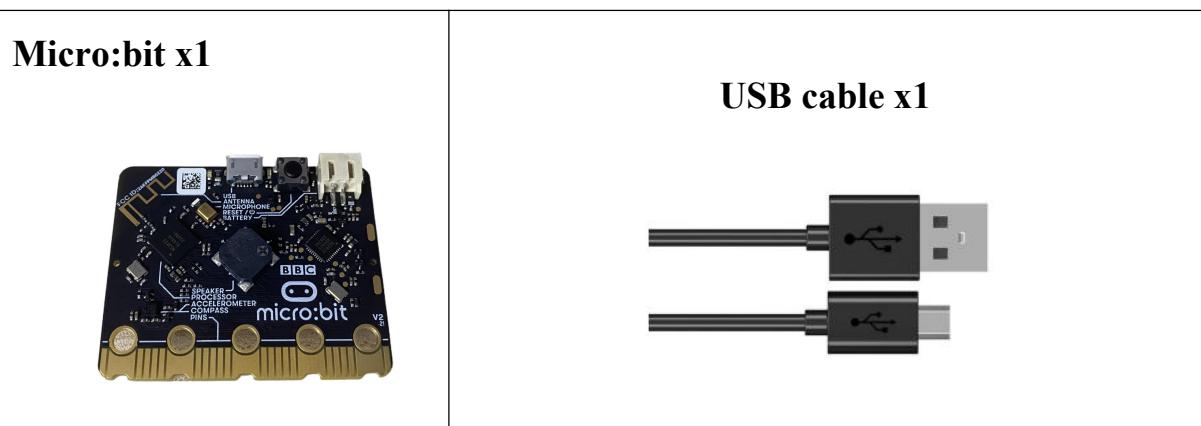

#### Circuit

Connect micro:bit and PC via a micro USB cable.



#### Block code

Open MakeCode first. Import the .hex file. The path is as below:

File type	Path	File name
HEX file	../Projects/BlockCode/09.1_SerialPort	SerialPort.hex

After importing successfully, the code is shown as below:


# LROBRUYA



Search... Q

- Basic
- Input
- Music
- Led
- Radio

Check the connection of the circuit and verify it correct download the code into the micro:bit, and then open the serial controller, as shown below:

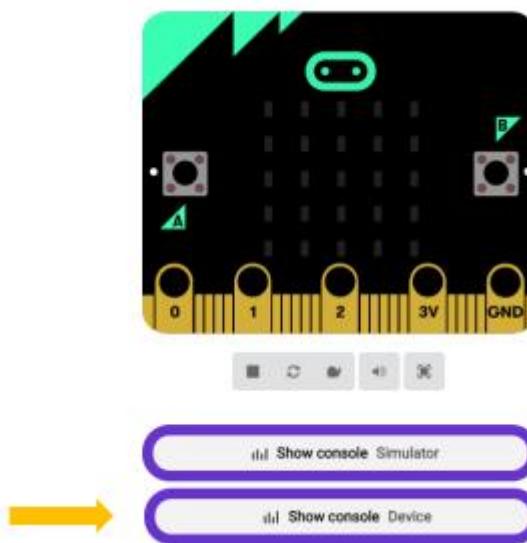


On the serial console, you can see the data sent by the microbit.




# LROBRUYA

```
Counter:161
Counter:162
Counter:163
Counter:164
Counter:165
Counter:166
Counter:167
Counter:168
```

Every 1 second, the value of the variable number is incremented by 1, and the new value will be sent to the serial port.

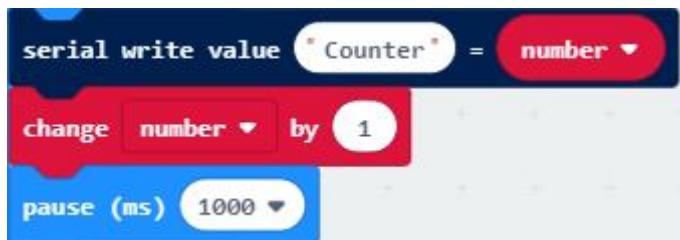

## Reference

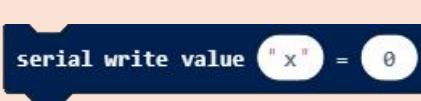
Block	Function
	Write a name:value pair and a newline character (\r\n) to the serial port.
	The change blocks increase the value in the variable by the amount you want. This is also known as an addition assignment operation.

## Python code

Open the .py file with Mu. Code, the path is as below:

File type	Path	File name
Python file	../Projects/PythonCode/09.1_SerialPort	SerialPort.py

After loading successfully, the code is shown as below:

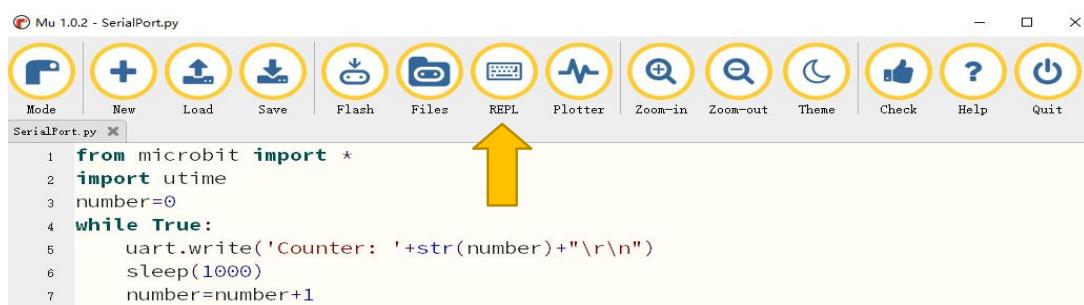


```
from microbit import *
import utime
number=0
while True:
    uart.write('Counter: '+str(number)+"\r\n")
    sleep(1000)
    number=number+1
```

# LROBRUYA

Check the connection of the circuit and verify it correct and then download the code into the micro:bit. After the program is downloaded, click on REPL as shown below.

Then press the reset button (the button on the back) of the Micro:bit and we will see the change of value.

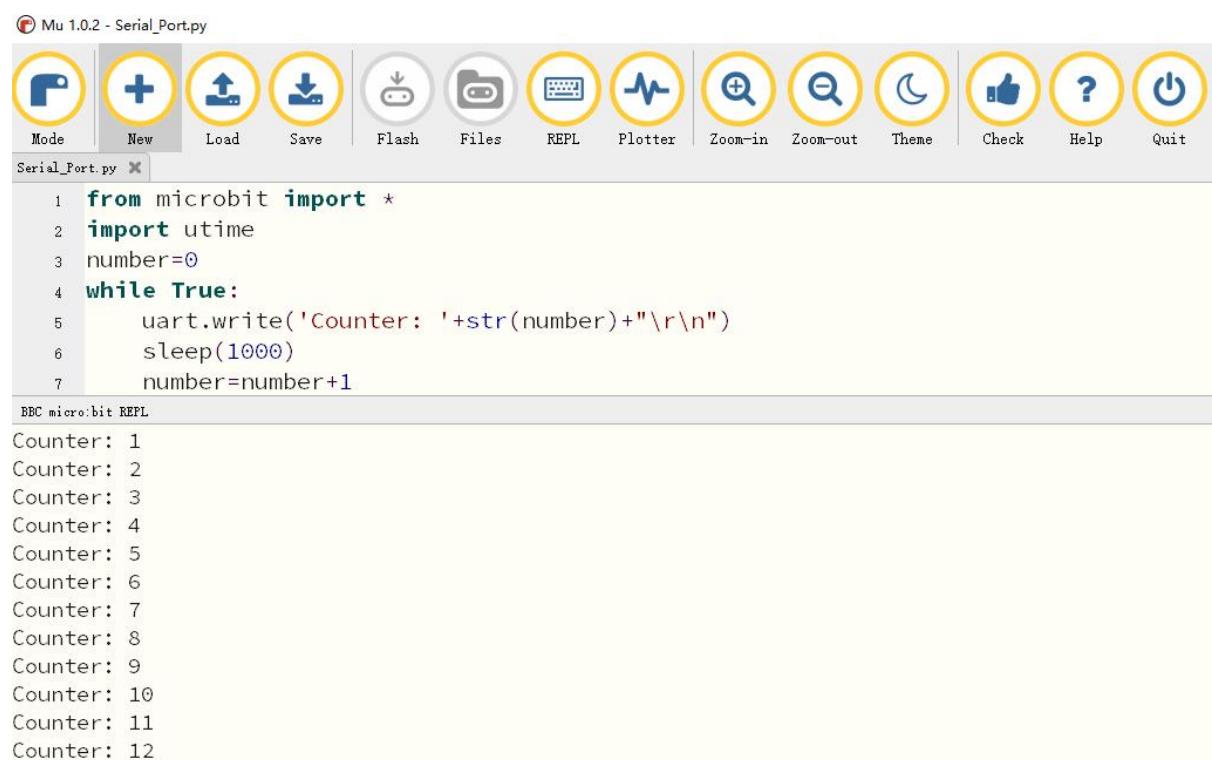

The screenshot shows the Mu 1.0.2 IDE interface. The top menu bar has a red 'P' icon and the text 'Mu 1.0.2 - Serial\_Port.py'. Below the menu is a toolbar with icons for Mode (camera), New, Load, Save, Flash, Files, REPL (highlighted in yellow), Plotter, Zoom-in, Zoom-out, Theme, Check, Help, and Quit. The main window has a tab for 'Serial\_Port.py' with a 'X' button. The code area contains the following Python script:

```
1 from microbit import *
2 import utime
3 number=0
4 while True:
5     uart.write('Counter: '+str(number)+"\r\n")
6     sleep(1000)
7     number=number+1
```

Below the code is a 'BBC micro:bit REPL' section showing the output of the program:

```
BBC micro:bit REPL
Counter: 1
Counter: 2
Counter: 3
Counter: 4
Counter: 5
Counter: 6
Counter: 7
Counter: 8
Counter: 9
Counter: 10
Counter: 11
Counter: 12
```

The following is the program code:

1	from microbit import *
2	import utime
3	number=0
4	while True:
5	uart.write('Counter: '+str(number)+"\r\n")
6	sleep(1000)
7	number=number+1

Every 1 second, the value of the variable number is incremented by 1, and the new value will be sent to the serial port, where "\r\n" is the meaning of the newline.

```
uart.write('Counter: ' +str(number)+ "\r\n")
sleep(1000)
number=number+1
```

## Reference

uart.write(x)

Write the buffer to the bus, it can be a bytes object or a string:  
uart.write('hello world')

uart.write(b'hello world')

uart.write(bytes([1, 2, 3]))

For more information, please refer to:

<https://microbit-micropython.readthedocs.io/en/latest/uart.html>

## Lesson 10 Magnetometer

In this chapter, we will learn the micro:bit built-in magnetometer chip.

### Project 10.1 Display magnetometer Data


This project will print the data obtained from the magnetometer chip on the serial console.

#### Component list

**Micro:bit x1**



**USB cable x1**

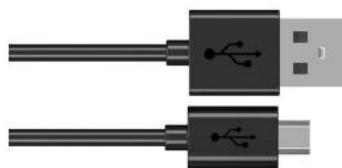

# LROBRUYA

---

## Circuit

Connect micro:bit and PC via a micro USB cable.



## Block code

Open MakeCode first. Import the .hex file. The path is as below:

File type	Path	File name
HEX file	../Projects/BlockCode/10.1_DisplayMagnetometerData	DisplayMagnetometerData.hex


After importing successfully, the code is shown as below:




Check the connection of the circuit and verify it correct, and then download the code into the micro:bit. After completing downloading, the magnetometer needs to be calibrated (calibration must be performed using the magnetometer program). Calibrating the magnetometer will cause the program to pause until the calibration is completed. Start the calibration process, a prompt will scroll on the LED matrix, which

# LROBRUYA

indicates that you need to rotate the micro:bit until all LEDs on the LED screen are illuminated, and then a smile is displayed which means the calibration is completed, as shown below:

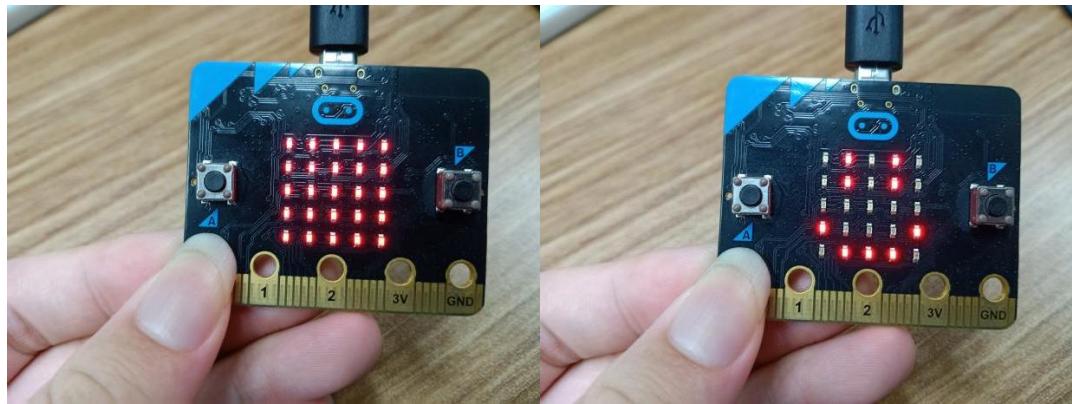


Then open the serial console (Open the Serial Port), place the micro:bit horizontally on the desktop, and rotate the micro:bit (clockwise or counterclockwise) to see the angular offset read from the magnetometer chip. As shown below:

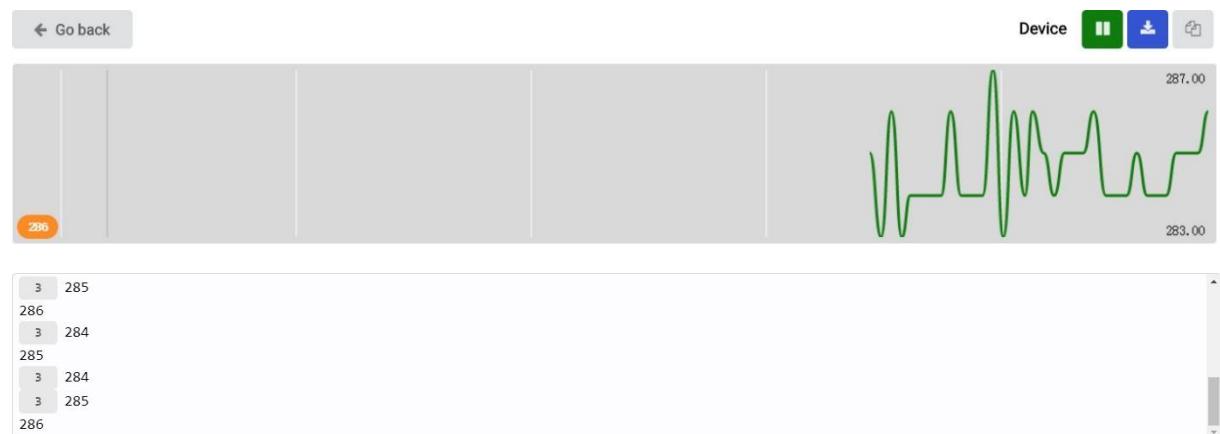

3 indicates the number of times of consecutive readings of the same value.

The angular offset is the angle between the directions of the micro:bit and the geographic North Pole, as shown in the following figure.


# LROBRUYA

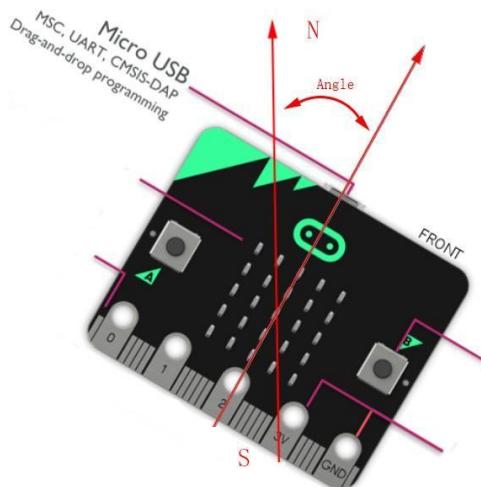

The angular offset read from the magnetometer chip is stored in the variable azimuth.



Then the value of the variable azimuth is printed on the serial port interface.

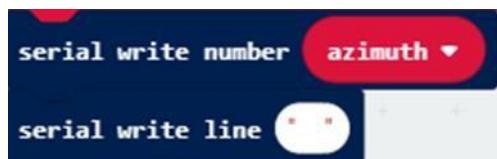

## Reference

Block	Function
<b>serial write line</b>	Write a string to the serial port and start a new line of text by writing \r\n.
<b>serial write number</b>	Write a number to the serial port.
<b>compass heading (°)</b>	The micro:bit measures the compass heading from 0 to 359 degrees with its magnetometer chip. Different numbers mean north, east, south, and west.

# LROBRUYA

## Python code

Open the .py file with Mu. Code, the path is as below:


File type	Path	File name
Python file	..../Projects/PythonCode/10.1_DisplayMagnetometerData	DisplayMagnetometerData.py

After loading successfully, the code is shown as below:



```
1 from microbit import *
2 compass.calibrate()
3 while True:
4     azimuth = compass.heading()
5     uart.write(str(azimuth)+"\r\n")
6     sleep(1000)
```

After checking the connection of the circuit and verify it correct, download the code into micro:bit. After downloading the program, click REPL, as shown below.

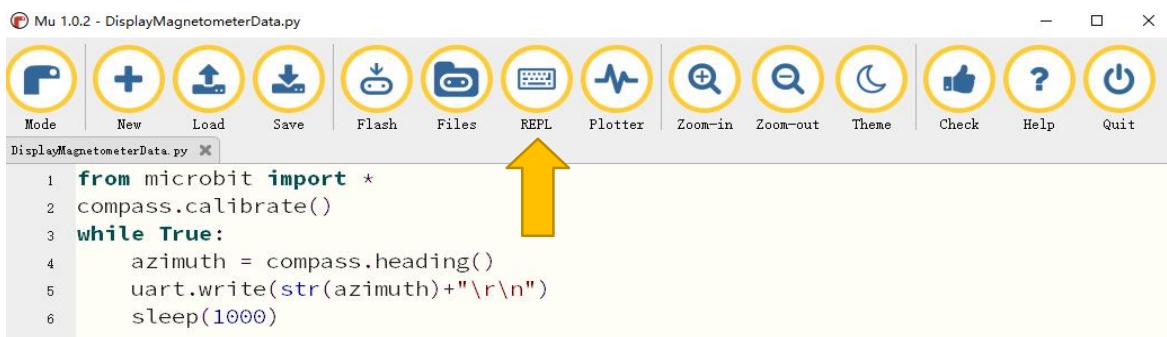


Then press the reset button of the Micro:bit, you need to calibrate the magnetometer (the calibration must be performed when downloading using the magnetometer program).

Calibrating the magnetometer will cause the program to pause until the calibration is complete. Start the calibration process, a prompt will scroll

# LROBRUYA


---

on the LED matrix, which indicates that you need to rotate the micro:bit until all LEDs on the LED screen are illuminated, and then a smile is displayed which means the calibration is completed, as shown below:

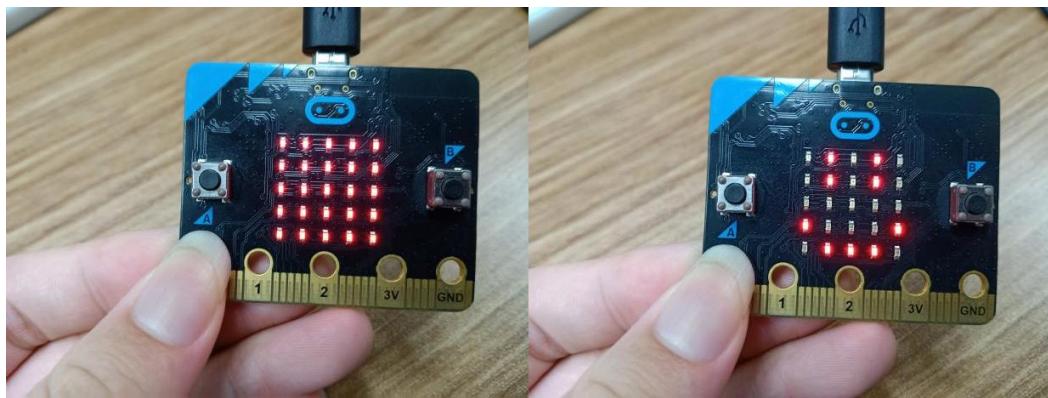

Place the micro:bit horizontally on the desktop, and rotate the micro:bit (clockwise or counterclockwise) to see the angular offset read from the magnetometer chip. As shown below:

Mu 1.0.2 - compass.py

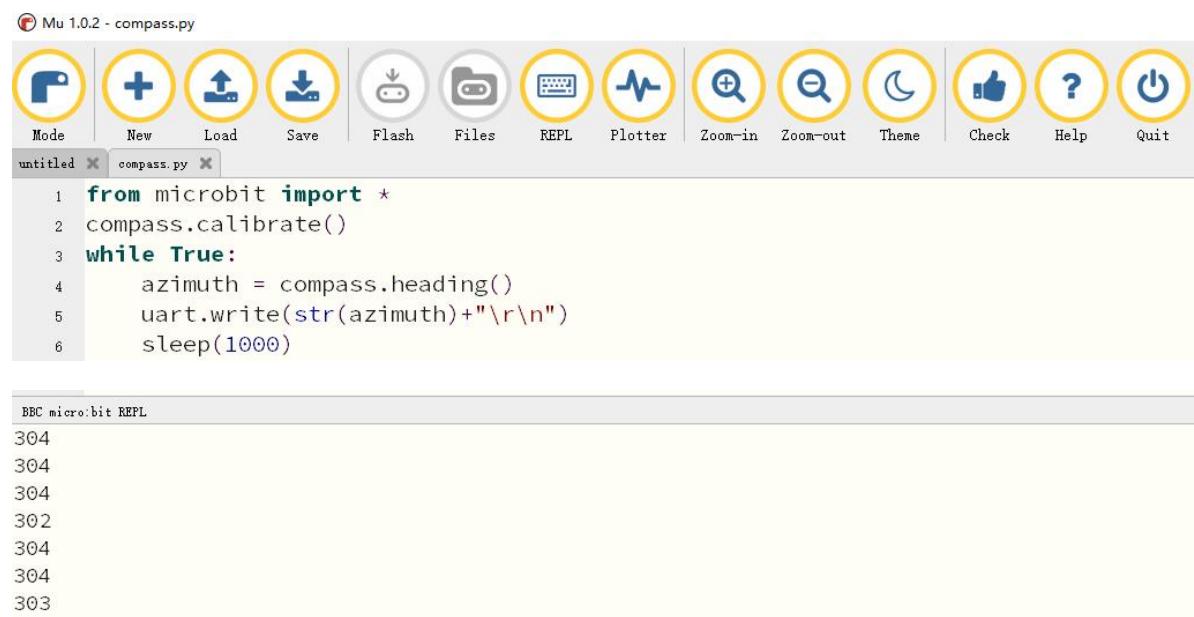


```
from microbit import *
compass.calibrate()
while True:
    azimuth = compass.heading()
    uart.write(str(azimuth)+"\r\n")
    sleep(1000)
```

BBC micro:bit REPL

```
304
304
304
302
304
304
303
```

The angular offset is the angle between the direction of the micro:bit and the geographic north pole, as shown in the following figure.

# LROBRUYA

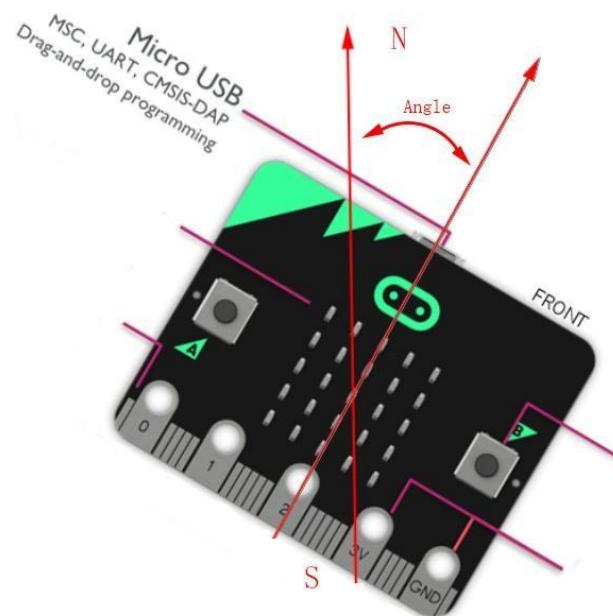

The following is the program code:

```
1 from microbit import *
2 compass.calibrate()
3 while True:
4     azimuth = compass.heading()
5     uart.write(str(azimuth)+"\r\n")
6     sleep(1000)
```

Magnetometer calibration.

```
compass.calibrate()
```

The angular offset read from the magnetometer chip is stored in the variable azimuth and then printed out every 1s through a serial port.

```
azimuth = compass.heading()
uart.write(str(azimuth)+"\r\n")
sleep(1000)
```

## Reference

`compass.calibrate()`

Starts the calibration process. An instructive message will scroll on the LED matrix, which indicates that you need to rotate the micro:bit until all LEDs are illuminated.

`compass.heading()`

# LROBRUYA

Gives the compass heading, calculated from the above readings, as an integer in the range from 0 to 360, representing the angle in degrees, clockwise, with north as 0.

## Project 10.2 Electronic Compass

In this project, we will use micro:bit to make an electronic compass, displaying an arrow on the micro:bit, and the arrow always points to the geographic north pole.

### Component list

#### Micro:bit x1



#### USB cable x1



### Circuit

Connect micro:bit and PC via a micro USB cable.



### Block code

Open MakeCode first. Import the .hex file. The path is as below:

File type	Path	File name
HEX file	../Projects/BlockCode/10.2_ElectronicCompass	ElectronicCompass.hex

# LROBRUYA

After importing successfully, the code is shown as below:



Check the connection of the circuit and verify it correct, and then download the code into the micro:bit. Calibrate the electronic compass.

After the calibration is successful, place the micro:bit horizontally and turn the micro:bit to see that the arrow points to the geography Arctic.

The arrow will point to eight directions: northwest, west, southwest, south, southeast, east, northeast, north, each direction is 45 degrees apart.

Assuming that the direction of the micro:bit is rotated 45 degrees from the north to the northeast of the geography, the arrow shown should be reversed, that is, it rotates

# LROBRUYA


---

-45 degrees, pointing to the northwest of the micro:bit, which is the geographic north pole. Therefore, we can adjust the direction of the arrow according to its angular offset from the geographic North Pole.

When the variable azimuth is less than 22.5 or greater than 337.5, the arrow points to the due north of the micro:bit.

When the variable azimuth is greater than 22.5 or less than 67.5, the arrow points to the northwest of the micro:bit.

And so on in the same fashion, in every 45 degrees, the arrow points to a particular direction indicating the geographic north, as shown in the following illustration:

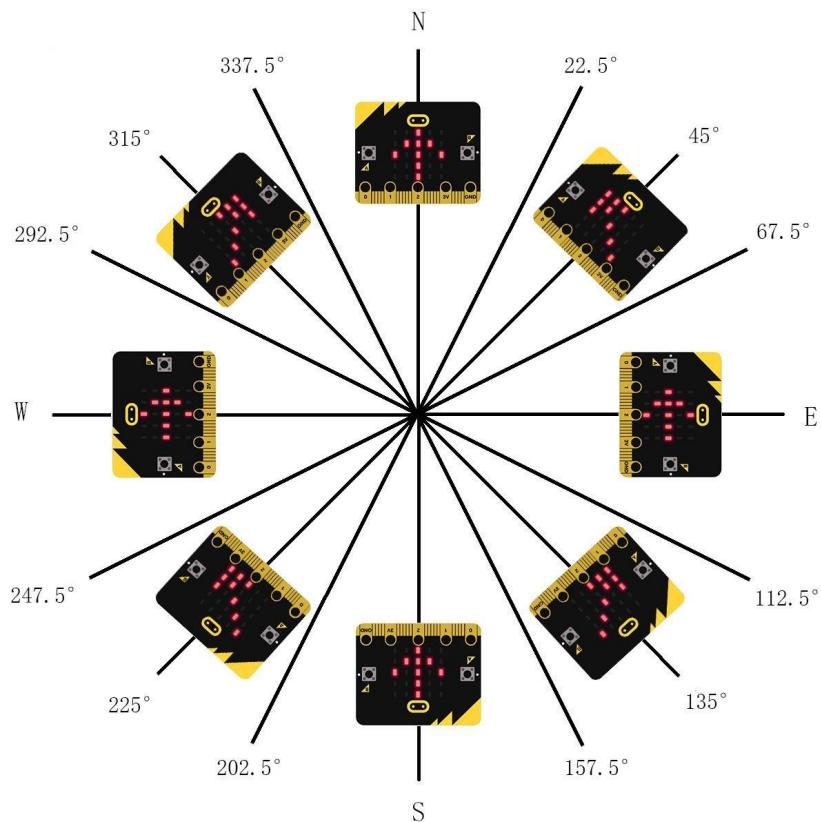


# LROBRUYA

The angular offset read from the magnetometer chip is stored in the variable azimuth

```
set [azimuth v] to [compass heading (°)]
```


Determine the value of the variable azimuth to change the direction of the arrow.

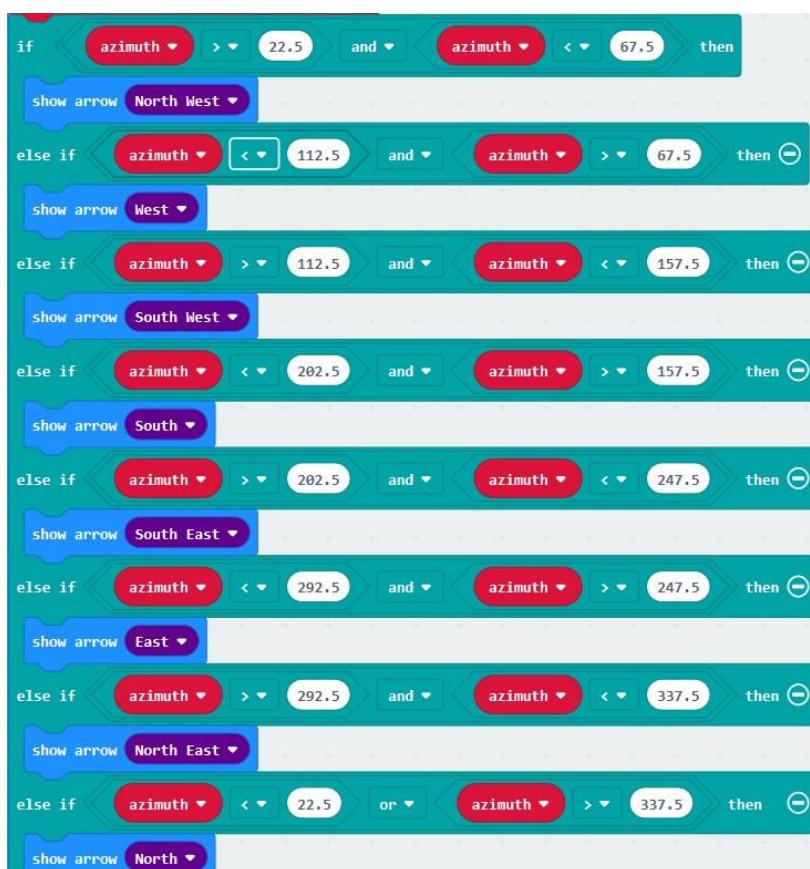

## Reference

Block	Function
	Run code depending on whether a Boolean condition is true or false.

# LROBRUYA

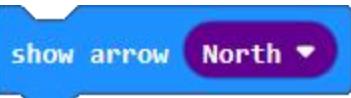

Shows the selected arrow on the LED screen

## Python code

Open the .py file with Mu. Code, the path is as below:

File type	Path	File name
Python file	..../Projects/PythonCode/10.2_ElectronicCompass	ElectronicCompass.py

After loading successfully, the code is shown as below:

The screenshot shows the Mu 1.0.2 IDE interface. The title bar says "Mu 1.0.2 - Electronic\_Compass.py". The toolbar icons include: Mode, New, Load, Save, Flash, Files, REPL, Plotter, Zoom-in, Zoom-out, Theme, Check, Help, and Quit. The code editor window contains the following Python code:

```
1 from microbit import *
2 compass.calibrate()
3 while True:
4     azimuth = compass.heading()
5     if azimuth<22.5 and azimuth<67.5:
6         display.show(Image.ARROW_NW)
7     elif azimuth<67.5 and azimuth<112.5:
8         display.show(Image.ARROW_W)
9     elif azimuth<112.5 and azimuth<157.5:
10        display.show(Image.ARROW_SW)
11    elif azimuth<157.5 and azimuth<202.5:
12        display.show(Image.ARROW_S)
13    elif azimuth<202.5 and azimuth<247.5:
14        display.show(Image.ARROW_SE)
15    elif azimuth<247.5 and azimuth<292.5:
16        display.show(Image.ARROW_E)
17    elif azimuth<292.5 and azimuth<337.5:
18        display.show(Image.ARROW_NE)
19    elif azimuth<22.5 or azimuth>337.5:
20        display.show(Image.ARROW_N)
```

Check the connection of the circuit and verify it correct,, download the code into the micro:bit and calibrate the electronic compass. After the calibration is successful, place the micro:bit horizontally and rotate the micro:bit to see that the arrow points to the geography Arctic.

# LROBRUYA

---

The arrow will point to eight directions:: northwest, west, southwest, south, southeast, east, northeast, north, each direction is 45 degrees apart.


Assuming that the direction of the micro:bit is rotated 45 degrees from the north to the northeast of the geography, the arrow shown should be reversed, that is, rotated -45 degrees, pointing to the northwest of the micro:bit, which is the geographic north pole. Therefore, the direction of the arrow is adjusted according to the angular offset from the geographic North Pole.

When the variable azimuth is less than 22.5 or greater than 337.5, the arrow points to the true north of the micro:bit.

When the variable azimuth is greater than 22.5 and less than 67.5, the arrow points to the northwest of the micro:bit.

And so on in the same fashion, in every 45 degrees, the arrow points to a particular direction indicating the geographic north, as shown in the following figure:

# LROBRUYA

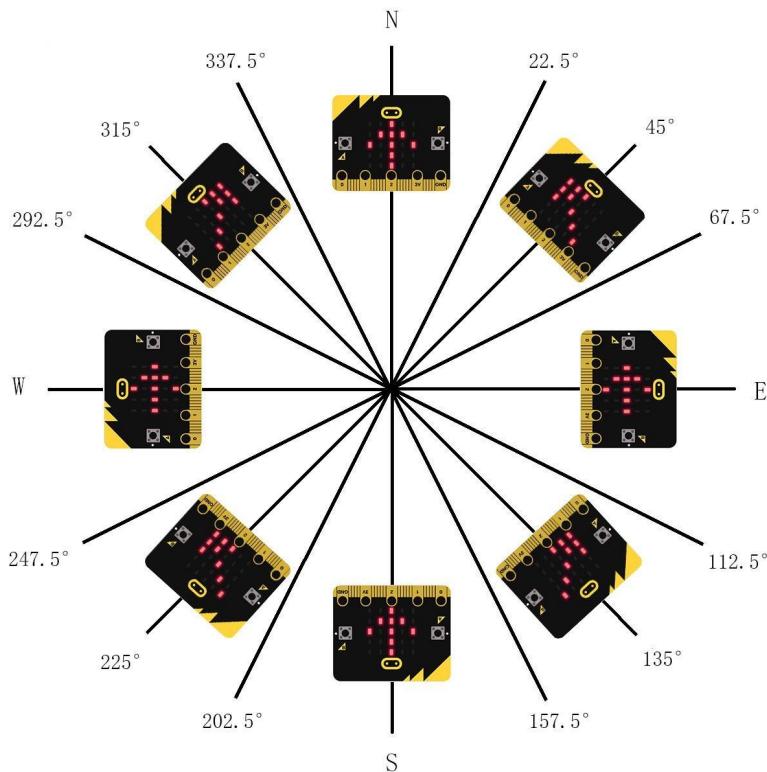

The following is the program code:

```
1  from microbit import *
2  compass.calibrate()
3  while True:
4      azimuth = compass.heading()
5      if azimuth<22.5 and azimuth<67.5:
6          display.show(Image.ARROW_NW)
7      elif azimuth<67.5 and azimuth<112.5:
8          display.show(Image.ARROW_W)
9      elif azimuth<112.5 and azimuth<157.5:
10         display.show(Image.ARROW_SW)
11     elif azimuth<157.5 and azimuth<202.5:
12         display.show(Image.ARROW_S)
13     elif azimuth<202.5 and azimuth<247.5:
14         display.show(Image.ARROW_SE)
15     elif azimuth<247.5 and azimuth<292.5:
16         display.show(Image.ARROW_E)
17     elif azimuth<292.5 and azimuth<337.5:
18         display.show(Image.ARROW_NE)
19     elif azimuth<22.5 and azimuth>337.5:
20         display.show(Image.ARROW_N)
```

Calibrate the electronic compass first and store the data on the variable azimuth.

# LROBRUYA

```
compass.calibrate()  
azimuth = compass.heading()
```

Determine the value of the variable azimuth and change the direction of the arrow.

```
if azimuth<22.5 and azimuth<67.5:  
    display.show(Image.ARROW_NW)  
elif azimuth<67.5 and azimuth<112.5:  
    display.show(Image.ARROW_W)  
elif azimuth<112.5 and azimuth<157.5:  
    display.show(Image.ARROW_SW)  elif  
azimuth<157.5 and azimuth<202.5:  
    display.show(Image.ARROW_S)  
elif azimuth<202.5 and azimuth<247.5:  
    display.show(Image.ARROW_SE)  elif  
azimuth<247.5 and azimuth<292.5:  
    display.show(Image.ARROW_E)  
elif azimuth<292.5 and azimuth<337.5:  
    display.show(Image.ARROW_NE)  
elif azimuth<22.5 and azimuth>337.5:  
    display.show(Image.ARROW_N)
```

## Lesson 11 Accelerometer

In this chapter, we will learn about the built-in accelerometer sensor of micro:bit.

### Project 11.1 Display Accelerometer Data

In this project, we will obtain data from the accelerometer sensor and print it on the serial console.


# LROBROUYA

## Component list

**Micro:bit x1**



**USB cable x1**

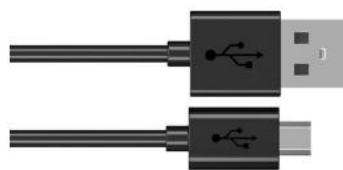

## Circuit

Connect micro:bit and PC via a micro USB cable.



## Block code


Open MakeCode first.

Import the .hex file. The path is as below:

File type	Path	File name
HEX file	../Projects/BlockCode/11.1_DisplayAccelerometerData	DisplayAccelerometerData.hex

After importing successfully, the code is shown as below:


# LROBRUYA

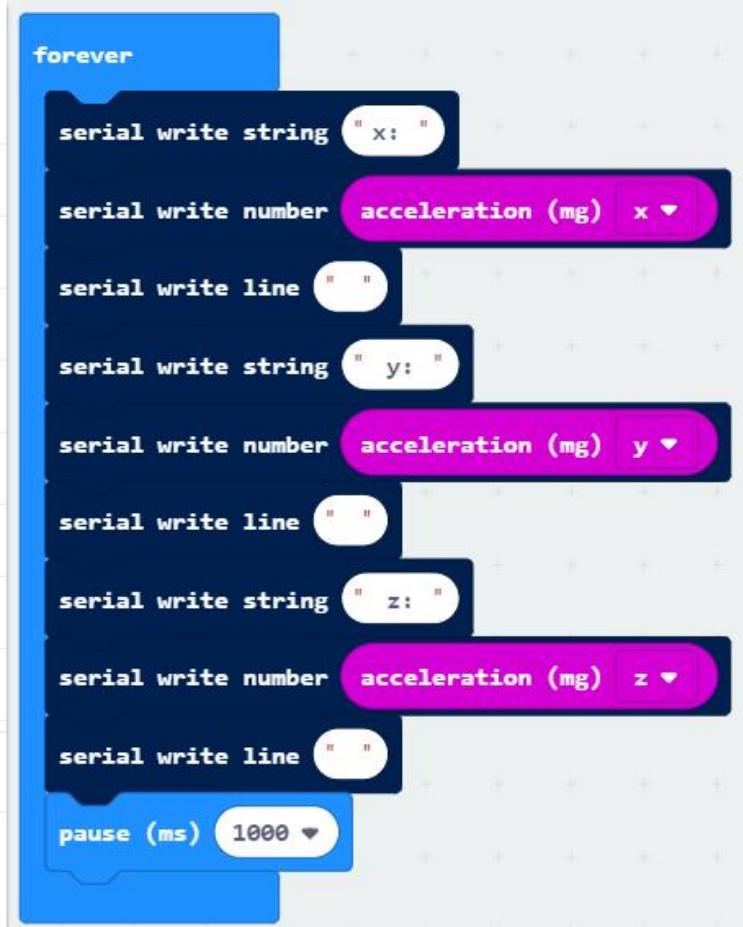


The image shows a Scratch script titled "forever" which outputs accelerometer data to the serial port. The script consists of the following blocks:

- serial write string "x: "
- serial write number acceleration (mg) x
- serial write line " " (a blank line)
- serial write string "y: "
- serial write number acceleration (mg) y
- serial write line " " (a blank line)
- serial write string "z: "
- serial write number acceleration (mg) z
- serial write line " " (a blank line)
- pause (ms) 1000


Check the connection of the circuit and verify it correct, download the code into the micro:bit, and then open the serial console, you can see the data of the accelerometer, as shown below:

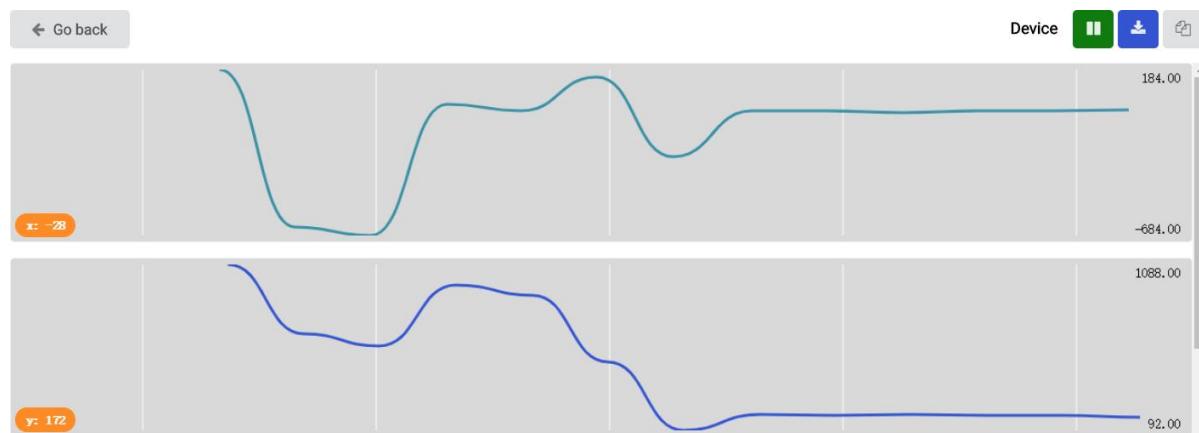

# LROBRYA

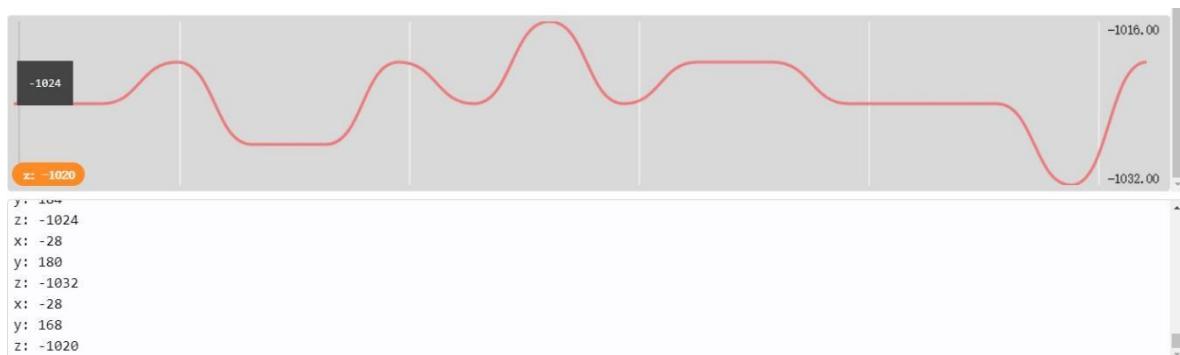

Read the value of the accelerometer in three directions and print it out through the serial port every second.

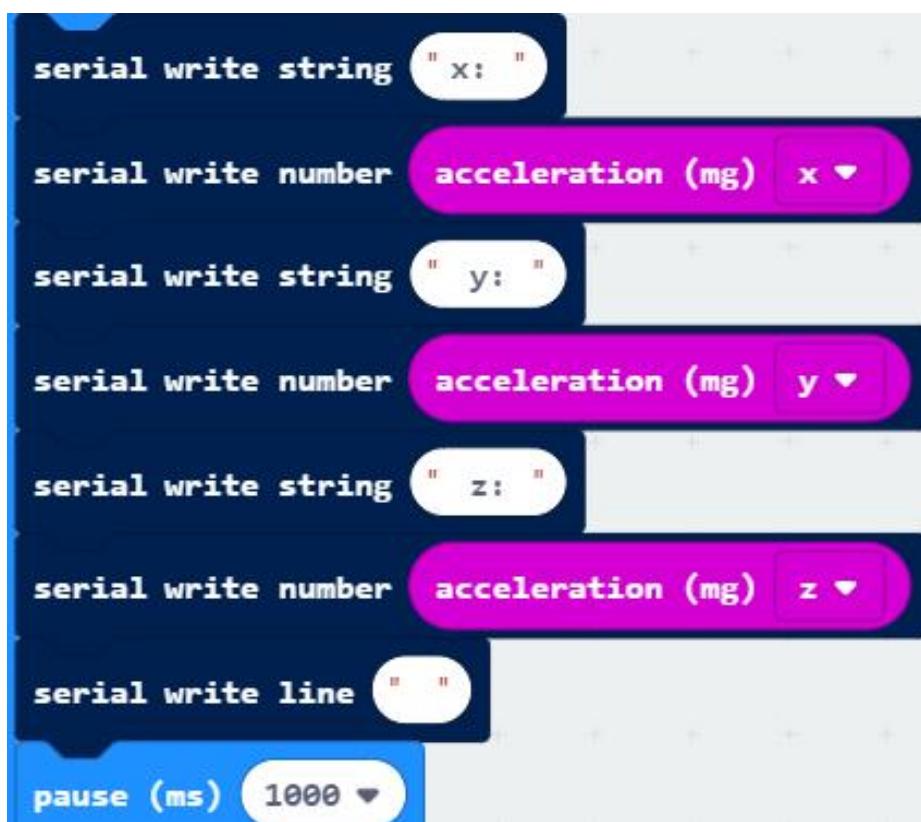

## Reference

Block	Function
<b>acceleration (mg) x ▾</b>	Get the acceleration value in one of three dimensions, or the combined value in all directions (x, y, and z).


# LROBRUYA

## Python code

Open the .py file with Mu. Code, the path is as below:

File type	Path	File name
Python file	..../PythonCode/11.1_DisplayAccelerometerData	DisplayAccelerometerData.py


After loading successfully, the code is shown as below:

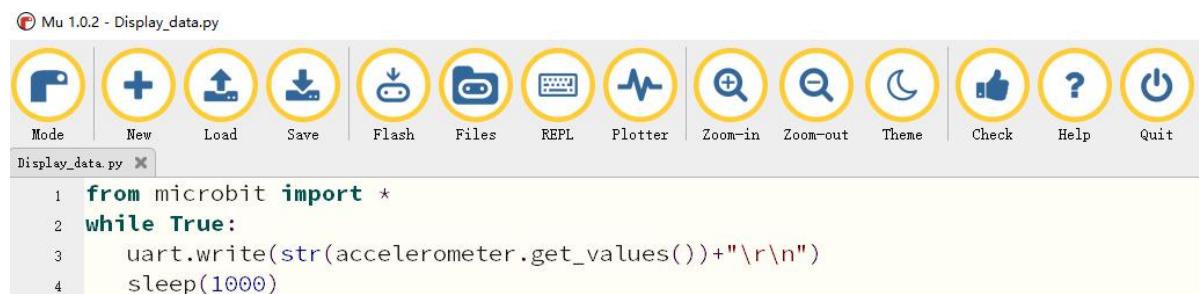

```
from microbit import *
while True:
    uart.write(str(accelerometer.get_values())+"\r\n")
    sleep(1000)
```

Check the connection of the circuit and verify it correct, and then download the code into the micro:bit.

After the program is downloaded, open the plotter (Plotter), click on the REPL, you can see the x-axis, y-axis, z-axis data collected by the accelerometer, as shown below:

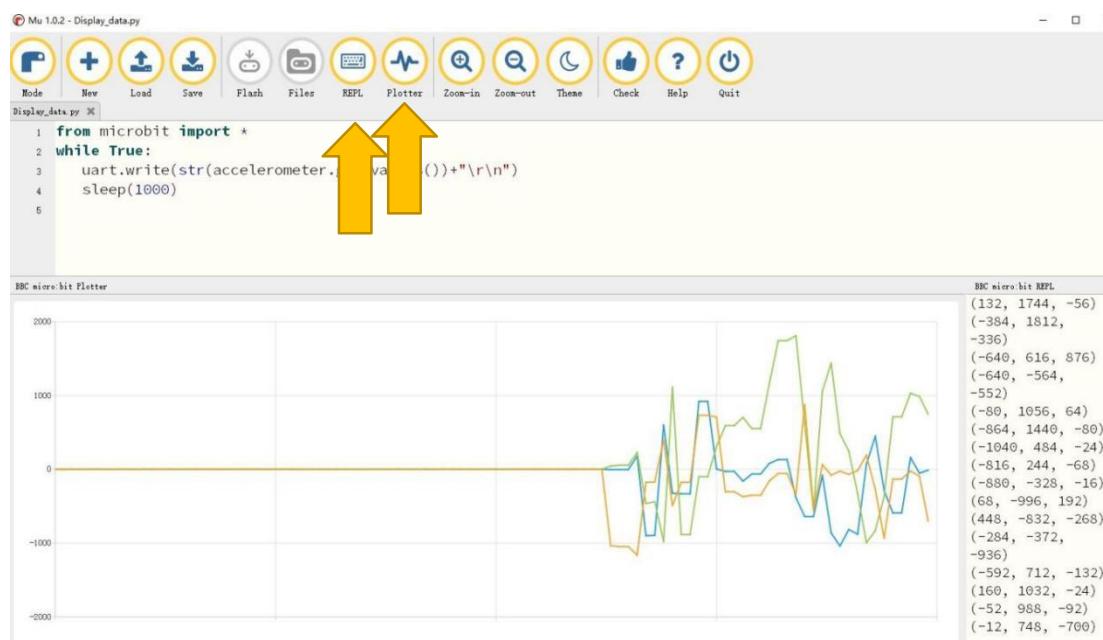

# LROBRUYA

The following is the program code:

```
1 from microbit import *
2 while True:
3     uart.write(str(accelerometer.get_values())+"\r\n")
4     sleep(1000)
```

Every 1 second, the accelerometer data will be obtained and printed through the serial port.

```
uart.write(str(accelerometer.get_values())+"\r\n")
sleep(1000)
```

## Reference

**accelerometer.get\_values()**

Get the acceleration measurements in all axes at once, as a three-element tuple of integers ordered as X, Y, Z. By default the accelerometer is configured with a range of +/- 2g, so X, Y, and Z will be within the range of +/-2000mg.

## Project 11.2 Gradiometer


In this project, we will use the accelerometer to make a level instrument.

### Component list

#### Micro:bit x1



#### USB cable x1

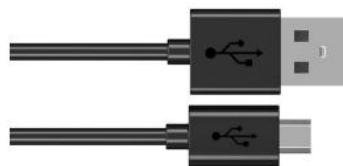

### Circuit

Connect micro:bit and PC via a micro USB cable.

# LROBRUYA




## Block code

Open MakeCode first.

Import the .hex file. The path is as below:

File type	Path	File name
HEX file	..../Projects/BlockCode/11.2_Gradienter	Gradienter.hex

After importing successfully, the code is shown as below:

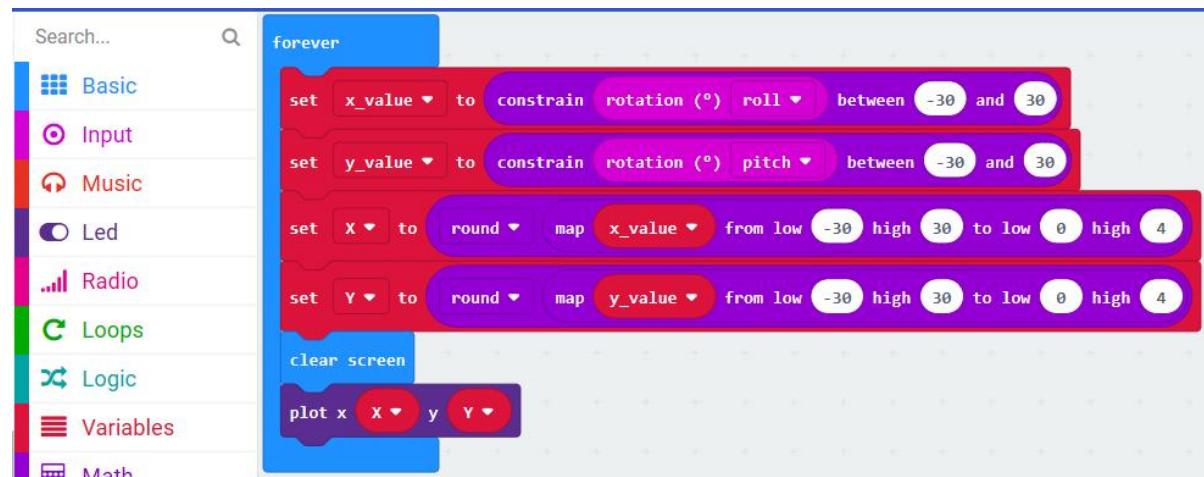


Check the connection of the circuit and verify it correct and download the code into micro:bit, you will observe that the LED dot matrix will change with the tilt of micro:bit.

Detect the flip angle of the microbit in the x-axis and the y-axis. The return value ranges from -180 to 180 degrees. This project does not

# LROBRUYA


require such a wide range of flip angles, so we just set it within -30 to 30 degrees.

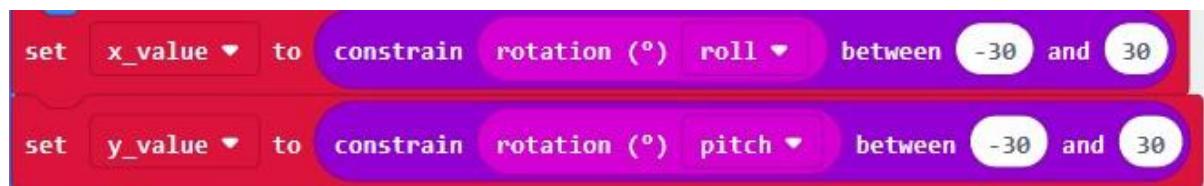

Since the LED screen is 5x5, map the range of -30-30 to the range of 0-4, and assign it to the X, Y variable.



Turn OFF all the LED first, then turn ON the corresponding LED according to the value of the X, Y variables.

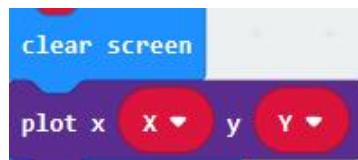

## Reference

Block	Function
<code>rotation (°) pitch ▾</code>	Find how much the micro:bit is tilted in different directions.
<code>plot x 0 y 0</code>	Turn ON the LED you set on the LED screen.
<code>round ▾ 0</code>	If a number has a fractional part, you can change the number to the nearest integer value.
	A map is a conversion of one span of

# LROBRUYA


	numbers to another.
	Turn OFF all the LED lights on the LED screen.
	Make sure that the value of the number you give is within the range.

## Python code

Open the .py file with Mu. Code, the path is as below:

File type	Path	File name
Python file	..../Projects/PythonCode/11.2_Gradienter	Gradienter.py

After loading successfully, the code is shown as below:

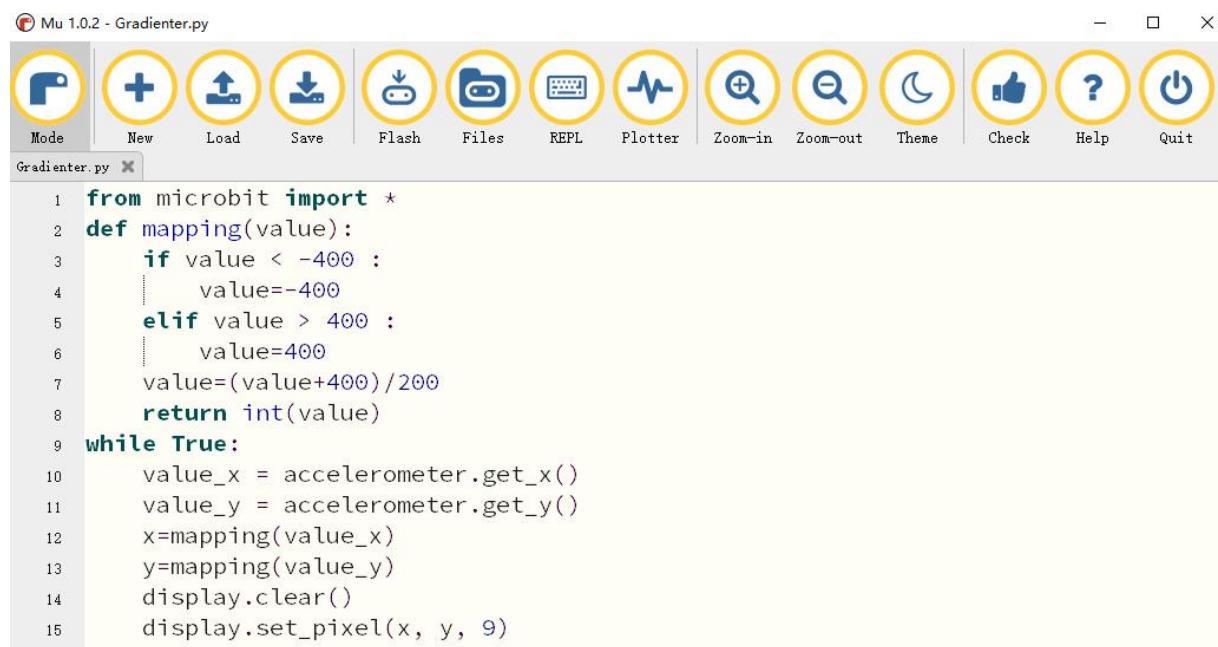

```
from microbit import *
def mapping(value):
    if value < -400 :
        value=-400
    elif value > 400 :
        value=400
    value=(value+400)/200
    return int(value)
while True:
    value_x = accelerometer.get_x()
    value_y = accelerometer.get_y()
    x=mapping(value_x)
    y=mapping(value_y)
    display.clear()
    display.set_pixel(x, y, 9)
```

Check the connection of the circuit and verify it correct, download the code into micro:bit, you will observe that the LED dot matrix will change with the tilt of micro:bit.

The following is the program code:

# LROBRUYA

```
1  from microbit import *
2  def mapping(value):
3      if value < -400 :
4          value=-400
5      elif value > 400 :
6          value=400
7      value=(value+400)/200
8      return int(value)
9  while True:
10     value_x = accelerometer.get_x()
11     value_y = accelerometer.get_y()
12     x=mapping(value_x)
13     y=mapping(value_y)
14     display.clear()
15     display.set_pixel(x, y, 9)
```

A custom mapping() function limits the input value to a range of -400 to 400 and maps to a range of 0-4.

```
def mapping(value):
    if value < -400 :
        value=-400
    elif value > 400 :
        value=400
    value=(value+400)/200
    return int(value)
```

Read the value of the accelerometer X, Y-axis direction. The return value range is -2000-2000. This project does not require such a wide range, So we set it to the range of -400to 400. Call the mapping() function to return the value ranging from 0-4 , lighting the LED corresponding to the x row and the y column.

```
while True:
    value_x = accelerometer.get_x()
    value_y = accelerometer.get_y()
```

# LROBRUYA

```
x=mapping(value_x)  
y=mapping(value_y)  
display.clear()  
display.set_pixel(x, y, 9)
```

## Reference

display.clear()

Set the brightness of all LEDs to 0 (off).

display.set\_pixel(x, y, 9)

Set the brightness value of the LED at column x and row y, which has to be an integer between 0 and 9.

accelerometer.get\_x()

Get the acceleration measurement in the x axis, as a positive or negative integer, depending on the direction. The measurement is given in milli-g. By default the accelerometer is configured with a range of +/- 2g, and so this method will return a value within the range of +/- 2000mg

accelerometer.get\_y()

Get the acceleration measurement in the y axis, as a positive or negative integer, depending on the direction. The measurement is given in milli-g. By default the accelerometer is configured with a range of +/- 2g, and so this method will return a value within the range of +/- 2000mg.

## Lesson 12 Potentiometer

In this chapter, we will learn a new component: potentiometer

### Project 12.1 Potentiometer

This project enables a rotatory potentiometer to output different voltages.




#### Component list

##### Microbit x1



##### Extension board x1

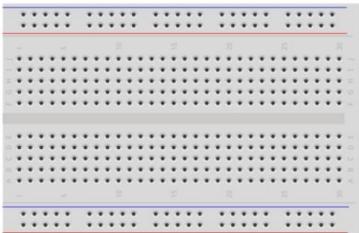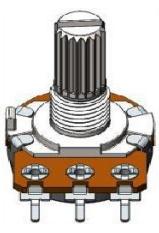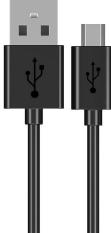


Breadboard x1	Potentiometer x1	USB cable x1	F/M x3
			

## Component knowledge

### ADC

An ADC is an electronic integrated circuit used to convert analog signals such as voltages to digital or binary form consisting of 1s and 0s. The range of our ADC module is 10 bits, that means the resolution is  $2^{10}=1024$ , so that its range (at 3.3V) will be divided equally to 1024 parts.

Any analog value can be mapped to one digital value using the resolution of the converter. So the more bits the ADC has, the denser the partition of analog will be and the greater the precision of the resulting conversion.

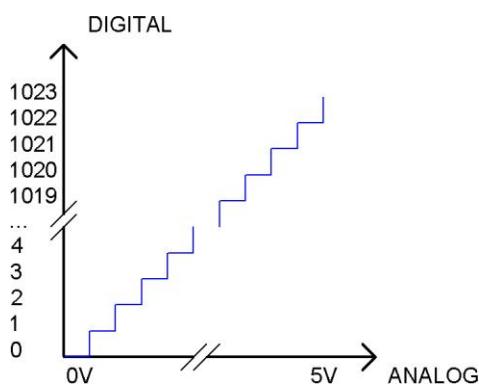

Subsection 1: the analog in rang of 0V-3.3/1024V corresponds to digital 0;


Subsection 2: the analog in rang of 3.3 /1024V-2\*3.3/1024V corresponds to digital 1;

The resultant analog signal will be divided accordingly.

## Potentiometer

Potentiometer is a resistive element with three Terminal parts. Unlike the resistors that we have used thus far in our project which have a fixed resistance value, the resistance value of a potentiometer can be adjusted.


A potentiometer is often made up by a resistive substance (a wire or carbon element) and movable contact brush. When the brush moves along the resistor element, there will be a change in the resistance of the potentiometer's output side (3) (or change in the voltage of the circuit that is a part). The illustration below represents a linear sliding potentiometer and its electronic symbol on the right.

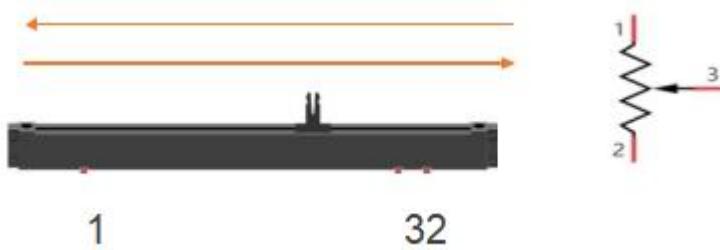

Between potentiometer pin 1 and pin 2 is the resistive element (a resistance wire or carbon) and pin 3 is connected to the brush that makes contact with the resistive element. In our illustration, when the brush moves from pin 1 to pin 2, the resistance value between pin 1 and pin 3

will increase linearly (until it reaches the highest value of the resistive element) and at the same time the resistance between pin 2 and pin 3 will decrease linearly and conversely down to zero. At the midpoint of the slider the measured resistance values between pin 1 and 3 and between pin 2 and 3 will be the same.

In a circuit, both sides of resistive element are often connected to the positive and negative electrodes of power. When you slide the brush “pin 3” , you can get variable voltage within the range of the power supply.

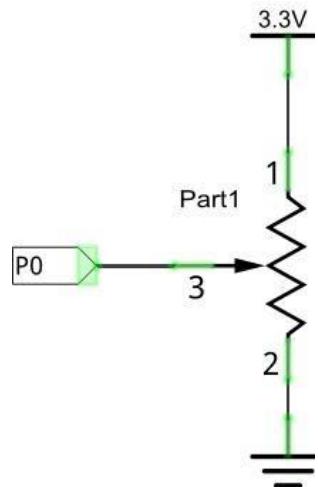


## Rotary potentiometer

Rotary potentiometers and linear potentiometers have the same function; the only difference being the physical action being a rotational rather than a sliding movement.

# LROBRUYA



## Circuit

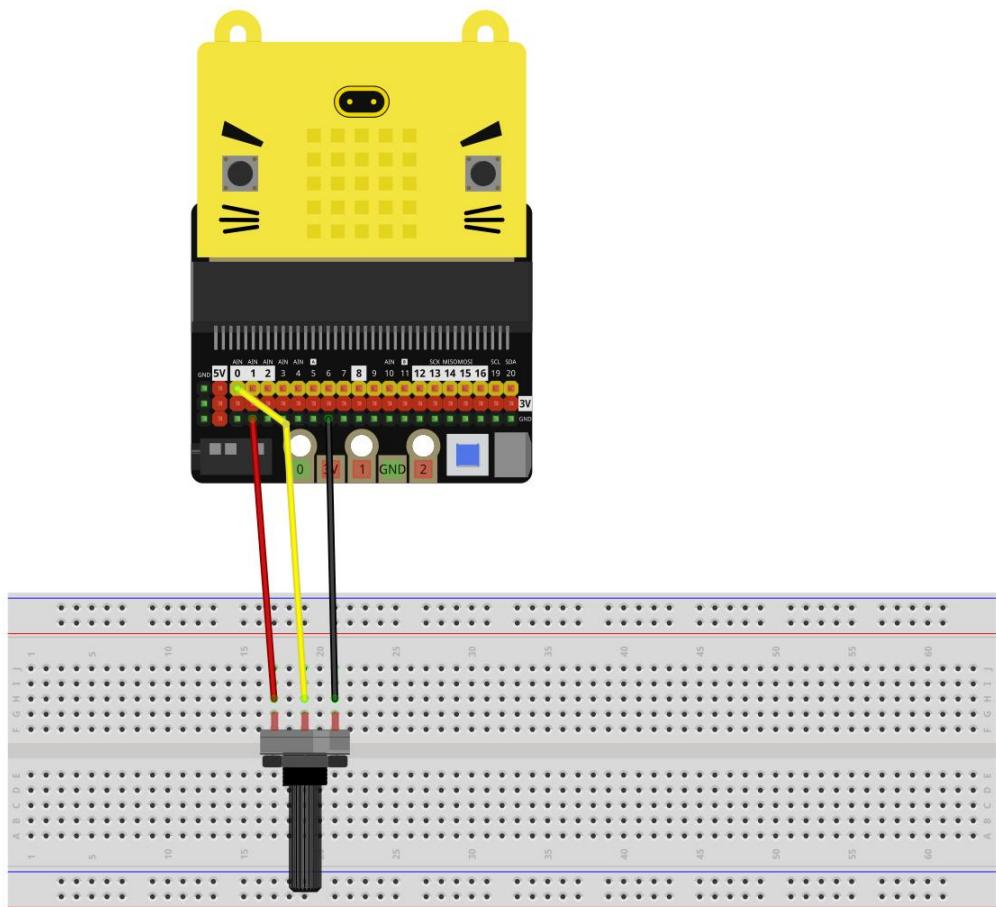

## Block code

Open MakeCode first. Import the .hex file. The path is as below:


File type	Path	File name
HEX file	../Projects/BlockCode/12.1_Potentiometer	Potentiometer.hex

After importing successfully, the code is shown as below:

# LROBRUYA



Check the connection of the circuit and verify it correct and then download the code into micro:bit.

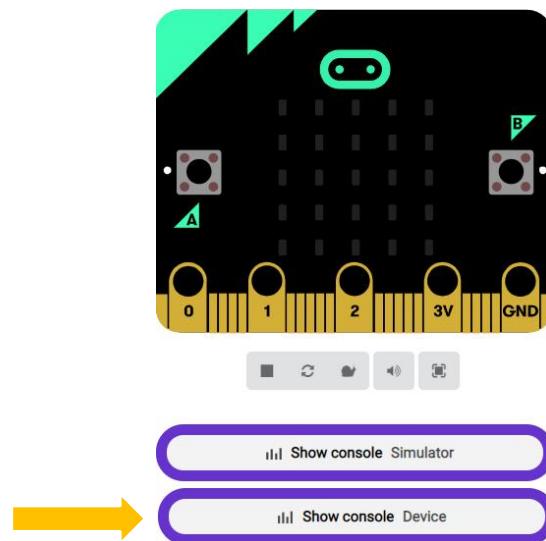


Click on the console device, rotate the potentiometer, you will see the output ADC value and voltage value.


```
CONVERTER v1.0.0
voltage::2.6129032258064515
convertValue:1022
voltage::3.2967741935483867
convertValue:793
voltage::2.5580645161290318
convertValue:731
voltage::2.3580645161290321
```

# LROBRUYA

Read the analog voltage value of the P0 pin, the range is 0-1023, and then convert the analog voltage value into a digital voltage value.

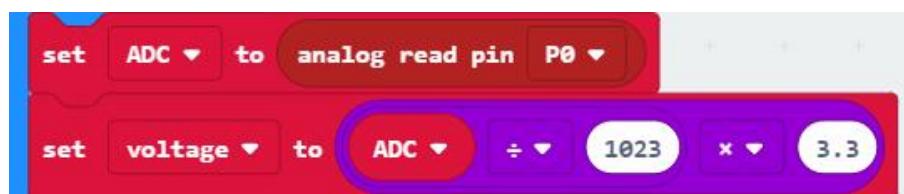

Print the analog voltage and digital voltage of P0 pin every 1 second.

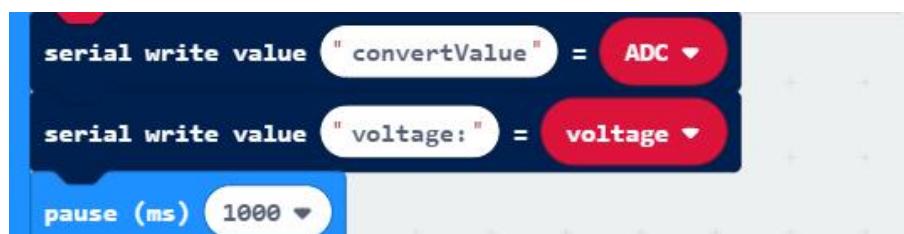

## Reference


Block	Function
<b>analog read pin P0</b>	Read an analog signal (0 to 1023) from the pin you set.)

## Python code

Open the .py file with Mu. Code, the path is as below:

File type	Path	File name
Python file	..//Projects/PythonCode/12.1_Potentiometer	Potentiometer.py

After loading successfully, the code is shown as below:

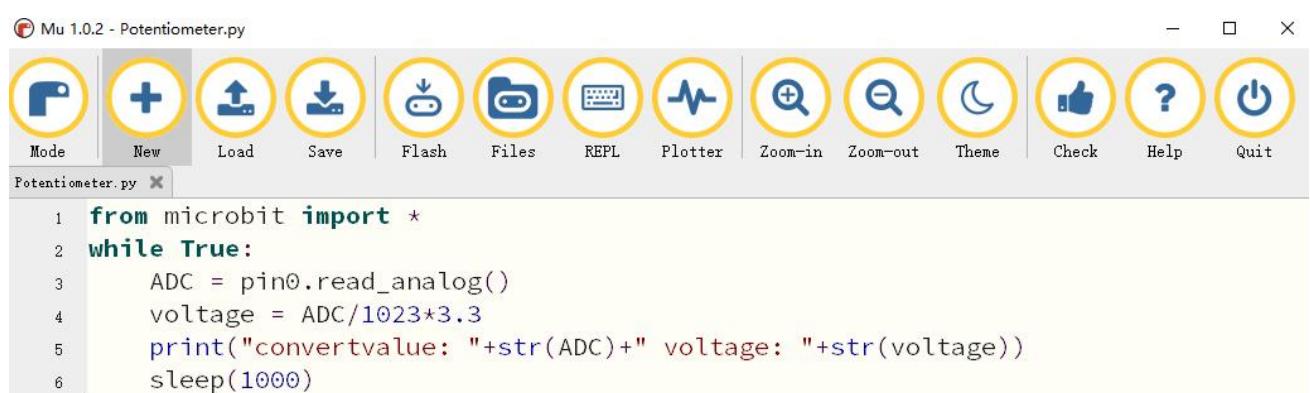A screenshot of the Mu 1.0.2 Python code editor. The title bar says 'Mu 1.0.2 - Potentiometer.py'. The interface includes a toolbar with icons for Mode, New, Load, Save, Flash, Files, REPL, Plotter, Zoom-in, Zoom-out, Theme, Check, Help, and Quit. The main window shows the Python code for a potentiometer. The code reads the analog value from pin 0, converts it to a digital voltage, and prints the results. The code is as follows:


```
1 from microbit import *
2 while True:
3     ADC = pin0.read_analog()
4     voltage = ADC/1023*3.3
5     print("convertvalue: "+str(ADC)+" voltage: "+str(voltage))
6     sleep(1000)
```

# LROBRUYA

---

Check the connection of the circuit and confirm that the circuit is connected correctly. Download the code into the micro:bit.

Click on the REPL, press the micro:bit reset button, and then rotate the potentiometer. You can see the change in the value on the software Mu, as shown below.

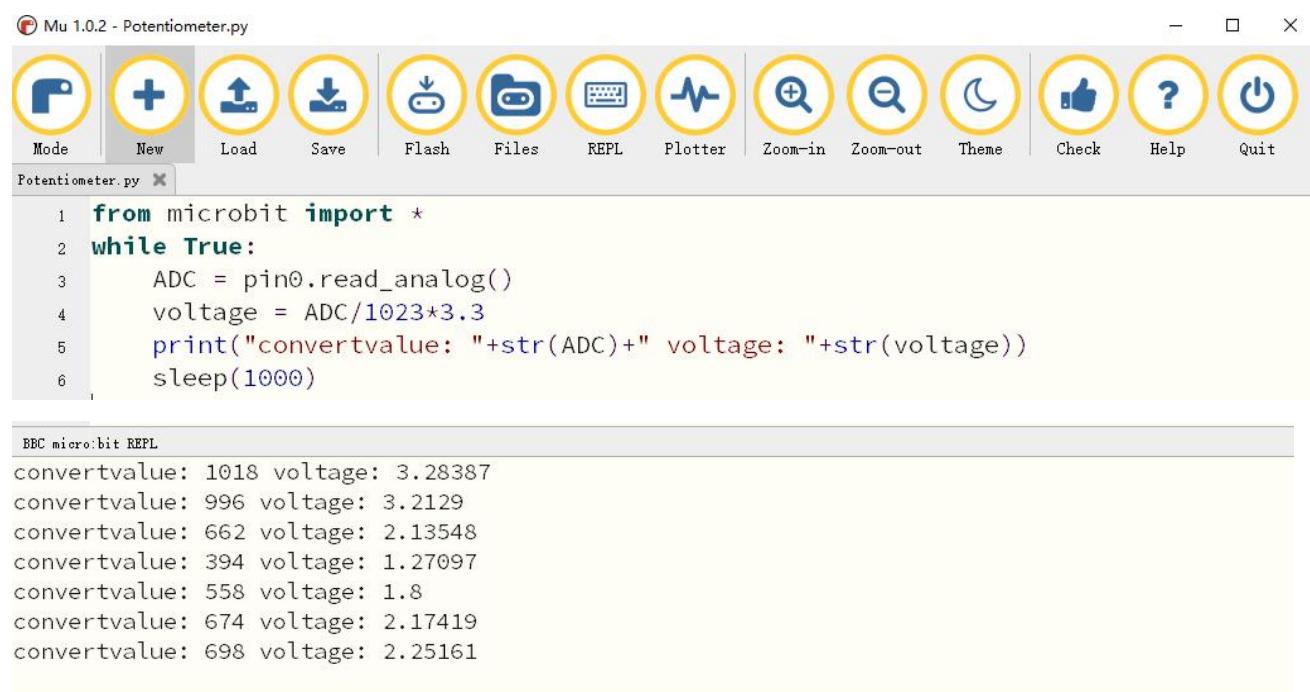

The screenshot shows the Mu 1.0.2 software interface. The top menu bar includes options like Mode, New, Load, Save, Flash, Files, REPL, Plotter, Zoom-in, Zoom-out, Theme, Check, Help, and Quit. The main window displays a Python script named 'Potentiometer.py' with the following code:

```
1 from microbit import *
2 while True:
3     ADC = pin0.read_analog()
4     voltage = ADC/1023*3.3
5     print("convertvalue: "+str(ADC)+" voltage: "+str(voltage))
6     sleep(1000)
```

Below the script, the BBC micro:bit REPL window shows the output of the program as it runs, displaying a series of analog values and their corresponding digital voltage conversions:

```
BBC micro:bit REPL
convertvalue: 1018 voltage: 3.28387
convertvalue: 996 voltage: 3.2129
convertvalue: 662 voltage: 2.13548
convertvalue: 394 voltage: 1.27097
convertvalue: 558 voltage: 1.8
convertvalue: 674 voltage: 2.17419
convertvalue: 698 voltage: 2.25161
```

The following is the program code:

```
1 from microbit import *
2 while True:
3     ADC = pin0.read_analog()
4     voltage = ADC/1023*3.3
5     print("convertvalue: "+str(ADC)+" voltage: "+str(voltage))
6     sleep(1000)
```

Read the analog voltage value of the P0 pin, the range is 0-1023, and then convert the analog voltage value into a digital voltage value.

```
ADC = pin0.read_analog()
voltage = ADC/1023*3.3
```

# LROBRUYA

Print the analog voltage and digital voltage of P0 pin every 1 second.

```
print("convertvalue: "+str(ADC)+" voltage: "+str(voltage))  
sleep(1000)
```

## Reference

read\_analog()

Read an analog signal (0 to 1023) from the pin you set.

print()

Print() is a Python built-in function for printing.

## Lesson 13 Potentiometer and LED

This chapter is a comprehensive application of potentiometer and LED.

### Project 13.1 Soft Light



In this project, we will make an LED with adjustable brightness.

**Microbit x1**



**Extension board x1**

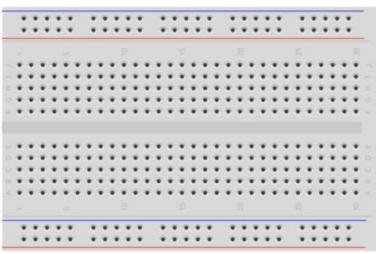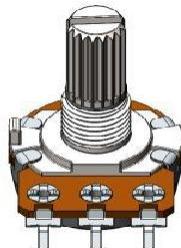


<b>Breadboard x1</b> 	<b>USB cable x1</b> 	<b>F/M x4</b> <b>M/M x1</b> 
<b>LED x1</b> 	<b>Resistor 220 Ω x1</b> 	<b>Potentiometer x1</b> 

## Circuit

In this circuit, the port 1 and 2 of the potentiometer are respectively connected to the two ends of the power supply, and the port3 is connected to the P0 pin of the micro:bit.

# LROBRUYA

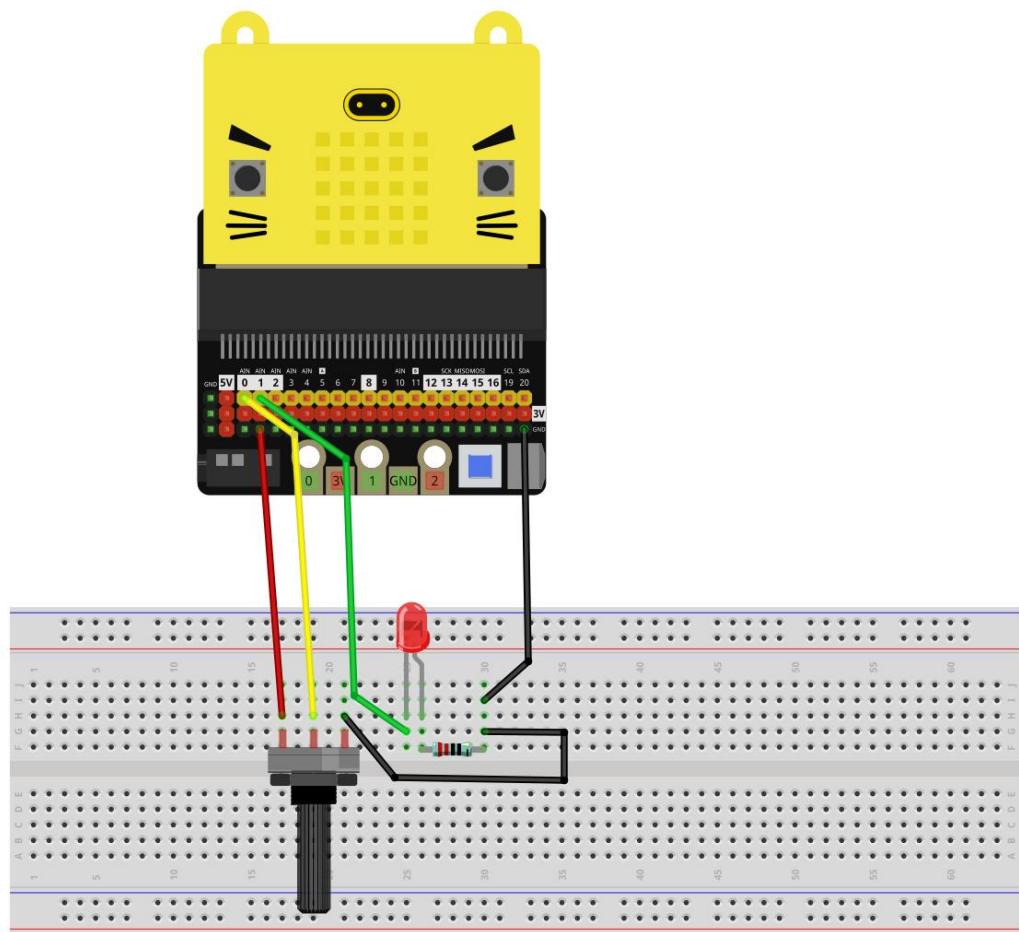

P1 pin is connected to LED 's long pin (positive), and its short pin (negative) is connected to resistor.

## Block code

Open MakeCode first. Import the .hex file. The path is as below:

File type	Path	File name
HEX file	../Projects/BlockCode/13.1_SoftLight	SoftLight.hex

After importing successfully, the code is shown as below:

# LROBRUYA



Check the connection of the circuit, verify it correct,, download the code into the micro:bit, and rotate the potentiometer to see the change of the brightness.

Read the analog voltage value of the P0 pin, then the P1 pin outputs the same analog voltage value.



## Python code

Open the .py file with Mu. Code, the path is as below:

File type	Path	File name
Python file	../Projects/PythonCode/13.1_SoftLight	SoftLight.py

After load successfully, the code is shown as below:

A screenshot of the Mu 1.0.2 Python code editor. The window title is 'Mu 1.0.2 - SoftLight.py'. The toolbar icons include Mode, New, Load, Save, Flash, Files, REPL, Plotter, Zoom-in, Zoom-out, Theme, Check, Help, and Quit. The code editor shows the following Python script:

```
1 from microbit import *
2 while True:
3     pin1.write_analog(pin0.read_analog())
```

Check the connection of the circuit, verify it correct, download the code into the micro:bit, and rotate the potentiometer to see the change of the brightness of the LED.

# LROBRUYA

The following is the program code:

```
1 from microbit import *
2 while True:
3     pin1.write_analog(pin0.read_analog())
```



Read the analog voltage value of the P0 pin, then the P1 pin outputs the same analog voltage value.

```
pin1.write_analog(pin0.read_analog())
```

## Project 13.2 multicolored Soft Light

In this project, we control the color of the RGBLED with a potentiometer.


### Component list
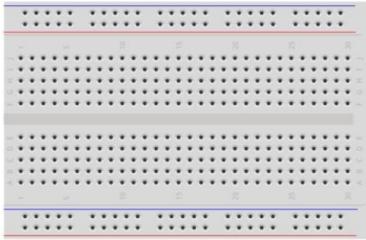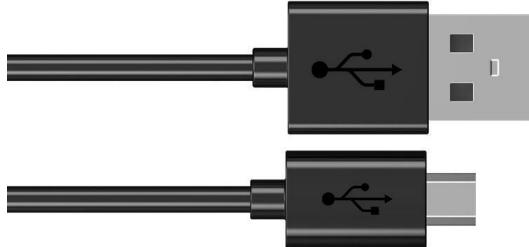
<b>Microbit x1</b> 	<b>Extension board x1</b> 
<b>Breadboard x1</b> 	<b>USB cable x1</b> 

# LROBRYA

---

**Rotary potentionmeter x1**

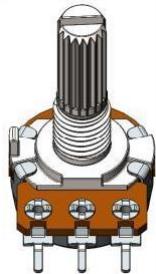

**RGB\_LED x1**



**F/M x6 M/M x1**




**Resistor 220 Ω x3**



**Circuit**

# LROBRUYA

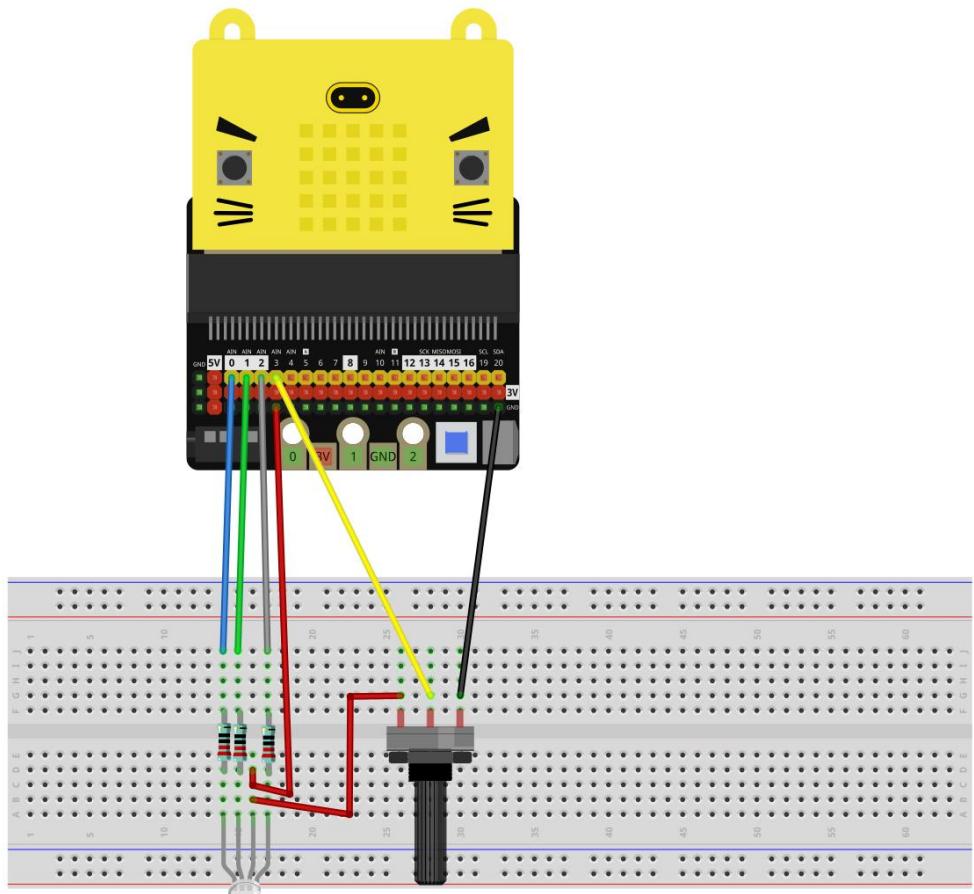

RGBLED' s long pin (anode) is connected to 3.3V power supply.


## Block code

Open MakeCode first. Import the .hex file. The path is as below:

File type	Path	File name
HEX file	../Projects/BlockCode/13.2_ColorfulSoftLight	ColorfulSoftLight.hex

After importing successfully, the code is shown as below:

# LROBRUYA

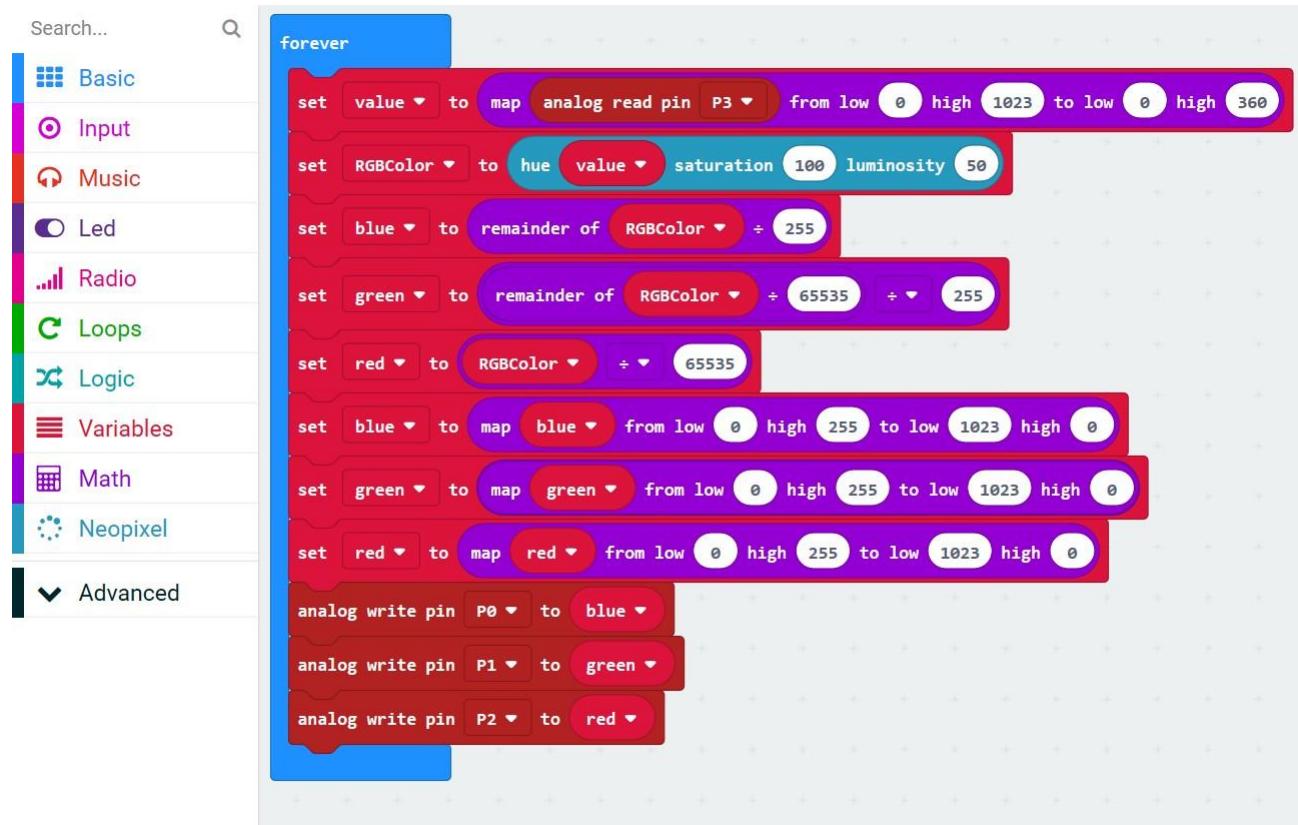

Download the code into micro:bit, rotate the potentiometer, you can see that the color of the RGBLED is changing.

Read the potentiometer's analog voltage and map the potentiometer's analog voltage ranging 0-1023 to the hue angle ranging 0-360.

```
set value to map analog read pin P3 from low 0 high 1023 to low 0 high 360
```

Convert the HSL color system to the RGB color system, return the RGB value corresponding to the current hue angle, and store the value in the variable RGBColor.

```
set RGBColor to hue value saturation 100 luminosity 50
```

The value of the lower eight-bit blue channel of the variable RGBColor is assigned to the variable blue, the value of the middle eight-bit green


# LROBRUYA

---

channel is assigned to the variable green, and the value of the upper eight-bit red channel is assigned to the variable red.



RGBLED is a common anode, so the pins are set to low to turn on the RGBLED. The values of the variables 'red', 'green', and 'blue' are converted from 0-255 to analog signal values in the range of 1023-0, and then reassigned to 'red', 'green', 'blue' variable. In this kit, three LEDs of RGB LED share a common anode(+) and their negative pins need to be set to LOW level to turn ON the RGB LED work. And the value of variables 'red', 'green', and 'blue' need to be converted from the value ranging from 0-255 to analog signal values ranging from 1023-0, and then reassigned to them.

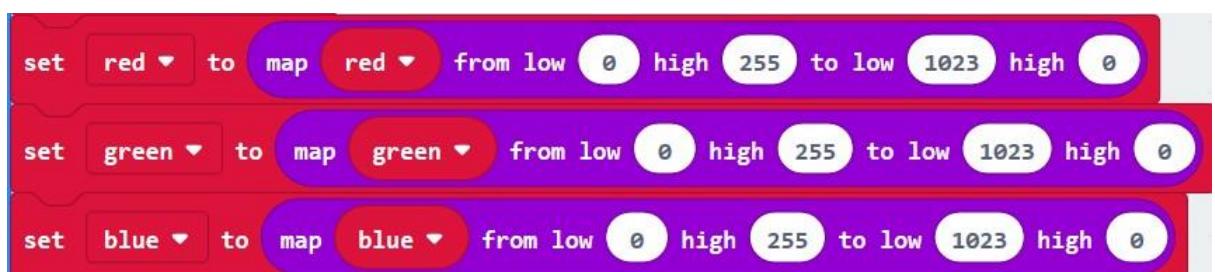

Write the analog voltage value of the red, green, and blue variables to the corresponding P0, P1, and P2 pins to change the LED color.

# LROBRUYA



## Python code

Open the py file with Mu. Code, the path is as below:

File type	Path	File name
Python file	../Projects/PythonCode/13.2_ColorfulSoftLight	ColorfulSoftLight.py

After loading successfully, the code is shown as below:

A screenshot of the Mu 1.0.2 Python code editor. The window title is 'Mu 1.0.2 - ColorfulSoftLight.py'. The interface includes a toolbar with icons for Mode, New, Load, Save, Flash, Files, REPL, Plotter, and various zoom and theme options. The main code area contains the following Python script:

```
1 from microbit import *
2 display.off()
3 def map(value,fromLow,fromHigh,toLow,toHigh):
4     return (toHigh-toLow)*(value-fromLow) / (fromHigh-fromLow) + toLow
5 def HSL_RGB(degree):
6     degree=degree/360*255
7     if degree < 85:
8         red = 255 - degree * 3
9         green = degree * 3
10        blue = 0
11    elif degree < 170:
12        degree = degree - 85
13        red = 0
14        green = 255 - degree * 3
15        blue = degree * 3
16    else:
17        degree = degree - 170
18        red = degree * 3
19        green = 0
20        blue = 255 - degree * 3
21    return red,green,blue
22 while True:
23     value=map(pin3.read_analog(),0,1023,0,360)
24     red,green,blue=HSL_RGB(value)
25     red=map(red,0,255,1023,0)
26     green=map(green,0,255,1023,0)
27     blue=map(blue,0,255,1023,0)
28     pin2.write_analog(red)
29     pin1.write_analog(green)
30     pin0.write_analog(blue)
```

# LROBRUYA

---

After checking the connection of the circuit, verify it correct, download the code into micro:bit. By rotating the potentiometer, you can see that the color of RGB LED is changing.

The following is the program code:

```
1  from microbit import *
2  display.off()
3  def map(value,fromLow,fromHigh,toLow,toHigh):
4      return (toHigh-toLow)*(value-fromLow) / (fromHigh-fromLow) + toLow
5  def HSL_RGB(degree):
6      degree=degree/360*255
7      if degree < 85:
8          red = 255 - degree * 3
9          green = degree * 3
10         blue = 0
11     elif degree < 170:
12         degree = degree - 85
13         red = 0
14         green = 255 - degree * 3
15         blue = degree * 3
16     else:
17         degree = degree - 170
18         red = degree * 3
19         green = 0
20         blue = 255 - degree * 3
21     return red,green,blue
22 while True:
23     value=map(pin3.read_analog(),0,1023,0,360)
24     red,green,blue=HSL_RGB(value)
25     print(red,green,blue)
26     red=map(red,0,255,1023,0)
27     green=map(green,0,255,1023,0)
28     blue=map(blue,0,255,1023,0)
29     pin2.write_analog(red)
30     pin1.write_analog(green)
31     pin0.write_analog(blue)
32     sleep(10)
```

Turn OFF the LED screen to use the P3 pin. A custom map() function converts values in one range of numbers to values in another range of numbers.

# LROBRUYA

```
display.off()
def map(value,fromLow,fromHigh,toLow,toHigh):
    return (toHigh-toLow)*(value-fromLow) / (fromHigh-fromLow) + toLow
```

The custom function HSL\_RGB() is used to convert the HSL color system to the RGB color system and return the RGB value corresponding to the current hue angle.

```
def HSL_RGB (degree):
    degree=degree/360*255
    if degree < 85:
        red = 255 - degree * 3
        green = degree * 3
        blue = 0
    elif degree < 170:
        degree = degree - 85
        red = 0
        green = 255 - degree * 3
        blue = degree * 3
    else:
        degree = degree - 170
        red = degree * 3
        green = 0
        blue = 255 - degree * 3
    return red,green,blue
```

Read the analog voltage value of the P3 pin and convert it to the corresponding hue angle. Call the HSL\_RGB() function to return the RGB value corresponding to the current hue angle, and then write the corresponding RGB values to the P0, P1, and P2 pins to change the LED color.

# LROBRUYA

```
while True:
    value=map(pin3.read_analog(),0,1023,0,360)
    red,green,blue=HSL_RGB(value)
    print(red,green,blue)
    red=map(red,0,255,1023,0)
    green=map(green,0,255,1023,0)
    blue=map(blue,0,255,1023,0)
    pin2.write_analog(red)
    pin1.write_analog(green)
    pin0.write_analog(blue)
    sleep(10)
```

## Lesson 14 Light Sensor

In this chapter, we will learn the micro:bit built-in light sensor and photoresistor.

### Project 14.1 Built-in Light Sensor

In this project, we use the micro:bit built-in light sensor to measure the brightness of light.

**Micro:bit x1**



**USB cable x1**



### Component list


### Component knowledge

### Light sensor

# LROBRUYA

---

Micro:bit detects the ambient light intensity through the LED matrix. In forward bias mode, the LED screen works as a display. In reverse bias mode, the LED screen works as a basic light sensor that can be used to detect ambient light.

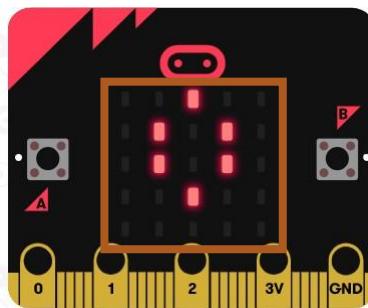

## Circuit

Connect micro:bit and PC via a micro USB cable.



## Block code

Open MakeCode first. Import the .hex file. The path is as below:


File type	Path	File name
HEX file	../Projects/BlockCode/14.1_LightIntensityMeter	LightIntensityMeter.hex

After importing successfully, the code is shown as below:

# LROBRUYA



Check the connection of the circuit, verify it correct and download the code into the micro:bit. Open the serial port console, then you can see the reading light intensity. Cover the LED screen with your hand or increase the light shining on it, you can see the change in value, the range of values is 0-255, 0 is dark, 255 is the brightest, as shown below.

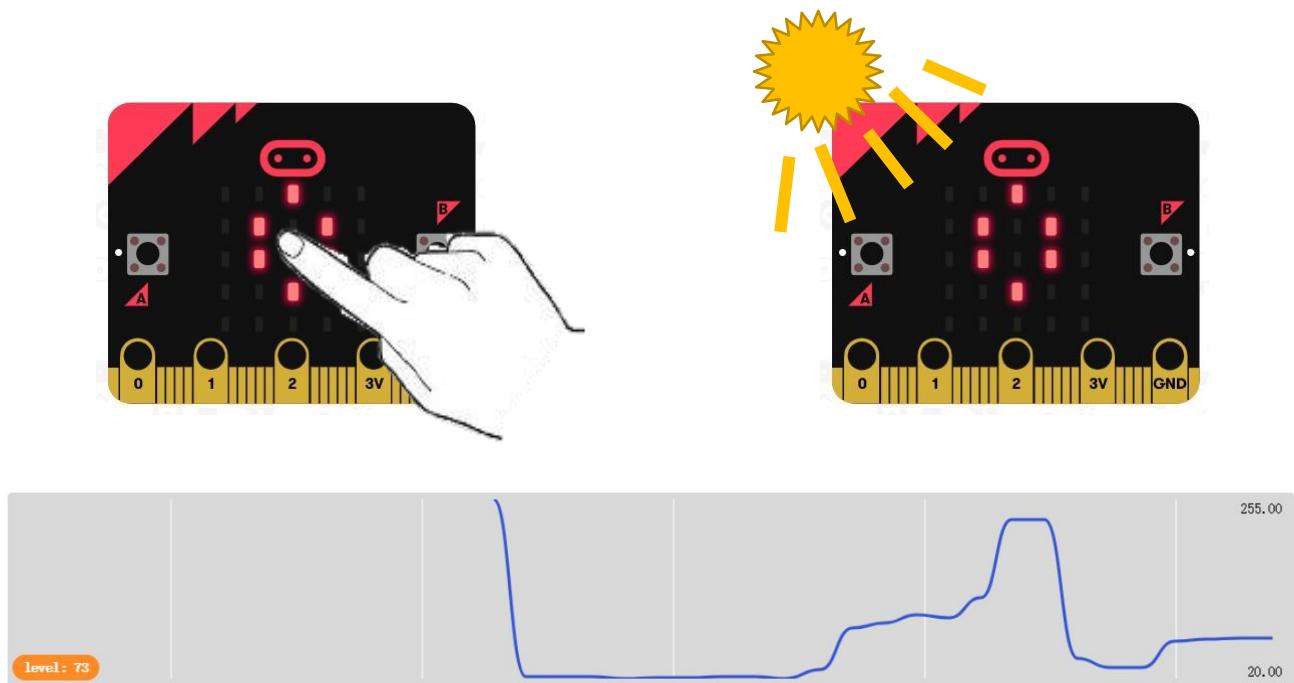

## Reference

# LROBRUYA

Block	Function
light level	Detect the light level (how bright or dark it is) of the environment where you are. The light level 0 means darkness and 255 means bright light.

## Python code

Open the .py file with Mu. Code, the path is as below:


File type	Path	File name
Python file	..//Projects/PythonCode/14.1_LightIntensityMeter	LightIntensityMeter.py

After loading successfully, the code is shown as below:



```
1 from microbit import *
2 while True:
3     item = display.read_light_level()
4     print(item)
```

Check the connection of the circuit, verify it correct, download the code into the micro:bit. Open the serial port console, then you can see the reading light intensity. Cover the LED screen with your hand or increase the light shining on it, you can see the change in value, the range of values is 0-255, 0 is dark, 255 is the brightest, as shown below.

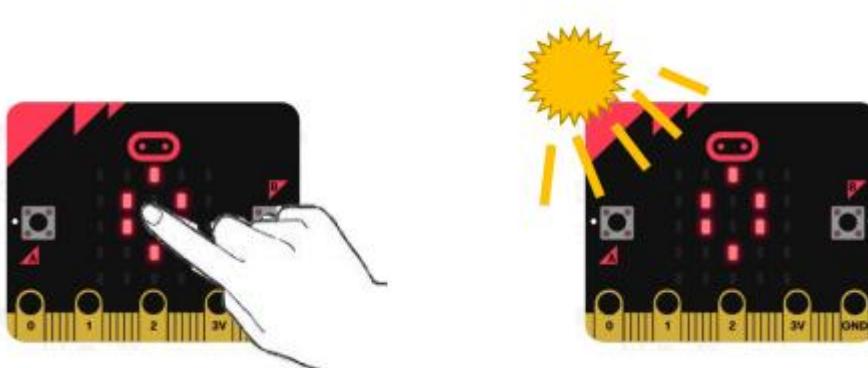

# LROBRUYA



```
from microbit import *
while True:
    item = display.read_light_level()
    print(item)
```

```
BBC micro:bit REPL
95
95
95
95
95
95
95
```

The following is the program code:

```
from microbit import *
while True:
    item = display.read_light_level()
    print (item)
```

## Reference

`display.read_light_level()`

Use the display's LEDs in reverse-bias mode to sense the amount of light falling on the display, return an integer between 0 and 255 representing the light level. The larger the value, the brighter the light..

## Project 14.2 Night Light


In this project, we will make a night light.



### Component list

#### Microbit x1



#### Extension board x1

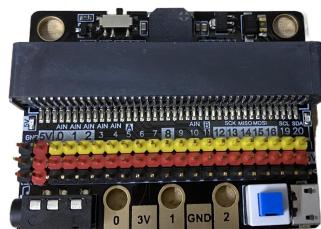

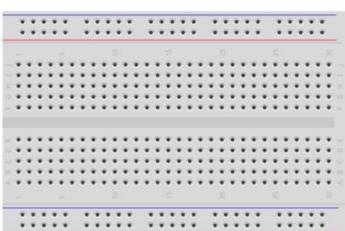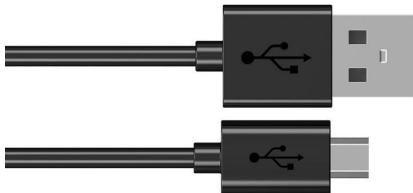
<b>Breadboard x1</b> 	<b>USB cable x1</b> 		
<b>F/M x 4</b> <b>M/M x1</b> 	<b>Photoresistance x1</b> 	<b>LED x1</b> 	<b>Resistor 10k Ω x1</b>  <b>Resistor 220 Ω x1</b> 

## Component knowledge


### Photoresistor

A Photoresistor is simply a light sensitive resistor. It is an active component that decreases resistance with respect to receiving luminosity (light) on the component's light sensitive surface. A Photoresistor's resistance value will change in proportion to the ambient light detected.

With this characteristic, we can use a Photoresistor to detect light intensity. The Photoresistor and its electronic symbol are as follows.

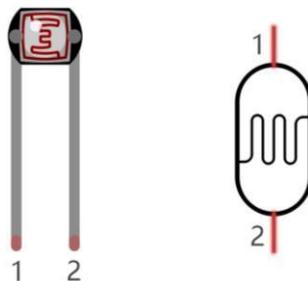


The circuit below is often used to detect the change of a photoresistor's resistance value:

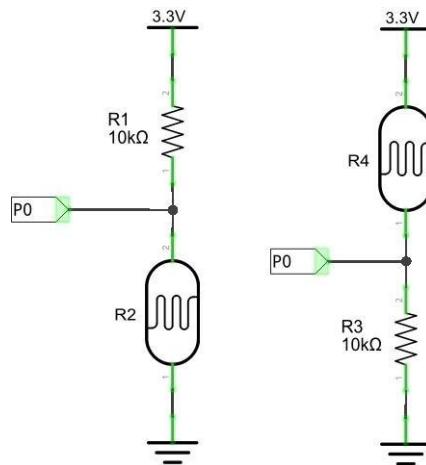

In the above circuit, when a Photoresistor's resistance value changes due to a change in light intensity, the voltage between the Photoresistor and Resistor R1 will also change. Therefore, the intensity of the light can be obtained by measuring this voltage.

## Circuit

# LROBRUYA

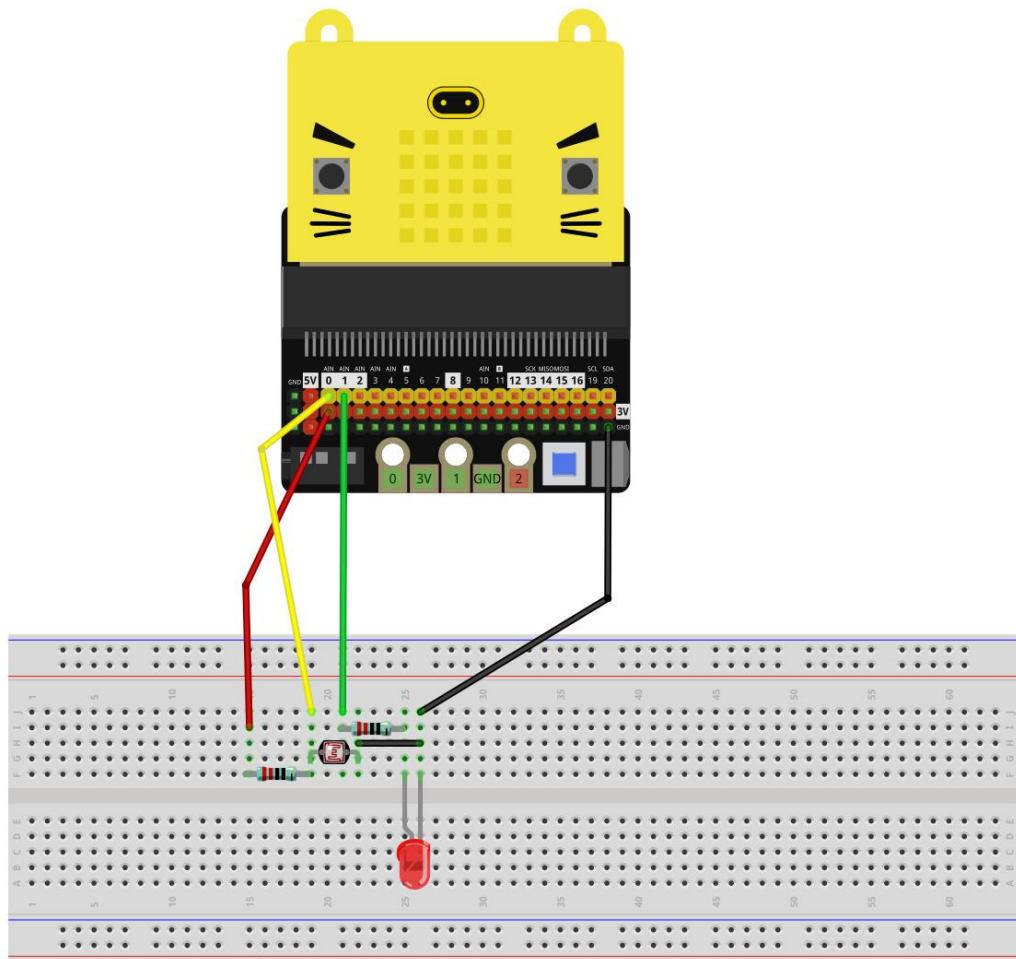


## Block code

Open MakeCode first. Import the .hex file. The path is as below:

File type	Path	File name
HEX file	..../Projects/BlockCode/14.2_NightLight	NightLight.hex

After importing successfully, the code is shown as below:

# LROBRUYA

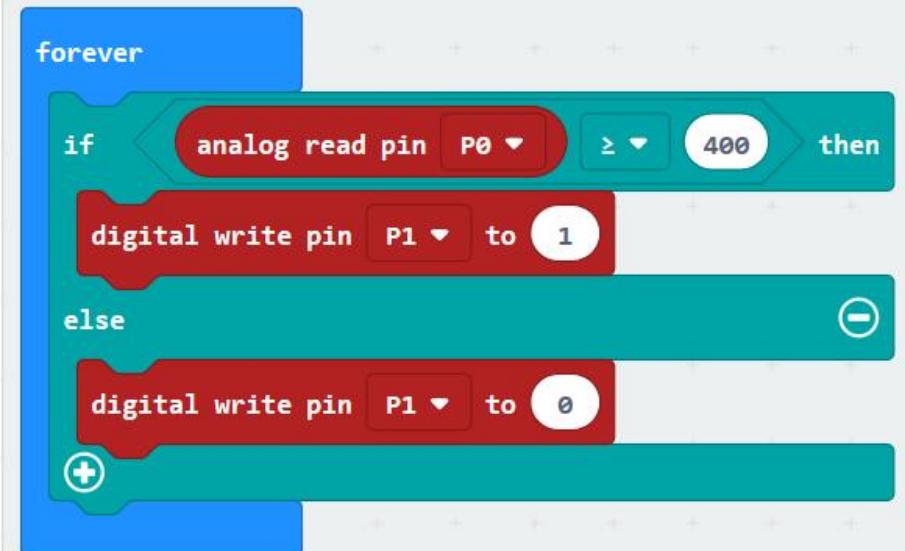


A Scratch script titled "forever" containing the following code:


```
forever
  if [analog read pin P0 >= 400] then
    [digital write pin P1 to 1 v]
  else
    [digital write pin P1 to 0 v]
```

The script uses the "analog read pin P0" sensor to control the "digital write pin P1". If the value is greater than or equal to 400, the pin is set to 1 (ON). Otherwise, it is set to 0 (OFF).

Check the connection of the circuit, verify it correct, and download the code into the micro:bit. Cover the photoresistor with your hand, the LED is turned ON. Move the hand away, the LED is turned OFF.

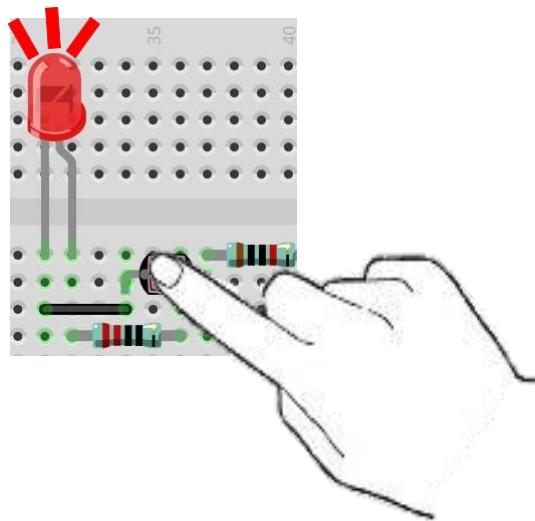


Read the analog voltage value of the P0 pin.

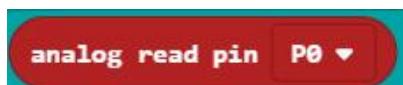

If the analog voltage read is greater than or equal to 400, it is considered to be occluded, and the LED is turned ON. Or the LED is turned OFF.

# LROBRUYA

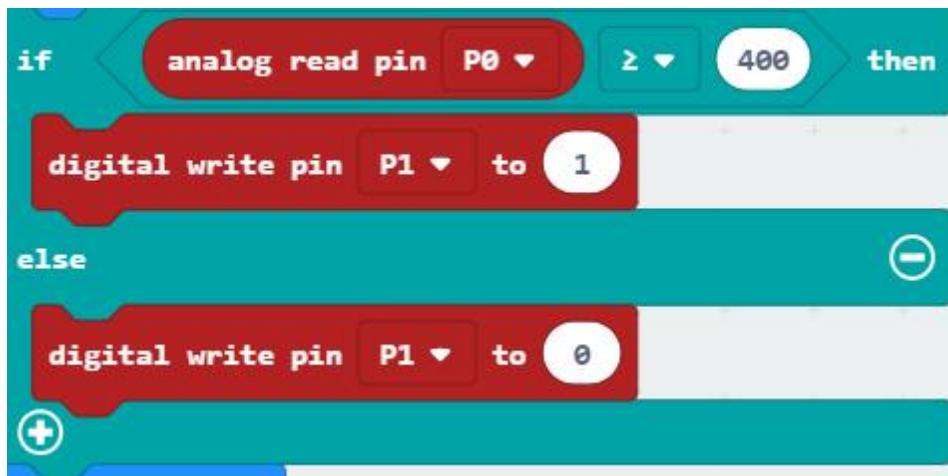

## Python code

Open the .py file with Mu. Code, the path is as below:

File type	Path	File name
Python file	..//Projects/PythonCode/14.2_NightLight	NightLight.py


After loading successfully, the code is shown as below:

```
1 from microbit import *
2 while True:
3     value = pin0.read_analog()
4     if value>=400:
5         pin1.write_digital(1)
6     else:
7         pin1.write_digital(0)
```

Check the connection of the circuit, verify it correct, and download the code into the micro:bit. Cover the photoresistor with your hand, then the LED is turned ON. Move the hand away, then the LED is turned OFF.

# LROBRUYA

---

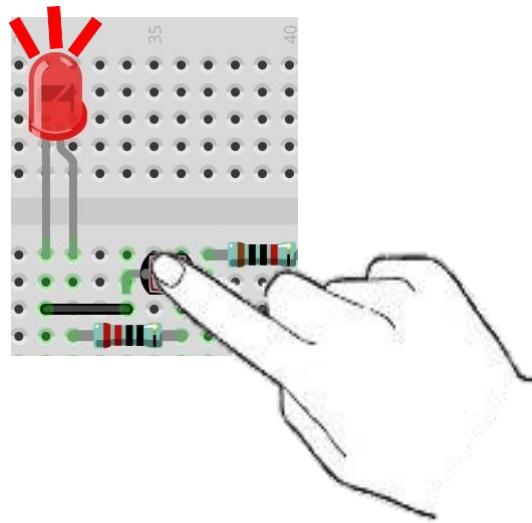

The following is the program code:

```
1 from microbit import *
2 while True:
3     value = pin0.read_analog()
4     if value>=400:
5         pin1.write_digital(1)
6     else:
7         pin1.write_digital(0)
```

Read the analog voltage value of the P0 pin.

```
value = pin0.read_analog()
```

If the analog voltage read is greater than or equal to 400, it is considered to be occluded, and the LED is turned ON. Otherwise the LED is turned OFF.

```
if value>=400:
    pin1.write_digital(1)
else:
    pin1.write_digital(0)
```


## Lesson 15 Temperature Sensor

In this chapter, we will learn the micro:bit built-in temperature sensor and thermistor.

### Project 15.1 Built-in Temperature Sensor

In this project, we measure the temperature with the micro:bit's built-in temperature sensor.

### Component list

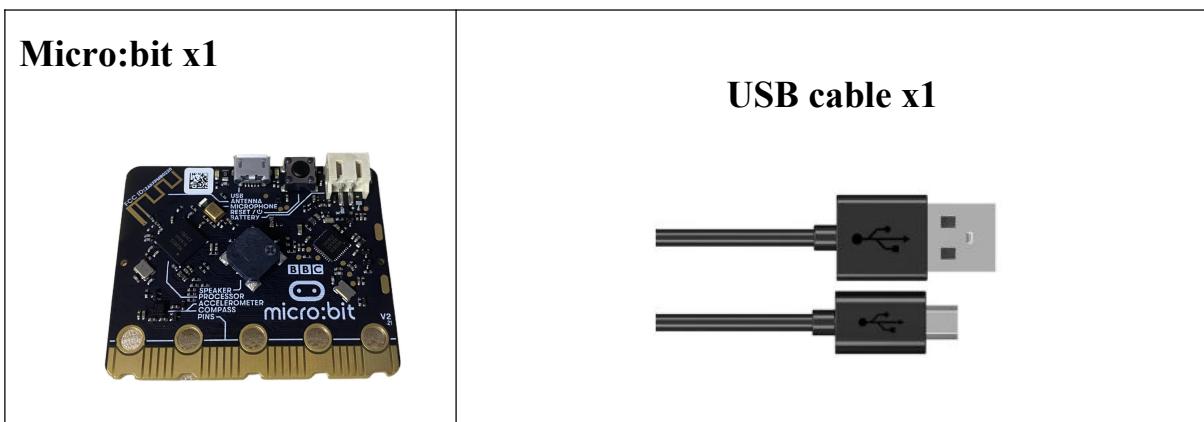

### Circuit

Connect micro:bit and PC via micro the USB cable.



# LROBRUYA

## Block code

Open MakeCode first. Import the .hex file. The path is as below:

File type	Path	File name
HEX file	../Projects/BlockCode/15.1_BuiltInThermometer	BuiltInThermometer.hex

After importing successfully, the code is shown as below:



Check the connection of the circuit, verify it correct, and download the code into micro:bit, and then LED dot matrix screen will display the current detected temperature.

## Reference

Block	Function
temperature (°C)	Detect the temperature of the environment where you are. The temperature is measured in Celsius (metric).

## Python code

Open the .py file with Mu. Code, the path is as below:

File type	Path	File name
Python file	../Projects/PythonCode/15.1_BuiltInThermometer	BuiltInThermometer.py

After loading successfully, the code is shown as below:

# LROBRUYA



The screenshot shows the Mu 1.0.2 IDE interface. The title bar reads "Mu 1.0.2 - BuiltinThermometer.py". The menu bar includes "File", "Edit", "Run", "Terminal", "Help". The toolbar contains icons for Mode, New, Load, Save, Flash, Files, REPL, Plotter, Zoom-in, Zoom-out, Theme, Check, Help, and Quit. The code editor window contains the following Python code:

```
1 from microbit import *
2 while True:
3     display.scroll(temperature())
```

Check the connection of the circuit, verify it correct, and download the code into micro:bit, and then LED dot matrix screen will display the current detected temperature.

The following is the program code:

```
1 from microbit import *
2 while True:
3     display.scroll(temperature())
```

Display the detected temperature on the LED dot matrix.

```
display.scroll(temperature())
```

## Reference

temperature()

Return the temperature of the micro:bit in Celcius.


display.scroll()

scrolls a string across the display

## Lesson 16 Clapping hands and heartbeat

In this project, we will learn to use a micro:bit onboard microphone to clap your hands and make the heart-shaped pattern on the dot matrix jump.

### Component list

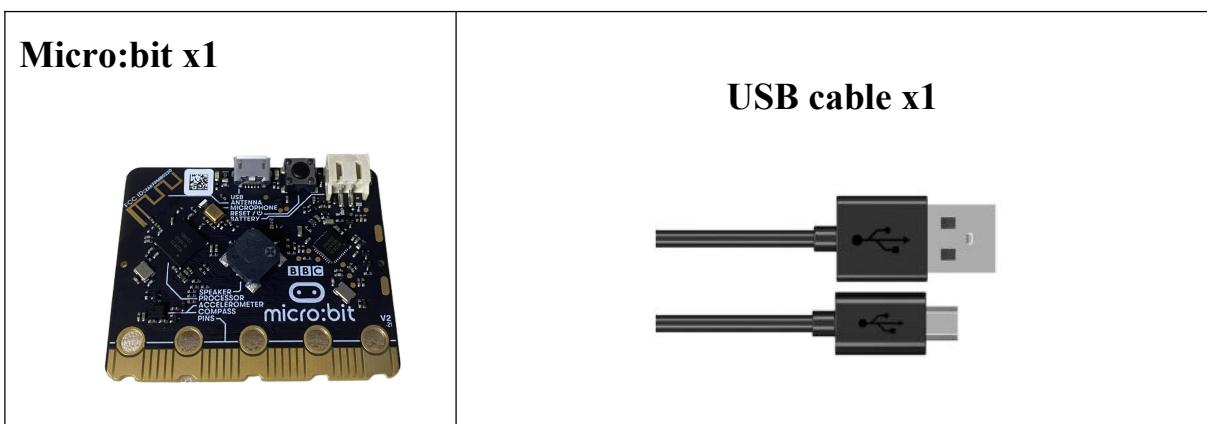

### Circuit

Connect micro:bit and PC via micro the USB cable.




### Block code

Open MakeCode first. Import the .hex file. The path is as below:

# LROBRUYA

File type	Path	File name
HEX file	..//Projects/BlockCode/16.1_Clapping	Clapping.hex

After importing successfully, the code is shown as below:

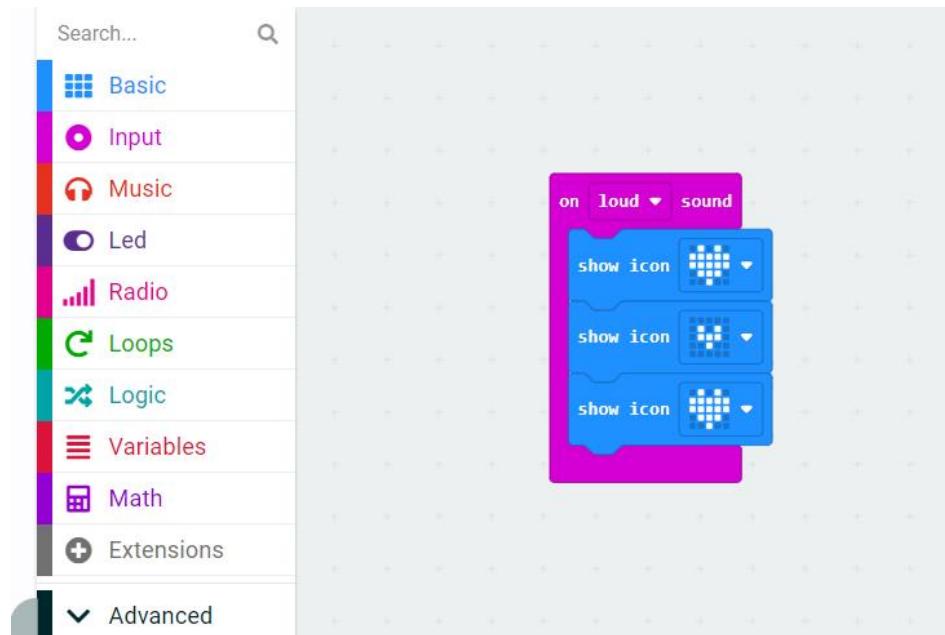

Whenever the motherboard receives sound input, the heart-shaped pattern of the motherboard lattice will switch, creating a heart beating effect.

## Reference

Block	Function
	The microphone will detect sounds that are quiet or loud. You can have the microphone detect a sound at a certain level and run some code in and event when it hears the sound. There are two sound ranges you can detect for: loud or quiet.


## Python code

Open the .py file with Mu. Code, the path is as below:

File type	Path	File name
Python file	..//Projects/PythonCode/16.1_Clapping	Clapping.py

After loading successfully, the code is shown as below:

# LROBRUYA

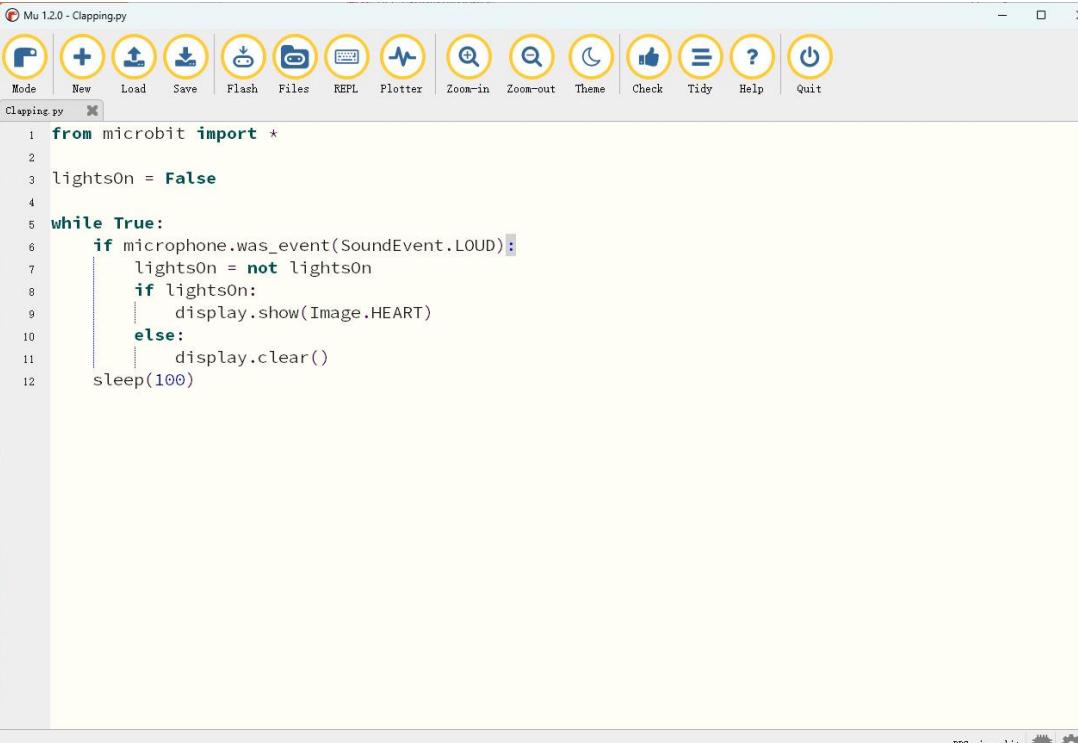

from microbit import \*

lightsOn = False

while True:

if microphone.was\_event(SoundEvent.LOUD):

lightsOn = not lightsOn

if lightsOn:

display.show(Image.HEART)

else:

display.clear()

sleep(100)