PCB v1.0 Important information


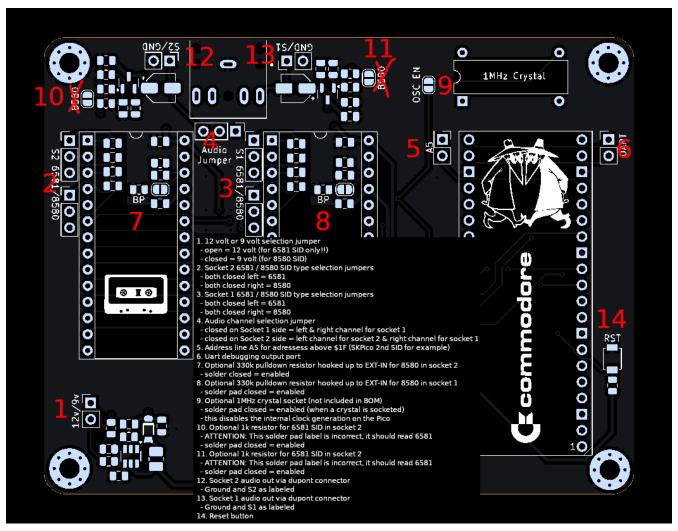



Figure 1. Explained

1. 12 volt or 9 volt selection jumper

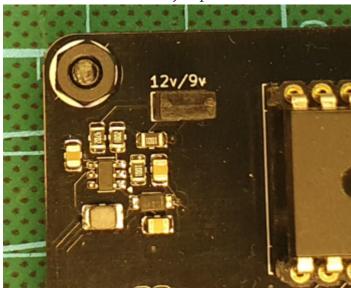


- open = for 6581 SID only!! (12 volts)
- closed = for 8580 SID (9 volts)

2. Socket 2 6581 / 8580 SID type selection jumpers

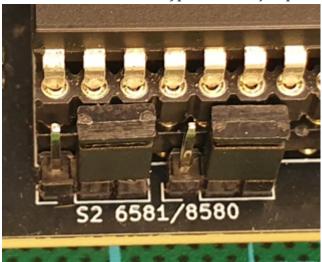

- both closed left = 6581
- both closed right = 8580
- 3. Socket 1 6581 / 8580 SID type selection jumpers

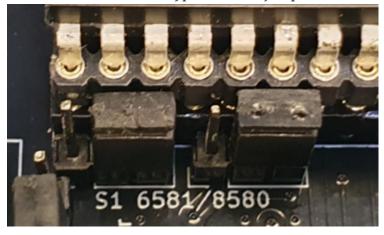


- both closed left = 6581
- both closed right = 8580
- 4. Audio channel selection jumper




- ∘ closed on Socket 1 side = left & right channel for socket 1
- 。 closed on Socket 2 side = left channel for socket 2 & right channel for socket 1
- 5. Address line A5 for adressess above \$1F (SKPico 2nd SID for example)




- $_{\circ}\,$ both pins are routed to the same GPIO for using adresses higher then \$20
- 6. Uart debugging output port

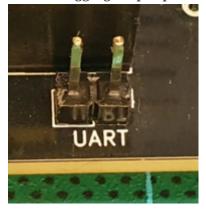


- \circ TX on the right
- RX on the left
- 7. Optional 330k pulldown resistor hooked up to EXT-IN for 8580 filter bypass in socket 2

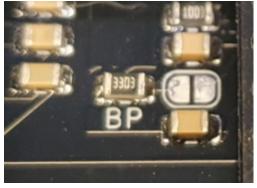

- solder closed = enabled
- 8. Optional 330k pulldown resistor hooked up to EXT-IN for 8580 filter bypass in socket 1

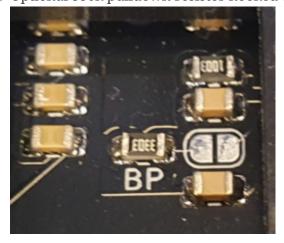


- solder pad closed = enabled
- 9. Optional 1MHz crystal socket (not included in BOM)

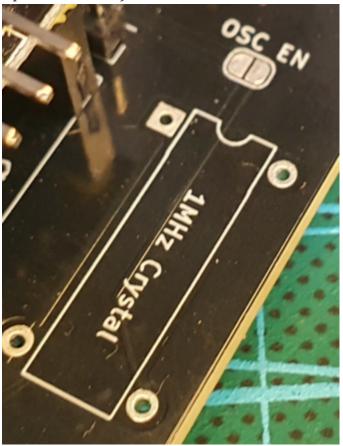

- solder pad closed = enabled (when a crystal is socketed)
- $\circ~$ this disables the internal clock generation on the Pico
- 10. Optional 1k resistor for 6581 SID in socket 2
 - ATTENTION!: This solder pad label is incorrect, it should read 6581!




- solder pad closed = enabled
- 11. Optional 1k resistor for 6581 SID in socket 2
 - ATTENTION!: This solder pad label is incorrect, it should read 6581!

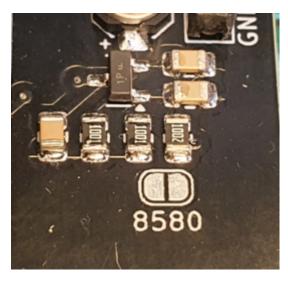


• solder pad closed = enabled

12. Socket 2 audio out via dupont connector

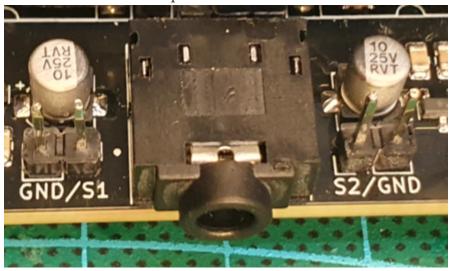

• Ground and S2 as labeled

13. Socket 1 audio out via dupont connector

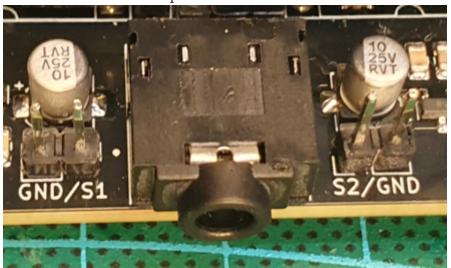

• Ground and S1 as labeled

14. Reset button

