Doc

2020/11/8

Contents

1	The files	1	
2	System requisites	1	
3 Creating the robot object			
4	The simulator 4.1 Geometric Model 4.2 Kinematic Model 4.3 P block 4.4 J# block 4.5 R,DCL block	2 3 3 4 4 4	
5	How to use	5	

1 The files

The files are:

- 1. create_rob.m, a MATLAB script containing a function to create a robot object and its variables
- 2. model.slx, the Simulink simulation
- 3. Other MATLAB scripts used internally by the simulator

2 System requisites

The program runs on any operating system, provided that MATLAB, Simulink and Peter's Corke Robotic Toolbox are installed.

3 Creating the robot object

The structure of the serial manipulator must be specified in a file with the following structure:

Content	Example
number of joints	3
type of each joint $(0 = \text{revolute}, 1 = \text{prismatic})$	0 0 0
DH parameters (θ, d, a, α) for each joint	1.5708 0.08 0 0
	0 0 0 1.5708
	0 0 0.15 0
DH parameters specifying the end effector config wrt last joint	0 0 0.21 0
Lower joint limits	-3.14 -3 -3
Upper joint limits	3.14 3 3

Number of tasks to be executed	1
Name of each task followed by associated gain	distance 1
Mode of execution	sim
Name of robot	zrobot

Mode of execution can be:

1. run: simulation without plot

2. sim: simulation: with plot

3. real: input joint positions to real robot (to be worked on)

4. all: combines sim and real

The possible tasks are: distance, alignment (more to be added).

To create the variables of the robot object, the command create_rob(filename) where filename is the path of the file described above.

4 The simulator

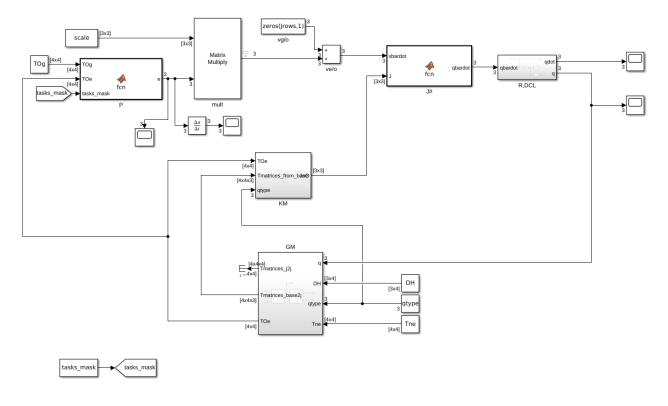


Figure 1: The Simulink scheme.

The main Simulink scheme of the simulator is shown in Figure (1). It is composed of 5 main components:

- 1. GM (Geometric Model) block
- 2. KM (Kinematic Model) block

- 3. P block
- 4. J# block
- 5. R,DCL block

4.1 Geometric Model

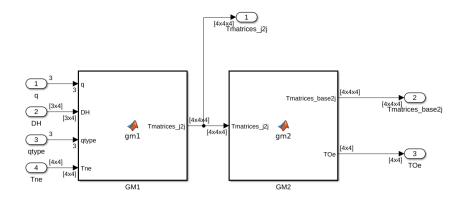


Figure 2: The Geometric Model.

The Geometric Model computes the transformation matrices. It is divided into 2 modules:

- 1. gm1 takes as input the q vector and the variables specifying the topology of the robot, and outputs the vector of transformation matrices from joint to joint, that is, $i^{-1}T$, i = 1, ..., n, e.
- 2. gm2 takes as input the output of gm1 and outputs the transformation matrices from base to joint (that is, ${}^{O}_{i}T, i=1,..,n$) and ${}^{O}_{e}T$.

The 2 modules are MATLAB functions.

4.2 Kinematic Model

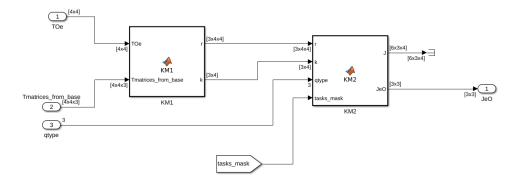


Figure 3: The Kinematic Model.

The Kinematic Model computes the Jacobian matrices (for now only the basic ones). It is divided into 2 modules:

1. km1 takes as input the transformation matrices $_e^OT$ and the ones from base to each joint $(_i^OT, i=1,...,n)$. It outputs two collections of data:

- \mathbf{r} , whose (i, j, k)-th element is the i-th component of the ray vector $r_{k,j-1}$ (where the -1 is due to MATLAB's indexing convention starting from 1), projected in base frame.
- k, whose (i, j)-th element is the i-th component of ${}^{O}k_{i}$ (z axis of the frame associated to joint i, projected in base coordinates).
- 2. km2 takes the output of km1 as input, and computes:
 - J, whose (i, j, k)-th element is the (i, j)-th element of the basic Jacobian of frame k with respect to the base (i.e. J contains all the basic Jacobians computed with respect to base frame).
 - JeO, the Jacobian of the end effector, with respect to base frame, required for the task specified in the simulations.

4.3 P block

The P block consists of a MATLAB functions which computes the error between end effector and goal frames, starting from the transformation matrices of the two frames.

Inputs: ${}_{e}^{O}T, {}_{g}^{O}T$

Output: the error vector, with structure

$$\mathbf{e} = egin{bmatrix}
ho_{g/e} \ \eta \end{bmatrix}$$

where $\rho_{g/e}$ is the misalignment between end effector and goal frame, and η is the distance between the two frames.

In case the file specifies only the "distance" or "alignment" tasks, only the corresponding part of the error vector will be computed.

To compute $\rho_{q/e}$ from the input transformation matrices, the unit vector lemma is used.

4.4 J# block

The J# block consists of a MATLAB functions which performs the inverse kinematics.

Inputs: $\dot{\bar{\mathbf{x}}}$ (desired end effector velocity), J (end effector Jacobian wrt base frame)

Output: $\dot{\mathbf{q}}$ (desired joint velocities)

To compute the joint velocities, SVD decomposition is used. SVO regularization is performed using a straight line regularization function (to be improved); the regularization threshold can be modified by changing the variable SVO_thr.

4.5 R,DCL block

The R,DCL block simulates the real robot.

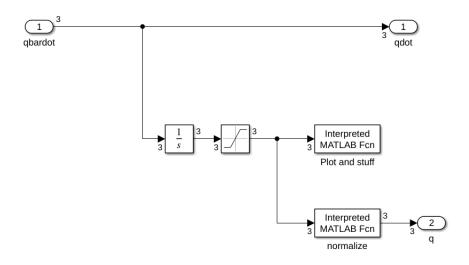


Figure 4: The R,DCL block internals.

For now, it doesn't actually implement the DCL; the joint velocities are simply returned without any modification. The other output are the joint positions, obtained by integrating the joint velocities, applying the joint limits (using a saturator) and normalizing them in the range $[-\pi, \pi]$.

There is also a block that plots the robot configuration using graphics from Peter Corke's Robotics Toolbox (for now).

5 How to use

To use this library to simulate your favourite serial manipulator, you have to:

- 1. Create a robot file as explained in .. and call the function create_robot on it.
- 2. In the Simulink model, change the input of the TOg and vg/O blocks.
- 3. Run the Simulink scheme.

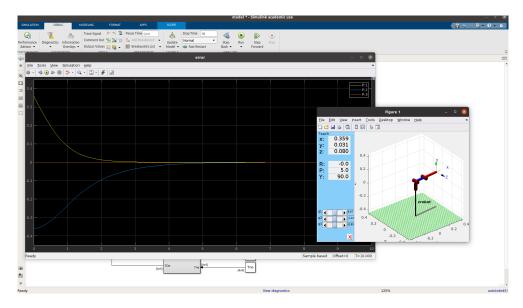


Figure 5: Image from a simulation: on the left the simulation position error, on the right the graphical representation of the robot.