Nermo Robot

User Manual

Peer Lucas

This Manual and the Robot resources are available free of charge from:

https://github.com/Luchta/nermo_robot (Hardware)

https://github.com/Luchta/nermo_code (Code)

https://github.com/Luchta/nermo_simulation (Simulation)



Abstract

This manual serves to build, assamble and use the final version of the Neurorobotic mouse robot, also called Nermo. This biomimetic robot is modular and low-cost; it was created to mimic the locomotion of a rodents, and has the size of a common rat (Rattus Norvegicus). The robot is untethered, easy to use and simple to produce; it thus can be used as a universal research platform. It is based on tendon-driven actuation, which enables the implementation of a compliant leg and body design and thus enables adaptive and dynamic walking motions. Small biomimetic robots can be useful for behavioural/social studies in combination with animals, or for investigating new, efficient types of locomotion for exploration systems. Combined with digital twins, they are a useful tool to reduce the reality gap between simulation and the real world.

Key words

Rodent; mouse; rat; robot; locomotion; biomimetic; tendon-driven actuation; Nermo.

Table of Contents

1	Intro	oductio	n	1
2	Part	s List		2
	2.1	Custor	n Parts and Reusables	3
3	Pren	aration	as .	4
	3.1	Electro		4
		3.1.1	Servos	4
		3.1.2	Spine Adapter Board	4
		3.1.3	Leg Sensor Board	5
		3.1.4	USB Hub	5
		3.1.5	Wire Harness	6
	3.2	Rewor	king printing parts	7
	3.3	Coils		8
4	Com	ponent	s Assembly	9
	4.1	Hindle	•	10
	4.2	Hindle	g Module	11
	4.3	Forele		12
	4.4	Forele	g Module	12
	4.5	Body I	Module	13
	4.6		and Compute Module	14
	4.7	Tail		16
	4.8	Head		17
5	Who	le Rob	ot Assembly	19
	5.1	Stringi	ng	20
		5.1.1	Foreleg	20
		5.1.2	Hindleg	20
		5.1.3	Body Module	21
		5.1.4	Tail Module	22
			-line Assembly	22
	5.3	Wiring		23
6	First	t Setup		25
7	Usag	ge		26
	7.1	Chargi	ng	26
	7.2	Conne	cting	26
Re	feren	ces		27
			List of Tables	
Tal	ole 1	All addi	tional parts needed from the original PowerHD HD-DSM44 Servo pack-	
141		ages.	norm parts needed from the original remotilib fib bonit of our pack-	3
			List of Figures	
Fis	g. 1	Assemb	ly of the custom Servos	4

Fig. 2	Spine assembly board with all regulator and adapter boards.	4
Fig. 3	Leg and pressure sensor prepared with wire.	5
Fig. 4	Disassembly of the USB Hub.	
Fig. 5	Assembly of the USB Hub with the cameras.	5
Fig. 6	Wire harness for connecting the 13 servos to the Spine Adapter Board.	6
Fig. 7	Detail view of the wire pathways in the body of the robot in red. The pathways	
	are symmetrical. Top: transparent body, Bottom: Solid body	7
Fig. 8	Detail view of the wire pathways in the tail of the robot in red. The pathways are	
	symmetrical. Top: transparent body, Bottom: Solid body	7
Fig. 9	Assembly of the tendon coils. Top: Body coil, Bottom: Leg coil	8
Fig. 10	NeRmo Module tree.	ç
Fig. 11	Exploded view of the Robot, without the left foreleg.	9
Fig. 12	Assembly Process for the Hindlegs.	10
Fig. 13	Hindleg of the Robot.	11
Fig. 14	Assembly of the Body module.	13
Fig. 15	Assembled Body module with transparent Body.	13
Fig. 16	Assembly of the charging coil to the Power and Compute Module.	14
Fig. 17	Assembly of the Power and Compute Module.	15
Fig. 18	Connection of the charging board and the Spine Adapter board.	15
Fig. 19	Assembly of the Tail Module	16
Fig. 20	Head Module components	17
Fig. 21	Assembly and schematic of the Head Sensors.	18
Fig. 22	Assembly of the Head steps A-E.	18
Fig. 23	Assembly of all sub modules to the complete Nermo Robot.	19
Fig. 24	Stringing of the foreleg.	20
Fig. 25	Stringing of the hindleg.	20
Fig. 26	Stringing of the lateral tendon on the body module.	21
Fig. 27	Stringing of the flex tendon on top of the body module.	21
Fig. 28	Stringing of the foreleg.	22
Fig. 29	Assembly of the centre line of the robot.	22
Fig. 30	Attaching the Wiring harness to the leg modules	23
Fig. 31	Attached Wire harnesses to the Spine, and both Leg sides.	23
Fig. 32	Power and compute module connectors.	24
Fig. 33	Power and compute module attached to the body module with connected usb plug.	24

1. Introduction

The present report details the evolution of the so-called Neurorobotic Mouse robot, and presents the main features of its latest release. The development of that robot was initiated in 2018 [1] with the view to become a general-purpose research robot for roboticists and neuroscientists alike. Over the last two years, four main successive versions [2] were built before finally obtaining the final version described herein. The minimal set of features for such a robot to be useful to all intended users [2] are:

- Flexible and functional backbones.
- Biologically relevant limbs with a small number of parts (for ease for build).
- A functional tail (for facilitating balance and locomotion).
- A sensory system sufficient to provide the robot with capabilities for autonomous navigation and decision-making.
- Tendon-driven actuation that mimics the biological musculoskeletal system of a rodent.

Additionally, the perquisites for this project where to create a low-cost and modular robot, in order to facilitate uptake of the device in the research community. These features were already realized with the last version of this robot [2]. The Final version presented herein features multiple improvements over previous iterations, especially ease of assembly and robustness to allow for a wider user group. Additionally, we created a digital twin of the robot (i.e. a simulated model, reproducing the characteristics of the real one with as much fidelity as possible) within the Neurorobotics Platform (NRP).

2. Parts List

Category	Item	Description	Quantity
Electronics			
	Raspberry Pi Zero W	Main Computer	1
	Micro SD memory card	Storage for RasPi	1
	Akku-Pack, Li-Polymer, 7,4 V 1000 mAh, 2, 25 C	Battery	1
	Nose Touch Button	Nose Touch Button	1
	1.0mm 1.0 SH Micro JST with 15cm Wire	Cable to connect Servos	17
	Cable to connect leg sensor PCB	Cable to connect leg sensor PCB	4
	0-200g Thin Film Pressure Sensor	Foot Pressure Sensor	4
	Micro USB Hub	USB Hub for Cameras	1
	U1-MWD	Camera in Head	2
	Modified PowerHD HD-DSM44	Motors	13
	Spine Adapter Board	Power and Motor control	2
	Leg Sensor Board	Angle and Pressure sensor	2
	4 Hole Wiring Board	Wiring Harness	2
	5 Hole Wiring Board	Wiring Harness	1
Mechanics			
	M2x8	Head Tilt Axis	1
	M2x6	Camera holder	1
	M2x14	Tail Mount	1
	M2 Stop-nut	Tail Mount	1
	M1x4	Leg-Wire Fixes	20
	M1x12	Servo PCB	16
	M1*3	Leg-Wire Fixes	10
	M1x8	Hip Fix	8
	Magnet 4x4 mm	Leg Sensor Magnet	8
	M2,5*6,5	Distance holder for RasPi	4
	India rubber tape self-adhesive	Feet covering	1
	Perlon thread ø0,3 mm length 50 m	Tendons	1
3D Prints			22
	Body	Main Body of the Mouse	1
	Body Coil	Small Coils for Tendons	2
	Body Solarplexus	Holder for Battery and Raspi	1
	Head	Robot Head	1
	Head Camera mount	mount for all head components	1
	Head Neck	Connection Head-Body	1
	Hip	Servo Mount for all Legs	4
	Leg Coil	Coils for Leg tendons	4
	Leg Fore Left	Left Foreleg	1
	Leg Fore Right	Right Foreleg	1
	Leg Hind Left	Left Hindleg	1
	Leg Hind Right	Right Hindleg	1
	Leg Hind Linkage	Linkage for Hindlegs	2
	Tail	Tail	1

2.1 Custom Parts and Reusables

Some parts come with the Servos, that will be used in the build.

Item	Description	Quantity
Servo Horn Cross	All Coils	6
Servo Horn Lever	Legs and Neck	5
Servo Horn Bar	Neck and Tail	2
Servo Horn Screw	Mount all Horns	13
Attachment Screw	Mount all Servos	26

Table 1. All additional parts needed from the original PowerHD HD-DSM44 Servo packages.

3. Preparations

There are some preparations to be taken before the robot can be assembled.

3.1 Electronics

Additionally to the Servo PCBs there are two types of PCBs that will have to be assembled before the robot can be build. Those are the Spine Adapter Board and the Leg Sensor Board. For both boards the eagle files and assembly manuals can be found in the folder "/Electronics/Eagle/"

3.1.1 Servos

Before starting with the Robot's assembly, make sure that you have 13 assembled servos. The Manual on how to assemble the custom servos can be found in the same directory as this manual (Servo_Assembly.pdf) Figure 1 shows a overview of the assembly process.




Fig. 1. Assembly of the custom Servos

3.1.2 Spine Adapter Board

The Spine Adapter board goes on top of the Raspberry Pi Zero and handles communication and power distribution in the robot. Additionally to the PCB there are some off the shelf parts, that are added to the board as shown in Figure 2.

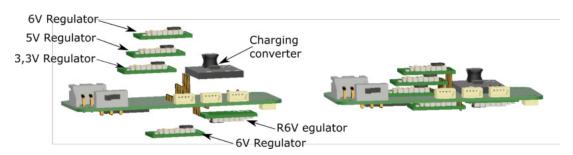


Fig. 2. Spine assembly board with all regulator and adapter boards.

3.1.3 Leg Sensor Board

The leg sensor boards have a hall sensor to measure the knee/elbow angles as well as a ADC to measure the ground pressure with the pressure sensors. To have less work later on you can solder wires already to the according pads (Figure 3).

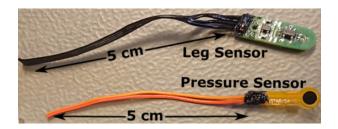


Fig. 3. Leg and pressure sensor prepared with wire.

3.1.4 USB Hub

To address the cameras in the Head, we used a simple USB-Hub. This Hub can be bought from Amazon or anywhere else. We only need the core pcb as shown in Figure 4. After Disassembly, the cameras and a USB cable can be soldered to the USB Hub as shown in Figure 5.

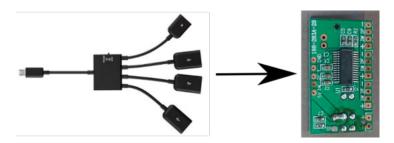


Fig. 4. Disassembly of the USB Hub.

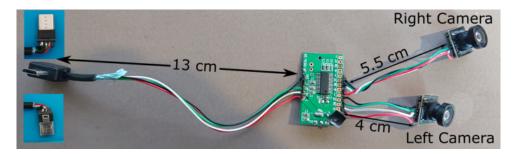


Fig. 5. Assembly of the USB Hub with the cameras.

3.1.5 Wire Harness

The following three wiring harnesses have to be build according to the specification in Figure 6

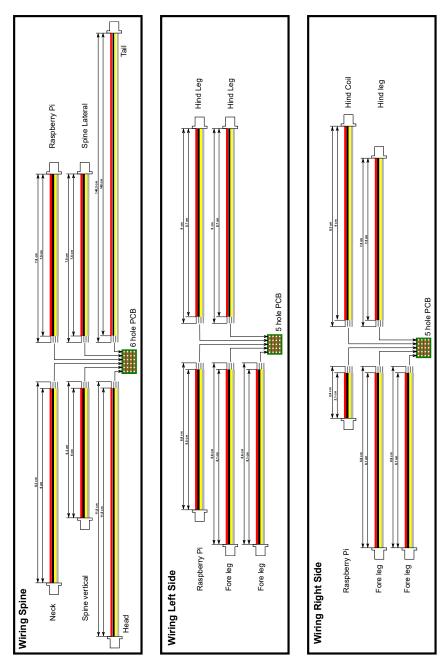


Fig. 6. Wire harness for connecting the 13 servos to the Spine Adapter Board.

3.2 Reworking printing parts

In order to be able to insert the wires to actuate the spine and tail, you will have to ensure, that the pathways are clear. The pathways are usually blocked slightly by residue of the Nylon powder used for 3D printing. This is most easily achieved by pushing a wire or a needle through the entire length of the respective pathway.

There are 5 Pathways to be cleared, three in the Body of the robot (Figure 7) and two in the Tail (Figure 8).



Fig. 7. Detail view of the wire pathways in the body of the robot in red. The pathways are symmetrical. Top: transparent body, Bottom: Solid body

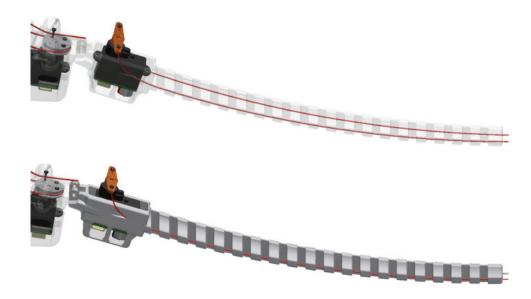


Fig. 8. Detail view of the wire pathways in the tail of the robot in red. The pathways are symmetrical. Top: transparent body, Bottom: Solid body

3.3 Coils

To attach the tendon coils to the servos, servo horns have to be attached to the 3D printed parts. This is best achieved by using Super glue, please ensure that the servo horns are fitted fully into the coils.

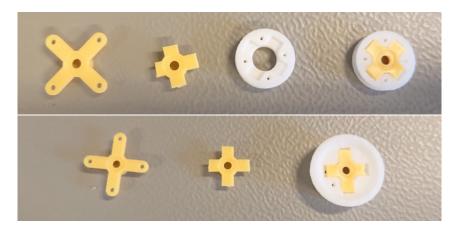


Fig. 9. Assembly of the tendon coils. Top: Body coil, Bottom: Leg coil

4. Components Assembly

The Robot can be separated into multiple Modules as shown in Figure 10. These modules will be assembled each on their own, until the full robot can be completed.

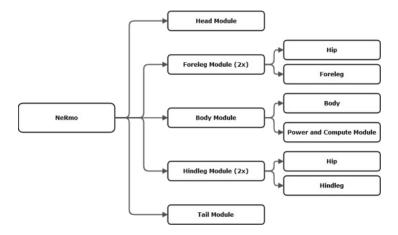


Fig. 10. NeRmo Module tree.

The modules can be seen in Figure 11 labelled on the actual Robot.


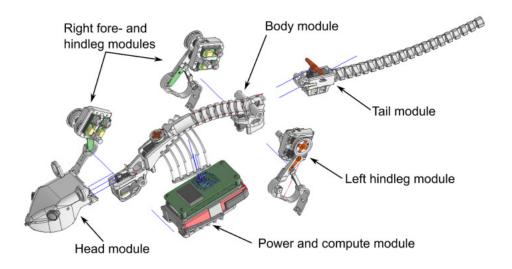


Fig. 11. Exploded view of the Robot, without the left foreleg.

For this manual, we will start with the Leg modules and work ourselves on to the full robot.

4.1 Hindleg

Needed Parts:		
Item	Quantity	
Leg Hind Left/Right (3D-Print)	1	
Leg Hind Linkage (3D-Print)	1	
M1x4 (Screw)	2	
Servo Horn (Servo Parts)	1	
Leg Sensor PCB with Wire	1	
Pressure Sensor PCB with Wire	1	
4x4x4 mm Magnet	1	
small piece rubber tape	1	

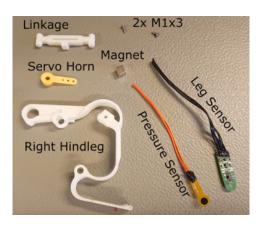

The process is the same for the left and the right Hindleg. All mounting holes are included in the 3D print, you might have to clean up the holes but you will not need to drill new holes for mounting. If you drill new holes you are placing the component wrong.

- A First screw the Servo Horn in place.
- B Push the Magnet into the provided Space in the Knee. WARNING! Make sure, that the separation line of the magnet poles is as indicated on the picture or the sensor will not work.
- C Screw the Leg Sensor in the provided place on the other side of the Leg. Make sure that the Hall sensor is facing the Magnet.
- C,D Thread the Pressure sensor cables through the hole in the foot (1), the guide on the ankle (2) and the guide on the Linkage (3) up to the Leg Sensor.
 - E Solder the pressure Sensor to the Leg sensor and add the rubber tape to the sole of the Foot.

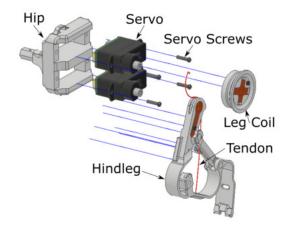


Fig. 12. Assembly Process for the Hindlegs.

4.2 Hindleg Module

The Hindleg Module combines the Hindleg with the Hip, the Servos and the Coil for the Leg Tendon. The Stringing of the Tendons itself will be handled in its own section later on.

Needed Parts:	Quantity
Hindleg Left/Right	1
Hip (3D-Print)	1
Leg Coil (3D-Print)	1
Servo Horn Cross (Servo Parts)	1
Servos (ID 0)	1
Servos (ID 1)	1
Servo mount screws (Servo Parts)	4



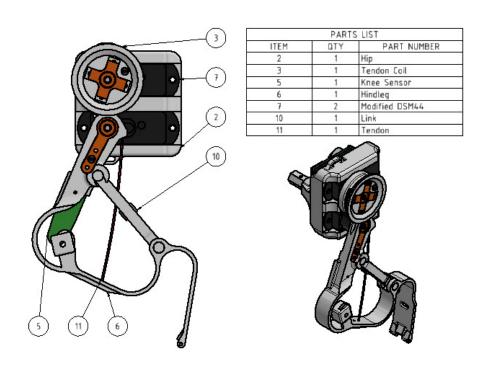


Fig. 13. Hindleg of the Robot.

Foreleg

Needed Parts:		
Item	Quantity	
Leg Fore Left/Right (3D-Print)	1	
M1x4 (Screw)	2	
Servo Horn (Servo Parts)	1	
Leg Sensor PCB with Wire	1	
Pressure Sensor PCB with Wire	1	
4x4x4 mm Magnet	1	
small piece rubber tape	1	







The process is the same for the left and the right Foreleg. All mounting holes are included in the 3D print, you might have to clean up the holes but you will not need to drill new holes for mounting. If you drill new holes you are placing the component wrong.


- A First screw the Servo Horn in place.
- B Push the Magnet into the provided Space in the Knee. WARNING! Make sure, that the separation line of the magnet poles is as indicated on the picture or the sensor will not work.
- C Screw the Leg Sensor in the provided place on the other side of the Leg. Make sure that the Hall sensor is facing the Magnet.
- C Thread the Pressure sensor cables through the hole in the foot.
- C Solder the pressure Sensor to the Leg sensor and add the rubber tape to the sole of the Foot.

Foreleg Module

The Foreleg Module combines the Foreleg with the Hip, the Servos and the Coil for the Leg Tendon. The Stringing of the Tendons itself will be handled in its own section later on.

Needed	Parts:

Item	Quantity
Foreleg Left/Right	1
Hip (3D-Print)	1
Leg Coil (3D-Print)	1
Servos (ID 2)	1
Servos (ID 3)	1
Servo-horn Cross (Servo Parts)	1
Servo mount screws (Servo Parts)	4

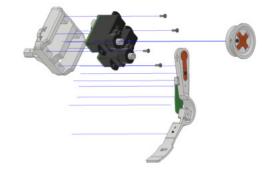

4.5 Body Module

Item	Quantity
Body (3D-Print)	1
Body coil (Preparations)	2
Servo (ID 0,1,3)	3
M1x3 (Screw)	3
M1x4 (Screw)	3
Servo mount screw (Servo Part)	6
Servo-horn bar (Servo Part)	1

The Body module is the base structure to which every module will be attached. It houses the actuators for the Neck, the stretching of and the left/right movement of the spine. The Parts are shown in Figure 14. The Later Flex Servo can not be inserted directly, but has to be slided in from the front before moving it upwards in the final resting position as shown in Figure 15.

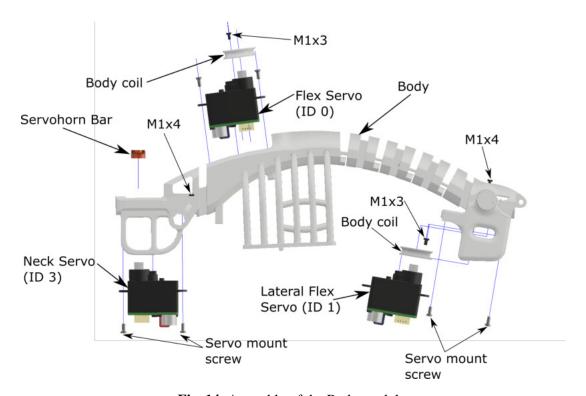


Fig. 14. Assembly of the Body module.

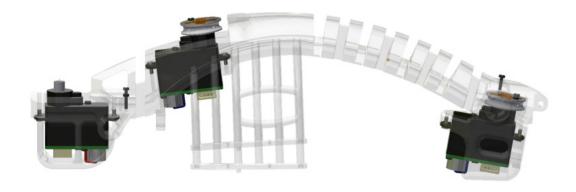
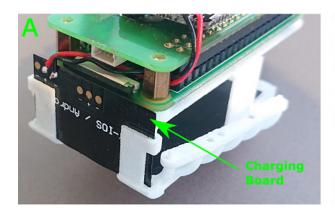


Fig. 15. Assembled Body module with transparent Body.

4.6 Power and Compute Module

Item	Quantity
Body Solarplexus (3D-Print)	1
Spine Adapter board	1
Raspberry Pi Zero WH	1
M2.5x4 (Screw)	4
M2.5x6.5 Distancer	4
1000 mAh 7.4 V Battery	1
Wireless charging coil	1
Epoxy glue	1

If you want to have the wireless charging feature for the robot, you will have to attach the charging coil to the Solarplexus as shown in Figure 16. First insert the Charging Board into the slot at the front of the Solarplexus (A), then you can bend the coil on to fit into the bottom of the Solarplexus and glue it in place with the Epoxy (B). Finally add the Protective shield that comes with the charger into the battery compartment.





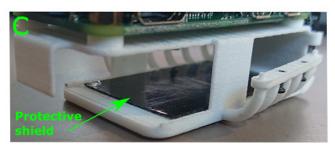


Fig. 16. Assembly of the charging coil to the Power and Compute Module.

Then you can attach the Raspberry Pi and the Spine Adapter board on top of the Solarplexus using the distancers and the screws as shown in Figure 17. Finally to attach the charger to the Spine adapter board, solder a wire from the charging board to the converter board on the Spine Adapter board as shown in Figure 18.

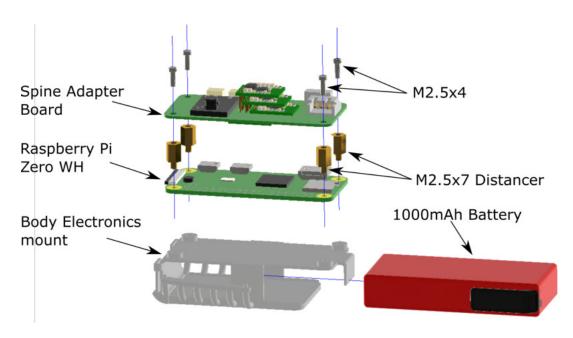


Fig. 17. Assembly of the Power and Compute Module.

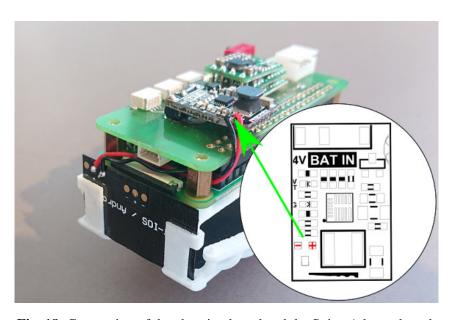


Fig. 18. Connection of the charging board and the Spine Adapter board.

4.7 Tail

Item	Quantity
Tail (3D-Print)	1
Servo (ID 2)	1
M1x3 (Screw)	2
M1x2 (Screw)	2
Servo mount screw (Servo Part)	2
Servo-horn screw (Servo Part)	1

For the tail, only one motor has to be attached in the according cage, including the servo horn and some screws needed for stringing later on, see Figure 19. The Stringing of the Tendons itself will be handled in its own section later on.

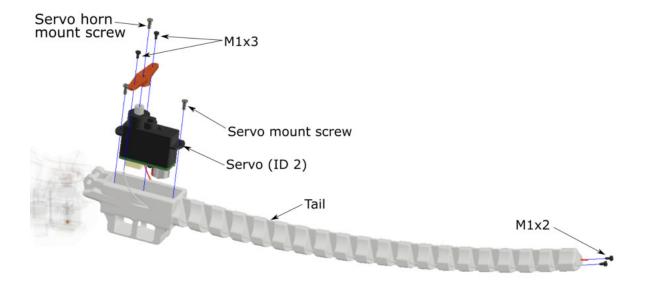


Fig. 19. Assembly of the Tail Module

4.8 Head

Item	Quantity
Head (3D-Print)	1
Head Neck (3D-Print)	1
Head C mount (3D-Print)	1
Camera	2
USB Hub	1
Nose Button (39-138 BLK)	1
Touch Sensor (TTP223)	1
Servo (ID 4)	1
Servo mount screw (Servo Part)	2
Servo-horn (Servo Part)	1
Servo-horn Bar (Servo Part)	1
Servo-horn screw (Servo Part)	1
M1x3	3
M1x4	2
M2x8	1
M2x6	1

The Head is the most complex part of the robot to build. It consists of many parts and needs multiple steps to complete. before building the head, make sure, that you have done the preparations for the USB-cameras and the USB-Hub.

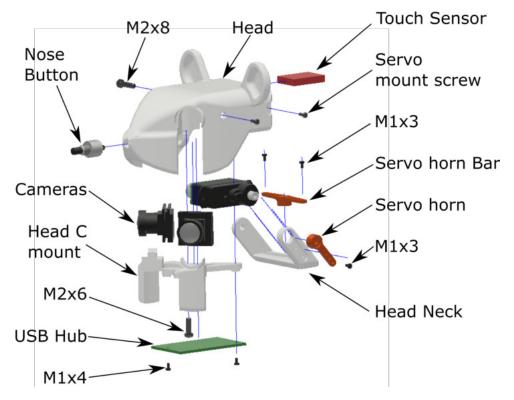


Fig. 20. Head Module components

The first step is the assembly of the sensors into the head. The schematic is shown in the right of Figure 21. First attach wires to the touch sensor and thread the wires through the cable channel in the top of the head, while pushing the sensor in its compartment. Then you can screw the nose button into the respective place in the head and connect all wires according to the schematic plans. The wire to the Spine Adapter Board should be 13 cm long.

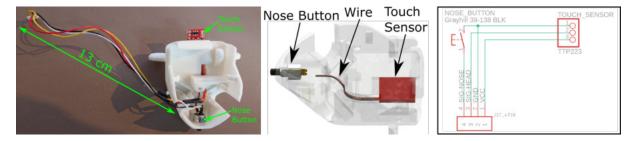


Fig. 21. Assembly and schematic of the Head Sensors.

The following Figure 22 shows the remaining step by step assembly of the head module. The steps are as follows:

- A Assemble the Neck with all servo horns as shown in Figure 20 and attach it to the head servo (ID 4). Make sure the motor is set to its centre (0800) position.
- B Insert the servo with the neck into the head and secure it with the servo mount screws.
- C Insert the two cameras into the two the according recesses. Be careful not to break off the lens from the sensor. The camera with the longer lead wire is the right eye of the head (when facing forward).
- D Insert the Head C mount to secure the cameras. Ensure that all camera wires can go unobstructed. And secure it with a M2x6 Screw.
- E Attach the USB Hub atop of the Head C mount, make sure, that the camera wires from the right camera are running over the PCB. Then secure it with two M1x3 screws.

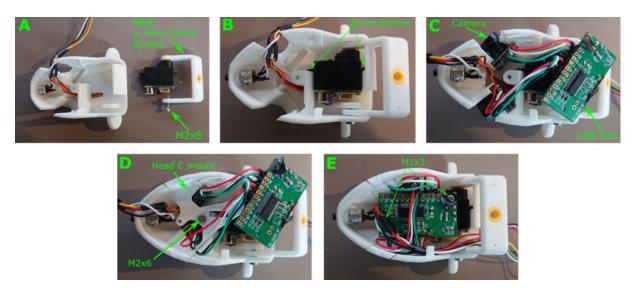


Fig. 22. Assembly of the Head steps A-E.

5. Whole Robot Assembly

Item	Quantity
Body Module	1
Hindleg Module Left	1
Hindleg Module Right	1
Foreleg Module Left	1
Tail Module	1
Power and Compute Module	1
Head Module	1
Wiring Harnesses	3

With all sub modules assembled, we can no start to assemble the complete robot.

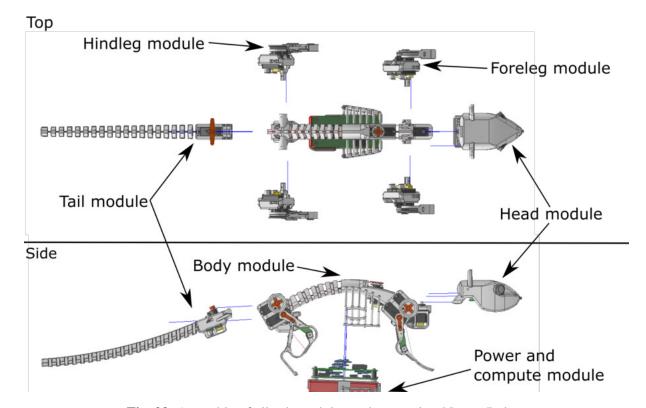


Fig. 23. Assembly of all sub modules to the complete Nermo Robot.

5.1 Stringing

For inserting the robot tendons, please make sure, that all motors are set to zero, especially the spine motors. For tendons we use nylon wire with a 0,3 mm diameter and a max force of 4 kg. The tendons are fixed with screws, but can be glued into place when the final setup of the robot is completed.

5.1.1 Foreleg

To string the foreleg tendon first attach the tendon on the leg as shown in the middle bottom on Figure 24 with a M1x3 screw. Then thread the tendon onto the coil as shown in the figure through the hole in the coil. The tenon can then be tightened fixed with a M1x4 screw.

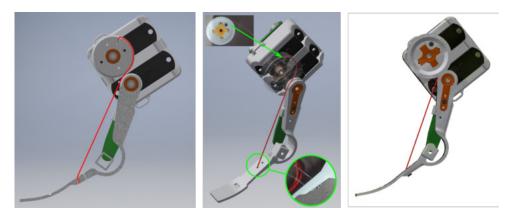
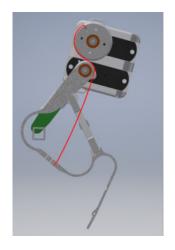


Fig. 24. Stringing of the foreleg.

5.1.2 Hindleg

To string the hindleg tendon first attach the tendon on the shin of the leg as shown in the middle bottom on Figure 25 with a M1x3 screw. Then thread the tendon through the linkage (2) and the hole on the top of the leg (1) and onto the coil as shown in the figure. The tendon can then be tightened through the hole in the coil and fixed with a M1x4 screw.



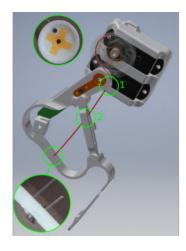




Fig. 25. Stringing of the hindleg.

5.1.3 Body Module

For the left and right lateral tendons prepare two tendons with about 20 cm length and remove the lateral flex servo from the body module. First attach the two tendons on the coil of the lateral flex servo as shown in Figure 26 on the right side. Take care, that the left tendon is attached to the right screw and the right tendon to the left screw to ensure the tendons can moved enough distance later on. The next step is to thread both tendons along their respective pathways until they are at the very front of the body module. You can then reinsert the lateral flex servo into the body module. Finally tighten the strings and fix them at the front with two M1x4 screws.

For the spine flex tendon prepare a 15 cm piece of tendon. Then attach the tendon to the coil at the servo

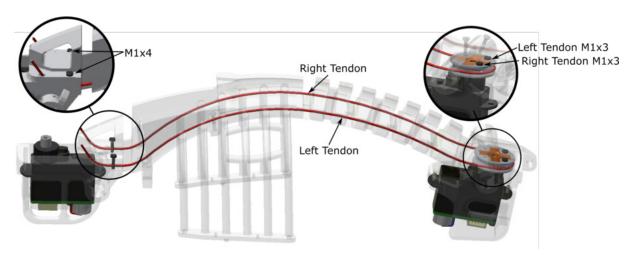


Fig. 26. Stringing of the lateral tendon on the body module.

as shown in Figure 27. then thread the tendon through to the back of the module, tighten the string and fix it with a M1x4 screw.

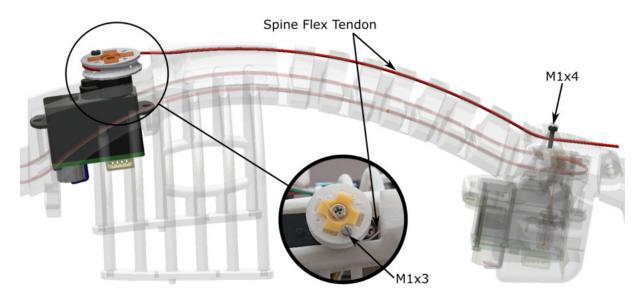


Fig. 27. Stringing of the flex tendon on top of the body module.

5.1.4 Tail Module

For the tail module prepare two pieces of wire of about 30 cm length. Thread the two pieces through their respective pathways as shown in Figure 28. On the end of the tail, attach the tendons with two M1x2 screws. On the servo side of the tail, thread the tendons through the holes of the servo horn, tighten the strings and fix them with two M1x3 screws.

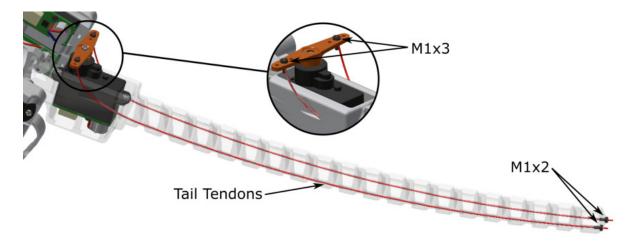


Fig. 28. Stringing of the foreleg.

5.2 Centre-line Assembly

The centre line of the robot consists of the body module together with the tail and the head modules. You will need a M2x11 screw with a Stop-nut and one of the servo horn screws form the servos.

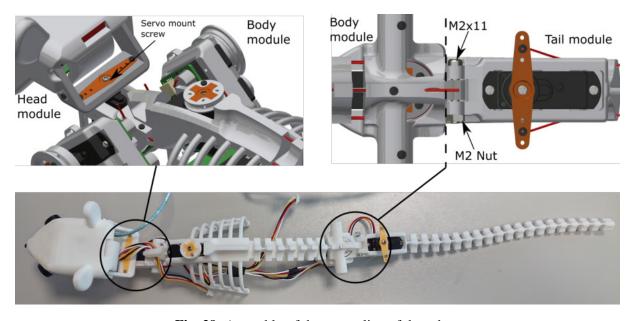


Fig. 29. Assembly of the centre line of the robot.

5.3 Wiring

The Wiring of the servos should be quite clear based on the plan from Figure 6. What is to be taken into account is to remove one of the servos of the leg modules for attaching the wire, as the mounting is in the way of pluging the connector in in the assembled module (Figure 30).

There are 2 places where the central spine wiring will have to be threaded through, at the neck the wiring

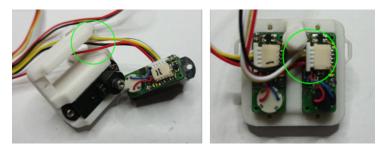


Fig. 30. Attaching the Wiring harness to the leg modules

coming from the head can be threaded through the hole in the body module as shown in the enlarged picture in Figure 31. At the tail, the wires can be attached or threaded through at the side of the flex servo.

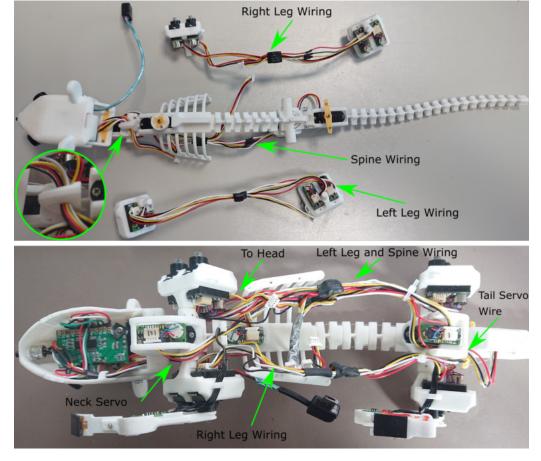


Fig. 31. Attached Wire harnesses to the Spine, and both Leg sides.

When all three wiring harnesses are attached to the servos you can attach the Leg modules to the body module as shown in Figure 23. The wires are then to be organized as shown in Figure 31. Finally you can insert the power and compute module. The plugs are to be attached as shown in Figure 32. The module is to be inserted from the bottom as shown in Figure 23. For securing the module to the body four M1x3 screws can be used as shown in Figure 33.

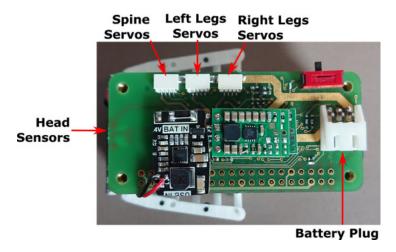


Fig. 32. Power and compute module connectors.



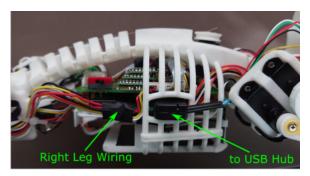


Fig. 33. Power and compute module attached to the body module with connected usb plug.

6. First Setup

- 7. Usage
- 7.1 Charging
- 7.2 Connecting

Acknowledgments

Thanks to everyone who helped with this project

References