Linux Power!			
(From the perspe	ctive of a	PMIC	vendor)

Matti Valttinen Jan 10 2023 ROHM Semiconductors

- 1. Breath, smile, look at them
- 2. Eyecontact. They are your friends. On your side
- 3. Breath
- 4. Welcome. I am not excited to be here. I am terrified
- 5. I am afraid of social situations and don't like making myself known
- 6. So, of course I am climbing up on the stage to give a talk, right? ... How stupid one can be?
- 7. Well, as I am here, I will talk a little bit about powring a SoC on a Linux based system

# Linux Power!

(From the perspective of a PMIC vendor)

Matti Vaittinen

Jan 10 2023

ROHM Semiconductors

023-01-17

—Topics

Linux Power!

CS

The to PMC

Th

- 1. Shallow overview on what is PMIC and why it is needed
- 2. Linux oriented Short glance of drivers can be needed for a PMIC
- 3. functional safety and reporting hw issues

# **Topics**

#### Goal

What is PMIC

Regulator errors and notifications

Functional-safety helpers in regulator subsystem

What and Why is a PMIC?

PMIC drivers

MFD and subdevices

Regulators

Monitoring for abnormal conditions

Severity levels and limit values

Regulator errors and notifications

Helpers and examples

Wrap it up

#### —About Me



- Kernel/Driver developer at ROH Semiconductor
- (networking, clock & sync) 2006 2018
- Currently mainly
   developing/maintaining upstream
   Linux device drivers for ROHM ICs



- 1. This is the formal me
- 2. Linux developer who started working with Linux at 2005
- 3. Today I work at ROHM Semiconductors
- 4. HW vendor, no forest from the trees.
- 5. Anyone with insight on how notifiers are or could be used please explain!

#### **About Me**

- Matti Vaittinen
- Kernel/Driver developer at ROHM Semiconductor
- Worked at Nokia BTS projects (networking, clock & sync) 2006 – 2018
- Currently mainly developing/maintaining upstream Linux device drivers for ROHM ICs




Following section aims to give an idea about What a PMIC is and Why PMICs are needed?

What and Why is a PMIC?




—Powering a processor

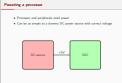

could be this simple. Just passive source

# Powering a processor

- Processor and peripherals need power
- Can be as simple as a dummy DC power source with correct voltage

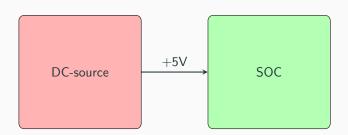

Linux Power!

Powering a modern SOC 1/2


Powering a modern SOC 1/2

| 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 100 | 1

- 1. almost a real SOC.
- 2. pic omits state GPIOs

# Powering a modern SOC 1/2

Modern SOCs can require multiple specific voltages

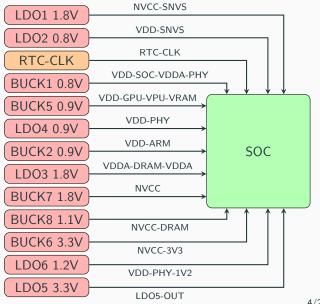


Powering a modern SOC 2/2



- 1. TIMINGs explain state transitions
- 2. from PMIC spec
- 3. shows also internal changes

# Powering a modern SOC 2/2

And specific timings...

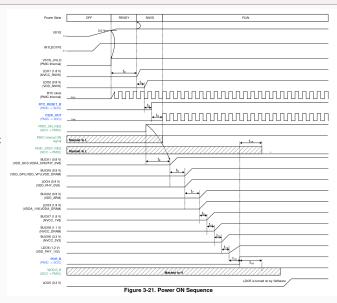

- 1. Importance of power saving increases
- 2. Toggling outputs on/off
- 3. Changing voltages
- 4. Predefined states changed by GPIO (avoid I2C shut-down races I2C depends on some other block other can't be shut down?)

# More control...

#### Power savings by:

- Shutting down not needed devices
- Stand-by state(s)
- DVS (Dynamic Voltage Scaling)

- Automated power on
- 1. Monitor turn-on input when SOC is shut down
- 2. For example RTC / HALL sensor (lid)

# **Automated power on**

Powering-on a system at given time...

- RTC
- ...Or by an event
  - HALL sensor, ...

# Linux Power! - More requirements...

Battery / changer
 Watchdog
 Functional-safety
 Voltage meditoring
 Currest meditoring
 Temperature monitoring

#### More needs

- 1. battery powered devices everywhere  $= \lambda$  charging logic
- 2. Watchdog cut power can be external or in power-supply
- 3. montor abnormal events (temp, over voltage, ocp)

# More requirements...

- Battery / charger
- Watchdog
- Functional-safety
  - Voltage monitoring
  - Current monitoring
  - Temperature monitoring

023-01-17

-PMICs

Linux Power!




- 1. PMICs created to support previous use-cases
- 2. Often very SOC specific
- 3. Still also generic ones done very customizable (amount of outputs, voltages, sequences)

#### **PMICs**

# PMIC - Power Management Integrated Circuit

- Multiple DC sources with specific start-up / shut-down sequence
- Voltage control
- Functional-safety
- Auxiliary blocks to support various needs

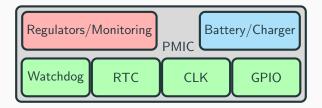

- 1. What some typical PMIC drivers look like
- 2. MFD
- 3. Regulators

# **PMIC** drivers

Multi Function Devices

Wby? (I have I reason on min MFD drivers guilator C C over supply techdog 10

- 1. MFD "core" driver (Lee says there is no such "thing" as MFD)
- 2. core driver often provides bus access and IRQ controller code
- 3. core driver is created as any "standard driver" on that bus
- 4. Sub devices are (seemingly independent) platform devices
- 5. mfd-cell array describes subdevices (drivers)
- 6. mfd registration instantiates subdevices and runs driver probes
- 7. MODALIAS for module loading
- 8. Ask why MFD? (spoiler, re-use)

#### Multi Function Devices

Why? (I have 1 reason on mind, may be more)

#### Often MFD drivers

- Regulator
- RTC
- Power supply
- Watchdog
- GPIO
- CLK ...

#### Multi Function Devices




- 1. Many devices re-use digital blocks from previous generations while adding something new
- 2. MFD sub-devices can be re-used and new drivers written only for new blocks (ideally)

# **Multi Function Devices**

#### Often MFD drivers

- Regulator
- RTC
- Power supply
- Watchdog
- GPIO
- CLK ...

#### Allows re-use

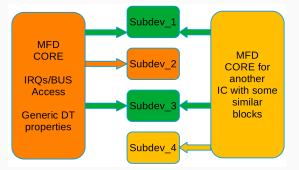

Regulator (provider) and consumer


Position for interioring the houses. Eg., 8th "hides" the engolden foresease. However, the engolden foresease. However, the engolden foresease. However, the engolden foresease. However, the engolden foresease he golden foresease. However, the engolden foresease he "Pilic dates the problen folion (south) just where it is proposed from the problen folion (south) just where it is proposed foresease. However, the engolden folion foresease has been a proposed foresease the engolden folion.

\*\*Total Control of the Engolden folion fol

- 1. regulator framework sits between hardware driver and regulator user
- 2. provides control/information interface to consumer drivers regulator API
- 3. hardware driver interfaces PMIC and translates regulator framework requests to register reads/writes
- 4. example, regulator consumer can be sensor driver, enabling sensor power when sensor is needed
- 5. sensor requests and enables the regulator via regulator API
- 6. regulator framework calls correct callbacks from regulator driver

# Regulator (provider) and consumer

- Provider is driver interfacing the hardware. Eg, sits "below" the regulator framework. Between regulator framework and HW
- Consumer is driver who wishes to control the regulator using the regulator framework. Eg, sits "on top of" the regulator framework
- PMIC driver is the provider driver (usually just referred as a regulator driver)

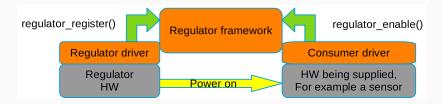

1. rest of the show explains how regulator framework can be used to deliver errors. From PMIC vendor perspective - sorry

# Monitoring for abnormal conditions

Detecting undexpected

Union has 3 menting categories

- PROTECTION

- PROTECTION

- ERROR

- WARRING - NEW(nb)

# **Detecting undexpected**

- PROTECTION
  - Unconditional shutdown by HW
- ERROR
  - Irrecoverable error, system not expected to be usable. Error handling by software.
- WARNING NEW(ish)
  - Something is off-limit, system still usable but a recovery action should be taken to prevent escalation to errors

—Detecting undexpected



- PROTECTION example, severe overvoltage PMIC shuts down all or offending outputs
- 2. Could be also temperature-error or over-current

# **Detecting undexpected**

- PROTECTION
  - Unconditional shutdown by HW
- ERROR
  - Irrecoverable error, system not expected to be usable. Error handling by software.
- WARNING NEW(ish)
  - Something is off-limit, system still usable but a recovery action should be taken to prevent escalation to errors

# Detecting undexpected

- 1. Some PMICs may not automatically shut down outputs SW should do it
- 2. ERROR still indicate fatal issues HW not working

# **Detecting undexpected**

- PROTECTION
  - Unconditional shutdown by HW
- ERROR
  - Irrecoverable error, system not expected to be usable. Error handling by software.
- WARNING NEW(ish)
  - Something is off-limit, system still usable but a recovery action should be taken to prevent escalation to errors

—Detecting undexpected



- 1. WARNING included in kernel 5.14
- 2. Intended to be used for invoking corrective action(s)
- 3. Has been requested from us there probably are use-cases
- 4. I have no insight as to what they could be very interested in learning any concrete examples ask from audience

# **Detecting undexpected**

- PROTECTION
  - Unconditional shutdown by HW
- ERROR
  - Irrecoverable error, system not expected to be usable. Error handling by software.
- WARNING NEW(ish)
  - Something is off-limit, system still usable but a recovery action should be taken to prevent escalation to errors

Safety limits, devicetree



- 1. Often board specific Can be provided via device-tree
- 2. property format from box
- 3. pause

# Safety limits, devicetree

#### **Property format:**

• regulator-<event >-<severity >-<unit >= value

#### Over current:

- regulator-oc-protection-microamp
- regulator-oc-error-microamp
- regulator-oc-warn-microamp

Similar for over voltage (oc), under voltage (uv) and temperature (temp)

#### Values

- 0 =>disable
- 1 = > enable
- other =>new limit

Safety limits, devicetree

```
My limits. A colocative

* opposition count >= country >= caist >= value

* opposition country >= caist >= value

* opposition operation relocation

* opposition relo
```

- 1. value sets new limit
- $2.\,\,1\,/\,0$  special values they are used to indicate enable  $/\,$  disable
- 3. pause

# Safety limits, devicetree

#### **Property format:**

• regulator-<event >-<severity >-<unit >= value

#### Over current:

- regulator-oc-protection-microamp
- regulator-oc-error-microamp
- regulator-oc-warn-microamp

Similar for over voltage (oc), under voltage (uv) and temperature (temp)

#### Values:

- 0 => disable
- 1 = > enable
- other =>new limit

- Safety limits, devicetree
- 1. I have no good answer.
- 2. What happens if silently ignored?
- 3. What happens if regulator registration fails?
- 4. If limit is silently ignored problems for example when changing a component and new driver does not support limits
- 5. If registration fails, system may not boot, boot without display etc.
- 6. Currently just log a warning
- 7. In general, is there a way to mark NOT supported properties to binding docs? Would it help? Including ALL regulator bindings does hide this at avalidation
- 8. pause
- 9. I know you are eager to see the code :) So, let's look at some

# Safety limits, devicetree

# **Property format:**

regulator-<event >-<severity >-<unit >= value

#### Over current

- regulator-oc-protection-microamp
- regulator-oc-error-microamp
- regulator-oc-warn-microamp

Similar for over voltage (oc), under voltage (uv) and temperature (temp)

#### Values

- 0 =>disable
- 1 = > enable
- other =>new limit

#### —Callbacks for configuring the limits

```
callacts for configuring the limits

state specialization [1]
in (inclusion constraints) [interest reprinted in a line (section constraint) [interest repri
```

- 1. Callbacks for over-current, over- and under-voltage, over temperature
- 2. Arguments include the limit, severity (PROT, ERR, WARN) and enable/disable

# Callbacks for configuring the limits

# —Callbacks for configuring the limits

1. Callbacks are amongst the other regulator ops which is pointed from the regulator description

# Callbacks for configuring the limits

```
struct regulator_ops {
        // snip
        int (*set_over_current_protection)(struct regulator_dev *,
               int lim_uA, int severity, bool enable);
        int (*set_over_voltage_protection)(struct regulator_dev *,
              int lim_uV , int severity , bool enable );
        int (*set_under_voltage_protection)(struct regulator_dev *,
             int lim_uV, int severity, bool enable);
        int (*set_thermal_protection)(struct regulator_dev *, int lim ,
             int severity, bool enable);
};
struct regulator_desc {
        // snip
        const struct regulator_ops *ops;
};
struct regulator_dev *devm_regulator_register(struct device *dev,
                          const struct regulator_desc *regulator_desc ,
                          const struct regulator_config *config);
```

Callbacks for configuring the limits

Callbacks for configuring the limits

struct regulator\_dens {
// const struct regulator\_dens reps;
};
struct regulator\_den ndown\_regulator\_regulator\_(struct denise eder.)

1. The description with ops is passed to regulator registration

# Callbacks for configuring the limits

```
struct regulator_ops {
        // snip
        int (*set_over_current_protection)(struct regulator_dev *,
               int lim_uA, int severity, bool enable);
        int (*set_over_voltage_protection)(struct regulator_dev *,
              int lim_uV, int severity, bool enable);
        int (*set_under_voltage_protection)(struct regulator_dev *,
             int lim_uV, int severity, bool enable);
        int (*set_thermal_protection)(struct regulator_dev *, int lim ,
             int severity, bool enable);
};
struct regulator_desc {
        // snip
        const struct regulator_ops *ops;
};
struct regulator_dev *devm_regulator_register(struct device *dev,
                          const struct regulator_desc *regulator_desc ,
                          const struct regulator_config *config);
```

Simplified example

```
Simplified example:

***State of the Author of the Author
```

- Example of over-current protection example using pieces of ROHM BD9576 driver as example
- Regulator framework parses dt properties and invokes callback with values found from DT
- 3. Driver typically checks for parameter sanity/support
- 4. Driver decides the register and values to write based on severity and limit
- 5. for example BD9576 has different register and limit ranges for warning and protection
- From the PMIC operation POV there is no difference between ERROR and WARNING
- 7. Finally if limits were sane, the driver updates new limits to registers and returns Ok

# Simplified example

#### Informing the unexpected



- 1. So, when an abnormal event is detected by HW (something exeeds the limit) we need to inform consumers
- 2. The regulator framework can use ERRORs or NOTIFICATIONs
- 3. Errors visible via sysfs

# Informing the unexpected

#### Two types of information

- ERRORs
- NOTIFICATIONs
- ERROR
  - set by provider
  - queried (polled) by consumer
  - regulator\_get\_error\_flags()
- NOTIFICATION
  - sent by provider (usually) from interrupt
  - no polling needed
  - regulator\_register\_notifier()
  - can send also other events

—Informing the unexpected



- 1. Errors are simple status which is stored in framework
- 2. Errors need to be polled by consumers
- 3. Polling is not always preferred

# Informing the unexpected

# Two types of information

- ERRORs
- NOTIFICATIONs

#### ERROR

- set by provider
- queried (polled) by consumer
- regulator\_get\_error\_flags()
- NOTIFICATION
  - sent by provider (usually) from interrupt
  - no polling needed
  - regulator\_register\_notifier()
  - can send also other events

#### Informing the unexpected

- 1. Notifications are sent by HW when problem occurs
- 2. No polling needed except to know when condition is back to normal
- 3. Not all notifications are errors...

# Informing the unexpected

#### Two types of information

- ERRORs
- NOTIFICATIONs

#### ERROR

- set by provider
- queried (polled) by consumer
- regulator\_get\_error\_flags()

#### NOTIFICATION

- sent by provider (usually) from interrupt
- no polling needed
- regulator\_register\_notifier()
- can send also other events

- 1. The available ERROR definitions
- 2. I've used REGULATION-OUT for over-voltage
- 3. Not sure where REGULATOR-ERROR-FAIL is used

# Regulator error flags

```
#define REGULATOR_ERROR_UNDER_VOLTAGE
#define REGULATOR_ERROR_OVER_CURRENT
#define REGULATOR_ERROR_REGULATION_OUT
#define REGULATOR_ERROR_FAIL
#define REGULATOR_ERROR_OVER_TEMP
#define REGULATOR_ERROR_UNDER_VOLTAGE_WARN
#define REGULATOR_ERROR_OVER_CURRENT_WARN
#define REGULATOR_ERROR_OVER_VOLTAGE_WARN
#define REGULATOR_ERROR_OVER_VOLTAGE_WARN
```

include/linux/regulator/consumer.h

- 1. The available EVENT definitions
- 2. Note, not all of the notificatin types listed as some are not failures
- 3. Last one (WARN-MASK) is not event but a mask for consumers to allow checking if notification was a warning

# Regulator notifications

```
#define REGULATOR_EVENT_UNDER_VOLTAGE
#define REGULATOR_EVENT_OVER_CURRENT
#define REGULATOR_EVENT_REGULATION_OUT
#define REGULATOR_EVENT_FAIL
#define REGULATOR_EVENT_OVER_TEMP
...
#define REGULATOR_EVENT_UNDER_VOLTAGE_WARN
#define REGULATOR_EVENT_OVER_CURRENT_WARN
#define REGULATOR_EVENT_OVER_VOLTAGE_WARN
#define REGULATOR_EVENT_OVER_TEMP_WARN
#define REGULATOR_EVENT_OVER_TEMP_WARN
#define REGULATOR_EVENT_WARN_MASK
include/linux/regulator/consumer.h
```

- 1. Usually an IRQ is generated by HW when error is observed
- Regulator notifications use blocking call-chain, notifiers should fire from process context
- 3. Often the IRQ is held active for the duration of a problem
- 4. Need special handling to avoid IRQ storm which would not exactly help mitigating issues
- 5. The event executes the action registered by the consumer

#### **Notifications**

# Usually IRQ backed

- 1. PMIC detects error and generates IRQ
- 2. IRQ handler sends notification
- 3. Regulator consumer action is executed

In some (many) cases IRQ is held active for whole duration of error

- Maybe because these IRQs are considered as a last thing?
- Maybe because there is need to ensure IRQ is not missed?
- Does not play well with all systems

2. IRQ kandler sends nobification
3. Regulator consumer action is executed
some (many) cases IRQ is held active for whole duration of error

• Maybe because these IRQs are considered as a last thing?

- 1. Usually an IRQ is generated by HW when error is observed
- Regulator notifications use blocking call-chain, notifiers should fire from process context
- 3. Often the IRQ is held active for the duration of a problem
- 4. Need special handling to avoid IRQ storm which would not exactly help mitigating issues
- 5. The event executes the action registered by the consumer

#### **Notifications**

# Usually IRQ backed

- 1. PMIC detects error and generates IRQ
- 2. IRQ handler sends notification
- 3. Regulator consumer action is executed

In some (many) cases IRQ is held active for whole duration of error

- Maybe because these IRQs are considered as a last thing?
- Maybe because there is need to ensure IRQ is not missed?
- Does not play well with all systems

- 1. helper provided
- 2. read the box
- 3. helper is registered using below API we will see it in more details later

# **Event IRQ helper**

#### A helper provided for IRQ handling and sending the notification

- Supports keeping IRQ disabled for a period of time
- Supports forcibly shutting down the system if accesing the PMIC fails


helper action
ISR
Fatal error?
Send notifications
Set error status
Schedule RQ
re-enable
Success?



—Helper break-out

- 1. But first, let's go through the helper operation
- 2. Box on the left represent functionality in helper
- 3. ellipse represent functionality implemented in driver
- 4. Let's walk through the notification process


# Helper break-out

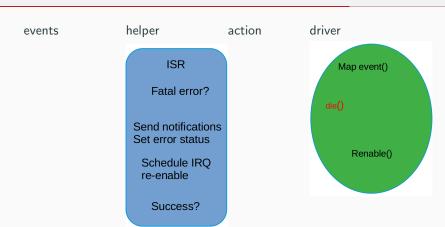

Helper break-out



1. abnormal event is detected by HW

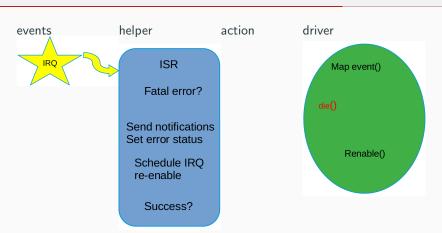


Linux Power!

—Helper break-out




1. helper runs ISR and calls map\_event() from driver to know what happened

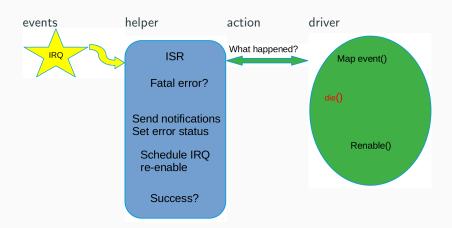

Helper break-out




- 1. map\_event() returns information about fatal access failure
- 2. If error was fatal, helper will call die() callback from driver or try execute emergency power-off
- 3. The die() callback can be used to provide emergency operation like turning off the failing power

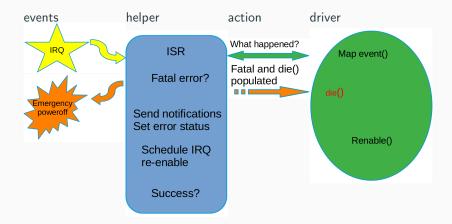

Helper break-out




- 1. Helper will send the notifications to consumers and update the errpr flags
- 2. Helper will schedule the IRQ re-enable

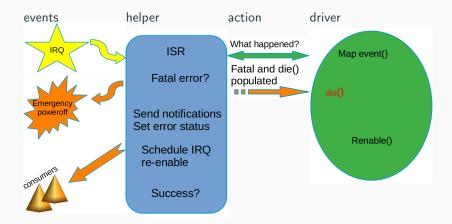

—Helper break-out




1. When it is time to re-enable the IRQ, helper will ask driver if problem is over and IRQ can be re-enabled

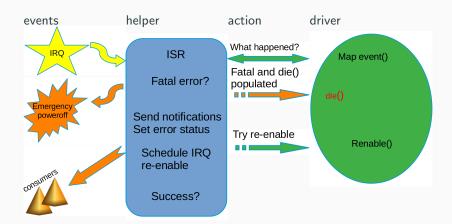

—Helper break-out



1. If IRQ can be re-enabled, the helper unmasks it. If not, the re-enable is scheduled again

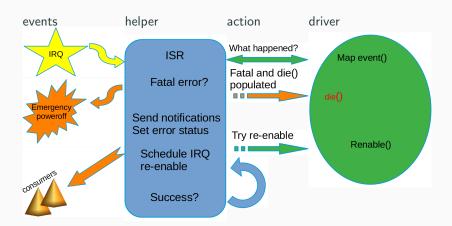

```
Linux Power!
```

Molper configuration

man state seed 

and state seed 

a

- Helper configuration
- 1. Let's get back to helper registration.
- 3. fatal\_cnt can be used to mark failures to handle event as fatal. Eg. after checking this many times for whether the condition is resolved (attempts to re-enable), die() is called or emergency power-off is executed

2. Helper config information is given in struct regulator\_irq\_desc

—Helper configuration

- 1. reread\_ms is time to wait after failed event mapping until retrying
- 2. irq\_off\_ms is time to keep IRQ disabled (before calling renable() if provided

```
Linux Power!
```

Helper configuration

- 1. skip\_off and high\_prio are sometihing that were used in existing event implementations
- skip\_off can be specified to not handle IRQs for regulators that are disabled
- 3. high\_prio can be set to use high\_priority work-queue for trying to re-enable the IRQ

```
Linux Power!
```

- Helper configuration
- 1. data is pointer which can be used to store data needed in call-backs like the driver private data
- 2. Callbacks for die(), mapping event and seeing if IRQ can be re-enabled. We will see the callbacks later

```
struct regulator_irq_desc {
        const char *name:
        int fatal_cnt;
        int reread_ms:
        int irq_off_ms;
        bool skip_off;
        bool high_prio;
        void *data;
        int (*die)(struct regulator_irq_data *rid);
        int (*map_event)(int irq, struct regulator_irq_data *rid,
             unsigned long *dev_mask);
        int (*renable)(struct regulator_irq_data *rid);
};
void *regulator_irq_helper(struct device *dev,
                   int irq_flags , int common_errs ,
                   int *per_rdev_errs , struct regulator_dev **rdev ,
```

```
Linux Power!
```

- 1. On top of this on the helper registration we provide
- 2. device pointer and IRQ information
- 3. errors that are common to all regulator devices this IRQ can be indicating errors for
- 4. errors specific to only some of the regulator devices
- 5. and finally an array of the regulator devices for which this IRQ can indicate problems

```
struct regulator_irq_desc {
        const char *name:
        int fatal_cnt;
        int reread_ms:
        int irq_off_ms;
        bool skip_off;
        bool high_prio;
        void *data;
        int (*die)(struct regulator_irq_data *rid);
        int (*map_event)(int irq, struct regulator_irq_data *rid,
             unsigned long *dev_mask);
        int (*renable)(struct regulator_irq_data *rid);
};
void *regulator_irq_helper(struct device *dev,
                   const struct regulator_irq_desc *d, int irq,
                   int irq_flags, int common_errs,
                   int *per_rdev_errs , struct regulator_dev **rdev ,
                   int rdev_amount);
```

—Event mapping

```
Vector mapping

10 (Imagenetic (Institute of the Company) (Institute of the
```

—Event mapping

```
ment management manage
```

```
Linux Power!
```

—Event mapping

```
int (*map_event)(int irq, struct regulator_irq_data *rid,
                 unsigned long *dev_mask);
struct regulator_irq_data {
        struct regulator_err_state *states;
        int num_states;
        void *data;
        long opaque;
};
struct regulator_err_state {
        struct regulator_dev *rdev;
        unsigned long notifs;
        unsigned long errors;
        int possible_errs;
};
int (*renable)(struct regulator_irq_data *rid);
int regulator_irq_map_event_simple(int irq,
                        struct regulator_irq_data *rid,
                        unsigned long *dev_mask)
```

```
Linux Power!
```

—Event mapping

```
int (*map_event)(int irq, struct regulator_irq_data *rid,
                 unsigned long *dev_mask);
struct regulator_irq_data {
        struct regulator_err_state *states;
        int num_states;
        void *data;
        long opaque;
};
struct regulator_err_state {
        struct regulator_dev *rdev;
        unsigned long notifs;
        unsigned long errors;
        int possible_errs;
};
int (*renable)(struct regulator_irq_data *rid);
int regulator_irq_map_event_simple(int irq,
                        struct regulator_irq_data *rid,
                        unsigned long *dev_mask)
```

```
Linux Power!
```

weed mapping

In (resultant)

Event mapping

```
int (*map_event)(int irq, struct regulator_irq_data *rid,
                 unsigned long *dev_mask);
struct regulator_irq_data {
        struct regulator_err_state *states;
        int num_states;
        void *data;
        long opaque;
};
struct regulator_err_state {
        struct regulator_dev *rdev;
        unsigned long notifs;
        unsigned long errors;
        int possible_errs;
};
int (*renable)(struct regulator_irq_data *rid);
int regulator_irq_map_event_simple(int irq,
                        struct regulator_irq_data *rid,
                        unsigned long *dev_mask)
```

```
Linux Power!
```

Event mapping example

static into heritative desauting into the control of the c

Event mapping example

# **Event mapping example**

Levent mapping example

#### **Event mapping example**

```
Linux Power!
```

Event mapping example

\*\*\*The control of the contro

stat-)-motifs = rdata-)-mod\_matif stat-)-moves = rdata-)-mod\_mov;

Event mapping example

#### **Event mapping example**

```
static int bd9576_ovd_handler(int irq, struct regulator_irq_data *rid,
                               unsigned long *dev_mask)
{
        ret = regmap_read(d—>regmap, BD957X_REG_INT_OVD_STAT, &val);
        if (ret)
                return REGULATOR_FAILED_RETRY;
        rid -> opaque = val & OVD_IRQ_VALID_MASK;
        *dev_mask = 0:
        if (!(val & OVD_IRQ_VALID_MASK))
                return 0;
        *dev_mask = val & BD9576_xVD_IRQ_MASK_VOUT1TO4;
        for_each_set_bit(i, dev_mask, 4) {
                stat = &rid -> states[i];
                stat -> notifs = rdata -> ovd_notif;
                stat -> errors = rdata -> ovd_err;
        }
        return 0;
}
```

—Helper registration 1/2



# Helper registration 1/2

#### Fill the helper configuration

Fil the holyen configuration

thinks count of their regardings of their highlighted of a configuration of their co

Helper registration 1/2

```
Fill the helper configuration
```

—Helper registration 2/2

```
Hedger registration 2/2

**The second registration 1/2

**The second registration 1/2

**The second registration is the Second s
```

```
Create an array of regulators this IRQ may concern
```

```
Linux Power!
```

Holean registration 2/2

Company and State State

Helper registration 2/2

—Helper registration 2/2

```
Medipor registration 7/2

**Trans a most of spinners in this process

**Trans a most of spinners in the process

**Trans a most of spinners in the process

**Trans a most of spinners in the process in
```

```
Linux Power!
```

Holper registration 2/2

Come on an inflation to 800 on more states required, in recommendation of 800 on more states required, in recommendation (1900), the (1 or 8 of 1 or 8 on 10 or 8 on 10 or 8 of 10 or 8

Helper registration 2/2

```
Create an array of regulators this IRQ may concern
struct regulator_dev *rdevs[BD9576_NUM_REGULATORS];
for (i = 0; i < num\_rdev; i++) {
         struct bd957x_regulator_data *r = &ic_data -> regulator_data [i];
         const struct regulator_desc *desc = &r->desc;
         r->rdev = devm_regulator_register(&pdev->dev, desc, &config);
         rdevs[i] = r \rightarrow rdev;
         if (i < BD957X_VOUTS1)</pre>
                 ovd_devs[i] = r->rdev;
}
Fill possible errors this IRQ may indicate and register the helper
int ovd_errs = REGULATOR_ERROR_OVER_VOLTAGE_WARN |
          REGULATOR_ERROR_REGULATION_OUT;
ret = devm_regulator_irq_helper(&pdev->dev, &bd9576_notif_ovd,
                                   irq, 0, ovd_errs, NULL,
                                   & ovd_devs[0],
                                   BD9576_NUM_OVD_REGULATORS);
```

	n 1
Linux	Power!
LIIIUA	I OVVCI.

Wrap it u

Wrap it up

# **Summary**

- Powering up a modern SOC is not simple
- PMIC is an IC trying to integrate powering related features into single chip
- Many PMICs include functional-safety features
- There is some existing support for indicating abnormal events

Limina	Power!	No answers guaranteed	
2023-01-17	└─No answers guaranteed	Questions?	

# No answers guaranteed

# Questions?

#### No answers guaranteed

Thank You for listening! (or time to wake up):)

#### **Extras**