A brief manual for running HAMS

Yingyi Liu

1. Prepare the BEM mesh for the marine structure that the user wants to compute for. The mesh can be in an arbitrary format but will need a mesh converter to transform it to the HAMS mesh format. A good way is to use Rhinoceros to export the hydrodynamic CAD model to the *.gdf format of WAMIT. Then use the built-in tool WAMIT_MeshTran.exe to convert the *.gdf mesh to the HAMS mesh format just by clicking RunWAMIT_MeshTran.bat, and then input manually the path and filename of the *.gdf file in the command line, or simply drag the *.gdf file to the command line. Do remember that the *.gdf file should better include both of the waterplane mesh and the submerged body mesh. The tool can automatically dispart the two meshes into the separate WaterplaneMesh.pnl and HullMesh.pnl files. Note that at the present stage, only the Windows version of the WAMIT_MeshTran program is available. Please wait for some while for the Linux version.

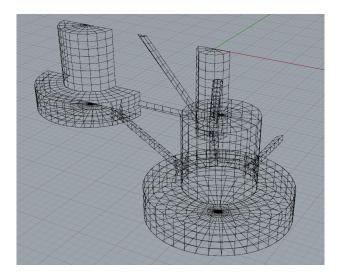


Fig.1 Body mesh and waterplane mesh in Rhinoceros

```
E:\Publications_Journal\Arrays_BEM_AOR\Program\WAMIT_MeshTran>WAMIT_MeshTran

Good afternoon.

Welcome to use the WAMIT-Mesh-File-Preprocessor. (Author: Yingyi Liu)

Please input name of the file you that want to process:

E:\Publications_Journal\Arrays_BEM_AOR\Program\WAMIT_MeshTran\marin_semi_low.gdf
Echo:

E:\Publications_Journal\Arrays_BEM_AOR\Program\WAMIT_MeshTran\marin_semi_low.gdf

ISY=1: the body has a plane of symmetry with respect to Y=0

Read the mesh file and detect odd nodes:
The total number of panels is:

O---Do not be nervous about these odd nodes.The program has already disposed with them successfully.---

Program is now separating the hull mesh and the waterplane mesh....

Program is printing out the mesh data into File (HullMesh txt)

Program is printing out the mesh data into File (FHulPlot.tec)

Program is printing out the full mesh data into File (FHulPlot.tec)

Program is printing out the full mesh data into File (FHulPlot.tec)

E:\Publications_Journal\Arrays_BEM_AOR\Program\WAMIT_MeshTran>pause

Press any key to continue...
```

Fig.2 Command line of RunWAMIT MeshTran.bat

- 2. Copy the WaterplaneMesh.pnl and HullMesh.pnl files to the Input Folder of HAMS. Make appropriate settings in the ControlFile.in file. There are several places that need attention:
- 1) Number_of_frequencies: following the WAMIT tradition, when a positive value is input, the next line right after this line should read a set a discrete wave frequencies (or wave periods, or wave numbers or wave lengths), see the "Moonpool" example in the CertTest Folder; when a negative value is input, the next two lines should read separately Minimum_frequency_Wmin (the minimum wave frequency, or wave period, or wave number or wave length) and Frequency step, see the "Cylinder" example in the CertTest Folder.
- 2) Number of headings: following the similar WAMIT tradition as Number of frequencies.
- 3) Number_of_field_points: this is to specify how many field points the users want to output the field pressure or elevation. Right after this line, the coordinates of these field points are expected to be input.
- 4) If_remove_irr_freq: set 0 if you do not want to remove the irregular frequencies and set 1 if you want to.
- 3. In principle, the body mass matrix should be input by the users as it contains also the information for the structures above the water surface. WAMIT_MeshTran.exe can generate a Hydrostatic.in file in which the body mass matrix is calculated using only the simple information of the wetted body mesh. Therefore, the author should use this body mass matrix with caution. The External Damping Matrix and the External Restoring Matrix should be input by the users.
- 4. After doing all the above, the user can run HAMS simply by clicking RunHAMS.bat. It worth noting that, the results in the WAMIT format can be visualized easily by BEMRosetta or BEMIO, which can be downloaded here:

https://github.com/izabala123/BEMRosetta

https://wec-sim.github.io/bemio/