# LED V1 System Design

By: Mahmoud Adel Matarawy


Email: mahmoudsarhan02672@gmail.com

## **Detailed Requirements**


Read System Requirements Specifications

- 1. Description
  - 1. Hardware Requirements
    - 1. Four LEDs (LED0, LED1, LED2, LED3)
    - 2. One button (BUTTON0)
  - 2. Software Requirements
    - 1. Initially, all LEDs are OFF
    - 2. Once BUTTON0 is pressed, LED0 will be ON
    - 3. Each press further will make another LED is ON
    - 4. At the fifth press, LED0 will be changed to be OFF
    - 5. Each press further will make only one LED is OFF
    - 6. This will be repeated forever
    - 7. The sequence is described below
      - 1. Initially (OFF, OFF, OFF, OFF)
      - 2. Press 1 (ON, OFF, OFF, OFF)
      - 3. Press 2 (ON, ON, OFF, OFF)
      - 4. Press 3 (ON, ON, ON, OFF)
      - 5. Press 4 (ON, ON, ON, ON)
      - 6. Press 5 (OFF, ON, ON, ON)
      - 7. Press 6 (OFF, OFF, ON, ON)
      - 8. Press 7 (OFF, OFF, OFF, ON)
      - 9. Press 8 (OFF, OFF, OFF, OFF)
      - 10. Press 9 (ON, OFF, OFF, OFF)

# **Layered architecture**

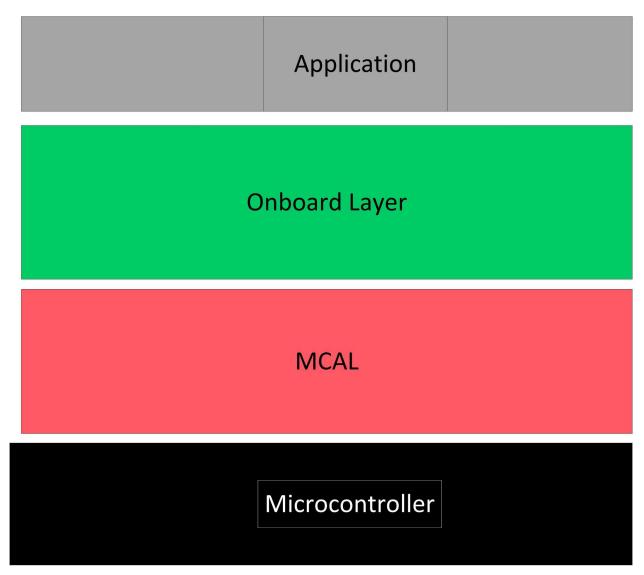

# System modules

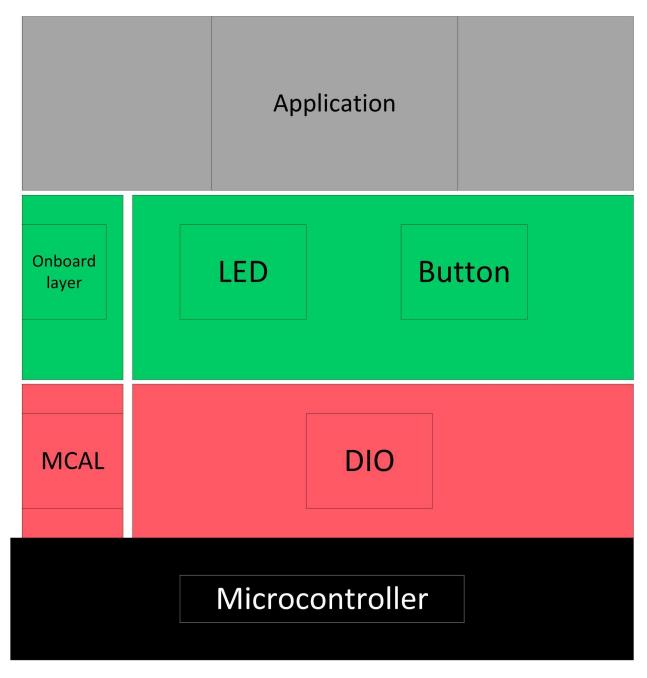

# **APIs**

# **MCAL APIs**

## DIO API:

Type definitions:

## • Dio\_ChannelType

Name	Dio_ChannelType
Туре	Enumeration
Range	Shall contain all pins ID
Description	Dio_ChannelType
Available via	DIO_Config.h

## • Dio\_PortType

Name	Dio_PortType
Туре	Enumeration
Range	Shall contain all ports ID
Description	Dio_PortType
Available via	DIO_Config.h

## • DIO\_Errors

Name	DIO_Errors
Туре	Enumeration

Range	DIO_E_OK 0x00 DIO error OK				
	DIO_InvalidPin	0x01	DIO error, invalid pin number.		
Description	DIO Errors				
Available via	DIO.h				

# • Dio\_LevelType

Name	Dio_LevelType			
Туре	Enumeration			
Range	STD_LOW	0x00	Physical state 0V	
	STD_HIGH	0x01	Physical state 5V or 3.3V.	
Description	Dio_LevelType			
Available via	DIO.h			

### Dio\_DIRType

Name	Dio_DIRType			
Туре	Enumeration			
Range	STD_INPUT	0x00	Set pin as input pin	
	STD_OUTPUT	0x01	Set pin as output pin	
Description	Dio_DIRType			
Available via	DIO.h			

Services affecting the hardware unit:

• Dio\_ReadChannel

Service name	Dio_ReadChannel			
Syntax	DIO_Errors Dio_ReadChannel(			
Parameters (in)	Channelld	Channel ID  Pointer to store the level  STD_HIGH STD_LOW		
	level			STD_HIGH
				STD_LOW
Return	DIO_Errors		DIO_E_OK DIO_InvalidPin	
Description	This Function gets the level of the pin			

This function shall return DIO\_InvalidPin if pin number is invalid.

### Dio\_WriteChannel

Service name	Dio_WriteChannel			
Syntax	DIO_Errors Dio_WriteChannel(			
Parameters (in)	Channelld	Channel ID		
	level	Value to be set STD_HIGH		STD_HIGH
		STD_LOW		
Return	DIO_Errors	DIO_E_OK DIO_InvalidPin		
Description	This Function gets the level of the pin			

• This function shall return DIO\_InvalidPin if pin number is invalid.

### • Dio\_ChannelSetDIR

|--|


Syntax	DIO_Errors Dio_ChannelSetDIR(			
Parameters (in)	Channelld Channel ID			
	dir	Value to be set STD_INPUT		STD_INPUT
		STD_OUTPUT		
Return	DIO_Errors	s DIO_E_OK DIO_InvalidPin		
Description	This Function sets the Direction of the pin			

This function shall return DIO\_InvalidPin if pin number is invalid.

# **Onboard APIs**

#### LED API:

State machine:

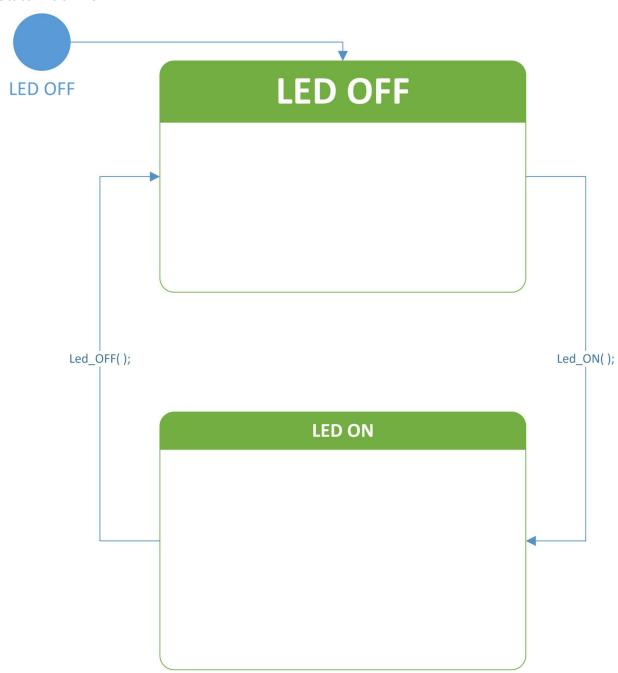

Type definitions:

• LED\_Config\_Type

Name	LED_Config_Type
Туре	Structure
Description	This is the type of the external data structure containing the overall configuration data for the LED API
Available via	led_types.h

### • LED\_STATE\_type

Name	LED_STATE_type				
Туре	Enumeration				
Range	LED_OFF 0x00 LED OFF STATE				
	LED_ON 0x01 LED ON STATE				
Description	LED State Enum				
Available via	led.h				

### • LED\_ERROR\_type

Name	LED_ERROR_type			
Туре	Enumeration			
Range	LED_OK 0x00 ERROR OK			
	LED_UNDEFINED	0x01	LED ID not defined	
Description	LED Error Enum			
Available via	led.h			

## • LED\_ID\_type

Name	LED_ID_type
Туре	Enumeration

Range	LED_1	0x01	LED 1		
	LED_2	0x02	LED 2		
	LED_3	0x03	LED 3		
	LED_4	0x04	LED 4		
Description	LED ID Enum				
Available via	led.h				

# Services affecting the hardware unit:

# • led\_Init

Service name	led_Init
Syntax	void led_Init( void );
Return	None
Description	This Function Initialize the LED module

# • led\_OFF

Service name	led_OFF				
Syntax	LED_ERROR_type led_OFF(				
Parameters (in)	led         LED_1         0x01           LED_2         0x02				
		LED_3	0x03		
	LED_4 0x04				

Return	LED_ERROR	LED_OK	0x00	
	_type		0x01	
Description	This Function Sets a LED OFF.			


# • led\_ON

Service name	led_ON				
Syntax	LED_ERROR_type led_ON(				
Parameters (in)	led LED_1 0x01				
	LED_2 0x02				
	LED_3 0x03				
		LED_4 0x04			
Return	LED_ERRO	LED_OK	0x00		
	R_type	LED_UNDEFINED	0x01		
Description	This Function Sets a LED ON.				


## Button API:

Flowchart:

button\_Main\_Task flowchart

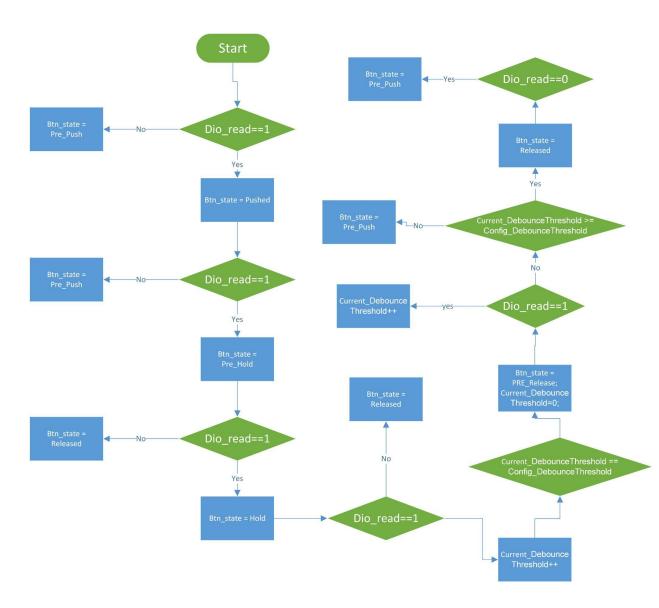

#### State machine:

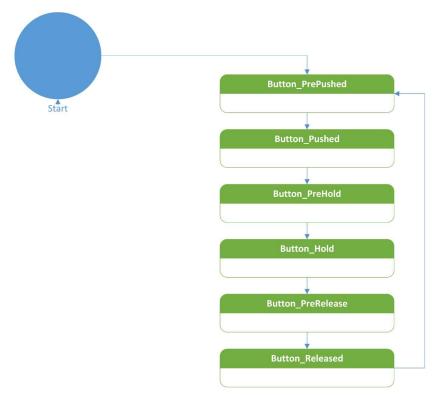

## Type definitions:

### • Button\_configType

Name	Button_configType
Туре	Structure
Description	This is the type of the external data structure containing the overall configuration data for the Button API
Available via	Button_Types.h

## • Button\_LevelType

Name	Button_LevelType			
Туре	Enumeration			
Range	BT_PUSH_LEVEL	0x00	Push Level	
	BT_RELEASE_LEVEL	0x01	Release Level	

Description	Button Level Enum
Available via	Button_Types.h

## • Button\_StateType

Name	Button_StateType		
Туре	Enumeration		
Range	BT_PRE_PUSH	0x00	Pre Push Level
	BT_PUSHED	0x01	Pushed Level
	BT_PRE_HOLD	0x02	Pre Hold Level
	BT_HOLD	0x03	Hold Level
	BT_PRE_RELEASE	0x04	Pre Release Level
	BT_RELEASED	0x05	Released Level
	BT_UNDEFINED	0x06	Undefined
Description	Button state Enum		
Available via	Button.h		

### Button\_IdType

Name	Button_IdType			
Туре	Enumeration			
Range	Button_Start 0x00 Start Button			
Description	Button ID Enum			
Available via	Button.h			

Services affecting the hardware unit:

• getButtonState

Service name	getButtonState				
Syntax	Button_StateTyp getButtonState( Button_IdType enmButtonId );				
Parameters (in)	enmButtonId Start 0x00				
Return	Button_StateTyp		BT_PRE_PUSH		
			BT_PUSHED		
			BT_PRE_HOLD		
			BT_HOLD		
			BT_PRE_RELEASE		
			BT_RELEASED		
			BT_UNDEFINED		
Description	This Function gets the Button state.				


#### • button\_Main\_Task

Service name	button_Main_Task		
Syntax	void button_Main_Taskt( void );		
Parameters (in)	NONE		
Return	NONE		
Description	This Function update all button states Shall call periodic		

# App APIs:

# App API:

#### Flowchart:

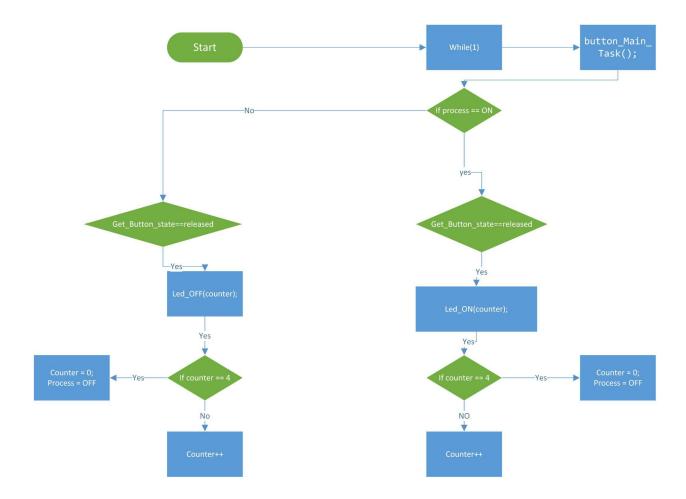

Services affecting the hardware unit:

### • appStart

Service name	appStart
Syntax	void appStart( void );
Parameters (in)	NONE
Return	NONE
Description	This Function Start the application.