

Data Sheet Miniature Laser Driver MLD203P1



Features

- Low cost, highly integrated, high-precision laser diode driver with small footprint
- Simple driver for TO can lasers and others
- Small SMT footprint, enabling machine assembly
- Soft start and brownout protection for protection of the laser from current transients
- Up to 200 mA LD current at a maximum 3 V LD voltage
- Laser power setting configurable as fixed setpoint or adjustable with potentiometer
- 2 μA to 2 mA monitor (photo) diode current
- Low Noise Operation

Applications


- Driving low-power laser diodes at
 - Fixed setpoint without external circuitry
 - Adjustable setpoint with external potentiometer or setpoint voltage
- Suitable for laser applications where small size is required, e.g.:
 - Laser pointers
 - Pilot lasers in adjustment applications etc.

Short Description and Typical Application Diagram

The MLD203P1 Miniature Laser Driver allows Constant Power operation. The operating setpoint of the laser diode can be defined by one external resistor (fixed setpoint). For an adjustable setpoint, an external potentiometer or an external control voltage from 0 to 2.5 V is required.

A soft start and a brownout protection prevents the laser from unwanted current transients. The MLD203P1 supports laser diodes of pin codes A, B and F.

It features a low current noise below 3 µA.

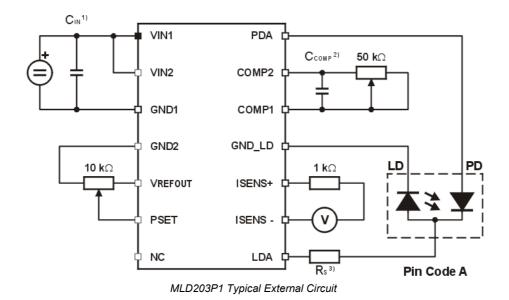


Revision History

Revision	Changes with respect to previous revision	
1.0	Initial Release	

Contents

1 Pin Configuration and Functions		4
2	Technical Data	5
2	2.1 Absolute Maximum Ratings	5
2	2.2 Recommended Operating Conditions	5
2	2.3 Electrical Characteristics	6
3	Functional Block Diagram	7
4	Typical Application	9
5	Troubleshooting	11
6	Drawing	12
7	Laser Diode Pin Codes	13
8	List of Acronyms	14
9	Warranty	15
10	Copyright and Exclusion of Reliability	16
11	Thorlabs 'End of Life' Policy	17
12	Thorlahs Worldwide Contacts	18

1 Pin Configuration and Functions

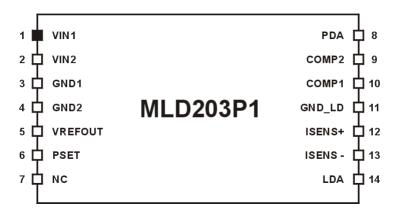

MLD203P1 Pin Configuration

Pin	Name	Description	
1	VIN1	Supply Voltage Input 1	
2	VIN2	Supply Voltage Input 2	
3	GND1	Supply Voltage Ground	
4	GND2	Return Pin (Ground) for Pin 6 (PSET)	
5	VREFOUT	Reference Voltage (+2.5 V) Output	
6	PSET	Input Control Voltage to Set Power	
7	NC	No Connection	
8	PDA	Photo (Monitor) Diode - Anode	
9	COMP2	Feedback Resistor (Gain Control of the VVA)	
10	COMP1		
11	GND_LD	Laser Diode Ground (Cathode)	
12	ISENS+	Lease Diada Coment Canaar Cottant (Valtaria)	
13	ISENS-	Laser Diode Current Sensor Output (Voltage)	
14	LDA	Laser Diode Anode	

2 Technical Data

2.1 Absolute Maximum Ratings

Supply Voltage	6 V
Power Dissipation	750 mW
Operating Temperature	-25 °C to + 90 °C
Storage Temperature	-40 °C to +100 °C

Note

Stresses beyond those listed above may cause permanent damage to the product. These are stress ratings only; functional operation of the MLD203P1 at these or any other conditions beyond those indicated under <u>Recommended Operating Conditions</u> and <u>Electrical Characteristics</u> is not implied.

Operation beyond the maximum rated conditions for extended periods may affect product reliability.

2.2 Recommended Operating Conditions

Supply Voltage	4.5 to 5.5 V
Operating Temperature	-20 to + 70 °C

2.3 Electrical Characteristics

Features		
Supported Laser Pin Codes	A, B, F	
Operating Mode	Constant Power (CP)	
Current Control		
Control Range of Laser Current	0 to 200 mA	
Compliance Voltage (5 V Supply Voltage)	3.0 V	
Noise (10 Hz to 10 MHz, rms)	3 μA ¹)	
Power Control		
Photodiode Current Control Range	2 μA to 2 mA	
Accuracy (full scale)	± 2% typ.	
Repeatability (full scale)	± 0.1%	
Drift (24 h, T _{amb} = 25 °C)	20 nA ²)	
Temperature Coefficient	55 ppm/°C	
Setpoint Input		
Input Resistance	1 ΜΩ	
Input Voltage Range	0 to 2.5 V	
Voltage Conversion Coefficient Range (adjustable)	8 μΑ/V to 800 μΑ/V ± 5%	
Measurement Output		
Laser Current (1 Ω Measurement Series Resistor)	1 mV/mA	
Measurement Accuracy (with Load ≥ 10 kΩ)	1%	
General Data		
Storage Temperature	-40°C to +100 °C ³)	
Warm-Up Time for Rated Accuracy	10 min	
Dimensions (W x H x D)	10 x 2.8 x 17 mm³	
Approx. Weight	1 g	


 $^{^{1}}$) Measured with a 10 Ω measurement resistor in series with a L635P5 laser diode in constant power mode

All technical data are valid at 23 ±5 °C and 45 ±15% rel. humidity (non condensing)

 $^{^{2}}$) Measured with a L635P5 laser diode in constant power mode, P_{0} = 4.5 mW, T_{amb} = 25 $^{\circ}$ C

³) non-condensing

3 Functional Block Diagram

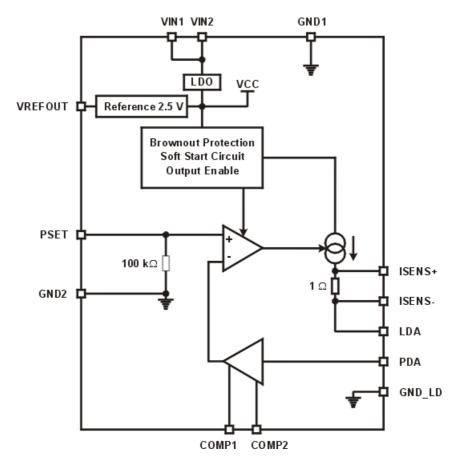

Functional Block Diagram MLD203P1

Functional Description

The MLD203P1 is a laser diode driver module that operates in CP (Constant Power) mode. In CP mode, the laser current is controlled in a manner that keeps the photo diode current constant. For adjusting the optical power, a PD current set value must be applied.

The MLD203P1 delivers up to 200 mA at 3 V compliance voltage. It operates with laser diodes of pin codes A, B and F.

Power Supply

The supply voltage **VIN** ranges from 4.75 V to 5.25 V. From VIN, a stable internal supply voltage for the laser current source and the control circuits is derived by the internal LDO (low-dropout regulator). Further, a reference voltage is generated (**VREFOUT**; 2.5 V).

Laser Diode Control

The laser diode is connected between **LDA** (anode) and **GND_LD** (cathode, common with photodiode cathode)

Internal protection circuits provide a safe switch-on of the laser diode during transition conditions after applying the supply voltage. The Brownout Protection blocks the enabling of the laser diode current output until the supply voltage transient is completed and reached a minimum of 4.75 V. The Soft Start enables then the output current with a defined ramp that efficiently avoids laser current transients that might destroy the laser diode.

The voltage between the **ISENS+** and **ISENS+** pins is proportional to the laser diode current and can be calculated by

$$I_{LD}$$
 [mA] = $\frac{U_{SENS}$ [mV]}{1 Ω

Power Control by Photodiode Current

The MLD203P1 operates in Constant Power Mode. The criteria for constant power is a constant photo current, delivered by the build-in to the laser housing photodiode (AKA monitor diode). Therefore, the photodiode current is measured (actual value) and converted into a voltage, which is compared with a set value.

The photodiode is connected between **PDA** and **GND_LD**. Its current is applied to the input of a VVA (Voltage-to-Voltage Amplifier). The output of this stage delivers a voltage equivalent to the optical power and is applied to one of the comparator inputs.

The feedback resistor connected to the **COMP1** and **COMP2** pins determines the gain of the VVA, and this way the maximum possible photodiode current. The relation between maximum photodiode current $I_{PD\ MAX}$ and R_{COMP} is expressed by the formulas

$$I_{PD,MAX} \ [mA] \ = \ \frac{2.5 \ V}{(R_{COMP} \ [k\Omega] \ + \ 1k\Omega)} \quad R_{COMP} \ [k\Omega] \ = \ \frac{2.5 \ V}{I_{PD,MAX} \ [mA]} \ - \ 1k\Omega$$

Example

 R_{COMP} = 11.5 k Ω limits the photo diode current to 200 μA .

Note

Between COMP1 and COMP2 a frequency compensation capacitor (100 pF) is located.

Setting the Optical Power


PSET is the second input of the comparator that controls the laser current. Above formulas define the maximum possible setpoint for the photodiode current, at an input voltage at **PSET** of 2.5 V.

The input voltage U_{PSET} ranges from 0 to +2.5 V. The control voltage can be applied from an external source or from the **VREFOUT** reference voltage output (2.5 V) via a potentiometer or fixed voltage divider.


The photo diode current set point is calculated by:

$$I_{PD} [mA] = \frac{I_{PD,MAX} [mA]}{2.5 \text{ V}} \times U_{PSET} [V]$$

4 Typical Application

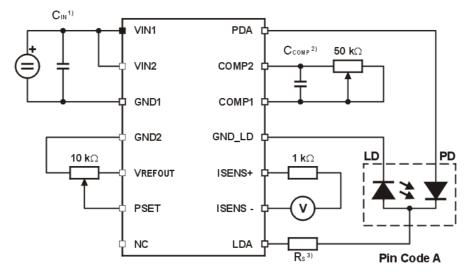


Typical Application MLD203P1 - Laser Pin Code A

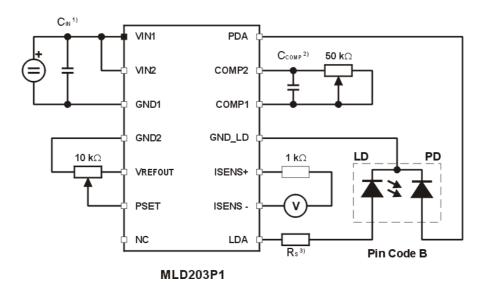

Typical Application MLD203P1 - Laser Pin Code B

Remarks:

- 1) C_{IN} : Optional ceramic capacitor for reduction of power supply ripple
- $^{2})$ $C_{\text{COMP}}\!\!:$ Optional ceramic capacitor for compensation of a large photodiode capacitance
- $^{\rm 3})~{\rm R}_{\rm S}\!\!:$ Optional resistor for laser current limitation

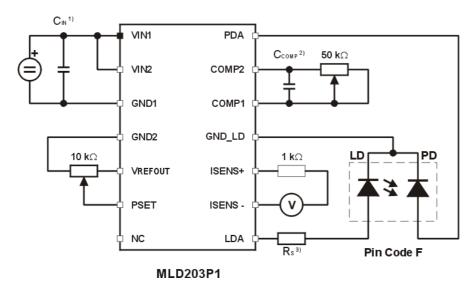

Typical Application MLD203P1 - Laser Pin Code F

Remarks:

- $^{\rm 1})~{\rm C_{IN}}\!\!:$ Optional ceramic capacitor for reduction of power supply ripple
- $^{2})$ $\mathrm{C}_{\mathrm{COMP}}\!.$ Optional ceramic capacitor for compensation of a large photodiode capacitance
- $^{\rm 3})~{\rm R}_{\rm S}$: Optional resistor for laser current limitation

5 Troubleshooting

The MLD203P1 has an imprinted Data Matrix code, that contains manufacturing information:



Please scan this code with your smartphone, and submit the DataMatrix code information to <u>Thorlabs</u>.

Compatible Android apps are:



QR & Barcode Scanner **QRbot** by TeaCapps. This scanner allows to share the scanned code directly by email.

(https://play.google.com/store/apps/details?id=net.grbot&hl=de)




QR Droid Code Scanner QRDroid by DroidLa. (https://play.google.com/store/apps/details?id=net.qrbot&hl=de)

Compatible iOS apps:




QR & Mobile Barcode Scanner **NeoReader**® by NeoMedia Technologies. (https://itunes.apple.com/de/app/neoreader-qr-mobile-barcode/id284973754?mt=8)


6 Drawing

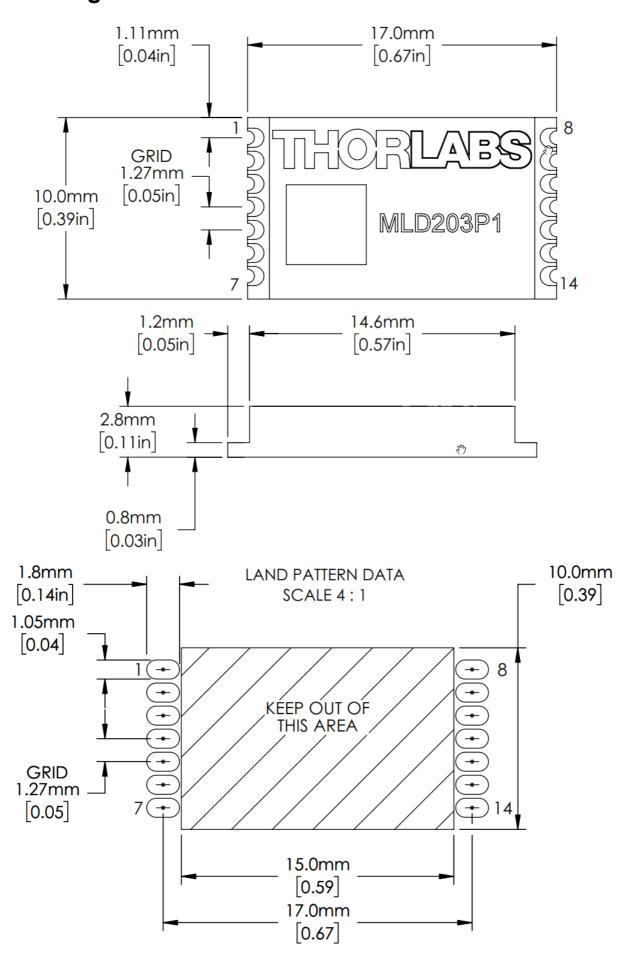

7 Laser Diode Pin Codes

This document refers to the laser diode pin codes ${\bf A}$ to ${\bf F}$ as per the figures below:





Laser Diode Pin Diagrams - Bottom View (Bold dots indicate case connection)

8 List of Acronyms

The following acronyms and abbreviations are used in this manual:

AC Alternating Current

DC Direct Current

ESD Electrostatic discharges

GND Ground

GUI Graphic User Interface I²C Inter-Integrated Circuit

LD Laser Diode μC Micro-Controller

NR Noise Reduction (filter)
LDO Low-Dropout Regulator
OA Operational Amplifier
PCB Printed Circuit Board

PD Photo Diode

SCPI Standard Commands for Programmable Instruments

SMT Surface Mounted Technology

TEC Thermoelectric cooler

TIA Transimpedance Amplifier

USB Universal Serial Bus

USB TMC USB Test and Measurement Class (device)

VVA Voltage-to-Voltage Amplifier

9 Warranty

Thorlabs GmbH warrants material and production of the MLD203P1 for a period of 24 months starting with the date of shipment. During this warranty period Thorlabs GmbH will see to defaults by repair or by exchange if these are entitled to warranty.

For warranty repairs or service the unit must be sent back to Thorlabs GmbH. The customer will carry the shipping costs to Thorlabs GmbH, in case of warranty repairs Thorlabs GmbH will carry the shipping costs back to the customer.

If no warranty repair is applicable the customer also has to carry the costs for back shipment.

In case of shipment from outside EU duties, taxes etc. which should arise have to be carried by the customer.

Thorlabs GmbH warrants the hard- and/or software determined by Thorlabs GmbH for this unit to operate fault-free provided that they are handled according to our requirements. However, Thorlabs GmbH does not warrant a fault free and uninterrupted operation of the unit, of the software or firmware for special applications nor this instruction manual to be error free. Thorlabs GmbH is not liable for consequential damages.

Restriction of warranty

The warranty mentioned before does not cover errors and defects being the result of improper treatment, software or interface not supplied by us, modification, misuse or operation outside the defined ambient stated by us or unauthorized maintenance.

Further claims will not be consented to and will not be acknowledged. Thorlabs GmbH does explicitly not warrant the usability or the economical use for certain cases of application.

Thorlabs GmbH reserves the right to change this instruction manual or the technical data of the described unit at any time.

10 Copyright and Exclusion of Reliability

Thorlabs GmbH has taken every possible care in preparing this document. We however assume no liability for the content, completeness or quality of the information contained therein. The content of this document is regularly updated and adapted to reflect the current status of the hardware and/or software. We furthermore do not guarantee that this product will function without errors, even if the stated specifications are adhered to.

Under no circumstances can we guarantee that a particular objective can be achieved with the purchase of this product.

Insofar as permitted under statutory regulations, we assume no liability for direct damage, indirect damage or damages suffered by third parties resulting from the purchase of this product. In no event shall any liability exceed the purchase price of the product.

Please note that the content of this document is neither part of any previous or existing agreement, promise, representation or legal relationship, nor an alteration or amendment thereof. All obligations of *Thorlabs GmbH* result from the respective contract of sale, which also includes the complete and exclusively applicable warranty regulations. These contractual warranty regulations are neither extended nor limited by the information contained in this document. Should you require further information on this product, or encounter specific problems that are not discussed in sufficient detail in the document, please contact your local *Thorlabs GmbH* dealer or system installer.

All rights reserved. This document may not be reproduced, transmitted or translated to another language, either as a whole or in parts, without the prior written permission of *Thorlabs GmbH*.

Copyright © Thorlabs GmbH 2016. All rights reserved.

11 Thorlabs 'End of Life' Policy

As required by the WEEE (Waste Electrical and Electronic Equipment Directive) of the European Community and the corresponding national laws, Thorlabs GmbH offers all end users in the EC the possibility to return "end of life" units without incurring disposal charges.

This offer is valid for Thorlabs GmbH electrical and electronic equipment

- sold after August 13th 2005
- marked correspondingly with the crossed out "wheelie bin" logo (see figure below)
- sold to a company or institute within the EC
- currently owned by a company or institute within the EC
- still complete, not disassembled and not contaminated

As the WEEE directive applies to self contained operational electrical and electronic products, this "end of life" take back service does not refer to other Thorlabs GmbH products, such as

- pure OEM products, that means assemblies to be built into a unit by the user (e. g. OEM laser driver cards)
- components
- mechanics and optics
- left over parts of units disassembled by the user (PCB's, housings etc.).

Waste treatment on your own responsibility

If you do not return an "end of life" unit to Thorlabs GmbH, you must hand it to a company specialized in waste recovery. Do not dispose of the unit in a litter bin or at a public waste disposal site.

WEEE Number (Germany): DE97581288

Ecological background

It is well known that waste treatment pollutes the environment by releasing toxic products during decomposition. The aim of the European RoHS Directive is to reduce the content of toxic substances in electronic products in the future.

The intent of the WEEE Directive is to enforce the recycling of WEEE. A controlled recycling of end-of-life products will thereby avoid negative impacts on the environment.



12 Thorlabs Worldwide Contacts

USA, Canada, and South America

Thorlabs, Inc. 56 Sparta Avenue Newton, NJ 07860

USA

Tel: 973-579-7227 Fax: 973-300-3600 www.thorlabs.com

www.thorlabs.us (West Coast) Email: sales@thorlabs.com

Support: techsupport@thorlabs.com

Europe

Thorlabs GmbH Hans-Böckler-Str. 6 85221 Dachau Germany

Tel: +49-8131-5956-0 Fax: +49-8131-5956-99

www.thorlabs.de

Email: europe@thorlabs.com

France

Thorlabs SAS 109, rue des Côtes 78600 Maisons-Laffitte France

Tel: +33-970 444 844 Fax: +33-811 38 17 48

www.thorlabs.com

Email: sales.fr@thorlabs.com

Japan

Thorlabs Japan, Inc. Higashi Ikebukuro Q Building 2nd Floor 2-23-2 Toshima-ku, Tokyo 170-0013

Japan

Tel: +81-3-5979-8889 Fax: +81-3-5979-7285

www.thorlabs.jp

Email: sales@thorlabs.jp

UK and Ireland

Thorlabs Ltd. 1 Saint Thomas Place, Ely Cambridgeshire CB7 4EX United Kingdom

Tel: +44-1353-654440 Fax: +44-1353-654444 www.thorlabs.com

Email: sales.uk@thorlabs.com

Support: techsupport.uk@thorlabs.com

Scandinavia

Thorlabs Sweden AB Bergfotsgatan 7 431 35 Mölndal Sweden

Tel: +46-31-733-30-00 Fax: +46-31-703-40-45 www.thorlabs.com

Email: scandinavia@thorlabs.com

Brazil

Thorlabs Vendas de Fotônicos Ltda.

Rua Riachuelo, 171

São Carlos, SP 13560-110

Brazil

Tel: +55-16-3413 7062 Fax: +55-16-3413 7064 www.thorlabs.com

Email: brasil@thorlabs.com

China

Thorlabs China Room A101, No. 100 Lane 2891, South Qilianshan Road Putuo District Shanghai 200331

China

Tel: +86-21-60561122 Fax: +86-21-32513480 www.thorlabs.com

Email: chinasales@thorlabs.com