# **AN13303 SNxxx/PN557- NFC Host SW Integration Guideline**

Rev-3.4 — 9/19/2023

**Application Note** 

#### **Document information**

| Info     | Content      |
|----------|--------------|
| Keywords | NFC, Android |

# **Android NFC Setup Guide**

## **Revision history**

| Rev | Date       | Description   |  |
|-----|------------|---|--|
| 1.0 | 2022-12-16 | Initial version for Android 14 NXP NFC Host SW Integration Guide  |  |
| 2.0 | 2023-01-12 | Target Library list updated for NFC & SE AIDL based HAL service   |  |
| 2.1 | 2023-04-14 | Updated with DTA APK setup guide link.  |  |
| 3.0 | 2023-04-24 | Review updates  |  |
| 3.1 | 2023-08-23 | Removed unused config options   |  |
| 3.2 | 2023-09-05 | Updated the keymint VTS/CTS and properties changes.   |  |
| 3.3 | 2023-09-08 | Updates for 14.0B.00  |  |
| 3.4 | 2023-09-19 | New Permission file added for Device policy manager tests.  VTS test case list added for Weaver and AuthSecret. |  |

# 1. Introduction

NXP's NFC controller SNxxxT/U and PN557 are designed to work with Android open source. Fig. 1 for SN1xx , Fig. 2 for SN220 and Fig 3 for PN557 shows the NXP's development and validation platform setup with Hi-key board 960.

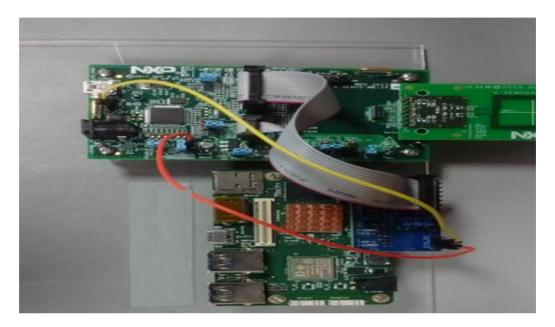


Figure 1: Hikey960 with SN1xx and Iguana Lite Board



Figure 2: DB845C with SN220 and Komodo Board

# **Android NFC Setup Guide**



Figure 3: Hikey960 along with PN557 Daughter sandwich board

## **Android NFC Setup Guide**

# 2. Abbreviations

NFC Near Field Communication

OEM Original Equipment Manufacturer

HW Hardware

IC Integrated Circuit
SWP Single Wire Protocol

GPIO General Purpose Input / Output

I2C Inter-Integrated CircuitSPI Serial Peripheral Interface

SW Software

SE Secure Element

OMAPI Open Mobile Application Programming Interface

AOSP Android Open Source Project
HAL Hardware Abstraction Layer
eSE Embedded Secure Element

OS Operating System

SEMS Secure Element Management Service

LS Loader Service
GSMA GSM Association

GSM Global System for Mobile

NFCC NFC Controller SMB System Mail Box

HIDL HAL interface definition language
UICC Universal Integrated Circuit Card

ISO International Organization for Standardization

DH Device Host

DTA Device Test Application

NA Not Applicable

MPOS Mobile Point of Sale

TEE Trusted Execution Environment

**Android NFC Setup Guide** 

# 3. Scope

This document provides guidelines for setting up NXP's new generation NFC/SE monolithic platform SNxxxT/U and NFC only PN557 in Android 14 build environment. It is a reference guideline for basic system integration. OEM integration may have variations based on actual system integration.

# 4. General steps for Android NFC integration

For the NFC software integration with Android, it is hereby assumed that NFC IC HW integration is done in a platform with following checks.

- Schematic reviewed with NXP
- HW IC interface like I2C/SPI, SWP (if used) working.
- Antenna designed and reviewed
- Antenna connection working
- GPIO connections checked

Fig. 4, shows the basic flow for Android NFC SW bring up. Following sections describe these steps in detail.

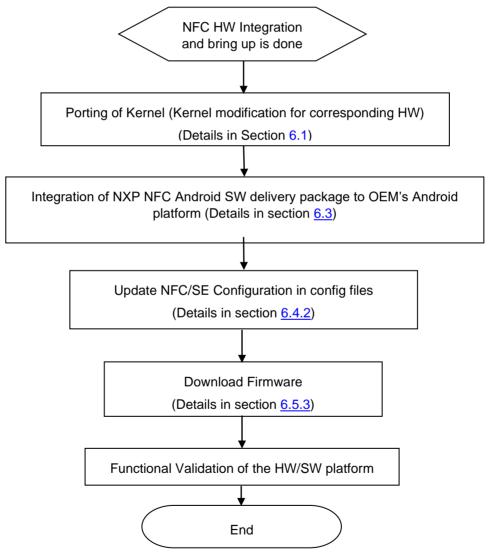


Figure 4: Android NFC SW bring up flow

# 5. Architecture Overview

Fig. 5, describes the architecture of Android 14 based NXP delivery package.

OMAPI implementation is part of the AOSP from Android P version onwards and NXP does not make any modification in Android OMAPI service layer.

Note: SEHal, WeaverHal, KeyMint Hal, AuthSecret HAL and SPIDriver are not applicable and shall not be integrated for NFC only product PN557.

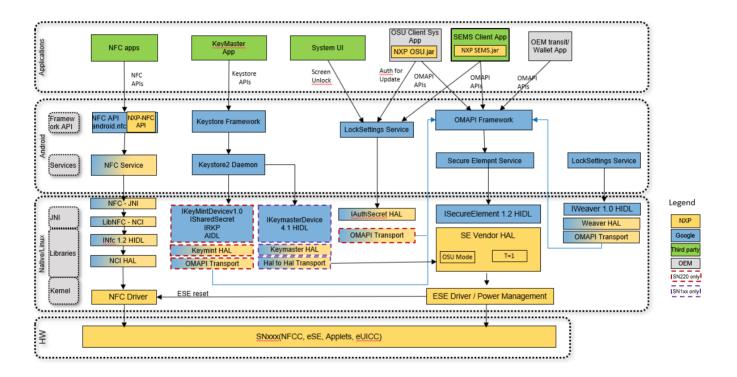


Figure 5: Secure NFC MW architecture

**Android NFC Setup Guide** 

# 6. Setup of Android NFC

# 6.1 Android Kernel driver setup for NXP-NFCC and eSE

#### 6.1.1 SNxxx

The db845c platform kernel can be downloaded by the below command:

```
repo init -u <a href="https://android.googlesource.com/kernel/common">https://android.googlesource.com/kernel/common</a> repo sync -j8
```

Additional information regarding db845 kernel:

```
git branch: 5.10
```

git commit: ea897dd10d35334b86d85e4cf23169d550220921

Steps to perform in platform's kernel root directory to integrate NXP specific I2C and SPI drivers for accessing NFCC and eSE.

- Download NFC I2C & SPI drivers from below git hub location: <a href="https://github.com/NXPNFCProject/NXPNFC">https://github.com/NXPNFCProject/NXPNFC I2CDriver/tree/br\_android\_ncihalx\_comm\_14</a>
   <a href="https://github.com/NXPNFCProject/NXPESE">https://github.com/NXPNFCProject/NXPESE</a> SPIDriver/tree/br\_android\_ncihalx\_comm\_14
- 2. Create nxp folder inside common/drivers/
- 3. Copy nfc from NXPNFC\_I2CDriver and keep inside common/driver/nxp
- 4. Copy ese from NXPNFC\_SPIDriver to common/driver/nxp
- 5. Include the driver Makefile folder path in the higher level Makefile in hierarchy
- 6. Include the Kconfig source to the higher level Kconfig in hierarchy
- 7. Add the DTS changes required in your platform DTS file

```
clock-frequency = <1000000>;
sn-i2c@28 {
  compatible = "nxp,sn-nci";
   req = <0x28>:
   nxp.sn-irq = <&qpio26 0 0>:
   nxp,sn-ven-rstn = <&gpio26 1 0>;
   nxp,sn-dwl-req = <&gpio26 2 0>;
};
p61@0 {
  compatible = "nxp,p61";
  reg = <0>;
  nxp,p61-irq = <&gpio2 3 0>;
  nxp,p61-rst = <&gpio2 5 0>;
  nxp,trusted-se = <&gpio26 4 0>;
  spi-max-frequency = <20000000>;
  nxp,nfcc = "2-0028";
                            }:
```

**Android NFC Setup Guide** 

8. Set the kernel configuration to build driver as static or dynamic in the platform config file

```
    Static Linking with kernel image

CONFIG_ NXP_NFC_I2C=y

CONFIG_ NXP_ESE_P73=y
```

b. Dynamic as module(.ko)CONFIG\_ NXP\_NFC\_I2C=mCONFIG\_ NXP\_ESE\_P73=m

9. Compile the kernel using corresponding cross compiler and copy the generated Image.gz-dtb file to the ANDROID\_ROOT/device/vendor/platform-kernel

Note: It is recommended to apply the patches manually.

Steps 2-6 are only required for building driver in-tree during building kernel.

Max frequency supported can be adjusted in dts as in step 7.

Ex. For SNxxx based platforms:

For I2c: clock-frequency = <3400000> For SPI: spi-max-frequency = <25000000>

#### 6.1.2 PN557

The db845c platform kernel can be downloaded by the below command:

```
repo init -u <a href="https://android.googlesource.com/kernel/common">https://android.googlesource.com/kernel/common</a> repo sync -j8
```

Additional information regarding db845 kernel:

git branch: 5.10

git commit: ea897dd10d35334b86d85e4cf23169d550220921

Steps to perform in platform's kernel root directory to integrate NXP specific I2C driver for accessing NFCC

- Download NFC I2C driver from below git hub location: https://github.com/NXPNFCProject/NXPNFC\_I2CDriver
- 2. Create nxp folder inside kernel/driver/
- 3. Copy nfc from NXPNFC\_I2CDriver and keep inside kernel/driver/nxp
- 4. Include the driver Makefile folder path in the higher level Makefile in hierarchy
- 5. Include the Kconfig source to the higher level Kconfig in hierarchy
- 6. Add the DTS changes required in your platform DTS file

**Android NFC Setup Guide** 

```
Ido11: LDO11 { /* Low Speed Connector */
    regulator-name = "VOUT11_1V8_2V95";
    regulator-min-microvolt = <1825000>;
        regulator-always-on;
    regulator-enable-ramp-delay = <240>;
};
clock-frequency = <1000000>;
sn-i2c@28 {
    compatible = "nxp,sn-nci";
    reg = <0x28>;
    nxp,sn-irq = <&gpio26 0 0>;
    nxp,sn-ven-rstn = <&gpio26 1 0>;
    nxp,sn-dwl-req = <&gpio26 2 0>;
};
```

- 7. Set the kernel configuration to build driver as dynamic in the platform config file CONFIG\_NXP\_NFC\_I2C=m
- 8. Compile the kernel using corresponding cross compiler and copy the generated Image.gz-dtb file to the ANDROID\_ROOT/device/vendor/platform-kernel

## 6.2 Setup of Android NFC for DB845C

#### 6.2.1 Downloading Android source code

Use following command to get source code for Android-<x>.<y>:

```
repo init -u https://android.googlesource.com/platform/manifest -b android-<x>.<y> repo sync -f Note: x & y represents Android major & minor versions
```

For detailed steps to download Android source code refer Android website:

http://source.android.com/source/downloading.html

## 6.2.2 Building the source code

Use android build instructions from Android website for building android OS image:

http://source.android.com/source/building.html

Build name for RB3 development board is **DB845C.** For device specific build (e.g. RB3), additional steps as described in link below needs to be followed.

https://source.android.com/setup/build/running

Information about the public APIs supported by Android NFC are available on following links:

http://developer.android.com/reference/android/nfc/package-summary.html

http://developer.android.com/reference/android/nfc/tech/package-summary.html

## 6.2.3 Building driver out of kernel tree(for arm64 arch)

Following are the steps to build the NFCC and ESE driver out-of-tree with the ACK, validated with the launch kernel android13-5.10 for A14.

- 1. Follow the steps mentioned in 6.1 for kernel sync & NXP NFC/SE driver integration.
- 2. Run below command for kernel out of tree compilation according to target platform. command mentioned in a. is for hikey960 & command mentioned in a. is for db845c.
  - a. BUILD NUMBER= BUILD CONFIG=common/build.config.hikey960 ./build/build.sh -j\$(nproc)
  - b. BUILD\_NUMBER= BUILD\_CONFIG=common/build.config.db845c ./build/build.sh -j\$(nproc)

SKIP\_MRPROPER=1 SKIP\_CP\_KERNEL\_HDR=1 are optional parameters to optimize the kernel build time during incremental build.

3. Build binaries will be available in KROOT/out/android13-5.10/dist folder. Create Image.gz-dtb by concatenate Image.gz & dtb file.

**Example:** cat Image.gz hi3660-hikey960.dtb > Image.gz-dtb

4. Copy the generated ko files & Image.gz-dtb to the android build environment for example "device/linaro/hikey-kernel/hikey960/5.10/" for hikey960.

## 6.3 Android NXP NFC SW Delivery Package

#### 6.3.1 Android NXP NFC Package Description

| Project/Repository      | Repository Link  | Branch                     |
|-------------------------|--|----------------------------|
| NFC_NCIHAL_base         | https://github.com/NXPNFCProject/NFC_N<br>CIHAL_base       | br_android_ncihalx_comm_14 |
| NFC_NCIHAL_Nfc          | https://github.com/NXPNFCProject/NFC_N<br>CIHAL_Nfc        | br_android_ncihalx_comm_14 |
| NFC_NCIHAL_libnfc-nci   | https://github.com/NXPNFCProject/NFC_N<br>CIHAL_libnfc-nci | br_android_ncihalx_comm_14 |
| nfcandroid_nfc_hidlimpl | https://github.com/NXPNFCProject/nfcandroid_nfc_hidlimpl   | br_android_ncihalx_comm_14 |

# **Android NFC Setup Guide**

| nfcandroid_se_hidlimpl      | https://github.com/NXPNFCProject/nfcandroid_se_hidlimpl         | br_android_ncihalx_comm_14 |
|-----------------------------|---|----------------------------|
| nfcandroid_secureelement    | https://github.com/NXPNFCProject/nfcandr<br>oid_secureelement   | br_android_ncihalx_comm_14 |
| nfcandroid_weaver_hidlimpl  | https://github.com/NXPNFCProject/nfcandr<br>oid_weaver_hidlimpl | br_android_ncihalx_comm_14 |
| nfcandroid_keymint_hidlimpl | https://github.com/NXPNFCProject/nfcandroid_keymint_hidlimpl    | br_android_ncihalx_comm_14 |
| nfcandroid_nxp_ese_clients  | https://github.com/NXPNFCProject/nfcandr<br>oid_nxp_ese_clients | br_android_ncihalx_comm_14 |
| NXPNFC_Reference            | https://github.com/NXPNFCProject/NXPNF<br>C_Reference           | br_android_ncihalx_comm_14 |
| NXPNFC_I2CDriver            | https://github.com/NXPNFCProject/NXPNFC 12CDriver               | br_android_ncihalx_comm_14 |
| NXPESE_SPIDriver            | https://github.com/NXPNFCProject/NXPES<br>E_SPIDriver           | br_android_ncihalx_comm_14 |
| NFC_NCIHAL_docs             | https://github.com/NXPNFCProject/NFC_N_CIHAL_docs               | br_android_ncihalx_comm_14 |
| nfc-NXPNFCC_FW              | https://github.com/NXP/nfc-NXPNFCC_FW                           | master                     |
| NXPAndroidDTA               | https://github.com/NXPNFCProject/NXPAndroidDTA                  | master                     |
| nfcandroid_frameworks       | https://github.com/NXPNFCProject/nfcandroid_frameworks.git      | br_android_ncihalx_comm_14 |

**Table 1: Android NXP NFC Package Description** 

# 6.3.2 Integration of NXP NFC Modules for SNxxx & PN557

Modify/Add AOSP directories in-place with NXP GitHub sources as per the following table:

| Module                                | NXP GitHub sources                            | Integration Path  | Description  | Applicable Chip type |
|---------------------------------------|---|---|--|----------------------|
| NFC Interface<br>and Public<br>APIs   | NFC_NCIHAL_base<br>/core/java/<br>android/nfc | \$ANROID_ROOT/frameworks/<br>base/core/<br>java/android/nfc | NFC Interfaces & Public APIs for Google AOSP   | SNxxx &<br>PN557     |
| NFC JNI and<br>JAVA<br>implementation | NFC_NCIHAL_Nfc /nci                           | \$ANDROID_ROOT/packages/<br>apps/Nfc/nci                    | Includes Java files and JNI for NCI NFC stack. It is modified minimally to adapt new features provided by NXP. | SNxxx &<br>PN557     |
| of NCI stack                          | NFC_NCIHAL_Nfc                                | \$ANDROID_ROOT/packages/<br>apps/Nfc                        | It is a derived module originally from AOSP. It is modified minimally to adapt new features provided by NXP.   | SNxxx &<br>PN557     |

# **Android NFC Setup Guide**

| NCI based<br>NFC stack<br>implementation | NFC_NCIHAL_libnfc-<br>nci                  | \$ANDROID_ROOT/system/nfc                            | NCI based NFC stack. It is a derived module originally from AOSP (Android Open Source Project). It is modified to adapt new features provided by NXP   | SNxxx &<br>PN557 |
|--|--|--|--|------------------|
| HAL implementation for NFC               | nfcandroid_nfc_hidlimp                     | \$ANDROID_ROOT/hardware/<br>nxp/nfc                  | Hardware abstraction layer for NXP specific controllers. This directory includes the configuration files also as below. 1.libnfc-nci.conf (to be pushed to vendor/etc on target) 2.libnfc-nxp- sn100x_example.conf (to be pushed to vendor/etc on target as libnfc-nxp.conf. 3.libnfc-nxp_RF- sn100x_example.conf(to be pushed to /vendor/ on target) NOTE: these configuration files are example files. Contact NXP support engineer for creating exact file for your platform. | SNxxx &<br>PN557 |
| HAL implementation for Secure Element    | nfcandroid_se_hidlimpl                     | \$ANDROID_ROOT/hardware/<br>nxp/secure_element       | Hardware abstraction layer implementation for Secure Element.  | SNxxx            |
| HAL implementation for Weaver            | nfcandroid_weaver_hi<br>dlimpl             | \$ANDROID_ROOT/hardware/<br>nxp/weaver               | Hardware abstraction layer implementation for Weaver.  | SNxxx            |
| HAL implementation for keymint           | nfcandroid_keymint_hi<br>dlimpl            | \$ANDROID_ROOT/hardware/<br>nxp/keymint              | Hardware abstraction layer implementation for Keymint  | SNxxx            |
| HAL implementation for authsecret        | nfcandroid_keymint_hi<br>dlimpl/authsecret | \$ANDROID_ROOT/hardware/<br>nxp/keymint/authsecret   | Hardware abstraction layer implementation for authsecret   | SNxxx            |
| SE Service                               | nfcandroid_secureele<br>ment               | \$ANDROID_ROOT/packages/<br>apps/SecureElement       | AOSP Secure Element Service  | SNxxx            |
| eSe Client<br>Library                    | nfcandroid_nxp_ese_c<br>lients             | \$ANDROID_ROOT/hardware/<br>nxp/secure_element_extns | NXP eSE client library implementation  | SNxxx            |
| Vendor APIs                              | nfcandroid_framework<br>s                  | \$ANDROID_ROOT/vendor/nx<br>p/frameworks             | NXP vendor framework APIs for NXP extension interfaces, SEMS & GSMA interfaces.  | SNxxx &<br>PN557 |
| NFC I2C<br>Driver                        | NXPNFC_I2CDriver/nf c                      | \$KERNEL_ROOT/drivers/nxp/<br>nfc                    | NFCC I2C Interface   | SNxxx &<br>PN557 |
| NFC SPI<br>Driver                        | NXPESE_SPIDriver/es<br>e                   | \$KERNEL_ROOT/drivers/nxp/ese                        | NFCC SPI Interface   | SNxxx            |
| Nxp Nfc<br>Documentation                 | NFC_NCIHAL_docs                            | NA   | NXP framework Java Docs  | SNxxx &<br>PN557 |
| NFCC                                     | nfc-NXPNFCC_FW                             | \$ANDROID_ROOT/system/ve                             | NFCC FW binary   | SNxxx &          |

# **Android NFC Setup Guide**

| Firmware |  | ndor/lib64                                 |   | PN557            |
|----------|--|--|---|------------------|
| DTA      | NXPAndroidDTA                            | \$ANDROID_ROOT/system/nfc<br>-dta/         | Device Test Application (DTA) used for NFC Forum testing. | SNxxx &<br>PN557 |
| SePolicy | NXPNFC_Reference/<br>/nxp/SNxxx/sepolicy | \$ANDROID_ROOT//vendor/nx p/SNxxx/sepolicy | SE Policy updates for NFC and SE service                  | SNxxx &<br>PN557 |

**Table 2: Android NXP NFC Integration** 

# 6.3.3 Android NFC Apps and Lib on Target

| Projects                             | Compiled Files  | Location in target device       |
|--------------------------------------|---|---------------------------------|
| NFCNCIHAL_base/core/java/android/nfc | Will be part of framework.jar                               | /system/framework               |
| NFC_NCIHAL_Nfc                       | lib/  | /system/app/NfcNci              |
|                                      | NfcNci.apk  |                                 |
|                                      | oat/  |                                 |
|                                      | libnfc_nci_jni.so   | /system/lib64/                  |
| nfcandroid_secureelement             | oat/  | /sytem/app/SecureElement        |
|                                      | SecureElement.apk   |                                 |
| NFC_NCIHAL_libnfc-nci                | libnfc_nci.so   | /system/lib64                   |
| nfcandroid_nfc_hidlimpl              | nfc_nci_nxp_snxxx.so  | /vendor/lib64                   |
|                                      | android.hardware.nfc-service.nxp                            | /vendor/bin/hw/                 |
| nfcandroid_nfc_hidlimpl/extns        | vendor.nxp.nxpnfc_aidl-V1-ndk.so                            | /vendor/lib64                   |
| nfcandroid_se_hidlimpl               | ese_spi_nxp_snxxx.so  | /vendor/lib64                   |
|                                      | android.hardware.secure_element-<br>service.nxp             | /vendor/bin/hw/                 |
| nfcandroid_keymint_hidlimpl          | libjc_keymint.nxp.so  | /vendor/lib64                   |
|                                      | libjc_keymint_transport.nxp.so                              | /vendor/lib64                   |
|                                      | android.hardware.security.keymint-<br>service.strongbox.nxp | /vendor/bin/hw                  |
|                                      | android.hardware.authsecret-service.nxp                     | /vendor/bin/hw                  |
| nfcandroid_weaver_hidlimpl           | ese_weaver.so<br>android.hardware.weaver-service.nxp        | /vendor/lib64<br>/vendor/bin/hw |
| nfcandroid_nxp_ese_clients           | se_extn_client.so   | /vendor/lib64                   |
| Nfcandroid_frameworks                | com.nxp.nfc.jar   | /system/framework               |
|                                      | com.nxp.sems.jar  | /product/framework              |
|                                      | com.nxp.osu.jar   | /product/framework              |

Table 3: Android NXP NFC Apps & Library Info on Target

**Android NFC Setup Guide** 

#### 6.3.4 Android Platform Modifications

#### 6.3.4.1 Android platform specific patches

Follow Step 1 to enable the following:

- Enable NFC, host card emulation and HCE-Felica features.
- Provide permission to i2c(nxp-nci) and spi(p73) driver for NFC Hal and SE Hal
- Assign object type for i2c(nxp-nci) and spi(p73) devices for providing se policy permissions
- Android SE Policy changes (these changes help in defining types, classes, permissions and rules for Nfc, SE, Strongbox & Weaver Hal service)
  - Integrate all required sepolicy. Reference SE policy changes are available in below link <a href="https://github.com/NXPNFCProject/NXPNFC\_Reference/tree/br\_android\_ncihalx\_comm\_14/nxp/SNxxx/sepolicy">https://github.com/NXPNFCProject/NXPNFC\_Reference/tree/br\_android\_ncihalx\_comm\_14/nxp/SNxxx/sepolicy</a>

Make sure to add corresponding HAL SEPolicy dirs to device makefile. Example as below BOARD SEPOLICY DIRS += vendor/\$(NXP VENDOR DIR)/SNxxx/sepolicy \

```
vendor/$(NXP_VENDOR_DIR)/SNxxx/sepolicy/authsecret \ vendor/$(NXP_VENDOR_DIR)/SNxxx/sepolicy/keymint \ vendor/$(NXP_VENDOR_DIR)/SNxxx/sepolicy/nfc \ vendor/$(NXP_VENDOR_DIR)/SNxxx/sepolicy/se \ vendor/$(NXP_VENDOR_DIR)/SNxxx/sepolicy/weaver
```

#### 6.3.4.2 Android Source Build

To perform a full build, execute the following command from android root directory:

- cd \$ANDROID ROOT/
- make api-stubs-docs-non-updatable-update-current-api
- make system-api-stubs-docs-non-updatable-update-current-api
- make -j\$(nproc)

**Android NFC Setup Guide** 

# 6.4 Host SW Source Package Compilation

## 6.4.1 Compilation Flags

NXP\_EXTNS=TRUE Enable NXP extensions

**Table 4: Compilation Flags** 

# 6.4.2 Configuration Files

Host specific configuration are available in the below path and all the configs are self-explanatory and some of the configs are listed below

#### SN110 Config path:

 $\frac{https://github.com/NXPNFCProject/nfcandroid\_nfc\_hidlimpl/tree/br\_android\_ncihalx\_comm\_14/snxxx/halimpl/conf/SN1xx/sn110/gen-config-files$ 

#### SN100 config path:

https://github.com/NXPNFCProject/nfcandroid\_nfc\_hidlimpl/tree/br\_android\_ncihalx\_comm\_14/snxxx/halimpl/conf/SN1xx/sn100/gen-config-files

## SN220 Config path:

 $\underline{https://github.com/NXPNFCProject/nfcandroid\_nfc\_hidlimpl/tree/br\_android\_ncihalx\_comm\_14/snxxx/halimpl/conf/SN220/gen-config-files}$ 

## PN557 Config path:

 $\underline{https://github.com/NXPNFCProject/nfcandroid\_nfc\_hidlimpl/tree/br\_android\_ncihalx\_comm\_14/snxxx/halimpl/conf/PN557/gen-config-files}$ 

**Android NFC Setup Guide** 

# 6.5 Feature Integration guideline

## 6.5.1 OMAPI Secure Element terminal configuration

Assignment of terminal number to each SE interface (SPI) is based on system configuration in **libnfc-nxp-SN100/SN110/SN220-example.conf**. These terminals are mapped to OMAPI framework SEService readers list. This section is not applicable for PN557.

Terminal Naming should start from eSE1 and continue in ascending order

(This is as per OMAPI SE service implementation)

Only terminal which are mapped in configuration file are reflected as readers available in SE service.

## For Example: -

Order below is just an example

NXP\_SPI\_SE\_TERMINAL\_NUM="eSE1" -> eSE domain accessed via SPI interface

Additionally, from Android 11 onwards it is mandatory to enable terminals as per the system configuration in vendor/etc/vintf/manifest/secure\_element-service-nxp.xml.xml

Based on number of terminals getting enabled in config file corresponding number of terminal instances need to be updated in manifest.xml as shown below

```
<manifest version="1.0" type="device">
    <hal format="aidl">
        <name>android.hardware.secure_element</name>
        <version>1</version>
        <fqname>ISecureElement/eSE1</fqname>
        </hal>
    </manifest>
```

#### 6.5.2 NFC DTA Setup

#### 6.5.2.1 NFC DTA Source

Information of NXPAndroidDTA Project repositories in the GitHub are as below:

NFC DTA source can be downloaded from the below link:

https://github.com/NXPNFCProject/NXPAndroidDTA

Copy NFC DTA source to /system/nfc-dta/ folder

#### 6.5.2.2 Build NFC DTA

After building DTA, it generates 64-bit DTA binaries. To install DTA on the android device, ensure that adb is installed on the system and USB cable is connected between the system and the android device.

#### 6.5.2.3 NFC DTA Binaries

1. The generated binary files should be pushed to the target devices as per the below table.

| Project          | Compiled Files | Location in target device                                   |
|------------------|----------------|---|
|                  | libdta.so      |   |
| /system/nfc-dta/ | libosal.so     | /system/lib64   |
|                  | libdta_jni.so  |   |
|                  | libmwif.so     |   |
| /system/nfc-dta/ | NxpDTA.apk     | /system/app/NxpDTA  |
|                  |                | (Create folder "NxpDTA" under /system/app in target device) |

**Table 5: DTA specific binaries** 

After updating the required files, the "NXP Device Test Application" appears in the main menu.

Setting to be done before running DTA APK are as below

- Switch off the default NFC service option in Settings.
   Settings->Connected Devices >NFC as OFF (Un-ticked) and reboot the device (using 'adb reboot').
- 2. Set Screen time out settings or Stay Awake option should be ticked.

Screen time out should be updated in the IUT settings to avoid the DTA RF signal loss. Because once the device goes to sleep mode immediately RF will be stopped from device, to avoid this device screen timeout should be increased to 30 minutes or device should powered. The following path can be used for updating the screen timeout setting.

```
Main menu -> Settings -> Developer Options -> Stay Awake.

Settings -> Display -> Sleep -> select 30 minutes.
```

Refer DTA setup guide (link) for the usage of DTA application.

## 6.5.3 Firmware Download

NXP provides precompiled firmware for ARM platforms. NXP also can provide firmware as .c file and it can be compiled as .so file with the platform compiler. Firmware resides at location /system/vendor/lib64/ on the android target system.

Firmware can be updated when NXP releases an updated version. Steps to update are as follows:

- 1. Compile the firmware to .so file using the file received in .C file format. If firmware is in .so format then this step can be skipped.
- 2. Push the firmware file to
  - a. /system/vendor/lib64/libsn100u\_fw.so for SN1xx
  - b. /system/vendor/lib64/libsn220u\_fw.so for SN22x
  - c. /system/vendor/lib64/libpn557\_fw.so for PN557on target.

**Android NFC Setup Guide** 

- 3. Reboot the device or disable and enable NFC service. New firmware will be downloaded during the NFC service boot up
- 4. Firmware file can be downloaded from below location

 $\underline{https://github.com/NXP/nfc-NXPNFCC\_FW/tree/master/sn1xx}$ 

https://github.com/NXP/nfc-NXPNFCC FW/tree/master/sn220

https://github.com/NXP/nfc-NXPNFCC\_FW/tree/master/pn557

Note 1: Firmware download can take up around 10 seconds including host delay.

Note 2: It is strongly recommended not to modify the original firmware download logic of Android NFC.

Note 3: It is recommended that Firmware is always upgraded and not downgraded. If firmware version is required to be downgraded, then please consult NXP.

**Android NFC Setup Guide** 

# 6.6 Android one specific

Android one compliant stack is where only vendor partition(HAL source), config files are from NXP remaining layers(Framework, NFC service, JNI and libnfc source) i.e. system partition is default AOSP source. Following section contains list of changes needed for Androd-one specific configuration.

This section is not applicable for PN557

#### 6.6.1 Card emulation through Off-host in Android-one platform

To achieve card emulation functionality through off-host(eSE/UICC) on Android one stack below changes are needed in libnfc-nxp config file which is different from regular config options

Default AOSP implementation only supports below config options related to routing table management

- 1) DEFAULT ISODEP ROUTE(libnfc-nci.conf)
- 2) DEFAULT\_SYS\_CODE\_ROUTE(libnfc-nxp.conf)
- 3) DEFAULT\_OFFHOST\_ROUTE(libnfc-nxp.conf)

|       | Value       |         |
|-------|-------------|---------|
| Route | Android One | Regular |
| eSE   | 0xC0        | 0x01    |
| UICC1 | 0x80        | 0x02    |
| UICC2 | 0x81        | 0x03    |

**Table 6: NFCEE route Ids** 

Hence the platforms which are willing to use Card emulation functionality through off-host locations shall update config file with values indicated above

#### 6.7 Enable SecureElement OMAPI AIDL interface to Vendor Services

To enable communication from KeyMint/Weaver HAL to SecureElement OMAPI AIDL service, following settings Required in the build environment

Add overlay in the device configuration folders as below (Example is given as per Dragon board)
 Create new folder device/linaro/dragonboard/overlay/packages/apps/SecureElement/res/value

Create new file "config.xml" with following content:

<?xml version="1.0" encoding="utf-8"?>

#### <resources>

<!-- To enable vendor stable service, set this to true and

make sure its vntf manifest entry is also configured. -->

<bool name="secure\_element\_vintf\_enabled">true</bool>

</resources>

config.xml file should be present in the "device/linaro/dragonboard/overlay/packages/apps/SecureElement/res/value"

Add following line in <ANDORID\_ROOT>/vendor/nxp/SNxxx/BoardConfigNfc.mk
 PRODUCT\_MANIFEST\_FILES += packages/apps/SecureElement/secure\_element-service.xml

#### 6.8 Strongbox, Weaver & AuthSecret Hal Integration

NXP Secure Element enables tamper-resistant key storage for Android Apps using StrongBox. StrongBox is an implementation of the Keymint HAL that resides in a hardware security module.

Weaver provides secure storage of secret value (device PIN/Password) that may only be read if the corresponding key has been presented.

This section is not applicable for PN557

#### 6.8.1 Weaver Hal Integration

NXP Weaver applet shall be preinstalled on eSE, please contact NXP CAS for further support.

Below steps shall be followed to enable Weaver Hal in Android.

- Download Weaver Hal source from NXP git hub
  - https://github.com/NXPNFCProject/nfcandroid weaver hidlimpl
- Integrate Weaver Hal to AOSP Code (br\_android\_ncihalx\_comm\_14)
  - cp -rf nfcandroid\_weaver\_hidlimpl/weaver AOSP/hardware/nxp/weaver
  - Copy below folder if keymint hal is not integrated, please skip if keymint hal is integrated

**Android NFC Setup Guide** 

**Android NFC Setup Guide** 

- cp -rf nfcandroid\_keymint\_hidlimpl/keymint/transport/ AOSP/hardware/nxp/weaver
- Update include path in AOSP/hardware/nxp/weaver/libese\_weaver/Android.bp
- Required sepolicy rules for Weaver HAL in link below
  - https://github.com/NXPNFCProject/NXPNFC\_Reference/tree/br\_android\_ncihalx\_comm\_14/nx p/SNxxx/sepolicy/weaver
- Add Below permission in "AOSP/vendor/nxp/SNxxx/sepolicy/file\_context"
  - "(vendor|system/vendor)/bin/hw/android\.hardware\.weaver-service\.nxp u:object\_r:hal\_weaver\_default\_exec:s0"
- Add Weaver HAL Service Pkg in "AOSP/vendor/nxp/SNxxx/Device.mk"
  - PRODUCT\_PACKAGES += android.hardware.weaver-service.nxp
  - BOARD\_SEPOLICY\_DIRS += vendor/\$(NXP\_VENDOR\_DIR)/SNxxx/sepolicy/weaver
- Minimal FW logic shall be enabled in NFC Hal(only required for SN110), Please make sure below configs are set
  - Android makefile: -DNXP\_NFC\_RECOVERY=TRUE
  - Libnfc-nxp config file option
    - # Enable or Disable the minimal FW recovery support.
    - # This logic will get enabled on early NFC hal boot.
    - # Disable NFCC RECOVERY support 0x00
    - # Enable NFCC RECOVERY support 0x01
    - NXP NFCC RECOVERY SUPPORT=0x01
  - NFC hal shall be configured as early hal, SE policy changes shall be adopted in SE and NFC hal
     https://github.com/NXPNFCProject/NXPNFC\_Reference/tree/br\_android\_ncihalx\_comm\_14/nxp/SNxxx/sepolicy
- Weaver VTS test cases to be executed:

| SI | Module                 | Location in  | Steps to Execute        |
|----|------------------------|--------------|-------------------------|
| No |                        | AOSP         |                         |
|    |                        |              |                         |
| 1  | VtsHalWeaverTargetTest | hardware/int | run vts -a arm64-v8a -m |
|    |                        | erfaces/weav | VtsHalWeaverTargetTest  |
|    |                        | er/vts/      | -                       |
|    |                        |              |                         |

## 6.8.2 Strongbox Hal(Keymint) Integration

Android Keymint Hal supportd Android Hardware backed Keystore. **Keymint both Hal are available in GitHub, but are mutually exclusive**. Only one service should be integrated in system. Also corresponding NXP Keymint applet shall be preinstalled on eSE. Please contact NXP CAS for info on which Hardware backed keystore is supported for specific chip types.

**Android NFC Setup Guide** 

Keymint uses OMAPI Transport layer. Hence ARA rules need to be updated for keymint HAL to access eSE via OMAPI. Please contact NXP CAS for ARA applet and ARA rules support.

- Get Keymint HAL source from below location
  - <a href="https://github.com/NXPNFCProject/nfcandroid\_keymint\_hidlimpl/tree/br\_android\_ncihalx\_comm">https://github.com/NXPNFCProject/nfcandroid\_keymint\_hidlimpl/tree/br\_android\_ncihalx\_comm</a>
     14
- cp -rf nfcandroid keymint hidlimpl/keymint AOSP/hardware/nxp/JavacardKeymaster
  - Enable compilation of strongbox HAL source by adding android.hardware.security.keymintservice.strongbox in board config file (vendor/nxp/SNxxx/device-nfc.mk)
    - PRODUCT\_PACKAGES + android.hardware.security.keymint-service.strongbox
  - Required sepolicy changes as below in vendor/nxp/SNxxx/sepolicy/file\_contexts
     #StrongBox Keymint HAL
    - + /vendor/bin/hw/android\.hardware\.security\.keymint-service\.strongbox u:object\_r:hal\_keymint\_strongbox\_exec:s0
  - vendor/nxp/SNxxx/sepolicy/hal\_keymint\_strongbox.te shall have changes available in below link
    - https://github.com/NXPNFCProject/NXPNFC Reference/blob/br android ncihalx com m\_14/nxp/SNxxx/sepolicy/hal\_keymint\_strongbox.te
  - vendor/nxp/SNxxx/config.fs shall have changes available in below link & config.fs file should be added as TARGET\_FS\_CONFIG\_GEN (e.g., TARGET\_FS\_CONFIG\_GEN += vendor/nxp/SNxxx/config.fs) in BoardConfigNfc.mk
    - https://github.com/NXPNFCProject/NXPNFC\_Reference/blob/br\_android\_ncihalx\_com m\_14/nxp/SNxxx/config.fs
- Please make sure below binaries are present on device:
  - SB HAL binary: /vendor/bin/hw/android.hardware.security.keymint-service.strongbox
  - SB HAL init rc: /vendor/etc/init/android.hardware.security.keymint-service.strongbox.rc
  - Manifest: /vendor/etc/vintf/manifest/android.hardware.security.keymint-service.strongbox.xml
  - Manifest: /vendor/etc/vintf/manifest/android.hardware.security.sharedsecretservice.strongbox.xml
  - o uuid mapping xml file : vendor/etc/hal\_uuid\_map\_config.xml

#### 6.8.2.1 Changes required for Keymint VTS, CTS and RKPD test case execution:

- Enable Keystore attest key feature
  - o PRODUCT\_COPY\_FILES += \

frameworks/native/data/etc/android.hardware.keystore.app\_attest\_key.xml:system/etc/permissions /android.hardware.keystore.app\_attest\_key.xml

## For RKP functionality

- PRODUCT\_PRODUCT\_PROPERTIES += remote\_provisioning.hostname=remoteprovisioning.googleapis.com
- o PRODUCT PRODUCT PROPERTIES += remote provisioning.enable rkpd=true
- PRODUCT\_PROPERTIES += remote\_provisioning.strongbox.rkp\_only=true

#### • Setting ro.vendor.build.security patch for Keymint 3.0 VTS Test cases

VENDOR\_SECURITY\_PATCH = \$(PLATFORM\_SECURITY\_PATCH)

#### For testing deleteAllKeys during factory reset

 PRODUCT\_PRODUCT\_PROPERTIES += ro.crypto.metadata\_init\_delete\_all\_keys.enabled=true

#### For Device Id Attestation Testcases

These changes are just for reference only and properties values might vary based on the OEM device configurations.

o PRODUCT\_COPY\_FILES += \

frameworks/native/data/etc/android.software.device\_id\_attestation.xml:\$(TARGET\_COPY\_OUT\_VENDOR)/etc/permissions/android.software.device\_id\_attestation.xml

o PRODUCT COPY FILES += \

frameworks/native/data/etc/handheld\_core\_hardware.xml:\$(TARGET\_COPY\_OUT\_VENDOR)/etc/permissions/handheld\_core\_hardware.xml

- PRODUCT\_PRODUCT\_PROPERTIES += ro.product.device\_for\_attestation=\$(TARGET\_PRODUCT)
- PRODUCT PRODUCT PROPERTIES += ro.product.product for attestation=unknown
- PRODUCT\_PRODUCT\_PROPERTIES += ro.product.manufacturer\_for\_attestation=unknown
- PRODUCT\_PRODUCT\_PROPERTIES += ro.product.vendor.name=unknown
- PRODUCT\_PRODUCT\_PROPERTIES += ro.product.name=unknown
- PRODUCT MODEL FOR ATTESTATION := \$(TARGET PRODUCT)
- o PRODUCT\_BRAND\_FOR\_ATTESTATION := Android

# List of Keymint CTS/VTS test cases to be executed:

| SI | Module                               | Location in       | Steps to Execute                       |
|----|--------------------------------------|-------------------|--|
| No |                                      | AOSP              |  |
| 1  | N/to A : dlV ov A disetTo septToot   | handii ana /iinta |  |
| 1  | VtsAidlKeyMintTargetTest             | hardware/inte     | run vts -a arm64-v8a -m                |
|    |                                      | rfaces/security   | VtsAidlKeyMintTargetTest               |
|    |                                      | /keymint/aidl/    |  |
|    |                                      | vts/functional    |  |
| 2  | VtsRemotelyProvisionedComponentTests | hardware/inte     | run vts -a arm64-v8a -m                |
|    |                                      | rfaces/security   | VtsHalRemotelyProvisionedComponentTarg |
|    |                                      | /rkp/aidl/vts/f   | etTest                                 |
|    |                                      | unctional         | etrest                                 |
|    |                                      | unctional         |  |
| 3  | VtsAidlSharedSecretTargetTest        | hardware/inte     | run vts -a arm64-v8a -m                |
|    |                                      | rfaces/security   |  |
|    |                                      | /sharedsecret/    | VtsAidlSharedSecretTargetTest          |
|    |                                      | aidl/vts/functi   |  |
|    |                                      | onal              |  |
|    |                                      |                   |  |
| 4  | CtsKeystoreTestCases                 | https://source    | run cts -a arm64-v8a -m                |
|    |                                      | .android.com/     | CtsKeystoreTestCases                   |
|    |                                      | docs/compati      |  |
| 5  | CtsKeystoreWycheproofTestCases       | bility/cts/dow    | run cts -a arm64-v8a -m                |
|    |                                      | <u>nloads</u>     | CtsKeystoreWycheproofTestCases         |
|    |                                      |                   |  |
| 6  | CtsKeystorePerformanceTestCases      |                   | run cts -a arm64-v8a -m                |
|    |                                      |                   | CtsKeystorePerformanceTestCases        |
|    |                                      |                   |  |

# Remote Key Provision test cases to be executed.

| SI<br>N<br>o | Package/tool                    | Location in AOSP                 | Description  | Steps to Execute  |
|--------------|---------------------------------|----------------------------------|--|---|
| 1            | rkp_factory_extra<br>ction_tool | system/security/provisi<br>oner/ | Extract the RKP CSR in factory to share with Google. This shall be done prior to any test. | <ul> <li>adb push rkp_factory_extraction_tool     /vendor/bin/</li> <li>adb shell     /vendor/bin/rkp_factory_extraction_to     ol</li> </ul> |

### **Android NFC Setup Guide**

| 2 | rkpdapp.apk                     | packages/modules/Rem<br>oteKeyProvisioning/app<br>/              | RKP service          | This always runs in background on boot complete.  |
|---|---------------------------------|--|----------------------|---|
| 3 | RkpdAppIntegrati<br>onTests.apk | packages/modules/Rem<br>oteKeyProvisioning/app<br>/tests/e2e     | RKP end to end tests | <ul> <li>adb install -t         RkpdAppIntegrationTests.apk</li> <li>adb shell am instrument -w         com.android.rkpdapp.e2etest/androidx         .test.runner.AndroidJUnitRunner</li> </ul> |
| 4 | RkpdAppUnitTest<br>s.apk        | packages/modules/Rem<br>oteKeyProvisioning/app<br>/tests/unit    | RKP unit test        | <ul> <li>adb install -t RkpdAppUnitTests.apk</li> <li>adb shell am instrument -w<br/>com.android.rkpdapp.unittest/android<br/>x.test.runner.AndroidJUnitRunner</li> </ul>                       |
| 5 | RkpdAppStressTe<br>sts.apk      | packages/modules/Rem<br>oteKeyProvisioning/app<br>/tests/ stress | RKP stress test      | <ul> <li>adb install -t RkpdAppStressTests.apk</li> <li>adb shell am instrument -w<br/>com.android.rkpdapp.stress/androidx.t<br/>est.runner.AndroidJUnitRunner</li> </ul>                       |

## 6.8.3 AuthSecret Hal Integration

NXP IAR applet shall be preinstalled on eSE, please contact NXP CAS for further support. Below steps shall be followed to enable AuthSecret Hal in Android.

- Download KeyMint Hal source from NXP git hub
  - https://github.com/NXPNFCProject/nfcandroid\_keymint\_hidlimpl/tree/br\_android\_ncihalx\_comm\_
     \_14
- Integrate Weaver Hal to AOSP Code (br\_android\_ncihalx\_comm\_14)
  - cp -rf nfcandroid\_keymint\_hidlimpl/ authsecret AOSP/hardware/nxp/authsecret
- Copy below folder if keymint hal is not integrated, please skip if keymint hal is integrated
  - cp -rf nfcandroid\_keymint\_hidlimpl/transport/ AOSP/hardware/nxp/authsecret
  - Update include path in AOSP/hardware/nxp/authsecret/Android.bp
- Required sepolicy rules for AuthSecret HAL in link below

  - <a href="https://github.com/NXPNFCProject/NXPNFC\_Reference/tree/br\_android\_ncihalx\_comm\_14/nx">https://github.com/NXPNFCProject/NXPNFC\_Reference/tree/br\_android\_ncihalx\_comm\_14/nx</a> <a href="py/p/SNxxx/sepolicy/secure\_element.te">p/SNxxx/sepolicy/secure\_element.te</a>
- Add Below permission in "AOSP/vendor/nxp/SNxxx/sepolicy/file\_context"

- "/vendor/bin/hw/android\.hardware\.authsecret-service\.nxp u:object\_r:hal\_authsecret\_default\_exec:s0"
- Add AuthSecret HAL Service Pkg in "AOSP/vendor/nxp/SNxxx/Device.mk"
  - PRODUCT PACKAGES += android.hardware.authsecret-service.nxp
- BOARD\_SEPOLICY\_DIRS += vendor/\$(NXP\_VENDOR\_DIR)/SNxxx/sepolicy
- vendor/nxp/SNxxx/config.fs shall have changes available in below link & config.fs file should be added
  as TARGET\_FS\_CONFIG\_GEN (e.g., TARGET\_FS\_CONFIG\_GEN += vendor/nxp/SNxxx/config.fs) in
  BoardConfigNfc.mk
  - https://github.com/NXPNFCProject/NXPNFC Reference/blob/br android ncihalx comm 14/nx p/SNxxx/config.fs
- Make sure uuid mapping xml file (vendor/etc/hal\_uuid\_map\_config.xml) UUID mapping for AuthSecret HAL service UID.
- AuthSecret VTS test cases to be executed:

| SI<br>No | Module                     | Location in AOSP                                | Steps to Execute                                      |
|----------|----------------------------|---|---|
| 1        | VtsHalAuthSecretTargetTest | hardware/int<br>erfaces/auths<br>ecret/aidl/vts | run vts -a arm64-v8a -m<br>VtsHalAuthSecretTargetTest |

### 6.9 Enable ULPDET feature (Optional)

To enable ULPDET feature please add following property to the "libnfc-nxp.conf"

NXP\_DEFAULT\_ULPDET\_MODE=1

**Note:** This feature is supported only on SN220 chipset. This is not applicable for SN1xx & PN557.

#### 6.10 Power Tracker feature (Optional)

1) To enable Power feature please add following property to the "libnfc-nxp.conf"

NXP\_SYSTEM\_POWER\_TRACE\_POLL\_DURATION\_SEC=30

- 2) By Default power tracker specific libraries build as part of NFC HAL compilation
- 3) During full build add command line argument POWER\_TRACKER\_FEATURE=true to enable power tracker service.

Example: make TARGET\_NXP\_NFC\_HW=SN220 POWER\_TRACKER\_FEATURE=true

For more information related to Power tracker integration & test steps please refer below link.

**Android NFC Setup Guide** 

## Link:

 $\underline{https://github.com/NXPNFCProject/nfcandroid\_nfc\_hidlimpl/blob/br\_android\_ncihalx\_comm\_14/snxxx/halimpl/p\_ower-tracker/README.txt\_$ 

Note: This feature is supported only on SN220 chipset. This is not applicable for SN1xx & PN557.

#### **Android NFC Setup Guide**

# 7. Legal information

#### **Definitions**

Draft — The document is a draft version only. The content is still under internal review and subject to formal approval, which may result in modifications or additions. NXP Semiconductors does not give any representations or warranties as to the accuracy or completeness of information included herein and shall have no liability for the consequences of use of such information.

#### **Disclaimers**

Limited warranty and liability — Information in this document is believed to be accurate and reliable. However, NXP Semiconductors does not give any representations or warranties, expressed or implied, as to the accuracy or completeness of such information and shall have no liability for the consequences of use of such information. NXP Semiconductors takes no responsibility for the content in this document if provided by an information source outside of NXP Semiconductors.

In no event shall NXP Semiconductors be liable for any indirect, incidental, punitive, special or consequential damages (including - without limitation - lost profits, lost savings, business interruption, costs related to the removal or replacement of any products or rework charges) whether or not such damages are based on tort (including negligence), warranty, breach of contract or any other legal theory.

Notwithstanding any damages that customer might incur for any reason whatsoever, NXP Semiconductors' aggregate and cumulative liability towards customer for the products described herein shall be limited in accordance with the *Terms and conditions of commercial sale* of NXP Semiconductors.

Right to make changes — NXP Semiconductors reserves the right to make changes to information published in this document, including without limitation specifications and product descriptions, at any time and without notice. This document supersedes and replaces all information supplied prior to the publication hereof.

Suitability for use — NXP Semiconductors products are not designed, authorized or warranted to be suitable for use in life support, life-critical or safety-critical systems or equipment, nor in applications where failure or malfunction of an NXP Semiconductors product can reasonably be expected to result in personal injury, death or severe property or environmental damage. NXP Semiconductors and its suppliers accept no liability for inclusion and/or use of NXP Semiconductors products in such equipment or applications and therefore such inclusion and/or use is at the customer's own risk

**Applications** — Applications that are described herein for any of these products are for illustrative purposes only. NXP Semiconductors makes no representation or warranty that such applications will be suitable for the specified use without further testing or modification.

Customers are responsible for the design and operation of their applications and products using NXP Semiconductors products, and NXP Semiconductors accepts no liability for any assistance with applications or customer product design. It is customer's sole responsibility to determine whether the NXP Semiconductors product is suitable and fit for the customer's applications and products planned, as well as for the planned application and use of customer's third party customer(s). Customers should provide appropriate design and operating safeguards to minimize the risks associated with their applications and products.

NXP Semiconductors does not accept any liability related to any default, damage, costs or problem which is based on any weakness or default in the customer's applications or products, or the application or use by customer's third party customer(s). Customer is responsible for doing all necessary testing for the customer's applications and products using NXP Semiconductors products in order to avoid a default of the applications and the products or of the application or use by customer's third party customer(s). NXP does not accept any liability in this respect.

**Export control** — This document as well as the item(s) described herein may be subject to export control regulations. Export might require a prior authorization from competent authorities.

**Translations** — A non-English (translated) version of a document is for reference only. The English version shall prevail in case of any discrepancy between the translated and English versions.

**Evaluation products** — This product is provided on an "as is" and "with all faults" basis for evaluation purposes only. NXP Semiconductors, its affiliates and their suppliers expressly disclaim all warranties, whether express, implied or statutory, including but not limited to the implied warranties of non-infringement, merchantability and fitness for a particular purpose. The entire risk as to the quality, or arising out of the use or performance, of this product remains with customer.

In no event shall NXP Semiconductors, its affiliates or their suppliers be liable to customer for any special, indirect, consequential, punitive or incidental damages (including without limitation damages for loss of business, business interruption, loss of use, loss of data or information, and the like) arising out the use of or inability to use the product, whether or not based on tort (including negligence), strict liability, breach of contract, breach of warranty or any other theory, even if advised of the possibility of such damages.

Notwithstanding any damages that customer might incur for any reason whatsoever (including without limitation, all damages referenced above and all direct or general damages), the entire liability of NXP Semiconductors, its affiliates and their suppliers and customer's exclusive remedy for all of the foregoing shall be limited to actual damages incurred by customer based on reasonable reliance up to the greater of the amount actually paid by customer for the product or five dollars (US\$5.00). The foregoing limitations, exclusions and disclaimers shall apply to the maximum extent permitted by applicable law, even if any remedy fails of its essential purpose.

#### Licenses

#### Purchase of NXP <xxx> components

<License statement text>

#### **Patents**

Notice is herewith given that the subject device uses one or more of the following patents and that each of these patents may have corresponding patents in other jurisdictions.

<Patent ID> — owned by <Company name>

#### **Trademarks**

Notice: All referenced brands, product names, service names and trademarks are property of their respective owners.

<Name> — is a trademark of NXP Semiconductors N.V.

AN13303

# **Android NFC Setup Guide**

| Table of Contents |   |    |  |
|-------------------|---|----|--|
| 1.                | Introduction                                      | .3 |  |
| 2.                | Abbreviations                                     | .5 |  |
| 3.                | Scope   |    |  |
| 4.                | General steps for Android NFC integration         | .7 |  |
| 5.                | Architecture Overview                             | .8 |  |
| 6.                | Setup of Android NFC                              | .9 |  |
| 6.1               | Android Kernel driver setup for NXP-NFCC and      |    |  |
|                   | eSE   |    |  |
| 6.1.1             | SNxxx   | _  |  |
| 6.1.2             | PN557   |    |  |
| 6.2               | Setup of Android NFC for DB845C                   |    |  |
| 6.2.1             | Downloading Android source code                   |    |  |
| 6.2.2             | Building the source code                          |    |  |
| 6.2.3             | Building driver out of kernel tree(for arm64 arch |    |  |
| 0.0               | Android NXP NFC SW Delivery Package               | 12 |  |
| 6.3               |   |    |  |
| 6.3.1             | Android NXP NFC Package Description               | 12 |  |
| 6.3.2             | Integration of NXP NFC Modules for SNxxx &        | 10 |  |
| 6.3.3             | PN557   |    |  |
| 6.3.4             | Android Platform Modifications                    |    |  |
| 6.4               | Host SW Source Package Compilation                |    |  |
| 6.4.1             | Compilation Flags                                 |    |  |
| 6.4.2             | Configuration Files                               |    |  |
| 6.5               | Feature Integration guideline                     |    |  |
| 6.5.1             | OMAPI Secure Element terminal configuration       |    |  |
| 6.5.2             | NFC DTA Setup                                     |    |  |
| 6.5.3             | Firmware Download                                 |    |  |
| 6.6               | Android one specific                              |    |  |
| 6.6.1             | Card emulation through Off-host in Android-one    |    |  |
|                   | platform2   | 21 |  |
| 6.7               | Enable SecureElement OMAPI AIDL interface t       | 0  |  |
|                   | Vendor Services2                                  |    |  |
| 6.8               | Strongbox, Weaver & AuthSecret Hal Integratio     |    |  |
|                   |   |    |  |
| 6.8.1             | Weaver Hal Integration2                           |    |  |
| 6.8.2             | Strongbox Hal(Keymint) Integration                |    |  |
| 6.8.3             | AuthSecret Hal Integration                        |    |  |
| 6.9               | Enable ULPDET feature (Optional)                  |    |  |
| 6.10              | Power Tracker feature (Optional)                  |    |  |
| 7.                | Legal information                                 |    |  |
| Definition        | nns :   | 30 |  |

Disclaimers ......30

Licenses 30

| Patents 30 Trademarks | <br>30 |
|-----------------------|--------|
|                       |        |
|                       |        |
|                       |        |
|                       |        |
|                       |        |
|                       |        |
|                       |        |
|                       |        |
|                       |        |
|                       |        |
|                       |        |
|                       |        |
|                       |        |
|                       |        |
|                       |        |
|                       |        |
|                       |        |
|                       |        |