CXPI: Polling – Slave – PWM Mode



Description:

- This example demonstrates CXPI transmission in Polling Trigger method.
- TVII acts as a slave node of CXPI network.

> Target Device:

Traveo-II CYT2B9x devices

> CPU Board:

- CYTVII-B-E-1M-176-CPU Rev. C Board
- CYTVII-B-E-BB Rev.A Board

Dependency:

- Jumper J80 to be short on position 1-2 on Base Board
- CYTVII-B-E-1M-176-CPU board should be connected on CYTVII-B-E-BB board.
- Open J60, J62, J63 on the base board. Short J58 on the base board.
- Connect following pins on the base board
 - (RX) JP5.9 to J63.2, (TX) JP5.7 to J60.2, (EN) JP7.17 to J62.1
- Connect LINO connector (P5 upper one) on the base board and CXPI analyzer if available.

CXPI: Polling – Slave – PWM Mode



Expectation:

Scheduled frames: Tester send PIDs according to below schedule


No.	PTYPE	ID	PID transmitter	Response transmitter	Frame length (byte)	Frame interval	
1	no	0A	CXPI analyzer	CXPI analyzer	8	100ms	TVII copy the response and send back to tester
2	no	4A	CXPI analyzer	TVII	8	100ms	
3	no	0F	CXPI analyzer	CXPI analyzer	16	100ms	TVII copy the response and send back to tester
4	no	4F	CXPI analyzer	TVII	16	100ms	and send back to tester
5	no	6D	CXPI analyzer	CXPI analyzer	8	100ms	TVII copy the response
6	yes	4D	TVII	TVII	8	100ms	and send back to tester
7	yes	5D	TVII	CXPI analyzer	24	100ms	
8	no	7D	CXPI analyzer	TVII	8	100ms	

– CXPI analyzer :

If you have PX-10 CXPI analyzer, you can use cxpi_test.mps for it.

CXPI: Polling – Slave – PWM Mode



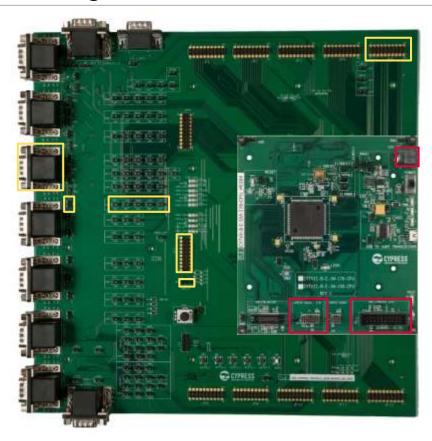

Legend:

- Red block for power, debug and USB (Mandatory)
- Yellow block for the example specific connections