CXPI: Polling – Master – NRZ Mode



Description:

- This example demonstrates CXPI transmission in Polling Trigger method.
- TVII acts as a master node of CXPI network.

Target Device:


Traveo-II CYT2BLx devices

CPU Board:

- CYTVII-B-E-1M-176-CPU Rev. C Board
- CYTVII-B-E-BB Rev.A Board

Dependency:

- CYTVII-B-E-1M-176-CPU board should be connected on CYTVII-B-E-BB board.
- Open J11, J12, J14 on the base board. Short J6, J9, J13 on the base board.
- Connect following pints on the base board
 - (RX) JP5.9 to J14.1, (TX) JP5.7 to J11.1, (CLK) JP5.6 to J12.2
- Connect CXPI connector (P1) on the base board and CXPI analyzer if available.





Expectation:

Scheduled frames: TVII send PIDs according to below schedule


No.	PTYPE	ID	PID transmitter	Response transmitter	Frame length (byte)	Frame interval	
1	no	0A	TVII	CXPI analyzer	8	100ms	TVII copy the response and send back to tester
2	no	4A	TVII	TVII	8	100ms	
3	no	0F	TVII	CXPI analyzer	16	100ms	TVII copy the response and send back to tester
4	no	4F	TVII	TVII	16	100ms	and send back to tester
5	yes	6D	CXPI analyzer	CXPI analyzer	8	100ms	TVII copy the response
6	yes	7D	CXPI analyzer	TVII	8	100ms	and send back to tester

– CXPI analyzer :

If you have PX-10 CXPI analyzer, you can use cxpi_test.mps for it.

CXPI: Polling – Master – NRZ Mode



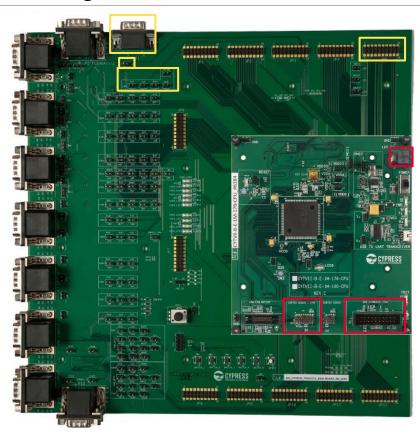

Legend:

- Red block for power, debug and USB (Mandatory)
- Yellow block for the example specific connections