CXPI: Event Trigger – Slave – PWM Mode



Description:

- This example demonstrates CXPI transmission in Event Trigger method.
- TVII acts as a slave node of CXPI network.

Target Device:

Traveo-II CYT2BLx devices

CPU Board:

- CYTVII-B-E-1M-176-CPU Rev. C Board
- CYTVII-B-E-BB Rev.A Board

Dependency:

- CYTVII-B-E-1M-176-CPU board should be connected on CYTVII-B-E-BB board.
- Open J60, J62, J63 on the base board. Short J58 on the base board.
- Connect following pins on the base board
 - (RX) JP5.9 to J63.2, (TX) JP5.7 to J60.2, (EN) JP7.17 to J62.1
- Connect LINO connector (P5 upper one) on the base board and CXPI analyzer if available.

CXPI: Event Trigger – Slave – PWM Mode



Expectation:

Scheduled frames: Tester send PIDs according to below schedule

No.	ID	PID transmitter	Response transmitter	Frame length (byte)	Frame interval	
1	0A	CXPI analyzer	CXPI analyzer	8	100ms	TVII copy the response and send back to tester
2	4A	CXPI analyzer	TVII	8	100ms	and send back to tester
3	0F	CXPI analyzer	CXPI analyzer	16	100ms	TVII copy the response
4	4F	CXPI analyzer	TVII	16	100ms	and send back to tester


Event frames: Press SW1, TVII send PID = 0x4D and response to tester

No.	ID	PID transmitter	Response transmitter	Frame length (byte)
5	4D	TVII	TVII	8


Press SW2, TVII send PID = 0x5D and request response from PX-10
After receiving response from PX-10, TVII send back data with PID increased by 1

No.	ID	PID transmitter	Response transmitter	Frame length (byte)	
6	5D	TVII	CXPI analyzer	24	TVII copy the response
7	5D	TVII	TVII	24	and send back to tester

CXPI analyzer :If you have PX-10 CXPI analyzer, you can use cxpi_test.mps for it.





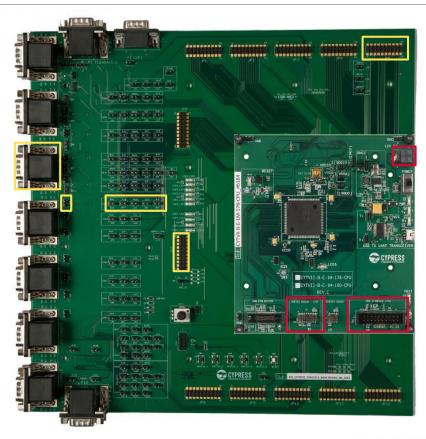

Legend:

- Red block for power, debug and USB (Mandatory)
- Yellow block for the example specific connections