
Enraged Rabbit Project Carrot Feeder assembly

Printing tips:


• Use the printing tips found on the EnragedRabbit Github (Carrot Feeder section)



Prepare the filament blocks

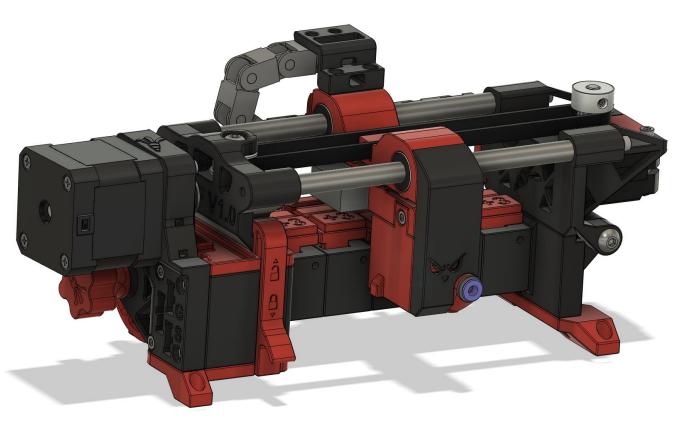


- Each channel of the Carrot Feeder is one filament block
- There two available versions for the block:
 with or without the M3 threaded insert. The
 threaded insert is though to insert properly,
 so if you're not comfortable doing it, use the
 version without it (you'll screw the M3x16
 directly in the plastic)
- 1-a Insert the magnet and the M3 threaded insert
- Every 6x3 magnet insert on the Carrot Feeder has a small flat slot on the side: use it to easily remove the magnet if needed

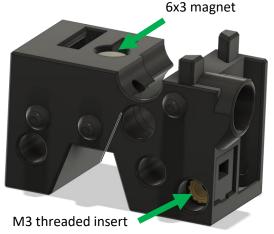




- Insert the latch, lock it with the M3x16 screw (don't screw too hard, be gentle) and insert the numbering plate (just click it in)
- Numbering plates can be easily removed with a small flat-head screwdriver, using the bottom slot of the plate


- Install the free rolling bondtech gear, take care of its orientation!
- Insert the 6x3 magnet: IT SHOULD REPEL THE ONE FROM THE FILAMENT BLOCK

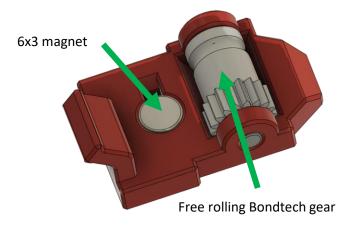

1-d Slide in the top hat locker plate (use the « 0 » value to begin with). Make sure it's fully inserted

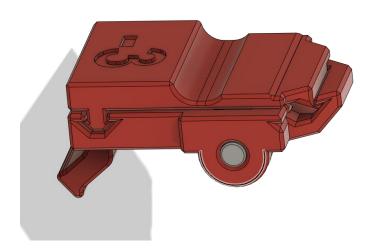





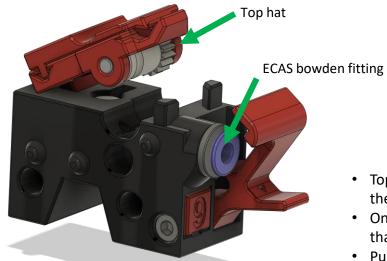




- Top hat should be inserted without forcing too much (play with the part orientation)
- Once inserted, rest position should be as seen on the left, thanks to the repelling magnets (with latch open)
- Push down the top hat and close the latch. You can now press on the top hat with a finger (it will go down) and release the finger (it will go up), like a spring mechanism

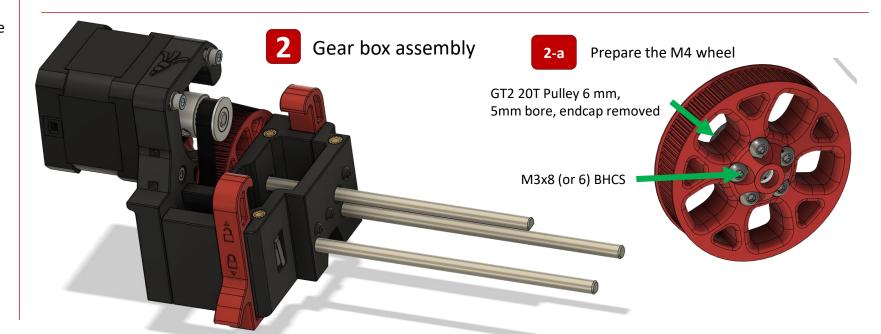

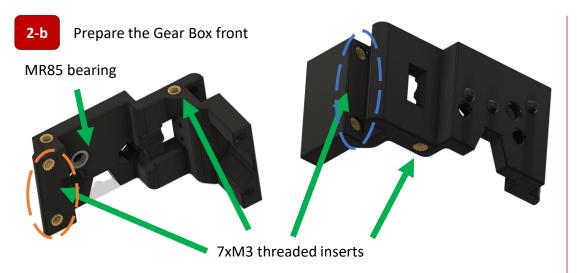


- Those M3 threaded inserts are difficult to insert (not much plastic behind), go slowly and do not put your soldering iron tip inside the insert if the tip sticks out of it
- Push those inserts using the soldering iron from the side, and take your time to make them well aligned with the holes

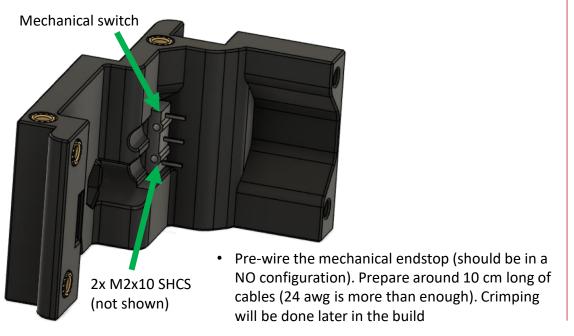




• You can already install the Gear motor (G label on the connector plate) cabling. Connect the 4 pins molex microfit connector in the dedicated slot (press fit). Use the zip-tie channel to secure the cable path

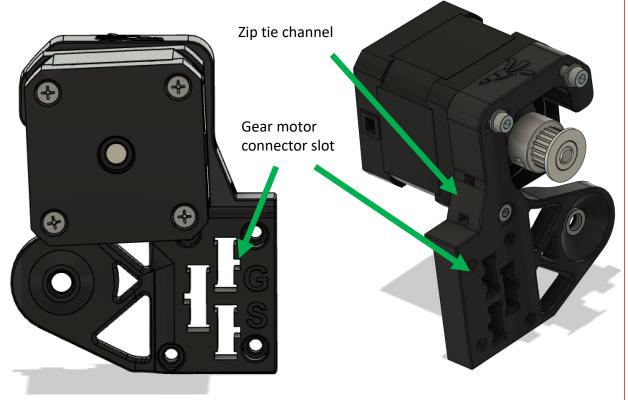


The microfit connector to install in the ERCF is the Female housing (with Male crimps). Just push them from the ERCF inside towards the exterior




Molex Microfit connector to install in the ERCF part

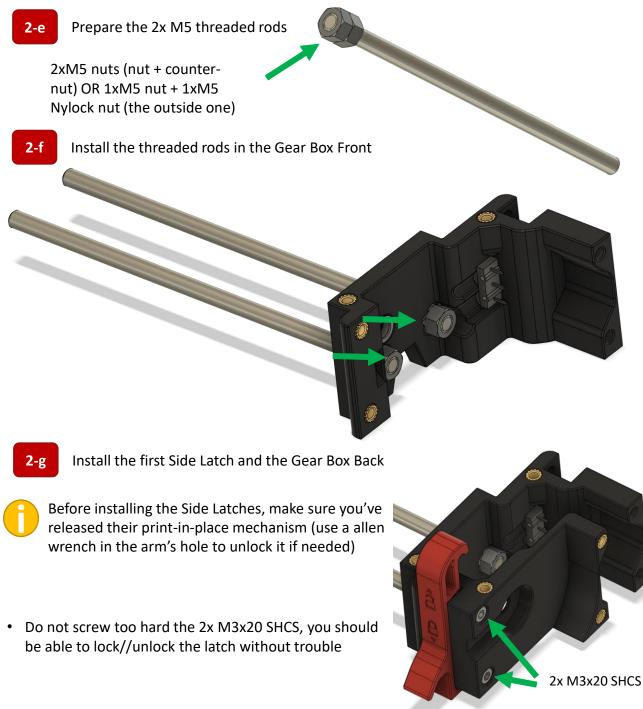

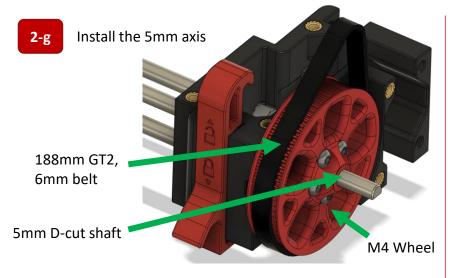


Don't forget to install the belt!

- No need to tighten the grub screws for the M4 wheel yet, we'll adjust the wheel//shaft position later
- 2-h Install the 2nd Side Latch and the M4 Gear Arm

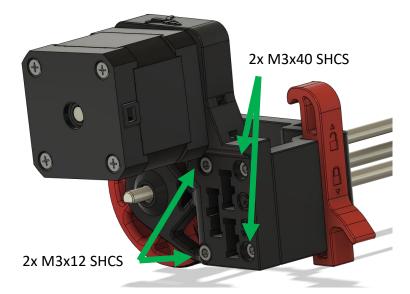


- Install the knob, tighten the M4 grub screw and tension the belt
- Press fit to the max the Knob on the 5mm shaft
- Put the Knob + Shaft assembly at around 1mm of the M4 Gear Arm part
- Tighten the M4 Wheel grub screws using the side access
- Tighten the belt by rotatin the motor around it's M3x12 SHCS screw
- Test the motion using the Knob, it should be smooth

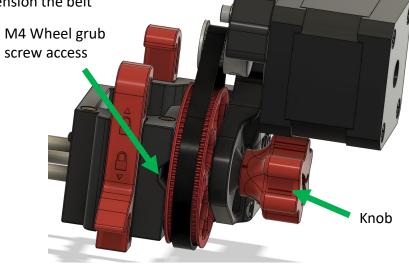


- Take a break, eat some gummy bears (not provided) or whatever, if you want!
- Prepare the Block End


 MR85 bearing


 2xM3 threaded inserts

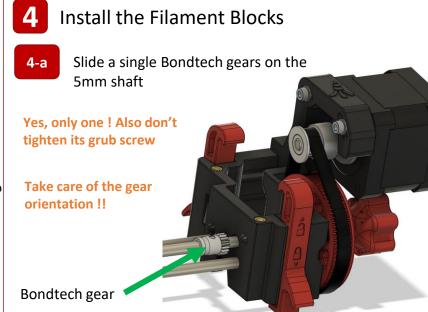

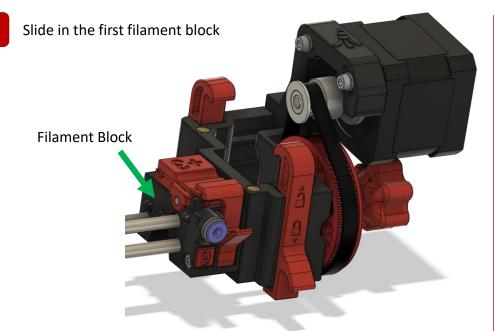


4-c Repeat steps 4-a and 4-b for all your Filament Blocks

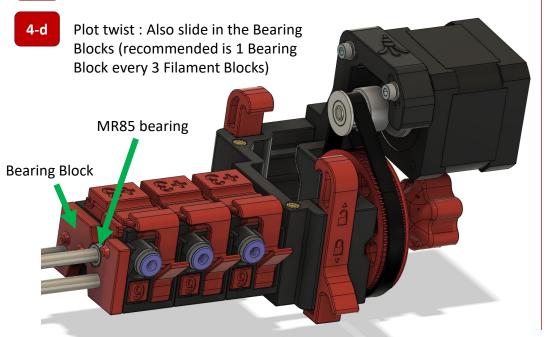

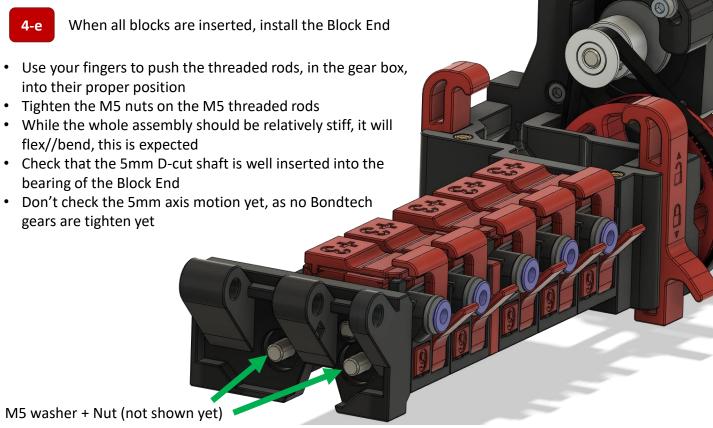


5 Align and tighten the Bondtech gears

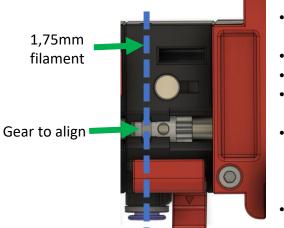


- Use a small ptfe tube (a few cms long is enough) and insert it in the first channel
- Use a some 1,75mm filament and insert it in the channel
- Use the knob to align the D-Cut shaft (cut facing the top)
- Align the Bondtech gears properly on the filament and screw it down, use some blue Loctite on the grub screw
- To check the proper alignement: Once done, let the filament in the filament block and turns by hand the gear axis using the knob (both directions). The filament should not move (it should not touch the Bondtech gears you've just fixed)
- Repeat this process for all channels




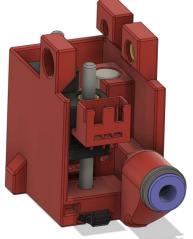


Prepare the detector cart parts

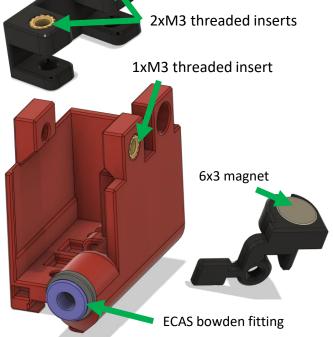

- Install the lever
- Make sure the lever spins freely around the 1,75mm filament axis
- Install the magnets so they repel each other!
- The rest position of the lever should be « down » (right picture) while the triggered position (using a 1,75 filament) should be « up » (left picture)

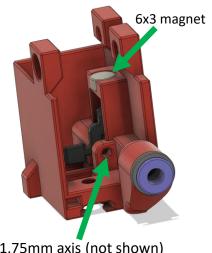

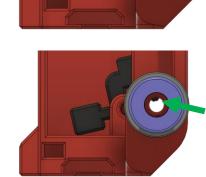


Rest position

Triggered position


1,75mm axis (not shown)

Install the optical detector

- Slide the optical detector into its support
- Install the detector support in the detector cart and then slide//screw in the 2xM3x20 SHCS screws
- Use the screws to position the detector around the middle of his allow movement range
- Make sure the head of the 2 screws are well inserted in the bottom slots of the detector cart and then slide in the Sliding Locker

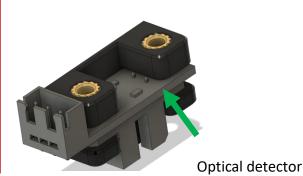

2x M3x20 SHCS

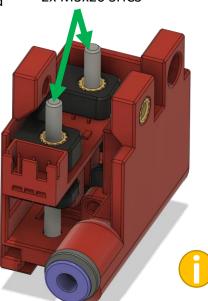



Sliding Locker

You can now use the two screws to precisely adjust the optical detector position (we'll do that later in the assembly//setup)





- 7-a Prepare the detector cart parts
- Make sure magnets (Selector Cart and the Selector Door) attract each other
- Use 2x M2x8mm screws (or similar) to fix the servo on the cart, directly screw in the plastic part
- The LM8UU (or the RJ4JP-01-08) are press-fitted in their slot

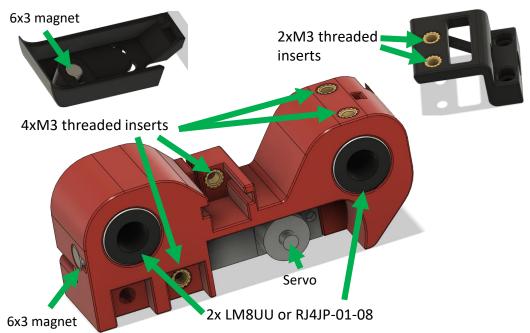

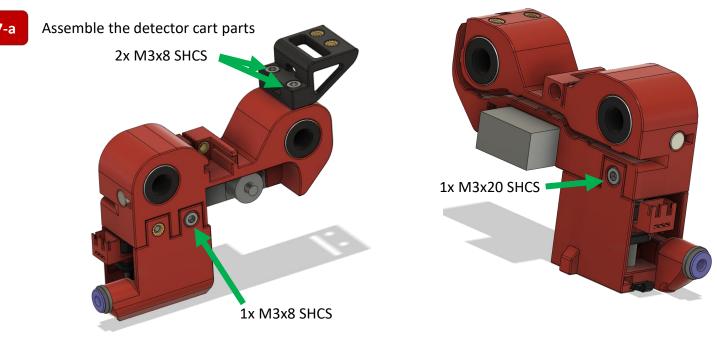


- Slide-in the Detector Cart, make sure the 2x M3X20 SHCS screws of the Detector Cart slides properly in their dedicated slots on the Selector Cart (they are not screwed-in, just guided)
- Just clip the door, as shown on the item #7. We'll deal with the wiring later on

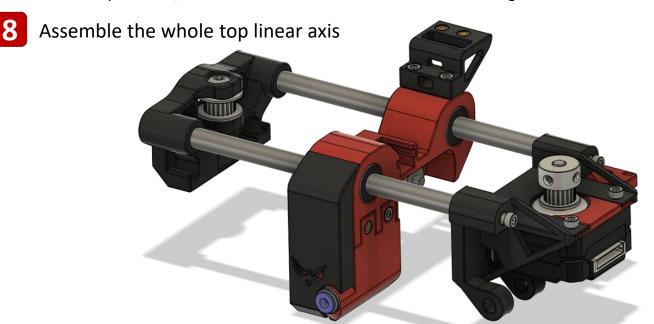

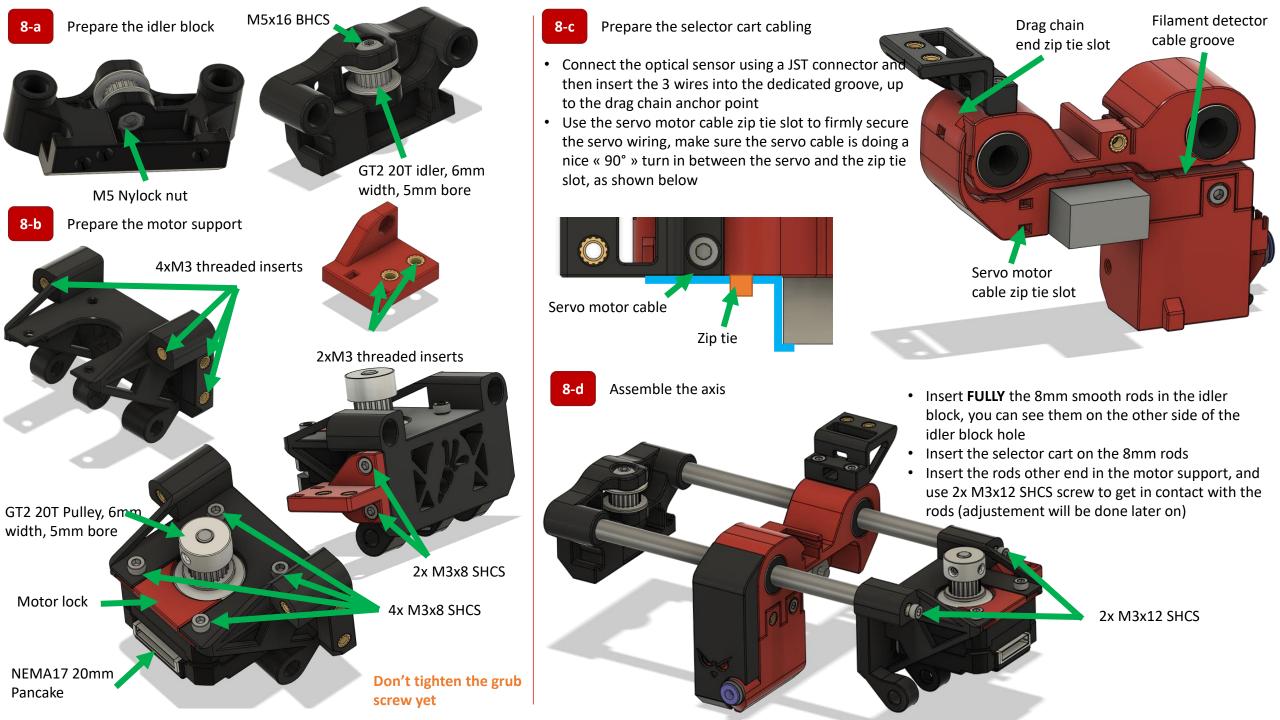


9 Assemble the top block to the bottom one

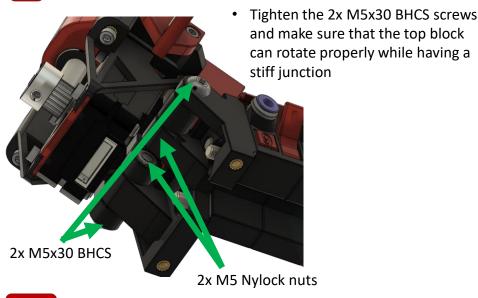


10 Finish the cabling

10-a Install the 7x7 drag chain

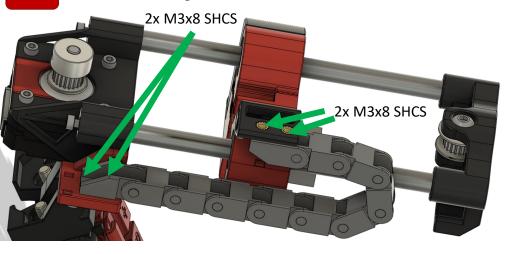


- Pass the servo and optical sensors cables into the drag chain, then fix the drag chain to the system
- Use zip-ties to secure cables at both ends of the drag chain

10-b Pass the whole wire harness to the ERCF connector plate

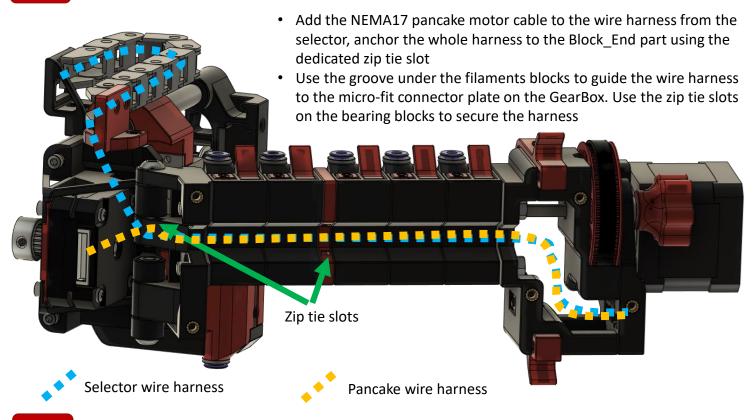

10-c Install the 2 ERCF feet

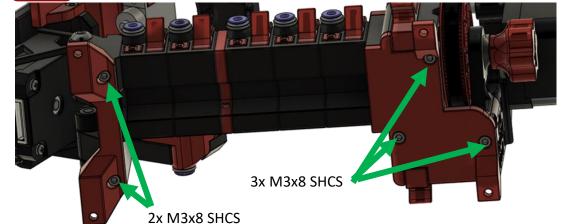

Don't pinch the wire harness under the 2 feet!

To be continued...