Using the Programming Arduino

Author: Mark Olson


https://github.com/Mark-MDO47/BluetoothAudioTransmitter KCX BT EMITTER

https://github.com/Mark-

MDO47/BluetoothAudioTransmitter_KCX_BT_EMITTER/blob/master/ProgrammingArduino/ProgrammingArduino.ino

We use the Programming Arduino to program the VMLINK table in the KCX_BT_EMITTER Bluetooth Audio Transmitter Module. VMLINK is the table that stores the info on Bluetooth receiver(s) (speaker, headphone, etc.) that the KCX_BT_EMITTER would automatically connect to. This KCX_BT_EMITTER VMLINK table can store info about more than one Bluetooth receiver. If info about more than one Bluetooth receiver is stored in VMLINK, the KCX_BT_EMITTER would try to connect to the first entry that was a device that it could see on its scan of Bluetooth devices.

Connections

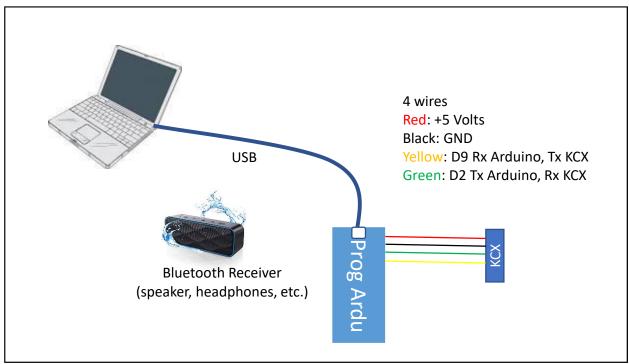

The Programming Arduino should be a type of Arduino that uses 5 Volt interfaces. For example, an Arduino Uno or an Arduino Nano Classic.

Programming

- Power off programming Arduino by disconnecting from USB
- Connect wires as follows

Arduino Pin	KCX_BT_EMITTER pin	suggested wire color
5V	+5V	Red
GND	PGND	Black
D2 (TX)	RX	Green
D9 (RX)	TX	Yellow

- Connect programming Arduino to USB for PC running the Arduino software
- On the PC running the Arduino software
 - Upload the sketch from ProgrammingArduino.ino into the programming Arduino
 - Open Serial Monitor by selecting menu "Tools" -> "Serial Monitor"
 - Follow instructions on the serial monitor
 - After each selected step, wait for the string "--- KCX_BT_EMITTER PROGRAMMING STEP COMPLETE ---"
- Disconnect programming Arduino from USB for PC running the Arduino software

Sample Session

For this sample session, we start with the "Old and Broken" device in the VMLINK table. We want to remove that and put in our "S1 Pro" device. Because both Jim and Mark have S1 Pro Bluetooth speakers, I will label this one "S1 Pro MDO" (you do not need to use the default name provided by the manufacturer).

In order to add S1 Pro MDO we need to know what its unique address is. This can be found by turning the speaker on and telling the KCX_BT_EMITTER to scan for Bluetooth speakers and headphones that it can connect to.

The table below shows the Serial Monitor output from a session of programming the KCX_BT_EMITTER Bluetooth Audio Transmitter module. The colors for the serial monitor output column are:

- BLACK communication from the Programming Arduino, either asking for directions or giving feedback. It often asks which "programming step" to execute: SCAN, DISPLAY, ADD, or DELETE ALL.
- RED "AT" commands sent to the KCX_BT_EMMITER. It takes several "AT" commands to perform a user-selected "programming step".
- GREEN KCX BT EMMITER direct status response to the "AT" command.
- BLUE communication from the KCX BT EMMITER reporting what it sees on its scan.

Dana and an all the Contain Mark the second	
Programming Arduino Serial Monitor output	Comments
Bluetooth Programming Arduino init completed!	Startup
1 - Scan for Bluetooth receiver devices (such as speaker, headphones, etc.)	Request user to command action
2 - Display stored auto-connect Bluetooth receiver devices	
3 - Add one auto-connect Bluetooth receiver device to storage	
4 - Delete all auto-connect Bluetooth receiver devices from storage	
==>	User types in number
1=SCAN	feedback to user on selection
ALL Devices=0	Scan output from KCX_BT_EMITTER
CMD 0 AT+	"Aliveness" command
OK+	command response
New Devices:1, MacAdd:0xf44efdecd39d, Name:S1 Pro	Scan output
ALL Devices=1	
MacAddr=0xf44efdecd39d, Name=S1 Pro	
CMD 1 AT+REST	RESET cmd to KCX_BT_EMITTER
OK+REST	command response
POWER ON	command response
New Devices:1, MacAdd:0xf44efdecd39d, Name:S1 Pro	Scan output
ALL Devices=1	
MacAddr=0xf44efdecd39d, Name=S1 Pro	
CMD 2 AT+SCAN	SCAN cmd to KCX BT EMITTER
OK+SCAN	
New Devices:1, MacAdd:0xf44efdecd39d, Name:S1 Pro	Scan output
ALL Devices=1	
MacAddr=0xf44efdecd39d, Name=S1 Pro	
New Devices:1, MacAdd:0xf44efdecd39d, Name:S1 Pro	
ALL Devices=1	
MacAddr=0xf44efdecd39d, Name=S1 Pro	
New Devices:1, MacAdd:0xf44efdecd39d, Name:S1 Pro	
KCX_BT_EMITTER PROGRAMMING STEP COMPLETE	
1 - Scan for Bluetooth receiver devices (such as speaker, headphones, etc.)	
2 - Display stored auto-connect Bluetooth receiver devices	
3 - Add one auto-connect Bluetooth receiver device to storage	
4 - Delete all auto-connect Bluetooth receiver devices from storage	
==>	
2=DISPLAY	
CMD 0 AT+	
CMD 0 AT+ OK+	
CMD 0 AT+ OK+ ALL Devices=1	
CMD 0 AT+ OK+ ALL Devices=1 MacAddr=0xf44efdecd39d, Name=S1 Pro	
CMD 0 AT+ OK+ ALL Devices=1 MacAddr=0xf44efdecd39d, Name=S1 Pro New Devices:1, MacAdd:0xf44efdecd39d, Name:S1 Pro	
CMD 0 AT+ OK+ ALL Devices=1 MacAddr=0xf44efdecd39d, Name=S1 Pro New Devices:1, MacAdd:0xf44efdecd39d, Name:S1 Pro ALL Devices=1	
CMD 0 AT+ OK+ ALL Devices=1 MacAddr=0xf44efdecd39d, Name=S1 Pro New Devices:1, MacAdd:0xf44efdecd39d, Name:S1 Pro	

Programming Arduino Serial Monitor output	Comments
CMD 1 AT+REST	
OK+REST	
POWER ON	
New Devices:1, MacAdd:0xf44efdecd39d, Name:S1 Pro	
ALL Devices=1	
MacAddr=0xf44efdecd39d,Name=S1 Pro	
CMD 2 AT+VMLINK?	Show the VMLINK info cmd
OK+VMLINK	Old and Broken device is in the
BT_ADD_NUM=1	VMLINK table, but we want to remove
BT_NAME_NUM=1	that and put in our S1 Pro device
Last_Add=0x0000000000	
VM_MacAdd0=0x0000000012	
VM_NameO=Old and Broken	
New Devices:1, MacAdd:0xf44efdecd39d, Name:S1 Pro ALL Devices=1	
MacAddr=0xf44efdecd39d,Name=S1 Pro	
MacAddr-0x144erdecd59d,Name-S1 Pro	
KCX BT EMITTER PROGRAMMING STEP COMPLETE	
1 - Scan for Bluetooth receiver devices (such as speaker, headphones, etc.)	
2 - Display stored auto-connect Bluetooth receiver devices	
3 - Add one auto-connect Bluetooth receiver device to storage	
4 - Delete all auto-connect Bluetooth receiver devices from storage	
==>	
4=DELETE ALL	
New Devices:1, MacAdd:0xf44efdecd39d, Name:S1 Pro	
ALL Devices=1	
CMD 0 AT+	
OK+	
ALL Devices=1	
MacAddr=0xf44efdecd39d,Name=S1 Pro	
New Devices:1, MacAdd:0xf44efdecd39d, Name:S1 Pro	
CMD 1 AT+REST	RESET command
OK+REST	
POWER ON	
New Devices:1, MacAdd:0xf44efdecd39d, Name:S1 Pro	
ALL Devices=1	
MacAddr=0xf44efdecd39d, Name=S1 Pro	
CMD 2 AT+DISCON	DISCONNECT in case we were connected
1 111	DISCONNECT in case we were connected
OK+DISCON ALL Devices=0	
ALL DEVICES-0	
CMD 2 AM I DELYM THE	Doloto overvithing in VMITNE
CMD 3 AT+DELVMLINK	Delete everything in VMLINK
Delete_Vmlink	

Programming Arduino Serial Monitor output	Comments
CMD 4 AT+REST	RESET so we read and use the new
	VMLINK table (all empty now)
OK+REST	
POWER ON	
New Devices:1,MacAdd:0xf44efdecd39d,Name:S1 Pro	
ALL Devices=1	
MacAddr=0xf44efdecd39d,Name=S1 Pro	
CMD 5 AT+VMLINK?	Display VMLINK again
OK+VMLINK	all empty
BT ADD NUM=0	
BT_NAME_NUM=0	
Last Add=0xf44efdecd39d	
New Devices:1, MacAdd:0xf44efdecd39d, Name:S1 Pro	NOTE: it says CONNECTED because
ALL Devices=1	there is nothing in the VMLINK
MacAddr=0xf44efdecd39d,Name=S1 Pro	and it knows how to and did connect
New Devices:1,MacAdd:0xf44efdecd39d,Name:S1 Pro	to the S1 Pro speaker. It did not
CONNECTED	connect before because it had VMLINK
ALL Devices=1	and it did not match with the
MacAddr=0xf44efdecd39d, Name=S1 Pro	speaker.
NOW DE PUREERS DECORDANCES AND COMPLETE	
KCX_BT_EMITTER PROGRAMMING STEP COMPLETE 1 - Scan for Bluetooth receiver devices (such as speaker, headphones, etc.)	
2 - Display stored auto-connect Bluetooth receiver devices	
3 - Add one auto-connect Bluetooth receiver devices	
4 - Delete all auto-connect Bluetooth receiver devices from storage	
=>>	
3=ADD	Now we add the S1 Pro MDO to VMLINK
Enter the unique MAC address for the Bluetooth speaker or headphones; it starts with 0x	
upper or lower case does not matter; maximum of 12 characters after the 0x	
To abort adding an auto-connect Bluetooth receiver device to storage, just enter an empty line	
==>	
Your entry "0xf44efdecd39d" was accepted	Get the address from the SCAN
Enton the name you choose for this device, it is OV to place analyse between your	
Enter the name you choose for this device; it is OK to place spaces between words maximum of 20 characters total	
To abort adding an auto-connect Bluetooth receiver device to storage, just enter an empty line	
10 about adding an auto-connect bruetooth receiver device to storage, just enter an empty line ==>	
Your entry "S1 Pro MDO" was accepted	Just about any name you want
CMD 0 AT+	Now we do a command sequence to
	add that BT device to VMLINK
OK+	
CMD 1 AT+DISCON	
OK+DISCON	
DISCONNECT	

Programming Arduino Serial Monitor output	Comments
CMD 2 AT+VMLINK?	Display VMLINK
OK+VMLINK	There is nothing in VMLINK before
BT ADD NUM=0	we do our ADD
BT NAME NUM=0	we do out had
Last_Add=0xf44efdecd39d	
CMD 3 AT+ADDLINKADD=0xf44efdecd39d	ADD the MAC Address
OK+	ADD the MAC Address
ADDLINKADD	
VM MacAdd 1 =0xf44efdecd39d	
CMD 4 AT+ADDLINKNAME=S1 Pro MDO	ADD our name - does not have to
	match the name the manufacturer
	gave it
OK+ADDLINKNAME	
VM_Name 0 =S1 Pro MDO	
CMD 5 AT+REST	We RESET to force it to read and
CHD 3 MITCHOI	use the modified VMLINK
DK+REST	
POWER ON	
New Devices:1, MacAdd:0xf44efdecd39d, Name:S1 Pro	
ALL Devices=1	
MacAddr=0xf44efdecd39d,Name=S1 Pro	
New Devices:1, MacAdd:0xf44efdecd39d, Name:S1 Pro	
CMD 6 AT+VMLINK?	Make sure we put the right stuff
CHD O ALTOHILIAG.	in the VMLINK
OK+VMLINK	OK that is from our ADD
BT ADD NUM=1	
BT_NAME_NUM=1	
Last Add=0xf44efdecd39d	
JM MacAdd0=0xf44efdecd39d	
VM NameO=S1 Pro MDO	
CONNECTED	It CONNECTED because
ALL Devices=1	(1) it came out of RESET and
MacAddr=0xf44efdecd39d,Name=S1 Pro	read VMLINK,
	(2) it found the device, and
	(3) it matched the VMLINK address
KCX BT EMITTER PROGRAMMING STEP COMPLETE	
1 - Scan for Bluetooth receiver devices (such as speaker, headphones, etc.)	
2 - Display stored auto-connect Bluetooth receiver devices	
3 - Add one auto-connect Bluetooth receiver device to storage	
4 - Delete all auto-connect Bluetooth receiver devices from storage	
==>	