## Using the Programming Arduino

Author: Mark Olson --- GitHub branch KCX\_BT\_EMITTER\_V1.7

https://github.com/Mark-


MDO47/BluetoothAudioTransmitter KCX BT EMITTER/tree/KCX BT EMITTER V1.7

https://github.com/Mark-

MDO47/BluetoothAudioTransmitter KCX BT EMITTER/blob/KCX BT EMITTER V1.7/ProgrammingArdu ino/ProgrammingArduino.ino

We use the Programming Arduino to program the VMLINK table in the KCX\_BT\_EMITTER Bluetooth Audio Transmitter Module. VMLINK is the table that stores the info on Bluetooth receiver(s) (speaker, headphone, etc.) that the KCX\_BT\_EMITTER would automatically connect to. This KCX\_BT\_EMITTER VMLINK table can store info about more than one Bluetooth receiver. If info about more than one Bluetooth receiver is stored in VMLINK, the KCX\_BT\_EMITTER would try to connect to the first entry that was a device that it could see on its scan of Bluetooth devices.

## Connections

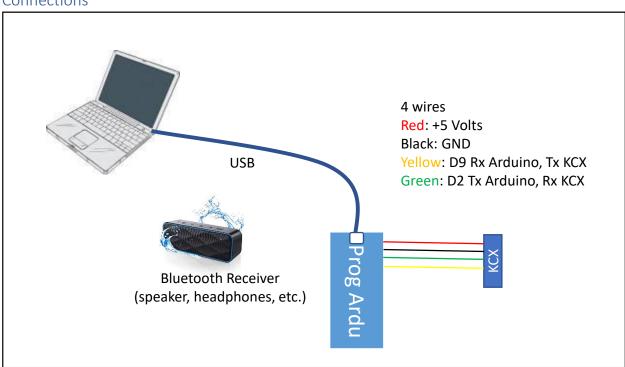

The Programming Arduino should be a type of Arduino that uses 5 Volt interfaces. For example, an Arduino Uno or an Arduino Nano Classic.

## **Programming**

- Power off programming Arduino by disconnecting from USB
- Connect wires as follows

Arduino Pin	KCX_BT_EMITTER pin	suggested wire color
5V	+5V	Red
GND	PGND	Black
D2 (TX)	RX	Green
D9 (RX)	TX	Yellow

- Connect programming Arduino to USB for PC running the Arduino software
- On the PC running the Arduino software
  - Upload the sketch from ProgrammingArduino.ino into the programming Arduino
  - Open Serial Monitor by selecting menu "Tools" -> "Serial Monitor"
  - Follow instructions on the serial monitor
  - After each selected step, wait for the string "--- KCX\_BT\_EMITTER PROGRAMMING STEP COMPLETE ---"
- Disconnect programming Arduino from USB for PC running the Arduino software

## Sample Session

For this sample session, we start with the "Old and Broken" device in the VMLINK table. We want to remove that and put in our "S1 Pro" device. Because both Jim and Mark have S1 Pro Bluetooth speakers, I will label this one "S1 Pro MDO" (you do not need to use the default name provided by the manufacturer).

In order to add S1 Pro MDO we need to know what its unique address is. This can be found by turning the speaker on and telling the KCX\_BT\_EMITTER to scan for Bluetooth speakers and headphones that it can connect to.

The table below shows the Serial Monitor output from a session of programming the KCX\_BT\_EMITTER Bluetooth Audio Transmitter module. The colors for the serial monitor output column are:

- BLACK communication from the Programming Arduino, either asking for directions or giving feedback. It often asks which "programming step" to execute: SCAN, DISPLAY, ADD, or DELETE ALL.
- RED "AT" commands sent to the KCX\_BT\_EMMITER. It takes several "AT" commands to perform a user-selected "programming step".
- GREEN KCX BT EMMITER direct status response to the "AT" command.
- BLUE communication from the KCX BT EMMITER reporting what it sees on its scan.

Programming Arduino Serial Monitor output	Comments
Bluetooth Programming Arduino init completed!	Startup
	Request user to command action
0 - Pair with Bluetooth receiver devices (such as speaker, headphones, etc.)	
1 - Scan for Bluetooth receiver devices	
2 - Display stored auto-connect Bluetooth receiver devices	
3 - Add one auto-connect Bluetooth receiver device to storage	User types in number
4 - Delete all auto-connect Bluetooth receiver devices from storage	
5 - Current XMTR status	
6 - BT Disconnect	
7 - PowerOff module	
==>	
5=STATUS	feedback to user on selection
SCAN	Scan output from KCX_BT_EMITTER
SCAN	
RESULT	RESULT flag to show start/end
> CMD 0: AT+	"Aliveness" command
OK+	command response
> CMD 1: AT+GMR?	"query version" cmd to
	KCX BT EMITTER
OK+VERS:KCX BT RTX V1.4	command response
> CMD 2: AT+BAUD?	"query baud" cmd to KCX BT EMITTER
OK+BAUD=0,BAUD=9600	command response
	Scan output from KCX BT EMITTER
SCAN	
> CMD 3: AT+BT MODE?	"query mode" cmd to KCX BT EMITTER
OK+BT EMITTER	command response
	****
> CMD 4: AT+CHANNEL?	"query chan" cmd to KCX BT EMITTER
OK+CHANNEL=BT CHANNEL	command response
> CMD 5: AT+VOL?	"query vol" cmd to KCX BT EMITTER
OK+VOL=31	command response
	Sommer response
> CMD 6: AT+STATUS?	"query statu" cmd to KCX BT EMITTER
OK+STATUS: 0	command response
on one of the original of the	Command Tesponse
	RESULT flag to show start/end
RESULT END	RESULT ITAG to SHOW Start/end
AEGULI END	
	Scan output from KCX BT EMITTER
SCAN	Scan Sucput IIOM NON_BI_EMILITER
UCAN,	

Programming Arduino Serial Monitor output	Comments
KCX BT EMITTER PROGRAMMING STEP COMPLETE	End of prev commanded steps
0 - Pair with Bluetooth receiver devices (such as speaker, headphones, etc.)	lina of prev commanded sceps
1 - Scan for Bluetooth receiver devices	Request user to command action
2 - Display stored auto-connect Bluetooth receiver devices	Request aser to command action
3 - Add one auto-connect Bluetooth receiver device to storage	
4 - Delete all auto-connect Bluetooth receiver devices from storage	
5 - Current XMTR status	User types in number
6 - BT Disconnect	occi cypes in name:
7 - PowerOff module	
=>	
1=SCAN	feedback to user on selection
SCAN	Scan output from KCX BT EMITTER
RESULT	"Aliveness" command
> CMD 0: AT+	
OK+	command response
> CMD 1: AT+RESET	RESET cmd to KCX_BT_EMITTER
OK+RESET	command response
Çe .	Glitches on serial line
11	
POWER ON	command response
	Scan output
SCAN	
> CMD 2: AT+	Aliveness cmd to KCX BT EMITTER
	No longer any SCAN command
OK+	command response
> CMD 3: AT+	Aliveness cmd to KCX_BT_EMITTER
	No longer any SCAN command
OK+	command response
MacAdd:9dd3ecfd4ef4,Name:S1 Pro	Scan output
> CMD 4: AT+	Aliveness cmd to KCX_BT_EMITTER
	No longer any SCAN command
OK+	command response
	RESULT flag to show start/end
RESULT END	

Province Audition Could be action to the	Comments
Programming Arduino Serial Monitor output	Comments
KCX_BT_EMITTER PROGRAMMING STEP COMPLETE	End of prev commanded steps
0 - Pair with Bluetooth receiver devices (such as speaker, headphones, etc.)	Request user to command action
1 - Scan for Bluetooth receiver devices	
2 - Display stored auto-connect Bluetooth receiver devices	
3 - Add one auto-connect Bluetooth receiver device to storage	
4 - Delete all auto-connect Bluetooth receiver devices from storage	User types in number
5 - Current XMTR status	
6 - BT Disconnect	
7 - PowerOff module	
==>	
2=DISPLAY	feedback to user on selection
RESULT	
> CMD 0: AT+	
OK+	
> CMD 1: AT+VMLINK?	Query VMLINK cmd
OK+VMLINK	Old and Broken device is in the
BT_ADD_NUM=01	VMLINK table, but we want to remove
BT_NAME_NUM=01	that and put in our S1 Pro device
Auto link Add:null	
MEM MacAdd 00:00000000012	
MEM Name 00:01d and Broken	
RESULT END	
VOY DM ENTHMED DDOODANATIO CHED CONDIEME	
KCX_BT_EMITTER PROGRAMMING STEP COMPLETE	
O Pain with Plusteeth marines desires (such as another handshouse start)	
0 - Pair with Bluetooth receiver devices (such as speaker, headphones, etc.) 1 - Scan for Bluetooth receiver devices	
2 - Display stored auto-connect Bluetooth receiver devices	
3 - Add one auto-connect Bluetooth receiver devices	
4 - Delete all auto-connect Bluetooth receiver devices from storage	
5 - Current XMTR status	
6 - BT Disconnect	
7 - PowerOff module	
>	
4=DELETE ALL	
RESULT	
CMD 0: AT+	
OK+	
> CMD 1: AT+DISCON	RESET command
OK+DISCON	
SCAN	

Programming Arduino Serial Monitor output	Comments
> CMD 2: AT+DELVMLINK	Delete everything in VMLINK
Delete Vmlink	J
MacAdd:9dd3ecfd4ef4,Name:S1 Pro	
CON ONE	
CONNECT=>MacAdd:9dd3ecfd4ef4,Name:S1 Pro	
> CMD 3: AT+RESET	RESET so we read and use the new
	VMLINK table (all empty now)
OK+RESET	
SCAN	
e	Glitches on serial line
11	
POWER ON	
SCAN	
MacAdd:9dd3ecfd4ef4,Name:S1 Pro	
CON LAST	
3 OF 4 35	
> CMD 4: AT+	
OK+	
A ONE S AT UNIT TIME	D' 1 THE THE
> CMD 5: AT+VMLINK?	Display VMLINK again
OK+VMLINK	all empty
BT_ADD_NUM=00 BT_NAME_NUM=00	
Auto link Add:9dd3ecfd4ef4	
THEO TIME THAT FACTOR TO THE THEO TIME THAT THE THEO TIME THE THEO THE THEO TIME THE THE THEO TIME THE THE THE THE THE THE THE THE THE TH	RESULT flag to show start/end
RESULT END	NESOLI Trag to show start, that
KCX BT EMITTER PROGRAMMING STEP COMPLETE	
<del></del>	
0 - Pair with Bluetooth receiver devices (such as speaker, headphones, etc.)	
1 - Scan for Bluetooth receiver devices	
2 - Display stored auto-connect Bluetooth receiver devices	
3 - Add one auto-connect Bluetooth receiver device to storage	
4 - Delete all auto-connect Bluetooth receiver devices from storage	
5 - Current XMTR status	
6 - BT Disconnect	
7 - PowerOff module	
2-300	New years and the OI Down MDO to TRAT TOWN
3=ADD	Now we add the S1 Pro MDO to VMLINK
Detail the unique MAC address for the Director's anather on headphones, it starts in the	
Enter the unique MAC address for the Bluetooth speaker or headphones; it starts with 0x	
upper or lower case does not matter; maximum of 12 characters after the 0x To abort adding an auto-connect Bluetooth receiver device to storage, just enter an empty	
line	
11:1e ==>	
Your entry "0x9dd3ecfd4ef4" was accepted	Get the address from the SCAN
Total oner, one acceptate in the accepted	1 ccc che address from the born

Duagramusian Auduina Carial Manitan autuut	Commonts
Programming Arduino Serial Monitor output	Comments
Enter the name you choose for this device; it is OK to place spaces between words	
maximum of 20 characters total	
To abort adding an auto-connect Bluetooth receiver device to storage, just enter an empty	
line	
==>	
Your entry "S1 Pro MDO" was accepted	Just about any name you want
RESULT	RESULT flag to show start/end
> CMD 0: AT+	"Aliveness" command
	Now we do a command sequence to
	add that BT device to VMLINK
OK+	
> CMD 1: AT+DISCON	
OK+DISCON	
SCAN	
MacAdd:9dd3ecfd4ef4,Name:S1 Pro	
CON LAST	
CON BASI	
> CMD 2: AT+VMLINK?	Display VMLINK
OK+VMLINK	There is nothing in VMLINK before
BT ADD NUM=00	we do our ADD
BT NAME NUM=00	
Auto link Add:9dd3ecfd4ef4	
> CMD 3: AT+ADDLINKADD=9dd3ecfd4ef4	ADD the MAC Address
OK+ADDLINKADD=9dd3ecfd4ef4	
BT_ADD_NUM=01	
BT_NAME_NUM=00	
Auto_link_Add:9dd3ecfd4ef4  MEM_MacAdd_00:9dd3ecfd4ef4	
MEM_MacAdd 00:9dd3ecid4ei4	
> CMD 4: AT+ADDLINKNAME=S1 Pro MDO	ADD our name - does not have to
> CMD 4. AITADDBINKNAME-SI FIO MDO	match the name the manufacturer
	gave it
OK+ADDLINKNAME=S1 Pro MDO	gave 10
BT ADD NUM=01	
BT NAME NUM=01	
Auto link Add:9dd3ecfd4ef4	
MEM MacAdd 00:9dd3ecfd4ef4	
MEM_Name 00:S1 Pro MDO	
> CMD 5: AT+RESET	We RESET to force it to read and
	use the modified VMLINK
OK+RESET	

Programming Arduino Serial Monitor output	Comments
SCAN	
?d	Glitches on serial line
11	differences on serial fine
POWER ON	command response
MacAdd:9dd3ecfd4ef4,Name:S1 Pro	Note that it matched the MAC address
CON MATCH ADD	even though we had a different
CONNECT=>MacAdd:9dd3ecfd4ef4,Name:S1 Pro	name. It still connected.
> CMD 6: AT+	
OK+	
> CMD 7: AT+VMLINK?	Make sure we put the right stuff in the VMLINK
BT_ADD_NUM=01	OK that is from our ADD
BT_NAME_NUM=01	
Auto_link_Add:9dd3ecfd4ef4	
MEM_MacAdd 00:9dd3ecfd4ef4	
MEM_Name 00:S1 Pro MDO	
RESULT END	
KCX_BT_EMITTER PROGRAMMING STEP COMPLETE	
0 - Pair with Bluetooth receiver devices (such as speaker, headphones, etc.)	
1 - Scan for Bluetooth receiver devices	
2 - Display stored auto-connect Bluetooth receiver devices	
3 - Add one auto-connect Bluetooth receiver device to storage	
4 - Delete all auto-connect Bluetooth receiver devices from storage	
5 - Current XMTR status	
6 - BT Disconnect	
7 - PowerOff module	
=>	